



FiOS *Quantum™* *Gateway* **USER** **GUIDE**



CONTENTS

01/

INTRODUCTION

1.0	Package Contents	7
1.1	System Requirements	7
1.2	Features	7
1.3	Getting to Know Your Gateway	10

02/

CONNECTING YOUR GATEWAY

2.0	Setting Up Your Gateway	18
2.1	Computer Network Configuration	24
2.2	Main Screen	30

03/

WIRELESS SETTINGS

3.0	Overview	35
3.1	Wireless Status	36
3.2	Basic Security Settings	39
3.3	Advanced Security Settings	42
3.4	Wireless MAC Authentication	49
3.5	802.11 Mode	51
3.6	Other Advanced Wireless Options	53

04/

CONFIGURING MY NETWORK SETTINGS

4.0	Accessing My Network Settings	61
4.2	Using My Network Settings	62

05/

USING NETWORK
CONNECTIONS

5.0	Accessing Network Connections	66
5.1	Network (Home/Office) Connection	67
5.2	Broadband Connection	74
5.3	Wireless Access Point Connection	78
5.4	Broadband Ethernet/Coax Connection	81

06/

CONFIGURING
SECURITY SETTINGS

6.0	Firewall	89
6.2	Access Control	93
6.3	Port Forwarding	96
6.4	Port Triggering	98
6.5	Remote Administration	100
6.6	Static NAT	102
6.7	Security Log	104

07/

SETTING PARENTAL
CONTROLS

7.0	Activating Parental Controls	115
7.1	Rule Summary	117

CONTENTS

08/

CONFIGURING ADVANCED SETTINGS

8.0	Using Advanced Settings	121
8.1	Utilities	122
8.2	DNS Settings	131
8.3	Network Settings	134
8.4	Routing	141
8.5	Date and Time	166
8.6	Configuration Settings	170

09/

MONITORING YOUR GATEWAY

9.0	Gateway Status	179
9.1	Advanced Status	180
9.2	System Logging	181
9.3	Full Status/System wide Monitoring of Connections	182
9.4	Traffic Monitoring	183
9.5	Bandwidth Monitoring	184

10/

TROUBLESHOOTING

10.0	Troubleshooting Tips	187
10.1	Frequently Asked Questions	193

11/

SPECIFICATIONS

11.0	General Specifications	200
11.1	LED Indicators	201
11.2	Environmental Parameters	201

12/

NOTICES

12.0	Regulatory Compliance Notices	205
------	-------------------------------	-----

01/

INTRODUCTION

- 1.0** Package Contents
- 1.1** System Requirements
- 1.2** Features
- 1.3** Getting to Know Your Gateway

The Verizon FiOS Quantum™ Gateway lets you transmit and distribute digital entertainment and information to multiple devices in your home/office.

Your Gateway supports networking using coaxial cables, Ethernet, or Wi-Fi, making it one of the most versatile and powerful gateways available.

PACKAGE CONTENTS, SYSTEM REQUIREMENTS AND FEATURES

1.0/ PACKAGE CONTENT

Your package contains:

- The FiOS Quantum Gateway
- Power adapter
- LAN Ethernet cable (yellow)
- WAN Ethernet cable (white)
- Quick Start Guide

1.1/ SYSTEM REQUIREMENTS

System and software requirements are:

- A computer or other network device supporting Wi-Fi or wired Ethernet
- A web browser, such as Chrome™, Firefox®, Internet Explorer 8® or higher, or Safari® 5.1 or higher

1.2/ FEATURES

Your Gateway features include:

- Support for multiple networking standards, including
 - **WAN** – Gigabit Ethernet and MoCA 2.0 interfaces
 - **LAN** – 802.11 b/g/n/ac, Gigabit Ethernet and MoCA 2.0 interfaces
- Integrated wired networking with 4-port Ethernet switch and Coax (MoCA)

-
- Ethernet supports speeds up to 1000 Mbps
 - MoCA 2.0 and 1.1 enabled to support speeds up to 700 Mbps over coaxial cable
 - Integrated wireless networking with 802.11b/g/n/ac access point featuring:
 - Enabled 802.11b capable speeds (based on device)
 - Enabled 802.11g capable speeds (based on device)
 - Enabled 802.11n capable speeds (based on device)
 - Enabled 802.11ac capable speeds (based on device)
 - Enterprise-level security, including:
 - Fully customizable firewall with Stateful Packet Inspection (SPI)
 - Content filtering with URL-keyword based filtering, parental controls, and customizable filtering policies per computer
 - Intrusion detection with Denial of Service protection against IP spoofing attacks, scanning attacks, IP fragment overlap exploit, ping of death, and fragmentation attacks
 - Event logging
 - MAC address filtering
 - Static NAT

FEATURES AND GETTING TO KNOW YOUR GATEWAY

- Port forwarding
 - Port triggering
 - Access control
 - Advanced wireless protection featuring WPA2/WPA Mixed Mode, WEP 64/128 bit encryption, and MAC address filtering
- Options, including:
 - DHCP server
 - WAN interface auto-detection
 - Dynamic DNS
 - DNS server
 - LAN IP and WAN IP address selection
 - MAC address cloning
 - IPv6 support
 - QoS support (end to end layer 2/3) featuring: Differentiated Services (Diffserv), 802.1p/q prioritization, and pass-through of WAN-side DSCPs, Per Hop Behaviors (PHBs), and queuing to LAN-side devices
 - Remote management and secured remote management using HTTPS
 - Static routing
 - VPN (VPN pass through only)

- IGMP
- Daylight savings time support

1.3/ GETTING TO KNOW YOUR GATEWAY

1.3a/ FRONT PANEL

The front panel has two lighted indicators and a WPS (Wi-Fi Protected Setup) button.

The Power/Internet light will be on and solid when your Gateway is turned on, connected to the Internet, and functioning normally.

The Wireless light will be on when your Gateway Wi-Fi is turned on.

For additional information on the front lights and error indications, refer the **Troubleshooting** section in this Guide.

The WPS button is used to initiate Wi-Fi Protected Setup. This is an easy way to add WPS capable devices to your wireless network.

When WPS is initiated from your Gateway, the wireless light slowly flashes white for up to two minutes, allowing time to complete the WPS pairing process on your wireless device (also known as a wireless client).

When a device begins connecting to your Gateway using WPS, the wireless light rapidly flashes white for a few seconds, then turns solid white as the connection completes.



GETTING TO KNOW YOUR GATEWAY

If there is an error during the WPS pairing process, the wireless light flashes red rapidly for two minutes after the error occurs.

The WPS button can also be used to reboot the router. To perform a soft reboot, press and hold the WPS button for at least 10 seconds.

1.3b/ SIDE PANEL

The side panel of your Gateway has a label that contains important information about your device, including the default settings for the Gateway’s wireless network name (ESSID), wireless password (WPA2 key), local URL for accessing the Gateway’s administrative pages, and Gateway administrator password. The label also contains a QR code that you can scan with your smartphone, tablet, or other camera-equipped Wi-Fi device to allow you to automatically connect your device to your Wi-Fi network without typing in a password (requires a QR code reading app with support for Wi-Fi QR codes).



Default login credentials
Please note: password letters are all lower-case


Wireless network name (ESSID)	XXXXXXXXXX	
Wireless password (WPA2)	XXXXXXXXXXXXXXXXXX	
Administration URL	myfiosgateway.com	
Administrator password	XXXXXXXXXX	

To reboot, press and hold the WPS button for 10 seconds.

Online tutorials : www.verizon.com/quickguides

1.3c/ REAR PANEL

The rear panel of your Gateway has 8 ports; COAX, Ethernet LAN [4], Ethernet WAN, and USB [2]. The rear panel also includes a DC power jack and a reset button.

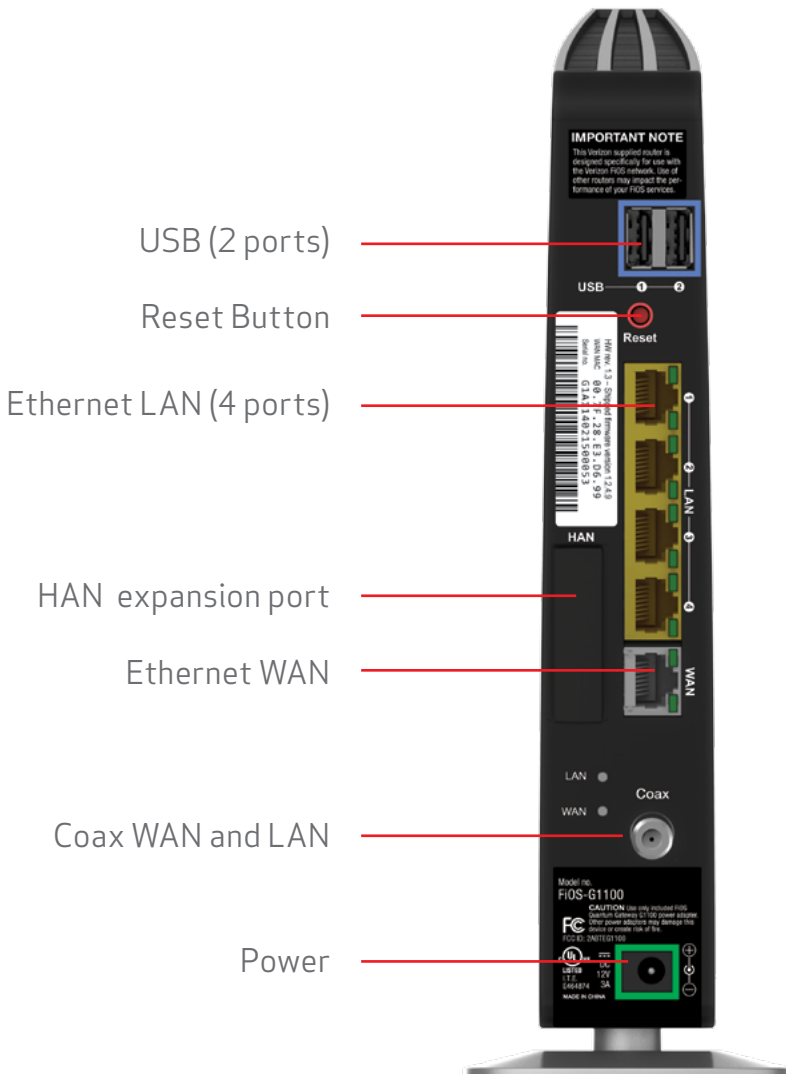

GETTING TO KNOW THE GATEWAY

- **USB** - provides up to 500 mA at 5 VDC for attached devices. For example, you could charge a cell phone. In the future, with a firmware upgrade, the USB host functionality may be available for other devices, such as external storage and cameras. Firmware updates are performed automatically by Verizon.
- **Reset Button** - allows you to reset your Gateway to the factory default settings. To reset the Gateway, press and hold the Reset button for at least three seconds.
- **Ethernet LAN** - connects devices to your Gateway using Ethernet cables to join the local area network (LAN). The four Ethernet LAN ports are 10/100/1000 Mbps auto-sensing and can be used with either straight-through or crossover Ethernet cables.
- **HAN Expansion Port** - provides for future hardware upgrades to add support for Home Area Networking capabilities.
- **Ethernet WAN** - connects your Gateway to the Internet using an Ethernet cable.
- **Coax WAN and LAN** - connects your Gateway to the Internet and/or to other MoCA devices using a coaxial cable.

Warning: *The WAN Coax Port is intended for connection to Verizon FiOS only. It must not be connected to any exterior or interior coaxial wires not designated for Verizon FiOS.*

- **Power** - connects your Gateway to an electrical wall outlet using the supplied power adapter.

Warning: *The included power adapter is for home use only, supporting voltages from 100-240Vac. Do not use in environments with greater than 240Vac.*

1.3d/ MOUNTING THE GATEWAY TO A WALL

For optimum performance, the FiOS Quantum Gateway is designed to stand in a vertical upright position. Verizon does not recommend wall mounting the FiOS Quantum Gateway. However, if you wish to mount your Gateway, you can purchase a wall mount bracket from the Verizon FiOS Accessories Store at verizon.com/fiosaccessories.

If you are replacing an existing Verizon wall mounted router, you do not need to remove the mounting screws from the wall. The existing mounting screws will fit the new bracket.

To mount your Gateway to a wall:

1. Remove the foot by turning the Gateway upside down and removing the single screw that holds the foot to the Gateway.



2. Slide the foot toward the front of the Gateway and pull the foot from the holes. You may need to wiggle the foot slightly.
3. You may use the wall mount bracket as a template for positioning the Gateway.

GETTING TO KNOW THE GATEWAY

4. Mark the mounting holes, then remove the wall mount bracket from the wall.
5. Drill holes for the screw anchors.
6. Insert the screw anchors in the holes in the wall, then insert the screws into the screw anchors and tighten the screws. Leave screws extended about 0.2 inches from the wall.
7. Verify the screws are positioned correctly by placing the wall bracket on the screws. Remove the wall bracket from the wall.
8. Place the Gateway on the wall bracket and slide the Gateway forward until it locks in place.



9. To secure the Gateway, attach the bracket to the Gateway using the single screw you removed from the foot.
10. Slide the wall mount bracket with the attached Gateway on the screws, then slide the bracket down until it locks in place.

02/

CONNECTING YOUR GATEWAY

2.0 Setting Up Your Gateway

2.1 Computer Network
Configuration

2.2 Main Screen

SETTING UP YOUR GATEWAY

Connecting your Gateway and accessing its web-based Graphical User Interface (GUI) are both simple procedures.

Accessing the GUI may vary slightly, depending on your device's operating system and web browser.

2.0/ SETTING UP YOUR GATEWAY

There are three basic steps to setting up your Gateway:

- Step 1:** Connect your Gateway to the Internet
- Step 2:** Connect your network device to your Gateway
- Step 3:** Configure your Gateway

Before you begin, if you are replacing an existing Gateway, disconnect it. Remove all old Gateway components, including the power supply. They will not work with your new Gateway.

2.0a/ STEP 1 - CONNECT YOUR GATEWAY

1. Remove your Gateway, Ethernet cables, and power adapter from the box.
2. Locate your high-speed Internet (WAN) outlet. This would be the wall jack installed previously by Verizon. Note the type of jack may be either Ethernet or coaxial.
3. Connect your Gateway to the Internet (WAN).
 - If connecting the WAN using Ethernet, use the supplied white Ethernet cable and plug one end into the white Ethernet WAN port on the back of your Gateway. Plug the other end of the cable into the high-speed Ethernet wall jack.



SETTING UP YOUR GATEWAY


- If connecting the WAN using coaxial cable, locate a coaxial cable and connect one end to the coax port on the back of your Gateway. Connect the other end of the coaxial cable to a coax wall jack.

Tighten the coaxial cables by hand until snug. The cables should not require a wrench.



4. Plug the power cord into the power port on the back of your Gateway and then into a power outlet. The Gateway automatically turns on as soon as power is plugged in.

Important: Wait until the Power/Internet light on the front of the Gateway stops flashing and is solid white. If the light turns red, check the troubleshooting steps in the Troubleshooting section of the user guide.

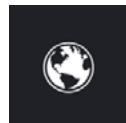


2.0b/ STEP 2 - CONNECT YOUR DEVICE TO YOUR GATEWAY

If connecting a device using wired Ethernet (preferred for initial setup):

- Plug one end of the supplied yellow Ethernet cable into one of the four yellow Ethernet ports in the back of your Gateway. Alternatively, you can use your own Ethernet cable of any color to connect from the yellow Ethernet ports on the back of your Gateway to your device with an Ethernet connector.
- Plug the other end of the yellow Ethernet cable into the Ethernet port of your network device.

If connecting a wireless device:


- Access the Wi-Fi setting on your wireless device, then select your new Gateway using the wireless network name (ESSID) shown on the sticker located on the side of your Gateway.
- Enter the wireless password (WPA2 key) also shown on the sticker.

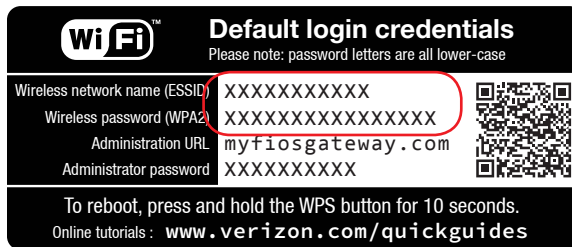

2.0c/ STEP 3 - CONFIGURE YOUR GATEWAY:


1. Open a web browser on the device connected to your Gateway network.
2. In the browser address field (URL), enter: **myfiosgateway.com**, then press the **Enter** key on your keyboard.

Alternately, you can enter: **https://192.168.1.1**



SETTING UP YOUR GATEWAY


The first time you access your Gateway, an Easy Setup Wizard displays to help step you through the setup process.

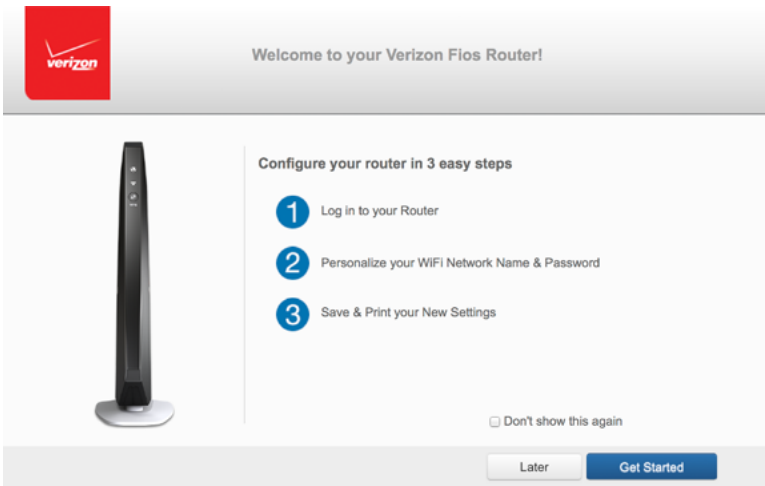

3. Click the **Get Started** button. The Gateway Login screen displays.



4. In the **Admin Password** field, enter the password that is printed next to the Administrator Password on the label on the side of your Gateway.

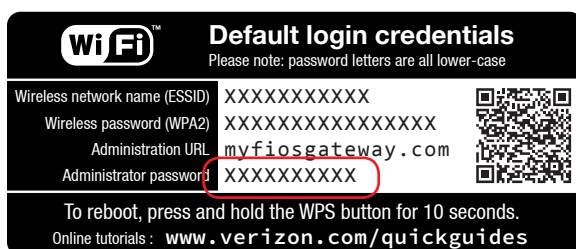

5. Click **Next**. The Personalize your Gateway screen displays.

The screen shows the 'Personalize Your Router' setup page. At the top left is the Verizon logo. The title 'Welcome to your Verizon Fios Router!' is centered. Below the title, there are two main sections. The left section, titled '2 Personalize Your Router', contains the text 'Your router is pre-configured with the below admin and Wi-Fi settings. Personalize your network by customizing the following:'. It has three input fields: 'Admin Password:', 'WiFi Name (ESSID):', and 'WiFi Password (WPA2 Key):'. Below the password field is a note: 'WiFi password must be at least 8 characters.' and a 'Revert Changes' button. There is also a link for 'Tips for creating secure passwords:'. The right section, titled 'Security Settings' with a lock icon, contains the text 'Your wireless network is automatically set to WPA2/WPA, the strongest type of security.' and a 'Change' button. At the bottom of the screen are 'Cancel' and 'Next' buttons.


SETTING UP YOUR GATEWAY AND COMPUTER NETWORK CONFIGURATION

For your protection, your Gateway is pre-set at the factory to use WPA2/WPA mixed mode (Wi-Fi Protected Access) encryption for your wireless network. This is the best setting for most users and provides maximum security.

6. Click **Next** to continue and save the Admin and Wi-Fi changes to your Gateway.

***Important:** If you are on a Wi-Fi device when setting up your Gateway, you will be disconnected from the Wi-Fi network when you change the Wi-Fi name or Wi-Fi password. When this occurs, your Gateway will detect this situation and prompt you to reconnect using the new settings.*

7. Print your settings. Once you have personalized your Gateway settings, you will be prompted to print a record of these settings in case you forget them.

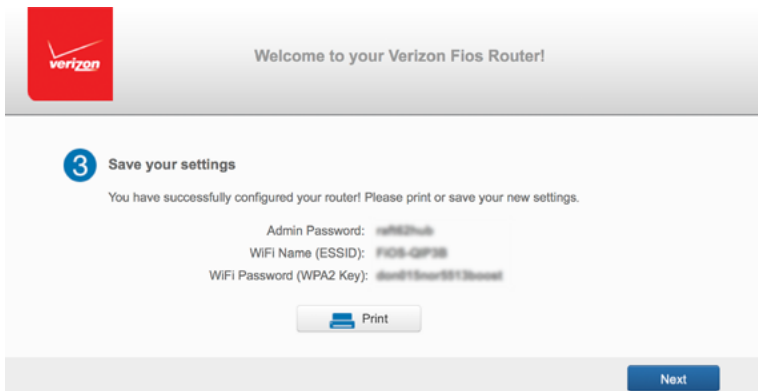

8. Click **Next** to continue. Your Gateway verifies the final settings and displays that it is successfully connected to the Internet and is ready for use.

Upon the successful completion of setup, the Main screen of the Gateway displays. Your Gateway is now configured. You can change any of the Gateway settings after this initial log in.

If your Gateway is subsequently reset to the factory default settings, the settings printed on the label will again be in effect.

If your Gateway fails to connect, follow the troubleshooting steps in the **Troubleshooting** section of this guide.

2.1/ COMPUTER NETWORK CONFIGURATION

Each network interface on your computer should either automatically obtain an IP address from the upstream Network DHCP server (default configuration) or be manually configured with a statically defined IP address and DNS address. We recommend leaving this setting as is.

2.1a/ CONFIGURING DYNAMIC IP ADDRESSING

To configure a computer to use dynamic IP addressing:

WINDOWS 7/8

1. In the Control Panel, locate **Network and Internet**, then select **View Network Status and Tasks**.

COMPUTER NETWORK CONFIGURATION

2. In the **View your active networks – Connect or disconnect** section, click **Local Area Connection** in the **Connections** field. The Local Area Connection Status window displays.
3. Click **Properties**. The Local Area Connection Properties window displays.
4. Select **Internet Protocol Version 4 (TCP/IPv4)**, then click **Properties**. The Internet Protocol Version 4 (TCP/IPv4) Properties window displays.
5. Click the **Obtain an IP address automatically** radio button.
6. Click the **Obtain DNS server address automatically** radio button, then click **OK**.
7. In the Local Area Connection Properties window, click **OK** to save the settings.
8. To configure Internet Protocol Version 6 (TCP/IPv6) to use dynamic IP addressing, repeat step 1 to 7. However for step 3, select **Internet Protocol Version 6 (TCP/IPv6)** in the Properties option (refer to IPv6 section for Gateway configuration).

MACINTOSH OS X

1. Click the **Apple** icon in the top left corner of the desktop. A menu displays.
2. Select **System Preferences**. The System Preferences window displays.
3. Click **Network**.

4. Verify that Ethernet, located in the list on the left, is highlighted and displays **Connected**.
5. Click **Assist Me**.
6. Follow the instructions in the Network Diagnostics Assistant.

2.1b/ CONNECTING OTHER COMPUTERS & NETWORK DEVICES

You can connect your Gateway to other computers or set top boxes using an Ethernet cable, wireless connection (Wi-Fi), or coaxial cable.

ETHERNET

1. Plug one end of an Ethernet cable into one of the open yellow Ethernet ports on the back of your Gateway.
2. Plug the other end of the Ethernet cable into an Ethernet port on the computer.
3. Repeat these steps for each computer to be connected to your Gateway using Ethernet. You can connect up to four.


CONNECTING A WI-FI DEVICE USING WPS

Wi-Fi Protected Setup (WPS) is an easier way for many devices to set up a secure wireless network connection. Instead of manually entering passwords or multiple keys on each wireless client, such as a laptop, printer, or external hard drive, your Gateway creates a secure wireless network.

COMPUTER NETWORK CONFIGURATION

In most cases, this only requires the pressing of two buttons – one on your Gateway and one on the wireless client. This could be either a built-in button or one on a compatible wireless adapter/card, or a virtual button in software. Once completed, this allows wireless clients to join your wireless network.

To initialize the WPS process, you can either press and release the WPS button located on the front of your Gateway or use the GUI and press the on-screen button.

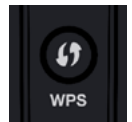

You can easily add wireless devices to your wireless network using the WPS option if your wireless device supports the WPS feature.

To access WPS using the user interface:

1. From the Main menu, select **Wireless Settings**, then select **Wi-Fi Protected Setup (WPS)**.

The screenshot shows the Verizon router's web interface. At the top is a navigation bar with the Verizon logo and several menu items: MAIN, WIRELESS SETTINGS (highlighted in blue), MY NETWORK, FIREWALL, PARENTAL CONTROLS, ADVANCED, and SYSTEM MONITORING. On the left is a sidebar with links: Main, Wireless Status, Basic Security Settings, Advanced Security Settings, Wi-Fi Protected Setup (WPS) (highlighted), and Logout. The main content area is titled 'Wi-Fi Protected Setup (WPS)' and contains the following text: 'Wi-Fi Protected Setup is an easy way to add wireless devices to your network. To use this feature, your wireless client device needs to support WPS.' followed by a warning: 'Warning: Wireless devices may briefly lose connectivity when turning WPS ON or OFF'. Below this is a toggle switch for 'Wi-Fi Protected Setup:' which is currently set to 'OFF'. The text then states: 'You have two alternate methods to add a wireless device to your network using WPS:'. Method A is 'Push button configuration (preferred):' with instructions to press the WPS button on the client device and click a 'WPS' button on the screen. Method B is 'PIN enrollment:' with instructions to enter the client device's WPS PIN and click 'Register'. There is a text input field for 'Client WPS PIN:' and a 'Register' button. At the bottom, it says 'Alternatively, if your client device supports it, enter the router's PIN into the client device:' followed by a checked checkbox for 'Enable Router's PIN' and the text 'XXXXXXX'.

2. Enable the protected setup by moving the selector to On.
3. Use one of the following methods:
 - If your wireless client device has a WPS button, press the WPS button on your Gateway, then click the WPS button on your wireless device (client) to start the WPS registration process.
 - If your client device has a WPS PIN, locate the PIN printed on the client's label or in the client documentation.

Enter the PIN number in the **Client WPS PIN** field. The **Client WPS PIN** field is located in the section **B - PIN Enrollment** on the user interface.

Click **Register**.

- Alternatively, you can enter the Gateway's PIN shown on this screen into the WPS user interface of your device, if this PIN mode is supported by your wireless device.
4. After pressing the WPS button on your Gateway, you have two minutes to press the WPS button on the client device before the WPS session times out.

When the WPS button on your Gateway is pressed, the Wireless light on the front of your Gateway begins flashing white. The flashing continues until WPS pairing to the client device completes successfully. At this time, the Wireless light turns solid white.

COMPUTER NETWORK CONFIGURATION AND MAIN SCREEN

If WPS fails to establish a connection to a wireless client device within two minutes, the Wireless light on your Gateway flashes red for two minutes to indicate the WPS pairing process was unsuccessful. After flashing red, the light returns to solid white to indicate that Wi-Fi is on.

CONNECTING A WI-FI DEVICE USING A PASSWORD

1. Verify each device that you are connecting wirelessly (using Wi-Fi) has a built-in wireless or external wireless adapter.
2. Open the device's wireless settings application.
3. Select your Gateway's wireless network name (SSID) from the device's list of discovered wireless networks.
4. When prompted, enter your Gateway's wireless password (WPA2 key) into the device's wireless settings. Your Gateway's default wireless network name and wireless password are located on the sticker on the side of your Gateway.
5. Verify the changes were implemented by using the device's web browser to access a site on the Internet.
6. Repeat these steps for every device that you are wirelessly connecting to your Gateway.


COAXIAL

1. Verify all coax devices are turned off.
2. Disconnect any adapter currently connected to the coaxial wall jack in the room where your Gateway is located.

3. Connect one end of the coaxial cable to the coaxial wall jack and the other end to the Coax port on your network device.
4. Power up the network device.

2.2/ MAIN SCREEN

When you log into your Gateway, the page displays showing the Main navigation menu at the top of the page and your Gateway's Status, including Quick Links, My Network, and Verizon Zone display in the body of the page.

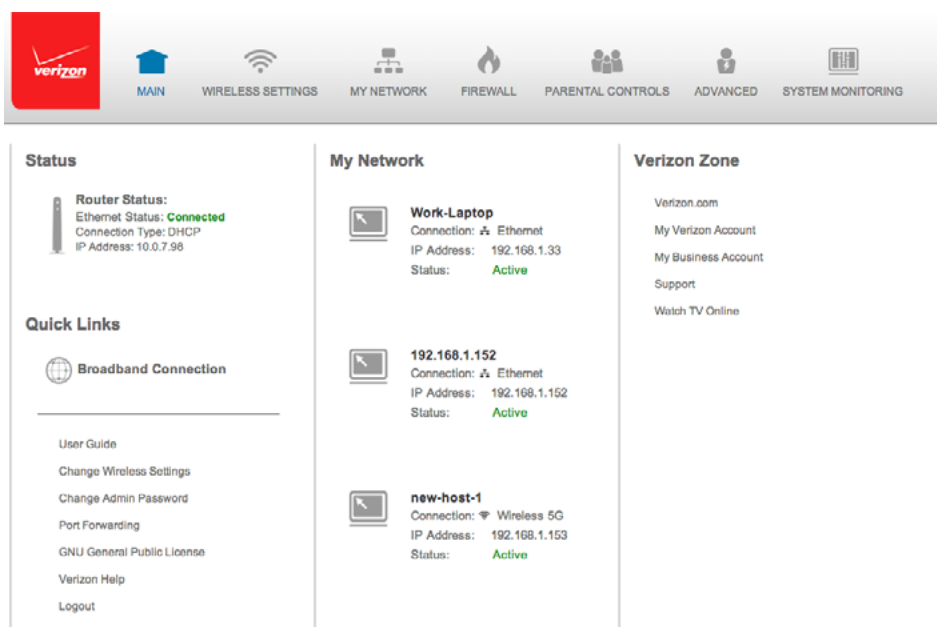

The screenshot displays the Verizon Gateway Main Screen. At the top is a navigation bar with the Verizon logo and icons for MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL, PARENTAL CONTROLS, ADVANCED, and SYSTEM MONITORING. The main content area is divided into three columns: Status, My Network, and Verizon Zone.

Status

Router Status:
Ethernet Status: **Connected**
Connection Type: DHCP
IP Address: 10.0.7.98

Quick Links

Broadband Connection

User Guide
Change Wireless Settings
Change Admin Password
Port Forwarding
GNU General Public License
Verizon Help
Logout

My Network

Work-Laptop
Connection: Ethernet
IP Address: 192.168.1.33
Status: **Active**

192.168.1.152
Connection: Ethernet
IP Address: 192.168.1.152
Status: **Active**

new-host-1
Connection: Wireless 5G
IP Address: 192.168.1.153
Status: **Active**

Verizon Zone

Verizon.com
My Verizon Account
My Business Account
Support
Watch TV Online

MAIN SCREEN

2.2a/ MENU

The Main menu links across the top of the page to the following configuration options and chapters:

- **Wireless Settings** - Chapter 3
- **My Network** - Chapter 5
- **Firewall** - Chapter 6
- **Parental Controls** - Chapter 7
- **Advanced** - Chapter 8
- **System Monitoring** - Chapter 9

2.2b/ STATUS

This section displays the status of your Gateway's local network (LAN) and Internet connection (WAN).

BROADBAND CONNECTION

Broadband Connection displays the state of the broadband connection:

- **Broadband interface:** Ethernet or Coax
- **Connected status:** Connected or No Connection
- **Connection Type:** DHCP or Static
- **WAN IP address:** Address of the broadband connection

QUICK LINKS

Quick Links contains frequently accessed documentation, such as User Guide and Verizon Help, and settings, such as Change Wireless Settings, Change Admin Password, and Port Forwarding as well as Logout.

MY NETWORK

My Network displays the connection type, IP address, and status of all devices that have accessed or are currently connected to the network.

The icon associated with the device displays to signify the device is active or shaded gray to indicate the device has not been active for several minutes. You can view the individual settings of each device by clicking its icon.

VERIZON ZONE

The Verizon Zone contains links to various Verizon web sites and other informational links.

03/

WIRELESS SETTINGS

- 3.0** Overview
- 3.1** Wireless Status
- 3.2** Basic Security Settings
- 3.3** Advanced Security Settings
- 3.4** Wireless MAC
Authentication
- 3.5** 802.11 Mode
- 3.6** Other Advanced Wireless
Options

Wireless networking enables you to free yourself from wires and plugs, making your devices more accessible and easier to use.

You can create a wireless network, including accessing and configuring wireless security options.

OVERVIEW

3.0/ OVERVIEW

Your Gateway provides you with wireless connectivity using the 802.11b, g, n, or ac standards. These are the most common wireless standards.

802.11b has a maximum data rate of 11 Mbps, 802.11g has a maximum data rate of 54 Mbps, 802.11n has a maximum data rate of 450 Mbps, and 802.11ac has a maximum data rate of 1300 Mbps.

802.11b and g standards operate in the 2.4 GHz range. 802.11n operates in both the 2.4 GHz and 5 GHz ranges. 802.11ac operates in the 5 GHz range.

Note: 802.11 b is a legacy mode and is not recommended. Even one 802.11b device connected to the network will slow your entire wireless network.

The wireless service and wireless security are activated by default. The level of security is preset to WPA2 encryption using a unique default WPA2 key (also referred to as a passphrase or password) pre-configured at the factory. This information is displayed on a sticker located on the side of your Gateway.



Default login credentials
Please note: password letters are all lower-case

Wireless network name (ESSID)	XXXXXXXXXX	
Wireless password (WPA2)	XXXXXXXXXXXXXXXXXX	
Administration URL	myfiosgateway.com	
Administrator password	XXXXXXXXXX	

To reboot, press and hold the WPS button for 10 seconds.

Online tutorials : www.verizon.com/quickguides

Your Gateway integrates multiple layers of security. These include Wired Equivalent Privacy (WEP), Wi-Fi Protected Access (WPA/WPA2), and firewall.

3.1/ WIRELESS STATUS

Use the Wireless Status feature to view the status of your Gateway's wireless network.

To view the status:

1. Access the Main page. You can quickly view your Gateway's wireless status in the My Network column. This includes all devices that have recently accessed or are currently connected to the network.

The screenshot displays the Verizon Gateway web interface. At the top is a navigation bar with the Verizon logo and icons for MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL, PARENTAL CONTROLS, ADVANCED, and SYSTEM MONITORING. The main content area is divided into three columns:

- Status:** Shows Router Status as **Connected** (Ethernet Status: Connected, Connection Type: DHCP, IP Address: 10.0.7.98).
- My Network:** Lists connected devices:
 - Work-Laptop:** Connection: Ethernet, IP Address: 192.168.1.33, Status: Active.
 - 192.168.1.152:** Connection: Ethernet, IP Address: 192.168.1.152, Status: Active.
 - new-host-1:** Connection: Wireless 5G, IP Address: 192.168.1.153, Status: Active.
- Verizon Zone:** Links to Verizon.com, My Verizon Account, My Business Account, Support, and Watch TV Online.

On the left side, under **Quick Links**, there is a **Broadband Connection** section and a list of links: User Guide, Change Wireless Settings, Change Admin Password, Port Forwarding, GNU General Public License, and Verizon Help.

WIRELESS STATUS

2. Select the **Wireless Settings** icon. The Wireless Status page displays additional wireless details.

verizon

MAIN

WIRELESS SETTINGS

MY NETWORK

FIREWALL

PARENTAL CONTROLS

ADVANCED

SYSTEM MONITORING

Main

Wireless Status

Basic Security Settings

Advanced Security Settings

Wi-Fi Protected Setup (WPS)

Logout

2.4 GHz Wireless Status

Radio Enabled:	Yes
SSID:	FiOS-T6ZA4
Channel:	Automatic
Security Enabled:	Yes
WEP 64-bit:	N/A
WPA2:	password
SSID Broadcast:	Enabled
MAC Authentication:	Disabled
Wireless Mode:	Compatibility Mode(802.11b/g/n)
WMM:	Enabled
Received Packets:	0
Sent Packets:	0

5 GHz Wireless Status

Radio Enabled:	Yes
SSID:	FiOS-T6ZA4
Channel:	Automatic
Security Enabled:	Yes
WEP 64-bit:	N/A
WPA2:	password
SSID Broadcast:	Enabled
MAC Authentication:	Disabled
Wireless Mode:	N and AC Mode(802.11n/ac)
WMM:	Enabled
Received Packets:	611

-
3. On the Wireless Status page for either 2.4 GHz or 5 GHz, the following information displays:
- **Radio Enabled** - displays whether the wireless radio is active. When the radio is not enabled, no wireless devices will be able to connect to the home network.
 - **SSID** - displays the SSID (Service Set Identifier) shared among all devices on a wireless network. The SSID is the network name. All devices must use the same SSID.
 - **Channel** - displays the channel the wireless connection is currently using.
 - **Security Enabled** - displays the type of security active on the wireless connection as well as the security encryption key.
 - **SSID Broadcast** - displays whether your Gateway is broadcasting its SSID. If activated, the SSID of your Gateway wireless network is broadcast wirelessly. If not activated, the SSID is hidden and the wireless clients must be manually configured to use the SSID.
 - **MAC Authentication** - displays whether your Gateway is using MAC (Media Access Control) address authentication to allow wireless devices to join the network.
 - **Wireless Mode** - displays the types of wireless device that can join the network.
 - **WMM** - displays whether WMM is enabled on your Gateway.

WIRELESS STATUS AND BASIC SECURITY SETTINGS

- *Packets Received/Sent* - displays the number of packets received and sent since the wireless capability was activated.

3.2/ BASIC SECURITY SETTINGS

You can configure the basic security settings for your Gateway's wireless network.

Note: *Your Gateway's recommended wireless security encryption is set to WPA2. This is the factory default.*

This section explains how to activate WEP (Wired Equivalent Privacy) wireless security. WEP is a significantly less robust security compared to WPA or WPA2 and is not recommended. To set up WPA2 wireless security, refer to the WPA2 section.

To configure basic security to WEP:

1. On the Wireless Setting page, select **Basic Security Settings**.

verizon

MAIN WIRELESS SETTINGS MY NETWORK FIREWALL PARENTAL CONTROLS ADVANCED SYSTEM MONITORING

Main
Wireless Status
Basic Security Settings
Advanced Security Settings
Wi-Fi Protected Setup (WPS)
Logout

Basic Security Settings

Instructions for setting up a wireless network using basic WEP wireless security are set out below. However, we recommend that you establish stronger security using the Advanced Security Settings. To establish stronger security, select "OFF" in Step 4, click on APPLY and then go to Advanced Security Settings to setup security.

1. Turn Wireless On

2.4 GHz Wireless: ☒ On ☐ Off 5 GHz Wireless: ☒ On ☐ Off

2. Change the SSID setting to any name or code you want
(SSID is the same thing as the name of your Wireless Network.)

2.4 GHz SSID: 5 GHz SSID:

3. Channel
To change the channel of the frequency band at which the Router communicates, please enter it below. Then click apply to save your settings:

2.4 GHz Channel: 5 GHz Channel:

2. To activate the wireless radio, click the **On** radio button.
3. If desired, enter a new name for the wireless network in the **SSID** field or leave the default name that displays automatically.
4. Select the channel you want the wireless radio to use to communicate or accept the default channel, then select the **Keep my channel selection during power cycle** check box to save your channel selection when your Gateway is rebooted.

BASIC SECURITY SETTINGS

4. Click on the button next to WEP

WEP prevents unintentional connections to your wireless home network. For greater protection against hacking and security breaches, see Advanced Security Settings.

2.4 GHz WEP ☐ WEP ☒ Off

5. Select a WEP Key

- To create a 64/40 WEP Hex Key, you need to enter a combination of 10 digits. You can choose any letter from A-F or any number from 0-9. Sample HEX WEP Key: 0FB310FF28.
- To create a 64/40 WEP ASCII, you need to enter a combination of 5 ASCII characters. Sample ASCII WEP Key: hello.
- To create a 128/108 WEP Hex Key, you need to enter a combination of 26 digits. You can choose any letter from A-F or any number from 0-9. Sample HEX WEP Key: 0FB310FF280FB310FF28123456.
- To create a 128/108 WEP ASCII, you need to enter a combination of 13 ASCII characters. Sample ASCII WEP Key: hellohello123.

Password Tips:

Use a mix of letters and numbers. Don't use personal information that could be guessed or easily discovered (for example, names of family members, birthdates, phone numbers)

2.4 GHz Wireless

Select a WEP Key:

Key Code:

5. To turn on WEP (Wired Equivalent Privacy) security, click the **WEP** radio button.
6. Select a WEP security level as 64/40 bit or 128/104 bit.
7. Enter the key code. If using a HEX key, each character must be a letter from A to F or a number from 0 to 9. If the key is ASCII, each character can be either any ASCII or alphanumeric character.

If using 64/40 bit, enter 10 HEX or 5 ASCII/alphanumeric characters. If 128/104, enter 26 HEX or 13 ASCII/alphanumeric characters.

8. Be sure to write down the wireless settings for future use. Other wireless devices that will be connected to your

Gateway must be configured to use these settings to join your Gateway's wireless network.

9. Click **Apply** to save changes.

3.3/ **ADVANCED SECURITY SETTINGS**

You can change your advanced wireless security settings, such as configuring wireless encryption to help protect your network from unauthorized access or damage to your network devices; disable your SSID broadcast to secure your wireless traffic; stop your Gateway from broadcasting your SSID; set Wireless MAC Authentication to limit access to specific wireless devices; and change the wireless mode to limit or allow access to your wireless network based on the type of technology as well as other advanced wireless options.

To modify the security settings for either 2.4 GHz or 5 GHz:

1. In the Wireless Settings page, select **Advanced Security Settings**.

ADVANCED SECURITY SETTINGS



 MAIN WIRELESS SETTINGS MY NETWORK FIREWALL PARENTAL CONTROLS ADVANCED SYSTEM MONITORING

Main

Wireless Status

Basic Security Settings

Advanced Security Settings

Wi-Fi Protected Setup (WPS)

Logout

Advanced Security Settings

IMPORTANT: For a more secure wireless network use Advanced Security Settings.

Level 1: Securing your wireless traffic as it transmits through the air, – we recommend you use WPA2 security, unless you experience compatibility issues.

2.4 GHz Security	5.0 GHz Security
☐ WEP	
☐ WPA2/WPA mixed mode	☐ WPA2/WPA mixed mode
☐ WPA2	☐ WPA2

Level 2: Stop your router from broadcasting your Wireless Network Name (SSID)
SSID Broadcast (Allows you to prevent users who do not know your SSID name to access your router wirelessly.)

2.4 GHz SSID Broadcast	5.0 GHz SSID Broadcast
☐	☐

Level 3: Limit access to certain wireless devices

[Wireless MAC Authentication](#) (Allows you to limit access to your wireless network by allowing only those devices with specific MAC addresses.)

[802.11 b/g/n/ac Mode](#) (Allows you to limit access to your wireless network based on the type of technology.)

[Other Advanced Wireless Options](#)

3.3a/ LEVEL 1: SECURING YOUR NETWORK

In the **Level 1** section, select the type of wireless security. Depending on your selection, one of the following pages displays.

WEP

If WEP was selected, the WEP Settings page displays.

Warning: WEP provides a low level of security and is not recommended. Additionally, the WEP security setting will drop your Gateway's wireless performance to a maximum data rate of 54 Mbps, and will disable Wi-Fi Protected Setup (WPS). WEP should only be enabled if you have wireless client devices that don't support WPA or WPA2.

To set the WEP security:

1. In the **Network Authentication** field, select the authentication level as Open System Authentication, Shared Key Authentication or Both.



 MAIN

 WIRELESS SETTINGS

 MY NETWORK

 FIREWALL

 PARENTAL CONTROLS

 ADVANCED

 SYSTEM MONITORING

Main

Wireless Status

Basic Security Settings

Advanced Security Settings

Wi-Fi Protected Setup (WPS)

Logout

2.4 GHz WEP Settings

WEP Mode: WEP Only

Network Authentication: Both

WEP Keys

- To create a 64/40 WEP Hex Key, you need to enter a combination of 10 digits. You can choose any letter from A-F or any number from 0-9. Sample HEX WEP Key: 0FB310FF28.
- To create a 64/40 WEP ASCII, you need to enter a combination of 5 ASCII characters. Sample ASCII WEP Key: hello.
- To create a 128/108 WEP Hex Key, you need to enter a combination of 26 digits. You can choose any letter from A-F or any number from 0-9. Sample HEX WEP Key: 0FB310FF280FB310FF28123456.
- To create a 128/108 WEP ASCII, you need to enter a combination of 13 ASCII characters. Sample ASCII WEP Key: hellohello123.

Password Tips:
Use a mix of letters and numbers. Don't use personal information that could be guessed or easily discovered (for example, names of family members, birthdates, phone numbers)

Active	Encryption Key	Entry Method	Key Length
☒ 1	jazzy	ASCII	64/40 - Bit
☐ 2		HEX	64/40 - Bit
☐ 3		HEX	64/40 - Bit
☐ 4		HEX	64/40 - Bit

Back

Apply

ADVANCED SECURITY SETTINGS

2. In the **WEP Keys** section, activate the encryption key by entering the key name in the **Encryption Key** column. If HEX, the key must be hexadecimal digits. If ASCII, any characters can be used.
3. Specify the length of key 1 by selecting 64/40 bit or 128/104 bit in the **Key Length** field and HEX or ASCII in the **Entry Method** field.
4. Click **Apply** to save changes.

WPA/WPA2 Mixed Mode

If WPA/WPA2 Mixed Mode (Wi-Fi Protected Access) was selected, the WPA Key page displays. Selecting WPA/WPA2 Mixed Mode allows the security mode to be automatically set by the gateway based on the security capabilities of the client device. WPA/WPA2 mixed mode is the default wireless security protocol.

To set the WPA/WPA2 Mixed Mode security:

1. Enter the Pre-Shared Key as a wireless password.

The screenshot shows a configuration page for WPA/WPA2 Mixed Mode security. At the top, 'Authentication Method:' is set to 'Pre-Shared Key'. Below this, the 'Pre-Shared Key:' field contains the text 'LANB00H0W1F1C001128'. To the left of this field is a help icon and the text 'Tips for creating secure passwords:'. Below the key field, the 'Group Key Update Interval' is checked, and the interval is set to '3600' seconds. At the bottom of the form are 'Back' and 'Apply' buttons.

2. To activate the group key update interval, select the **Group Key Update Interval** check box and set the interval time in seconds.

3. Click **Apply** to save the changes.

WPA2

If WPA2 (Wi-Fi Protected Access II) was selected, the WPA2 page displays.

To set the WPA2 security:

1. Enter the Pre-Shared Key.

Authentication Method: Pre-Shared Key

Pre-Shared Key: [Masked Password]

❓ Tips for creating secure passwords:

☒ Group Key Update Interval 3600 Seconds

Back Apply

2. To activate the group key update interval, select the **Group Key Update Interval** check box and set the interval time in seconds.
3. Click **Apply** to save the changes.

3.3b/ LEVEL 2: SSID BROADCAST

You can configure your Gateway's SSID broadcast capabilities to allow or disallow wireless devices from automatically using a broadcast SSID name to detect your Gateway wireless network.


ADVANCED SECURITY SETTINGS

To enable or disable SSID broadcast:

1. In the Advanced Settings page, locate the **Level 2** section.



2. Click the **2.4 GHz SSID Broadcast** or **5 GHz SSID Broadcast** link for the wireless network you wish to modify. The following example uses the 2.4 GHz network. The display configuration looks basically the same for the 5 GHz network.

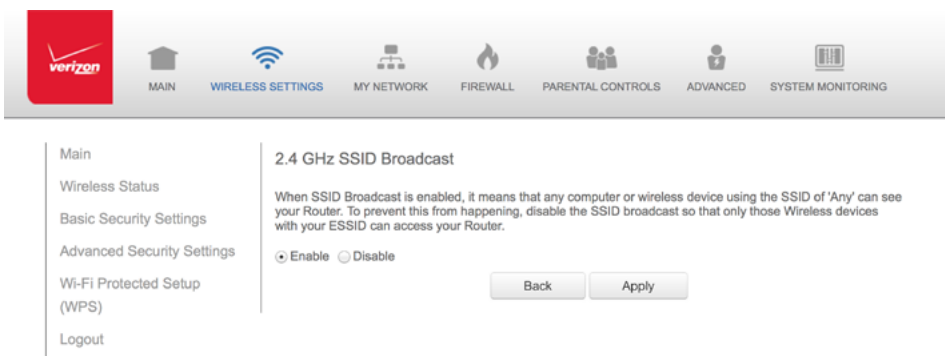

3. To enable SSID broadcasting, click the **Enable** radio button. SSID broadcast is enabled by default. The SSID of the wireless network will be broadcast to all wireless devices.

4. To disable SSID broadcasting, click the **Disable** radio button. The public SSID broadcast will be hidden from all wireless devices. You will need to manually configure additional wireless devices to join the wireless network.
5. Click **Apply** to save the changes.

3.3c/ LEVEL 3: LIMIT ACCESS

You can configure your Gateway to limit access to your wireless network allowing access only to those devices with specific MAC addresses or based on the type of wireless technology used.

To limit access:

1. In the Advanced Settings page, locate the **Level 3** section.

Level 3: Limit access to certain wireless devices

[Wireless MAC Authentication](#) (Allows you to limit access to your wireless network by allowing only those devices with specific MAC addresses.)

[802.11 b/g/n/ac Mode](#) (Allows you to limit access to your wireless network based on the type of technology.)

[Other Advanced Wireless Options](#)

2. To allow only devices with specific MAC addresses, click the **Wireless MAC Authentication** link. The Wireless MAC Authentication page displays. For additional details, refer to the **Wireless MAC Authentication** section.
3. To limit access based on the type of technology, click the **802.11 b/g/n/ac Mode** link. The 802.11 b/g/n/ac Mode page displays. For additional details, refer to the **802.11 b/g/n/ac Mode** section.

WIRELESS MAC AUTHENTICATION

4. To access other advanced wireless options, click the **Other Advanced Wireless Options** link. The Other Advanced Wireless Options page displays. For additional details, refer to the **Other Advanced Wireless Options** section.

3.4/ WIRELESS MAC AUTHENTICATION

You can allow or deny access to your wireless network by specifying devices with specific MAC addresses.

To set wireless MAC authentication:

1. On the Advanced Settings page, locate the **Level 3** section and click the **Wireless MAC Authentication** link. The Wireless MAC Authentication page displays.



 MAIN
  WIRELESS SETTINGS
  MY NETWORK
  FIREWALL
  PARENTAL CONTROLS
  ADVANCED
  SYSTEM MONITORING

Main
 Wireless Status
 Basic Security Settings
 Advanced Security Settings
 Wi-Fi Protected Setup (WPS)
 Logout

Wireless MAC Authentication

To limit access to this Router using the MAC address of specific wireless devices, please follow the instructions below.

- Click the box next to 'Enable Access List'

If you want to limit access to a certain list of wireless devices:

- Click the box next to 'Accept all devices listed below'
- Enter the MAC Address of first Wireless device and then click Add.
- Repeat the process for each Wireless device that you want to have access to the network.
- Verify that all devices were entered properly by reviewing the list at the bottom.
- Click Apply to save your settings.

If you want to allow access to any wireless device except for a certain group:

- Click the box next to 'Deny all devices listed below'.
- Enter the MAC Address of first Wireless device that you want denied and then click Add.
- Repeat the process for each Wireless device that you do NOT want to have access to the network.
- Verify that all devices were entered properly by reviewing the list at the bottom.
- Click Apply to save your settings.

2.4 GHz Wireless

☐ Enable Access List
☐ Accept all devices listed below
☒ Deny all devices listed below

Client MAC Address:

Add

Sample MAC Address: 00:20:e0:00:41:00

List:

AB:CD:EF:GH:IJ:KL

Remove

11:CD:EF:GH:IJ:KL

Remove

5.0 GHz Wireless

☐ Enable Access List
☐ Accept all devices listed below
☒ Deny all devices listed below

Client MAC Address:

Add

Sample MAC Address: 00:20:e0:00:41:00

List:

33:CD:EF:GH:IJ:KL

Remove

44:CD:EF:GH:IJ:KL

Remove

Back

Apply

verizon.com/fios | ©2014 Verizon. All Rights Reserved.

802.11 MODE

2. To enable access control, select the **Enable Access List** check box.
3. Select either:
 - **Accept all devices listed below** – allows only the listed devices to access the wireless network.
Warning: This will block wireless network access for all devices not in the list. Only devices in the list will be able to connect to the wireless network.
 - **Deny all devices listed below** – denies access to the listed devices. All other wireless devices will be able to access the wireless network if they use the correct wireless password.
4. Enter the MAC address of a device, then click **Add**.
5. Repeat step 2 to add additional devices, as needed.
6. To remove a specific device's MAC address, click the **Remove** button next to the specific MAC address.
7. When all changes are complete, click **Apply** to save changes.

3.5/ 802.11 MODE

From the 802.11 Mode page, you can limit the wireless access to your network by selecting the 2.4 GHz and 5 GHz wireless communication standard (mode) best suited or compatible with the devices you allow access to your wireless network.

verizon

MAIN WIRELESS SETTINGS MY NETWORK FIREWALL PARENTAL CONTROLS ADVANCED SYSTEM MONITORING

Main
Wireless Status
Basic Security Settings
Advanced Security Settings
Wi-Fi Protected Setup (WPS)
Logout

802.11 Mode

Access to the Router's network can be restricted to wireless devices using either 802.11b/g (11Mbps/54Mbps) or 802.11n (130 Mbps) wireless devices. Select the option that best applies to your wireless network. Then click Apply button to save your settings.

NOTE:
'Compatibility Mode' to support 802.11bg & 802.11n.
'Legacy Mode' to support only 802.11bg.

2.4 GHz Wireless Mode: Performance Mode(802.11n)

5 GHz Wireless Mode: N Only Mode(802.11n)

Back Apply

To select the 802.11 Mode:

1. On the Advanced Settings page, locate the **Level 3** section and click the **802.11 Mode** link. The 802.11 Mode page displays.
2. Select the 2.4 GHz Wireless Mode as follows:
 - **Compatibility** – This is the default mode setting, providing a good balance of performance and compatibility with existing wireless devices. 802.11b, g, and n devices can connect.
 - **Legacy** – For older wireless devices. Only 802.11b and g devices can connect. 802.11b (legacy mode) will cause your wireless network to slow and is not recommended.
 - **Performance** – For newer wireless 802.11n devices only. No other devices can be used.

OTHER ADVANCED WIRELESS OPTIONS

3. Select the 5 GHz Wireless Mode as follows:
 - **N and AC Mode** – This is the default setting. Both 802.11n and 802.11ac are available on the 5 GHz frequencies.
 - **N Only Mode** – The 5 GHz frequencies are available to 802.11n devices. 802.11ac is not enabled.
 - **AC Only Mode** – This provides maximum performance. 802.11ac devices will have exclusive use of the 5 GHz frequencies and 802.11n devices will not be able to connect at 5 GHz.
4. Click **Apply** to save the changes.

3.6/ OTHER ADVANCED WIRELESS OPTIONS

You can view additional wireless options.

To view the options:

1. In the Advanced Settings page, locate the **Level 3** section and click **Other Advanced Wireless Options** link. A warning message displays.
2. Click **Yes**. The Other Advanced Wireless Options page displays.



 MAIN
  WIRELESS SETTINGS
  MY NETWORK
  FIREWALL
  PARENTAL CONTROLS
  ADVANCED
  SYSTEM MONITORING

Main
 Wireless Status
 Basic Security Settings
 Advanced Security Settings
 Wi-Fi Protected Setup (WPS)
 Logout

2.4 GHz Advanced Wireless Options

Transmission Rate: Auto

Channel Width:

Transmit Power: 30 %

CTS Protection Mode: None

CTS Protection Type: cts-only

Frame Burst - Max Number: 10

Frame Burst - Burst Time: 15

Beacon Interval: 60 ms

DTIM Interval: 3 ms

Fragmentation Threshold: 258

RTS Threshold: 60

MSDU Aggregation:

☐ Enable
 ☒ Disable

MPDU Aggregation:

☒ Enable
 ☐ Disable

802.11n Guard Interval: Dynamic

3. View the following options:

Caution: These settings should only be configured by experienced network technicians. Changing the settings could adversely affect the operation of your Gateway and your local network.

OTHER ADVANCED WIRELESS OPTIONS

- **Transmission Rate** – displays status as Auto
- **Channel Width** – Controls the bandwidth of the wireless signal
- **Transmit Power** – adjusts the power of the wireless signal
- **CTS (Clear to Send) Protection Mode** – allows mixed 802.11b/g/n/ac networks to operate at maximum efficiency
- **CTS Protection Type** – displays cts, which is only for mixed 802.11b/g/n/ac networks or rts_cts, which is for 802.11a/b/g networks
- **Frame Burst – Max Number** – allows packet bursting, which increases overall network speed
- **Frame Burst – Burst Time** – indicates the burst time of the frame bursts
- **Beacon Interval** – displays the time period of the beacon interval
- **DTIM (Delivery Traffic Indication Message) Interval** – provides a countdown mechanism, informing wireless network clients of the next window for listening to broadcast and multicast messages
- **Fragmentation Threshold** – increases the reliability of frame transmissions on the wireless network
- **RTS Threshold** – controls the size of the data packet that the low level RF protocol issues to an RTS packet

- **MSDU Aggregation** – enables or disables MSDU aggregation
 - **MPDU Aggregation** – enables or disables MPDU aggregation
5. To access the WMM settings, click the **WMM Settings** link.
 6. Click **Apply** to save changes.

3.6a/ WMM SETTINGS

You can prioritize the types of data transmitted over the wireless network using the advanced WMM settings.

Wireless QoS (WMM) can improve the quality of service (QoS) for voice, video, and audio streaming over Wi-Fi by prioritizing these data streams.


WMM Power Save can improve battery life on mobile Wi-Fi devices such as smart phones and tablets by fine-tuning power consumption.

WMM (Wi-Fi Multimedia) QoS and Power Save require a wireless client device which also supports WMM.

To set the options:

1. In the Advanced Wireless Options page, click **WMM Settings** link. A warning message displays.
2. Click **Yes**. The WMM Settings page displays.

OTHER ADVANCED WIRELESS OPTIONS

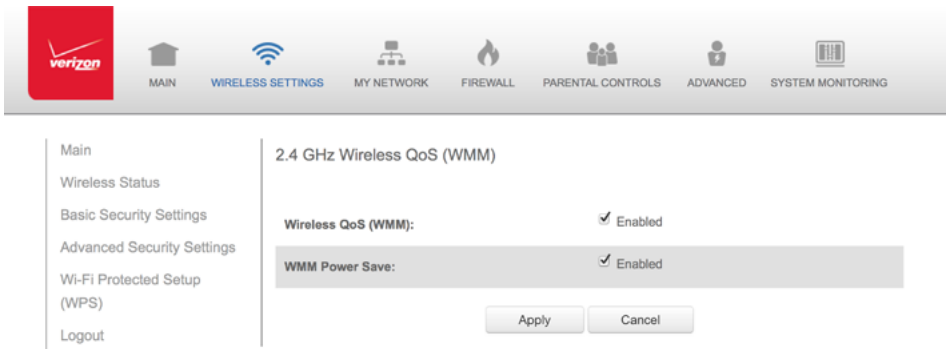

3. To enable Wireless QoS (WMM), select the **Enabled** check box.
4. To enable WMM Power Save, enable **Wireless QoS (WMM)** first, then enable WMM Power Save by selecting the **Enabled** check box.
5. Click **Apply** to save changes.

04/

CONFIGURING MY NETWORK SETTINGS

- 4.0** Accessing My Network Settings
- 4.1** Using My Network Settings

You can configure the basic network settings for your Gateway's network.

ACCESSING MY NETWORK SETTINGS AND USING MY NETWORK SETTINGS


Caution: The settings described in this chapter should only be configured by experienced network technicians. Changes could adversely affect the operation of your Gateway and your local network.

4.0/ ACCESSING MY NETWORK SETTINGS

My Network allows you to view and manage your network connections and devices. You can block websites and Internet services, set port forwarding, view device details, and rename devices.

To view your network connections:

1. On the Main page, select the **My Network** icon. The My Network page opens with our current status displayed.

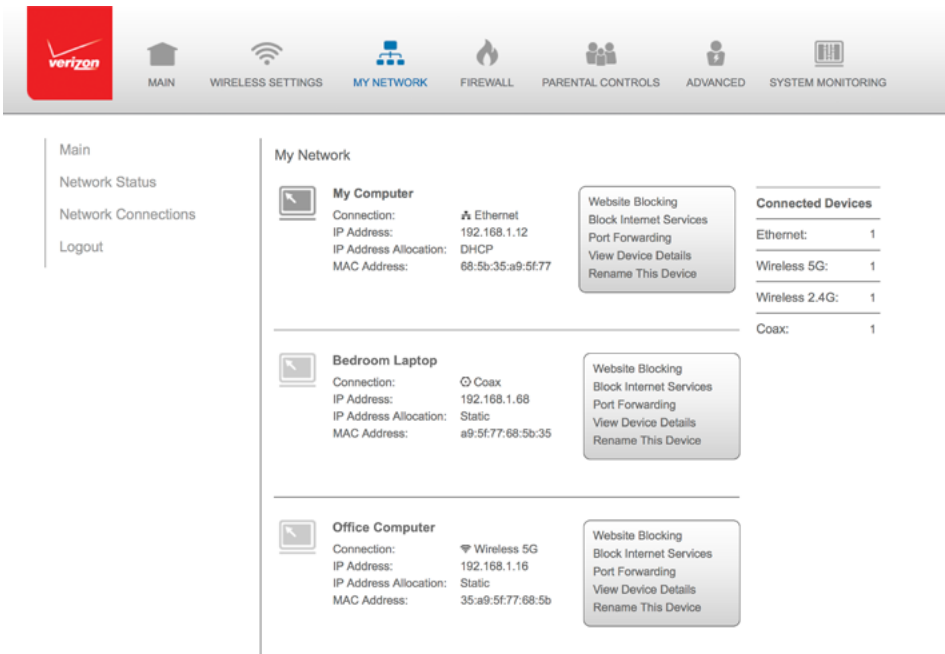

4.1/ USING MY NETWORK SETTINGS

You can access and configure common network parameters:

- **Website Blocking** - To block specific websites, click **Website Blocking**. The Parental Controls page displays.

For additional information about blocking websites, refer to **Chapter 7 Setting Parental Controls**.

- **Block Internet Services** - Internet services blocking prevents a device on your network from accessing specific services, such as receiving email or downloading files from FTP sites. Block Internet services by locating the device, then clicking **Block Internet Services**. The Access Control page displays.

For additional information on blocking Internet services, refer to the **Access Control** section in **Chapter 6 Configuring Security Settings**.

- **Port Forwarding** - Port Forwarding allows your network to be exposed to the Internet in specific limited and controlled ways. For example, you could allow specific applications, such as gaming, voice, and chat, to access servers in the local network. To access the Port Forwarding page, click **Port Forwarding**.

For additional information, refer to the **Port Forwarding** section in **Chapter 6 Configuring Security Settings**.

- **View Device Details** - Click **View Device Details** to display the Device Information page and view the selected device's information, such as IP Address, MAC address, Network Connection, Lease Type,

USING MY NETWORK SETTINGS

Port Forwarding Services, and Windows Shared Folder as well as the Ping Test option. You can also click the device's icon in the Main page to display the Device Information page.

- ***Rename this Device*** - To change the name of a specific device, click **Rename this Device**. The Rename Device page displays.

If desired, enter the new device name and/or select a different icon. Click **Apply** to save changes. The My Network page will open with the new name and icon displayed.

05/

USING NETWORK CONNECTIONS

- 5.0** Accessing Network Connections
- 5.1** Network (Home/Office) Connection
- 5.2** Ethernet/Coax Connection
- 5.3** Wireless Access Point Connection
- 5.4** Broadband Ethernet/Coax Connection

ACCESSING NETWORK CONNECTIONS

Your Gateway supports various local area network (LAN) and wide area network (WAN), or Internet connections using Ethernet or coaxial cables.

You can configure aspects of the network and Internet connections as well as create new connections.


Caution: The settings described in this chapter should only be configured by experienced network technicians. Changes could adversely affect the operation of your Gateway and your local network.

5.0/ ACCESSING NETWORK CONNECTIONS

You can access your network connections and view the connections by connection type.


To access the network connections:

1. Select **My Network**, then select **Network Connections**.

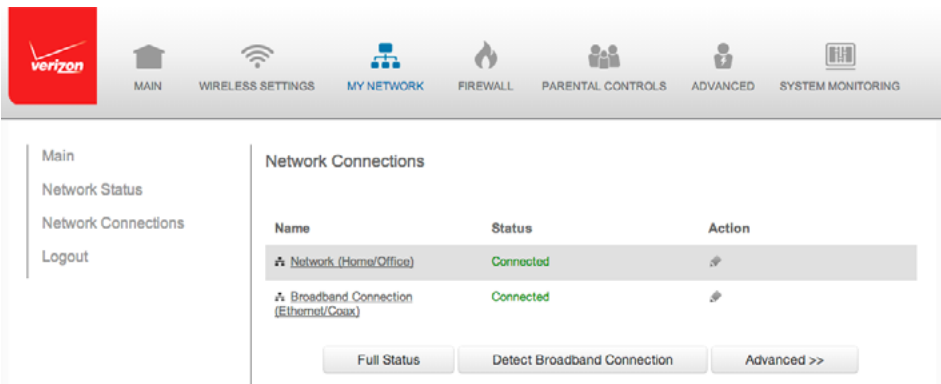

2. To display all connection entries, click the **Advanced** button.

NETWORK (HOME/OFFICE) CONNECTION

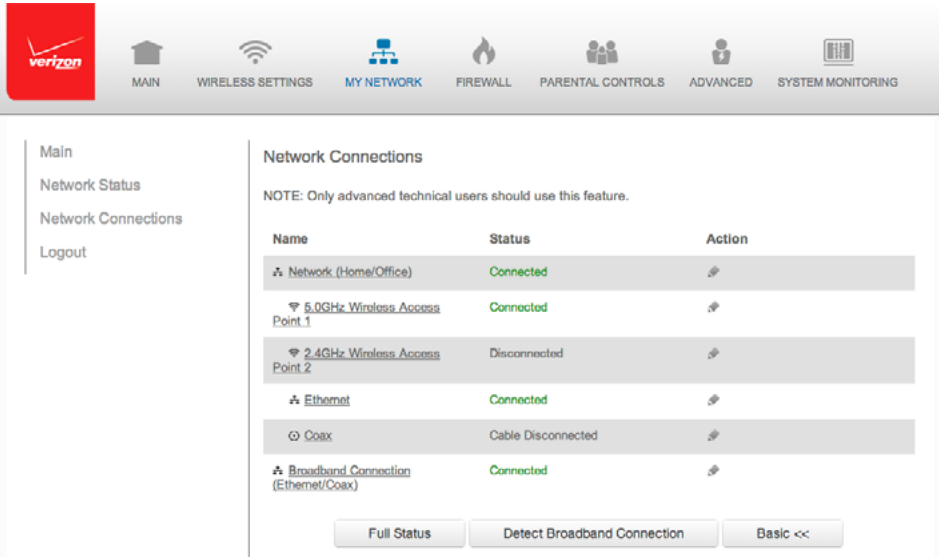

3. To view and edit the details of a specific network connection, click the hyperlinked name or the action icon. The following sections detail the types of network connections that you can view.

5.1/ NETWORK (HOME/OFFICE) CONNECTION

You can view the properties of your local network. This connection is used to combine several network interfaces under one virtual network. For example, you can create a home/office network connection for Ethernet and other network devices.

Note: When a network connection is disabled, the formerly underlying devices connected to it will not be able to obtain a new DHCP address from that Gateway network interface.

To view the connection:

1. On the Network Connections page, click the **Network (Home/Office)** connection link. The Network (Home/Office) Properties page displays.

The screenshot shows the Verizon FiOS Network (Home/Office) Properties page. The top navigation bar includes links for MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL, PARENTAL CONTROLS, ADVANCED, and SYSTEM MONITORING. The left sidebar lists Main, Network Status, Network Connections, and Logout. The main content area displays the following information:

Network (Home/Office) Properties	
Note: Only advanced technical users should use this feature.	
Name:	Network (Home/Office)
Status:	Connected
Network:	Network (Home/Office)
Underlying Device:	5.0GHz Wireless Access Point 1 2.4GHz Wireless Access Point 2 Ethernet Cox
Connection Type:	Bridge
MAC Address:	c8:a7:0a:82:4b:93
IP Address:	192.168.1.1
Subnet Mask:	255.255.255.0
IP Address Distribution:	DHCP Server
Received Packets:	28617
Sent Packets:	5723
Time Span:	0:50

At the bottom of the page are three buttons: Apply, Cancel, and Settings.

2. To rename a network connection, enter the new network name in the **Name** field.
3. Click **Apply** to save the changes.

NETWORK (HOME/OFFICE) CONNECTION

CONFIGURING THE HOME/OFFICE NETWORK

To configure the network connection:

1. In the Network (Home/Office) Properties page, click **Settings**. The configuration page displays.



MAIN

WIRELESS SETTINGS

MY NETWORK

FIREWALL

PARENTAL CONTROLS

ADVANCED

SYSTEM MONITORING

Main

Network Status

Network Connections

Logout

Network (Home/Office) Properties

NOTE: Only advanced technical users should use this feature.

General

Status:

Connected

Network:

Network (Home/Office)

Connection Type:

Bridge

Physical Address:

d4:a9:28:05:2d:85

MTU:

Automatic

1500

Internet Protocol:

Use the Following IP Address

IP Address:

192.168.1.1

Subnet Mask:

255.255.255.0

Refresh

2. Configure the following sections, as needed.

GENERAL

In the **General** section, verify the following information:

- **Status** - displays the connection status of the network.
- **Network** – displays the type of network connection.

- **Connection Type** - displays the type of connection.
- **Physical Address** - displays the physical address of the network card used for the network
- **MTU** - specifies the Maximum Transmission Unit (MTU) specifies the largest packet size permitted for Internet transmissions:
 - **Automatic** - sets the MTU at 1500
 - **Automatic by DHCP** - sets the MTU according to the DHCP connection
 - **Manual** - allows you to manually set the MTU
- **Internet Protocol** - in the internet protocol section, specify one of the following
 - **Use the Following IP Address** - the network connection uses a permanent or static IP address and subnet mask address, provided by Verizon or experienced network technician.

BRIDGE

In the **Bridge** section of the Configure Network (Home/Office), you can configure the various LAN interfaces. By default, the Ethernet, Coax, and Wireless Access Point connections are included in the 'Network (Home/Office)' bridge.

Caution: Do not change these settings unless specifically instructed to by Verizon. Changes could adversely affect the operation of your Gateway and your local network.

NETWORK (HOME/OFFICE) CONNECTION


Bridge			
Name	VLANs	Status	Action
 Network (Home/Office)	Disabled	Connected	
☐  Broadband Connection (Ethernet/Coax)	Disabled	Connected	
☒  5.0GHz Wireless Access Point 1	Disabled	Disconnected	
☒  2.4GHz Wireless Access Point 2	Disabled	Disconnected	
☒  Ethernet	Disabled	Connected	
☒  Coax	Disabled	Cable Disconnected	

Verify the following information:

- **Status** – displays the connection status of a specific network connection.
- **Action** – contains an icon that, when clicked, generates the next lower-level configuration page for the specific network connection or network device.

IP ADDRESS DISTRIBUTION

The IP Address Distribution section of the Properties settings is used to configure your Gateway’s Dynamic Host Configuration Protocol (DHCP) server parameters.

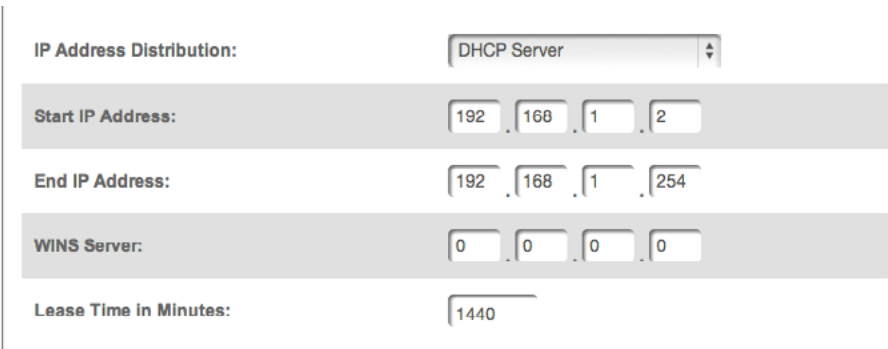

The screenshot shows a configuration interface for IP Address Distribution. It includes a dropdown menu for 'IP Address Distribution' set to 'DHCP Server'. Below this are three rows of input fields: 'Start IP Address' with values 192, 168, 1, 2; 'End IP Address' with values 192, 168, 1, 254; and 'WINS Server' with values 0, 0, 0, 0. At the bottom, there is a 'Lease Time in Minutes' field set to 1440.

IP Address Distribution:	DHCP Server
Start IP Address:	192 . 168 . 1 . 2
End IP Address:	192 . 168 . 1 . 254
WINS Server:	0 . 0 . 0 . 0
Lease Time in Minutes:	1440

Once enabled and configured, the DHCP server automatically assigns IP addresses to any network devices which are set to obtain their IP address dynamically.

If DHCP Server is enabled on your Gateway, configure the network devices as DHCP Clients. There are 2 basic options in this section: Disabled and DHCP Server.

To set up the Gateway's network bridge to function as a DHCP server:

1. In the **IP Address Distribution** section, select the DHCP server. Once enabled, the DHCP server provides automatic IP assignments (also referred to as IP leases) based on the preset IP range defined below.
 - **Start IP Address** – Enter the first IP address in the IP range that the Gateway will automatically begin assigning IP addresses from. Since your Gateway's IP address is 192.168.1.1, the default Start IP Address is 192.168.1.2.

NETWORK (HOME/OFFICE) CONNECTION

- **End IP Address** – Enter the last IP address in the IP range that the Gateway will automatically stop the IP address allocation at. The maximum end IP address range that can be entered is 192.168.1.254.
2. If Windows Internet Naming Service (WINS) is being used, enter the WINS server address.
 3. In the **Lease Time in Minutes** field, enter the amount of time a network device is allowed to connect to the Gateway with its currently issued dynamic IP address.
 4. Click **Apply** to save changes.

ROUTING

You can configure your Gateway to use static or dynamic routing.

- **Static routing** – specifies a fixed routing path to neighboring destinations based on predetermined metrics.
- **Dynamic routing** – automatically adjusts how packets travel on the network. The path determination is based on network/device reachability and status of network being traveled.

To configure routing:

1. In the **Routing Table** section, click **Add New Route** to display and modify the new route configuration page.

verizon

MAIN WIRELESS SETTINGS MY NETWORK FIREWALL PARENTAL CONTROLS ADVANCED SYSTEM MONITORING

Main
Network Status
Network Connections
Logout

Route Settings

Name: Network (Home/Office)

Destination: 0 . 0 . 0 . 0

Netmask: 255 . 255 . 255 . 255

Gateway: 0 . 0 . 0 . 0

Metric: 0

Apply Cancel

COMPLETE NETWORK CONNECTION CONFIGURATION UPDATES

To save your changes click **Apply**.

5.2/ BROADBAND CONNECTION

You can view the properties of your broadband connection (your connection to the Internet). This connection may be via either Ethernet or Coaxial cable.

To view the connection settings:

1. In the Network Connections page, click the **Broadband Connection (Ethernet/Coax)** link.

ETHERNET/COAX CONNECTION

The screenshot shows the Verizon Gateway configuration interface. At the top is a navigation bar with the Verizon logo and icons for MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL, PARENTAL CONTROLS, ADVANCED, and SYSTEM MONITORING. On the left is a sidebar menu with links for Main, Network Status, Network Connections, and Logout. The main content area is titled 'Broadband Connection (Ethernet/Coax) Properties'. It includes a 'Disable' button at the top right. Below this is a table of connection properties. At the bottom are 'Apply', 'Cancel', and 'Settings' buttons.

Broadband Connection (Ethernet/Coax) Properties	
Note: Only advanced technical users should use this feature.	
Disable	
Name:	Broadband Connection (Ethernet/Coax)
Status:	Connected
Network:	Broadband Connection
Connection Type:	Ethernet/Coax
MAC Address:	c8:a7:0a:82:4b:92
IP Address:	10.0.7.98
Subnet Mask:	255.255.255.0
Default Gateway:	10.0.7.1
DNS Servers:	10.0.7.1
IP Address Distribution:	Disabled
Received Packets:	2069264
Sent Packets:	202791
Time Span:	75:11
Coax Channel:	Cable Disconnected


[Apply](#) [Cancel](#) [Settings](#)

2. To rename the network connection, enter the new name in the **Name** field.
3. Click **Apply** to save changes.

5.2a/ CONFIGURING THE ETHERNET/COAX CONNECTION

To configure the connection:

1. In the Broadband Connection (Ethernet/Coax) Properties page, click **Settings**. The configuration page displays.

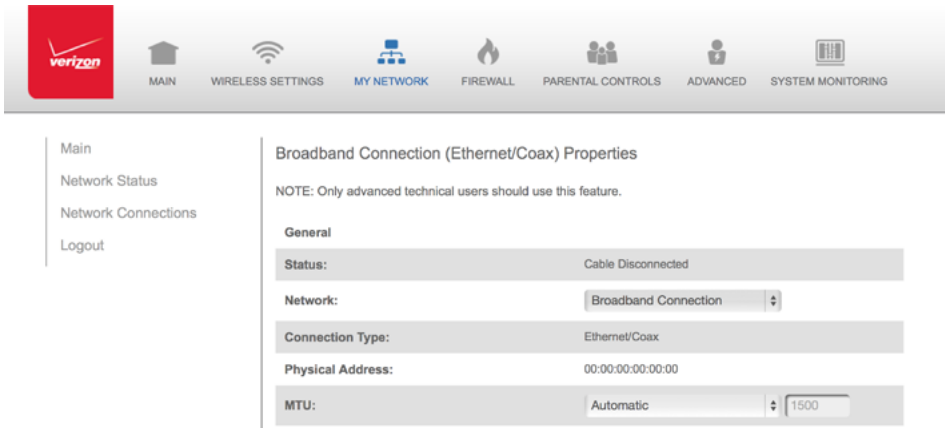

2. Configure the following settings, as needed.

GENERAL

Verify the following information:

- **Status** - displays the connection status of the network.
- **Network** - displays the type of network connection.
- **Connection Type** - displays the type of connection.
- **Physical Address** - displays the physical address of the network card used for the network.
- **MTU** - specifies the largest packet size permitted for Internet transmissions:
 - **Automatic** - sets the MTU (Maximum Transmission Unit at 1500)


ETHERNET/COAX CONNECTION

- **Automatic by DHCP** - sets the MTU according to the DHCP connection
- **Manual** - allows you to manually set the MTU to be set.

COAX LINK

To set the Channel:

1. Select the coax link channel as 1 to 3.

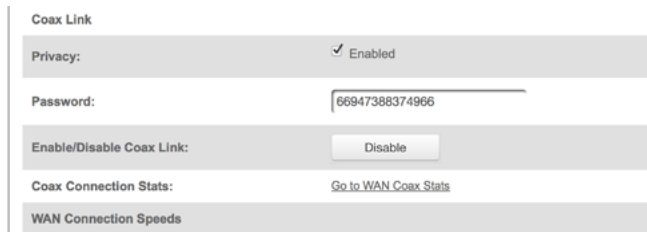

The screenshot shows a configuration panel for 'Coax Link'. It includes a 'Privacy' section with a checked 'Enabled' checkbox. Below that is a 'Password' field containing the text '66947388374966'. There is an 'Enable/Disable Coax Link' section with a 'Disable' button. At the bottom, there are two links: 'Coax Connection Stats' and 'Go to WAN Coax Stats'.

Coax Link	
Privacy:	☒ Enabled
Password:	66947388374966
Enable/Disable Coax Link:	<button>Disable</button>
Coax Connection Stats:	Go to WAN Coax Stats
WAN Connection Speeds	

2. Select the **On** or **Off** radio button in the **Auto Detection** field.
3. To set privacy, select the **Enabled** check box. This causes all devices connected to the coaxial cable to use the same password. This is recommended.
4. To set the password, enter the Coax Link password in the **Password** field.
5. To enable or disable the Coax link, click **Disable** or **Enable**.
6. To view the devices connected using the coaxial cable, click the **Go to WAN Coax Stats** link.

COMPLETE ALL ETHERNET/COAX CONNECTION CONFIGURATION UPDATES

To save your changes:

1. Click Apply.


5.3/ WIRELESS ACCESS POINT CONNECTION

A Wireless Access Point network connection allows wireless devices to connect to the local area network (LAN) using the 2.4 GHz or 5 GHz Wi-Fi network.

Note: Once disabled, all wireless devices connected to that wireless network will be disconnected from the LAN network and Internet.

To view the connection:

1. In the Network Connections page, click **Advanced**.

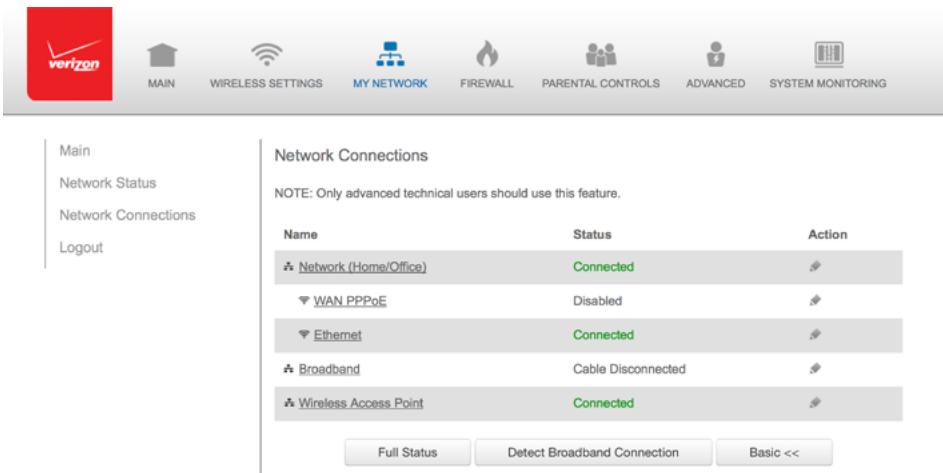

The screenshot shows the Verizon FiOS Network Connections page. The top navigation bar includes the Verizon logo and icons for MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL, PARENTAL CONTROLS, ADVANCED (selected), and SYSTEM MONITORING. The left sidebar contains links for Main, Network Status, Network Connections (selected), and Logout. The main content area is titled "Network Connections" and includes a note: "NOTE: Only advanced technical users should use this feature." Below this is a table with three columns: Name, Status, and Action.

Name	Status	Action
Network (Home/Office)	Connected	
WAN PPPoE	Disabled	
Ethernet	Connected	
Broadband	Cable Disconnected	
Wireless Access Point	Connected	

At the bottom of the table are three buttons: "Full Status", "Detect Broadband Connection", and "Basic <<".

WIRELESS ACCESS POINT CONNECTION

- 2. Click 5 GHz Wireless Access Point 1 or 2.4 GHz Wireless Access Point 2.



MAIN

WIRELESS SETTINGS

MY NETWORK

FIREWALL

PARENTAL CONTROLS

ADVANCED

SYSTEM MONITORING

Main

Network Status

Network Connections

Logout

2.4GHz Wireless Access Point 2 Properties

Note: Only advanced technical users should use this feature.

Disable

Name:	2.4GHz Wireless Access Point 2
Status:	Connected
Network:	Network (Home/Office)
Connection Type:	Wireless 802.11 2.4GHz Access Point
MAC Address:	d4:a9:28:05:2d:88
IP Address Distribution:	Disabled
Received Packets:	0
Sent Packets:	0
Time Span:	0:36

Apply

Cancel

Settings

- 3. To disable the connection, click **Disable**.
- 4. To rename the connection, enter a name in the **Name** field.
- 5. Click **Apply** to save the changes.
- 6. Reboot your Gateway.

5.3a/ CONFIGURING WIRELESS ACCESS POINT PROPERTIES

To configure the connection:

1. In the Wireless Access Point Properties page, click **Settings**. The configuration page displays.

The screenshot shows the Verizon FiOS Network Manager interface. At the top is a navigation bar with the Verizon logo and icons for MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL, PARENTAL CONTROLS, ADVANCED, and SYSTEM MONITORING. On the left is a sidebar with links for Main, Network Status, Network Connections, and Logout. The main content area is titled "2.4GHz Wireless Access Point 2 Properties" and includes a note: "NOTE: Only advanced technical users should use this feature." Below this is a "General" section with the following fields:

Status:	Connected
Network:	Network (Home/Office)
Connection Type:	Wireless 802.11 2.4GHz Access Point
Physical Address:	d4:a9:28:05:2d:88
MTU:	Automatic 1500

At the bottom of the form are "Apply" and "Cancel" buttons.

2. Verify the following information:
 - **Status** - displays the connection status of the network.
 - **Network** - displays the type of network connection.
 - **Connection Type** - displays the type of connection.
 - **Physical Address** - displays the physical address of the network card used for the network.
 - **MTU** - specifies the largest packet size permitted for Internet transmissions:

WIRELESS ACCESS POINT CONNECTION AND BROADBAND ETHERNET/COAX CONNECTION

- **Automatic** - set the MTU (Maximum Transmission Unit) at 1500
- **Automatic by DHCP** - sets the MTU according to the DHCP connection
- **Manual** - allows you to manually set the MTU

3. Click **Apply** to save changes.

5.4/ BROADBAND ETHERNET/COAX CONNECTION

A Broadband Ethernet connection connects computers to your Gateway using Ethernet cables. The connections are either direct or use network hubs and switches.

A Coax connection connects devices, such as set-top boxes, to your Gateway using a coaxial cable.

Note: *If disabling the connection, you must reboot your Gateway for the change to take effect.*

To view the connection:

1. In the Network Connections page, click the **Broadband Connection (Ethernet/Coax)** link.

The screenshot shows the Verizon FiOS Network Manager interface. At the top is a navigation bar with the Verizon logo and icons for MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL, PARENTAL CONTROLS, ADVANCED, and SYSTEM MONITORING. On the left is a sidebar with links: Main, Network Status, Network Connections, and Logout. The main content area is titled "Broadband Connection (Ethernet/Coax) Properties". Below the title is a note: "Note: Only advanced technical users should use this feature." There is a "Disable" button. The configuration fields are as follows:

Name:	Broadband Connection (Ethernet)
Status:	Cable Disconnected
Network:	Broadband Connection
Connection Type:	Ethernet/Coax
MAC Address:	00:00:00:00:00:00
IP Address Distribution:	Disabled
Coax Channel:	Cable Disconnected

At the bottom are three buttons: "Apply", "Cancel", and "Settings".

2. To rename the network connection, enter the new name in the **Name** field.
3. Click **Apply** to save changes.

5.4a/ CONFIGURING THE ETHERNET/COAX CONNECTION

To configure the connection:

1. In the Broadband Connection (Ethernet/Coax) Properties page, click **Settings**. The configuration page displays.

BROADBAND ETHERNET/COAX CONNECTION

The screenshot shows the Verizon router's web interface. At the top is a navigation bar with the Verizon logo and icons for MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL, PARENTAL CONTROLS, ADVANCED, and SYSTEM MONITORING. On the left is a sidebar with links: Main, Network Status, Network Connections, and Logout. The main content area is titled 'Broadband Connection (Ethernet/Coax) Properties' and includes a note: 'NOTE: Only advanced technical users should use this feature.' Below this is a 'General' section with the following settings:

General	
Status:	Cable Disconnected
Network:	Broadband Connection
Connection Type:	Ethernet/Coax
Physical Address:	00:00:00:00:00:00
MTU:	Automatic (with a manual input field showing 1500)
Coax Link	
Privacy:	✓ Enabled

2. Configure the following settings, as needed.

GENERAL

Verify the following information:

- **Status** - displays the connection status of the network
- **Network** - displays the type of network connection
- **Connection Type** - displays the type of connection
- **Physical Address** - displays the physical address of the network card used for the network
- **MTU** - specifies the largest packet size permitted for Internet transmissions:
 - **Automatic** - set the MTU (Maximum Transmission Unit) at 1500

- **Automatic by DHCP** - sets the MTU according to the DHCP connection
- **Manual** - allows you to manually set the MTU

COAX LINK

1. To set the Channel, select the coax link channel as 1 to 3.

Coax Link

Privacy: ☒ Enabled

Password: 66947388374966

Enable/Disable Coax Link: [Disable](#)

Coax Connection Stats: [Go to WAN Coax Stats](#)

WAN Connection Speeds

Router Tx (Mbps): 0

2. Select the **On** or **Off** radio button in the Auto Detection field.
3. To set privacy, select the **Enabled** check box. This causes all devices connected to the coaxial cable to use the same password. This is recommended.
4. To set the password, enter the Coax Link password in the **Password** field.
5. To enable or disable the Coax link, click **Disable** or **Enable**.
6. To view the devices connected using the coaxial cable, click the **Go to WAN Coax Stats** link.

BROADBAND ETHERNET/COAX CONNECTION

INTERNET PROTOCOL

1. In the Internet Protocol section, specify one of the following:
 - **No IP Address** – the connection has no IP address. This is useful if the connection operates under a bridge.
 - **Obtain an IP Address Automatically** – the network connection is required by Verizon to obtain an IP address automatically. The server assigning the IP address also assigns a subnet mask address, which can be overridden by entering another subnet mask address.
 - **Use the Following IP Address** - the network connection uses a permanent or static IP address, then the IP address and subnet mask address.

The screenshot shows a configuration window for Internet Protocol settings. It includes fields for Router Tx (Mbps) and Router Rx (Mbps), both set to 0. The Internet Protocol dropdown menu is set to 'Obtain IP Address Automatica'. Below this, there is a checkbox for 'Override Subnet Mask' which is currently unchecked, followed by four input boxes for the subnet mask, all containing the digit 0. At the bottom, there is a 'DHCP Lease:' label and a 'Renew' button.

Router Tx (Mbps):	0
Router Rx (Mbps):	0
Internet Protocol:	Obtain IP Address Automatica
☐ Override Subnet Mask:	0 . 0 . 0 . 0
DHCP Lease:	Renew

2. To override the subnet mask, select the **Override Subnet Mask** check box, then enter the new subnet mask.

ROUTING MODE

Lease Time in Minutes:

IP Address Distribution According to DHCP Option 60 (Vendor Class Identifier)

Vendor Class ID:	IP Address:	MAC Address:	QoS
------------------	-------------	--------------	-----

Routing Table

Name	Destination	Gateway	Netmask	Metric	Status	Action
------	-------------	---------	---------	--------	--------	--------

COMPLETE ALL ETHERNET/COAX CONNECTION CONFIGURATION UPDATES

To save your changes:

1. Click Apply.

06/

CONFIGURING SECURITY SETTINGS

- 6.0** Firewall
- 6.1** Access Control
- 6.2** Port Forwarding
- 6.3** Port Triggering
- 6.4** Remote Administration
- 6.5** Static NAT
- 6.6** Security Log

Your Gateway's security suite includes comprehensive and robust security services, such as stateful packet inspection, firewall security, user authentication protocols, and password protection mechanisms.

These and other features help protect your computers from security threats on the Internet.

FIREWALL

This chapter covers the following security features:

- **Firewall** - select the security level for the firewall.
- **Access Control** - restrict access from the local network to the Internet.
- **Port Forwarding** - enable access from the Internet to specified services provided by computers on the local network.
- **Port Triggering** - define port triggering entries to dynamically open the firewall for some protocols or ports.
- **Remote Administration** - enable remote configuration of your gateway from any Internet-accessible computer.
- **Static NAT** - allow multiple static NAT IP addresses to be designated to devices on the network.
- **Security Log** - view and configure the security log.

6.0/ FIREWALL

The firewall is the cornerstone of the security suite for your Gateway. It has been exclusively tailored to the needs of the residential or office user and is pre-configured to provide optimum security.

The firewall provides both the security and flexibility home and office users seek. It provides a managed, professional level of network security while enabling the safe use of interactive applications, such as Internet gaming and video conferencing.

Additional features, including surfing restrictions and access control, can also be configured locally through the user interface or remotely by a service provider.

The firewall regulates the flow of data between the local network and the Internet. Both incoming and outgoing data are inspected, then either accepted and allowed to pass through your Gateway or rejected and barred from passing through your Gateway, according to a flexible and configurable set of rules. These rules are designed to prevent unwanted intrusions from the outside, while allowing local network users access to Internet services.

The firewall rules specify the type of services on the Internet that are accessible from the local network and types of services in the local network that are accessible from the Internet.

Each request for a service that the firewall receives is checked against the firewall rules to determine whether the request should be allowed to pass through the firewall. If the request is permitted to pass, all subsequent data associated with this request or session is also allowed to pass, regardless of its direction.

For example, when accessing a website on the Internet, a request is sent to the Internet for this site. When the request reaches your Gateway, the firewall identifies the request type and origin, such as HTTP and a specific computer in the local network. Unless your Gateway is configured to block requests of this type from this computer, the firewall allows this type of request to pass to the Internet.

When the website is returned from the web server, the firewall associates the website with this session and allows it to pass; regardless HTTP access from the Internet to the local network is blocked or permitted.

FIREWALL

It is the origin of the request, not subsequent responses to this request, which determines whether a session can be established.

6.0a/ SETTING FIREWALL CONFIGURATION

You can select a maximum, typical, or minimum security level to block, limit, or permit all traffic. The following table shows request access for each security level.

Security Level	Internet Requests Incoming Traffic	Local Network Requests Outgoing Traffic
Maximum	Blocked	Limited
Typical	Blocked	Unrestricted
Minimum	Unrestricted	Unrestricted

The request access is defined as:

- **Blocked traffic** - no access allowed, except as configured in Port Forwarding and Remote Access
- **Limited** - permits only commonly used services, such as email and web browsing
- **Unrestricted** - permits full access of incoming traffic from the Internet and allows all outgoing traffic, except as configured in Access Control

6.0b/ SPECIFYING GENERAL SETTINGS FOR IPV4 OR IPV6

To set your firewall configuration:

1. From the Firewall General settings page click on desired IPv4 or IPv6 option to configure IPv6 security:

The screenshot shows the Verizon FiOS Security Settings interface. At the top is a navigation bar with icons for MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL (selected), PARENTAL CONTROLS, ADVANCED, and SYSTEM MONITORING. Below this is a sidebar menu with options: Main, General, Access Control, Port Forwarding, Port Triggering, Remote Administration, Static NAT, Security Log, and Logout. The main content area is titled 'General' and contains two sections: 'IPv4 Settings' and 'IPv6 Settings'. Each section has three radio button options: 'Maximum Security (High)', 'Typical Security (Medium)' (which is selected), and 'Minimum Security (Low)'. For each option, the inbound policy is 'Reject' and the outbound policy is 'Accept'. The outbound policy for 'Typical Security' is 'Accept'. The 'Maximum Security' option includes a checkbox for 'Allow outbound Set Top Box traffic' which is unchecked. At the bottom right of the settings area are 'Apply' and 'Cancel' buttons.

verizon

MAIN WIRELESS SETTINGS MY NETWORK FIREWALL PARENTAL CONTROLS ADVANCED SYSTEM MONITORING

Main
General
Access Control
Port Forwarding
Port Triggering
Remote Administration
Static NAT
Security Log
Logout

General

IPv4 Settings

☐ Maximum Security (High)
Inbound Policy: **Reject**.
Remote Administration settings will override the security inbound policy.
Outbound Policy: **Reject**.
Outbound access is allowed to the following services: DHCP, DNS, IMAP, SMTP, POP3, HTTPS, HTTP, FTP, Telnet.
☐ Allow outbound Set Top Box traffic

☒ Typical Security (Medium)
Inbound Policy: **Reject**.
Remote Administration settings will override the security inbound policy.
Outbound Policy: **Accept**.

☐ Minimum Security (Low)
Inbound Policy: **Accept**.
Outbound Policy: **Accept**.

IPv6 Settings

☐ Maximum Security (High)
Inbound Policy: **Reject**.
Remote Administration settings will override the security inbound policy.
Outbound Policy: **Reject**.
Outbound access is allowed to the following services: DHCP, DNS, IMAP, SMTP, POP3, HTTPS, HTTP, FTP, Telnet.

☒ Typical Security (Medium)
Inbound Policy: **Reject**.
Remote Administration settings will override the security inbound policy.
Outbound Policy: **Accept**.

☐ Minimum Security (Low)
Inbound Policy: **Accept**.
Outbound Policy: **Accept**.

Apply Cancel

ACCESS CONTROL

2. Select a security level by clicking one of the radio buttons. Using the Minimum Security setting may expose the local network to significant security risks, and should only be used for short periods of time to allow temporary network access.
3. Click **Apply** to save changes.

6.1/ ACCESS CONTROL


You can block individual computers on your local network from accessing specific services on the Internet. For example, you could block one computer from accessing the Internet, then block a second computer from transferring files using FTP as well as prohibit the computer from receiving incoming email.

Access control incorporates a list of preset services, such as applications and common port settings.


6.1a/ ALLOW OR RESTRICT SERVICES

To allow or restrict services:

1. From the Firewall page, select **Access Control**. The Access Control page opens with the Allows and Blocked sections displayed. The Allowed section only displays when the firewall is set to maximum security.

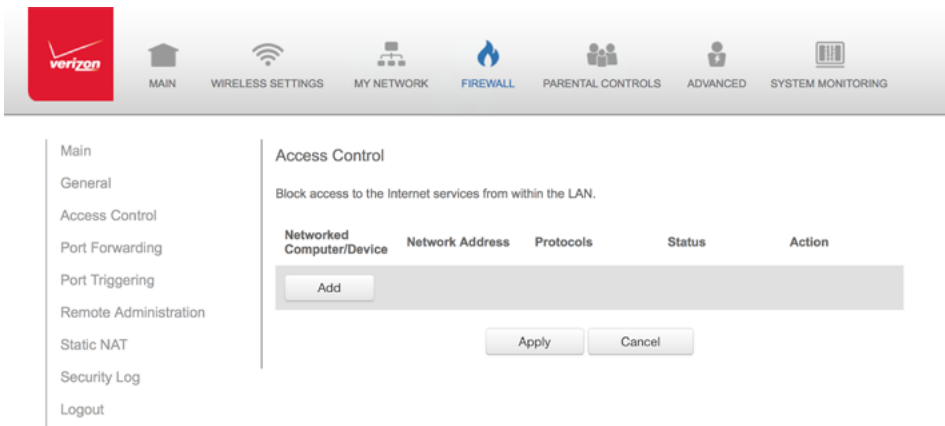

2. To block a service, click **Add**. The Add Access Control Rule page displays.

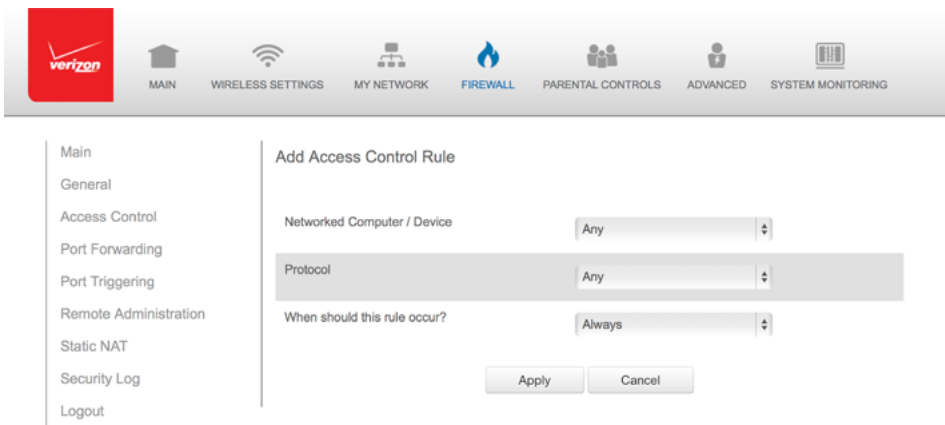

3. To apply the rule to:
 - **All networked devices** - select **Any**.

ACCESS CONTROL AND PORT FORWARDING

- *Specific devices only* - select **User Defined**, then click **Add** and create a network object.
4. In the **Protocol** field, select the Internet protocol to be allowed or blocked.

If the service is not included in the list, select **User Defined**. The Edit Service page displays. Define the service, then click **OK**. The service is automatically added to the **Add Access Control Rule** section.
 5. Specify when the rule is active as **Always** or **User Defined** and click **Add** to create the schedule.
 6. Click **Apply** to save changes. The Access Control page displays a summary of the new access control rule.

6.1b/ DISABLE ACCESS CONTROL

You can disable an access control and enable access to the service without removing the service from the Access Control table. This can make the service available temporarily and allow you to easily reinstate the restriction later.

- To disable an access control, clear the check box next to the service name.
- To reinstate the restriction, select the check box next to the service name.
- To remove an access restriction, select the service and click **Remove**. The service is removed from the Access Control table.

6.2/ PORT FORWARDING

You can activate port forwarding to expose the network to the Internet in a limited and controlled manner. For example, enabling applications, such as gaming and voice, to work from the local network as well as allowing Internet access to servers within the local network.

To create port forwarding rules:

1. From the Firewall page, select **Port Forwarding**. The Port Forwarding page opens with the current rules displayed.

The screenshot shows the Verizon FiOS Security Settings interface. At the top is a navigation bar with icons for MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL (selected), PARENTAL CONTROLS, ADVANCED, and SYSTEM MONITORING. On the left is a sidebar menu with options: Main, General, Access Control, Port Forwarding (selected), Port Triggering, Remote Administration, Static NAT, Security Log, and Logout. The main content area is titled 'Port Forwarding' and includes a description: 'This feature enables applications (Games, Webcams, IM & Others) by opening a tunnel between remote (Internet) computers and a specific device port inside your local area network(LAN)'. Below this is a section 'Create new port forwarding rule:' with two dropdown menus: 'Select IP from menu' and 'Application To Forward...'. There are four buttons: 'Add', 'Reset', 'Cancel', and 'Advanced>>'. Below these is a section 'Applied rules:' containing a table with columns: 'Networked Computer / Device', 'Applications & Ports Forwarded', 'Status', and 'Delete'.

Networked Computer / Device	Applications & Ports Forwarded	Status	Delete
localhost 127.0.0.1	Verizon FIOS Service TCP Any -> 4567	Active	

At the bottom of the table are 'Apply' and 'Delete' buttons.

2. To create a new rule, select the IP address in the **Select IP from Menu** drop down.

PORT FORWARDING AND PORT TRIGGERING

- 3. Select the application in the **Application to Forward** drop down.
- 4. Click **Add**. The rule displays in the **Applied Rules** section.
- 5. Click **Apply** to save changes.

6.2a/ ADVANCED PORT FORWARDING RULES

You can configure advanced port forwarding rules.

To configure the rules:

- 1. In the Port Forwarding page, select **Advanced**.

verizon

MAIN

WIRELESS SETTINGS

MY NETWORK

FIREWALL

PARENTAL CONTROLS

ADVANCED

SYSTEM MONITORING

Main

General

Access Control

Port Forwarding

Port Triggering

Remote Administration

Static NAT

Security Log

Logout

Port Forwarding

This feature enables applications (Games, Webcams, IM & Others) by opening a tunnel between remote (Internet) computers and a specific device port inside your local area network(LAN).

Create new port forwarding rule:

Select IP from menu

Application To Forward...

Add

Reset

Cancel

Basic <<

Applied rules:

Networked Computer / Device	Applications & Ports Forwarded	Status	Delete
localhost 127.0.0.1	Verizon FIOS Service TCP Any -> 4567	Active	

Apply

Delete

2. If needed, to select a port to forward communication to, select an option in the **Forward to Port** list box.
3. If a single port or range of ports is selected, a text box displays. Enter the port numbers.
4. To schedule the rule, select either **Always** or **User Defined** in the **Schedule** list box.
5. Click **Add**. The rule displays in the **Applied Rules** section.
6. Click **Apply** to save changes.

6.3/ PORT TRIGGERING

Port triggering can be described as dynamic port forwarding. By setting port triggering rules, inbound traffic arrives at a specific network host using ports that are different than those used for outbound traffic. The outbound traffic triggers the ports where the inbound traffic is directed.

For example, a gaming server is accessed using UDP protocol on port 2222. The gaming server then responds by connecting the user using UDP on port 3333, when a gaming session is initiated.

In this case, port triggering must be used since it conflicts with the following default firewall settings:


- Firewall blocks inbound traffic by default.
- Server replies to your Gateway IP, and the connection is not sent back to the host since it is not part of a session.

PORT TRIGGERING AND REMOTE ADMINISTRATION

To resolve the conflict, a port triggering entry must be defined, which allows inbound traffic on UDP port 3333 only after a network host generated traffic to UDP port 2222. This results in your Gateway accepting the inbound traffic from the gaming server and sending it back to the network host which originated the outgoing traffic to UDP port 2222.

To configure port triggering:

1. Select **Port Triggering**.

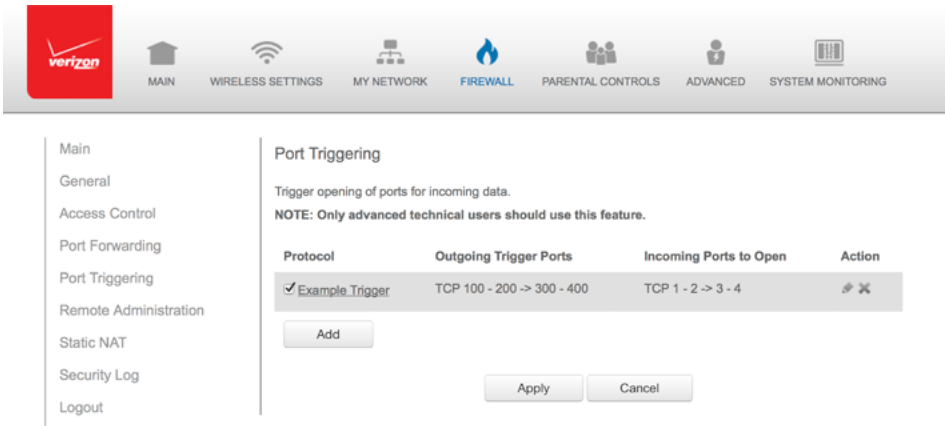

2. To add a service as an active protocol, click **Add**. The Edit Port Triggering Rule page displays.

Service Name:

Outgoing Trigger Ports

Protocol	Server Ports	Action
New Trigger Ports		

Incoming Ports to Open

Protocol	Opened Ports	Action
New Opened Ports		

3. Enter the service name then configure its inbound and outbound trigger ports. Click **Apply** to save User Defined changes. The Port Triggering page displays.
4. Click **Apply** again to save all changes.

6.4/ REMOTE ADMINISTRATION

Caution: Enabling Remote Administration places your Gateway network at risk from outside attacks.

You can access and control your Gateway not only from within the local network, but also from the Internet using Remote Administration.

REMOTE ADMINISTRATION AND STATIC NAT

You can allow incoming access to the following:

- **Web Management** - used to obtain access to your Gateway's GUI and gain access to all settings and parameters through a web browser.
- **Diagnostic Tools** - used for troubleshooting and remote system management by a user or Verizon.

Web Management remote administration access may be used to modify or disable firewall settings. Local IP addresses and other settings can also be changed, making it difficult or impossible to access your Gateway from the local network. Remote administration access to SSH or Web Management services should be activated only when absolutely necessary.

Note: Encrypted remote administration is performed using a secure SSL connection and requires a SSL certificate. When accessing your Gateway for the first time using encrypted remote administration, a warning page opens with a certificate authentication message displayed. This is due to your Gateway SSL certificate being self-generated. When this message display under that circumstance, ignore the message and continue. Even though this message displays, the self-generated certificate is safe and provides a secure SSL connection.

To enable remote administration:

1. Select **Remote Administration**.

The screenshot shows the Verizon FiOS router web interface. At the top is a navigation bar with the Verizon logo and icons for MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL, PARENTAL CONTROLS, ADVANCED, and SYSTEM MONITORING. On the left is a sidebar menu with links: Main, General, Access Control, Port Forwarding, Port Triggering, Remote Administration (highlighted), Static NAT, Security Log, and Logout. The main content area is titled "Remote Administration" and contains the following text: "Configure Remote Administration to the router" and "Attention: With Remote Administration enabled, your network will be at risk from outside attacks." Below this is a section "Allow Incoming WAN Access to Web-Management" with two unchecked checkboxes: "Using Primary HTTPS Port (443)" and "Using Secondary HTTPS Port (8443)". Another section "Diagnostic Tools" has two unchecked checkboxes: "Allow Incoming WAN ICMP Echo Requests (e.g. pings and ICMP traceroute queries)" and "Allow Incoming WAN UDP Traceroute Queries". At the bottom right are "Apply" and "Cancel" buttons.

2. To enable access, select the check box.
3. Click **Apply** to save changes.
4. To remove access, clear the check box.
5. Click **Apply** again to save changes.

6.5/ STATIC NAT

Static NAT allows devices located behind a firewall that is configured with private IP addresses to appear to have public IP addresses to the Internet. This allows an internal host, such as a web server, to have an unregistered (private) IP address and still be accessible over the Internet.

STATIC NAT AND SECURITY LOG

To configure static NAT:

1. Select **Static NAT**.



MAIN

WIRELESS SETTINGS

MY NETWORK

FIREWALL

PARENTAL CONTROLS

ADVANCED

SYSTEM MONITORING

Main

General

Access Control

Port Forwarding

Port Triggering

Remote Administration

Static NAT

Security Log

Logout

Static NAT

Static IP Mapping Table

ID	Networked Computer / Device	Public IP Address	Status	Port Forwarding	Action
Add					

Apply

Cancel

2. To create a static NAT, click **Add**. The Add NAT/NAPT Rule page displays.



MAIN

WIRELESS SETTINGS

MY NETWORK

FIREWALL

PARENTAL CONTROLS

ADVANCED

SYSTEM MONITORING

Main

General

Access Control

Port Forwarding

Port Triggering

Remote Administration

Static NAT

Security Log

Logout

Add NAT/NAPT Rule

Local Host:

Specify Address

192.168.1.0

Public IP Address:

0

0

0

0

☐ Enable Port Forwarding For Static NAT

Apply

Cancel

3. Select a source address in the **Specify Address** field or enter an IP address in the text box.
4. Enter the public IP address.
5. If using port forwarding, select the **Enable Port Forwarding for Static NAT** check box.
6. Click **Apply** to save changes.
7. Repeat these steps to add additional static IP addresses.

6.6/ SECURITY LOG

You can view events that your firewall has blocked by accessing the security log. Your Gateway reports events, such as attempts to establish inbound and outbound connections, attempts to authenticate at an administrative interface, such as your Gateway GUI, firewall configuration, and system start-up.

The security log reports the following information:

- **Time** - based on the date and time in your Gateway
- **Event** - consists of firewall information, firewall setup, and system log
- **Event Type** - describes the event that occurred, such as a fragmented packet or parental controls.
- **Details** - provide a reason the event occurred, such as a packet has been blocked because of parental controls.

SECURITY LOG

You can modify the type of events that display in the security log. This does not modify the event itself. It simply changes the information that displays in the log.

6.6a/ EVENT TYPES

The security log records the following event types:

- **Access control** – a packet has been accepted/blocked due to an access control rule.
- **Advance filter rule** – a packet has been accepted/blocked due to an advanced filter rule.
- **ARP** – an ARP packet has been accepted.
- **AUTH:113 request** - an outbound packet for AUTH protocol has been accepted (for maximum security level).
- **Broadcast/Multicast protection** – a packet with a broadcast/multicast source IP has been blocked.
- **Default policy** – a packet has been accepted/blocked according to the default policy.
- **Defragmentation failed** – the fragment has been stored in memory and blocked until all fragments have arrived and defragmentation can be performed.
- **DHCP request** – your Gateway sent a DHCP request (depends on the distribution).
- **DHCP response** - your Gateway sent a DHCP response (depends on the distribution).

- ***Echo/Chargen/Quote/Snork protection*** – a packet has been blocked due to Echo/Chargen/Quote/Snork protection.
- ***Firewall internal*** – from the firewall internal mechanism, event type is recorded and an accompanying explanation will be added.
- ***Firewall rules were changed*** – the rule set has been modified.
- ***Firewall status changed*** – the firewall status changed from up to down or vice versa, as specified in the event type description.
- ***First packet in connection is not a SYN packet*** – a packet has been blocked due to a TCP connection that started without a SYN packet.
- ***Fragmented packet*** – a fragment has been rejected.
- ***Fragmented packet, bad align*** – a packet has been blocked because, after defragmentation, the packet was badly aligned.
- ***Fragmented packet, header too big*** – a packet has been blocked because, after defragmentation, the header was too big.
- ***Fragmented packet, header too small*** – a packet has been blocked because, after defragmentation, the header was too small.
- ***Fragmented packet, no memory*** – a packet has been blocked because there is no memory for fragments.
- ***Fragmented packet, overlapped*** – a packet has been blocked because, after defragmentation, there were overlapping fragments.
- ***Fragmented packet, packet exceeds*** – a packet has been blocked because, after defragmentation, the packet exceeded.

SECURITY LOG

- ***Fragmented packet, packet too big*** – a packet has been blocked because, after defragmentation, the packet was too big.
- ***FTP port request to 3rd party is forbidden*** – possible bounce attack – a packet has been blocked.
- ***ICMP flood protection*** – a broadcast ICMP (Internet Control Message Protocol) flood.
- ***ICMP protection*** – a broadcast ICMP message has been blocked.
- ***ICMP redirect protection*** – an ICMP redirected message has been blocked.
- ***ICMP replay*** – an ICMP replay message has been blocked.
- ***Illegal packet options*** – the options field in the packet's header is either illegal or forbidden.
- ***IP Version 6*** – an IPv6 packet has been accepted.
- ***Malformed packet: Failed parsing*** – a packet has been blocked because it is malformed.
- ***Maximum security enabled service*** – a packet has been accepted because it belongs to a permitted service in the maximum security level.
- ***Multicast IGMP connection*** – a multicast packet has been accepted.
- ***NAT Error: Connection pool is full - No connection created*** – a connection has not been created because the connection pool is full.
- ***NAT Error: Conflict mapping already exists*** – a conflict occurred because the NAT mapping already exists, so NAT failed.

- **NAT Error: No free NAT IP** – no free NAT IP, so NAT has failed.
- **NAT out failed** – NAT failed for this packet.
- **Outbound Auth1X** – an outbound Auth1X packet has been accepted.
- **Packet invalid in connection** – an invalid connection packet has been blocked.
- **Parental controls** – a package has been block because of parental controls.
- **Passive attack on ftp-server: Client attempted to open Server ports** – a packet has been blocked.
- **Service** – a packet has been accepted because of a certain service, as specified in the event type.
- **Spoofing protection** – a packet from the Internet with a source IP belong to the local network has been blocked.
- **STP packet** – STP (Spanning Tree Protocol) packet has been accepted/rejected.
- **SynCookies protection** – a SynCookies packet has been blocked.
- **Trusted device** – a packet from a trusted device has been accepted.
- **UDP flood protection** – a packed has been blocked, stopping a UDP flood.
- **User authentication** – a message arrived during login time, including both successful and failed authentication.
- **Wildcard connection hooked** – debug message regarding connection.

SECURITY LOG

- *Wildcard connection opened* - debug message regarding connection.
- *WinNuke protection* - a WinNuke attack has been blocked.

To view the security log:

1. Select **Security Log**.

The screenshot shows the Verizon router's web interface. At the top is a navigation bar with the Verizon logo and icons for MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL (highlighted in blue), PARENTAL CONTROLS, ADVANCED, and SYSTEM MONITORING. On the left is a sidebar menu with options: Main, General, Access Control, Port Forwarding, Port Triggering, Remote Administration, Static NAT, and Security Log (selected). The main content area is titled 'Security Log' and contains buttons for Close, Clear Log, Save Log, Hazard, Settings, and Refresh. Below the buttons is a prompt: 'Press the Refresh button to update the data.' A table displays the log entries with columns for Time, Event-Type, Log Level, and Details.

Time	Event-Type	Log Level	Details
Feb 28 14:25:12 2014	System	info<166>	Successful login to web UI
Feb 28 14:24:53 2014	System	warn<164>	Failed login to web UI from 192.168.1.154:43749

2. To modify the types of events that display in the log, click **Settings**.

verizon

MAIN WIRELESS SETTINGS MY NETWORK FIREWALL PARENTAL CONTROLS ADVANCED SYSTEM MONITORING

Main
General
Access Control
Port Forwarding
Port Triggering
Remote Administration
Static NAT
Security Log
Logout

Log Settings

Accepted Events

☐ Accepted Incoming Connections

☐ Accepted Outgoing Connections

Blocked Events

☐ All Blocked Connection Attempts

☒ Winnuke	☒ Multicast/Broadcast	☒ ICMP Replay
☒ Defragmentation Error	☒ Spoofed Connection	☒ ICMP Redirect
☒ Blocked Fragments	☒ Packet Illegal Options	☒ ICMP Multicast
☒ Syn Flood	☒ UDP Flood	☒ ICMP Flood
☒ Echo Chargen		

Other Events

☐ Remote Administration Attempts

☐ Connection States

Log Buffer

☐ Prevent Log Overrun

Apply Cancel

3. In the **Accepted Events** section, select the type of activities that generates a log message:
 - **Accepted Incoming Connections** – generates a log message for each successful attempt to establish an inbound connection to the local network.

SECURITY LOG

- ***Accepted Outgoing Connections*** - generates a log message for each successful attempt to establish an outbound connection to the public network.
4. In the **Blocked Events** section, select the type of blocked events you want logged.
 5. To log a message for each remote administration connection attempt, click the **Remote Administration Attempts** check box.
 6. To log the connection for handling by the firewall and application level Gateways, click the **Connection States** check box.
 7. Click **Apply** to save changes. The Security Log page displays.

07/

SETTING PARENTAL CONTROLS

7.0 Activating Parental
Controls

7.1 Rule Summary

The abundance of harmful information on the Internet poses a serious challenge for employers and parents alike as they ask “How can I regulate what my employee or child does on the Internet?”

With that question in mind, your Gateway’s Parental Controls were designed to allow control of Internet access on all locally networked devices.

ACTIVATING PARENTAL CONTROLS


7.0/ ACTIVATING PARENTAL CONTROLS

You can create a basic access policy for any computer or device on your Gateway network. Parental controls limit Internet access to specific websites based on a schedule that you create.

Access can be limited on specific websites or keywords embedded in a website. For example, you can block access to the ‘www.anysite.com’ as well as block any website that has the word ‘any’ in its site name.

To limit computer access:

1. Select **Parental Controls**.

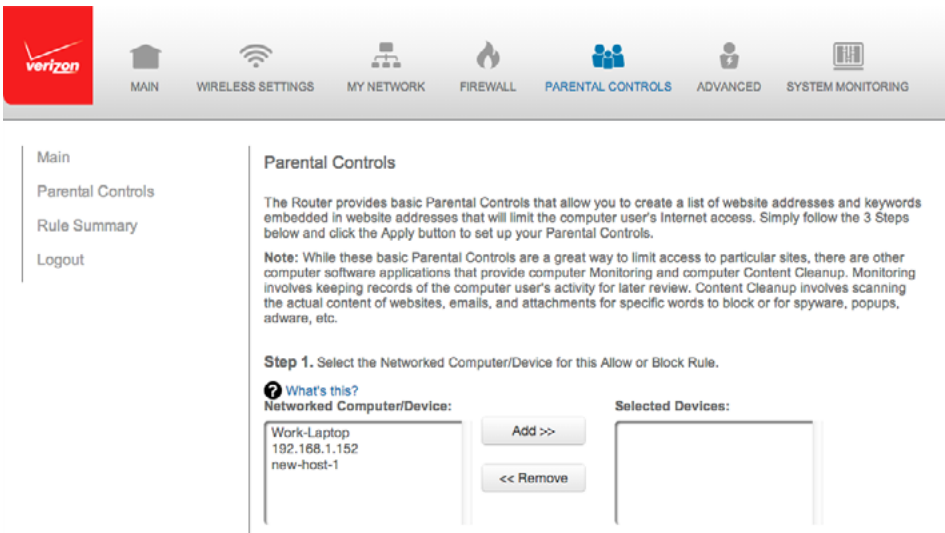

2. In **Step 1**, select the computers or device where you are limiting access in the **Networked Computer/Device** list box, then click **Add**. The devices display in the **Selected Devices** section.

3. To remove a device from the **Selected Devices** list box, select the device, then click **Remove**. The device displays in the **Networked Computer/Device** list box.
4. In **Step 2**, click one of the following options in the **Limit Access By** section:
 - **Block the following Websites and Embedded Keywords within a Website** – blocks the specified websites and websites with names contained the specified keyword.
 - **Allow the following Websites and Embedded Keywords within a Website** – allows the specified websites and websites with names contained the specified keyword.
 - **Block ALL Internet Access** – will not allow the device to access the Internet.
5. Enter the name of the website or keyword, then click **Add**.

Step 2. Create the Parental Control Rules and Schedules.

Limit Access By: What's this?

☒ Block the following Websites and Embedded Keywords within a URL.
☐ Allow the following Websites and Embedded Keywords within a URL.
☐ Blocking ALL Internet Access

Website:

Example: www.example.com

Embedded keyword within a URL:

Example: "sample" within www.sample.com


Add >>

Remove

6. To remove a website or keyword, select the word, then click **Remove**.

ACTIVATING PARENTAL CONTROLS AND RULE SUMMARY

7. Create a schedule by selecting the days of the week when the rule will be active or inactive.

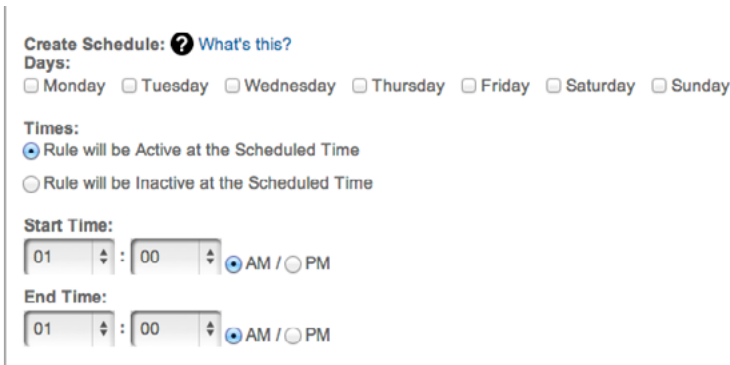

The screenshot shows a 'Create Schedule' form. At the top, it says 'Create Schedule: ? What's this?'. Below this is a 'Days:' section with radio buttons for each day of the week: Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, and Sunday. The 'Times:' section has two radio buttons: 'Rule will be Active at the Scheduled Time' (which is selected) and 'Rule will be Inactive at the Scheduled Time'. Below the times section are two time pickers. The 'Start Time:' picker shows '01' for the hour and '00' for the minutes, with 'AM / PM' options. The 'End Time:' picker also shows '01' for the hour and '00' for the minutes, with 'AM / PM' options.

8. Set the time when the rule will be active or inactive, then specify the start time and end time.
9. Create a rule name and description.
10. Click **Apply** to save changes.

7.1/ RULE SUMMARY

You can view the rules created for your Gateway.

- To view the rule summary, select **Rule Summary**. The Rule Summary page opens with the rule name, description, and computer or device displayed.



 MAIN

 WIRELESS SETTINGS

 MY NETWORK

 FIREWALL

 PARENTAL CONTROLS

 ADVANCED

 SYSTEM MONITORING

Main

Parental Control

Rule Summary

Logout

Rule Summary

Rule Name	Description	Computer/Device	View Rule	Edit Rule	Delete Rule
Example	This is an example control	My Computer			

You can view, edit, or delete the rule, refer to **Scheduler Rules** for additional setting details.

08/

CONFIGURING ADVANCED SETTINGS

- 8.0** Using Advanced Settings
- 8.1** Utilities
- 8.2** DNS Settings
- 8.3** Network Settings
- 8.4** Routing
- 8.5** Date and Time
- 8.6** Configuration Settings

Advanced settings cover a wide range of sophisticated configurations for your Gateway's firmware and network.

USING ADVANCED SETTINGS AND UTILITIES

Caution: *Many of the settings described in this section should only be configured by experienced network technicians. Changes could adversely affect the operation of your Gateway and local network.*

8.0/ USING ADVANCED SETTINGS

You can access the following settings:



Utilities



Date & Time



DNS Settings



Routing




Network Settings



Configuration Settings

To access the advanced settings:

1. Select **Advanced**. A warning page displays, asking if you want to proceed.
2. Click **Yes**. The Advanced page displays.

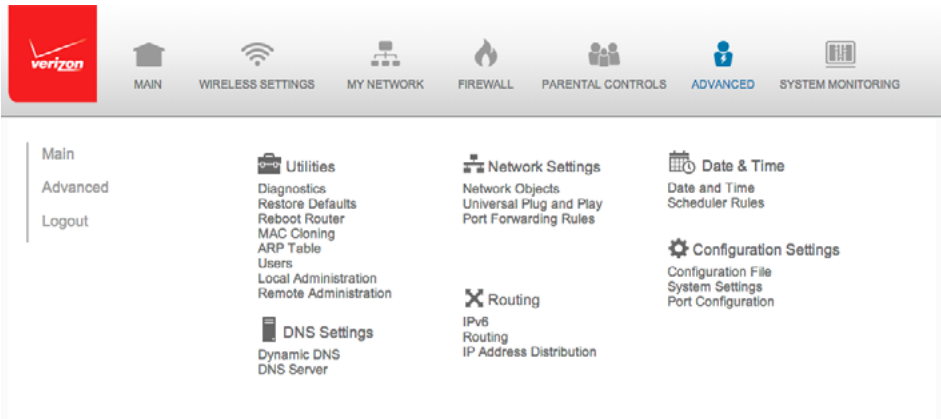

3. Select a topic by clicking the topic name.

8.1/ UTILITIES

You can access the following advanced settings:

- **Diagnostics** – performs diagnostic tests
- **Restore Defaults** – resets your Gateway to its default settings
- **Reboot Router** – restarts your Gateway
- **MAC Cloning** – clones the MAC address
- **ARP Table** – displays active devices with their IP and MAC addresses
- **Users** – creates and manages remote users
- **Quality of Service (QoS)** – contact Technical Support for detailed information

UTILITIES

- **Local Administration** – allows you to grant local SSH access
- **Remove Administration** – detailed in Chapter 6 Configuring Your Network Settings

8.1a/ DIAGNOSTICS

You can use diagnostics to test network connectivity.

To diagnose network connectivity:

1. Select **Diagnostics** in the Advanced page.

The screenshot shows the Verizon network management interface. At the top is a navigation bar with the Verizon logo and icons for MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL, PARENTAL CONTROLS, ADVANCED (highlighted), and SYSTEM MONITORING. On the left is a sidebar with links for Main, Advanced, and Logout. The main content area is titled 'Diagnostics' and contains a description: 'Diagnostics can assist in testing network connectivity. This feature pings (ICMP echo) an IP address and displays the results, such as the number of packets transmitted and received, round trip time, and success status'. Below this is a 'Ping (ICMP Echo)' section with a 'Destination:' field containing 'google.com' and a 'Go' button. There is also a 'Number of Pings:' field with the value '4'. A 'Status:' field is present but empty. A 'Close' button is at the bottom right of the diagnostics area.

2. To ping an IP address, enter the IP address or domain name in the **Destination** field and click **Go**.

The diagnostics will display the number of pings, status, packets sent, and round trip time.

If no diagnostic status displays, click **Refresh** in your web browser.

3. Click **Close** to exit the session.

8.1b/ RESTORE DEFAULTS


You can restore your configuration settings to your Gateway factory default settings. Restoring the default settings erases the current configuration, including user defined settings and network connections. All connected DHCP client must request new IP addresses. Your Gateway must restart.

Prior to restoring the factory defaults, you may want to save your current configuration to a file. This allows you to reapply your current settings and parameters to the default settings, as needed. For additional information, refer to the **Configuration File** section.

Note: When restoring defaults, the setting and parameters of your Gateway are restored to their default values. This includes the Administrator password. A user-specified password will no longer be valid.

To restore your Gateway's factory default settings:

1. Select **Restore Defaults** in the Advanced page.

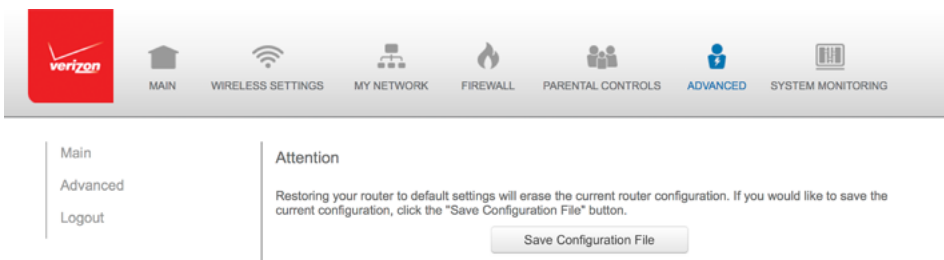

UTILITIES

2. To save your current configuration file, click **Save Configuration File**.
3. To restore the factory default settings, click **OK**.


The factory default settings are applied and your Gateway restarts. Once complete, the Login page for the First Time Easy Setup Wizard displays.

8.1c/ REBOOT GATEWAY

You can reboot your Gateway using the Reboot Router feature as well as pressing and holding the WPS button on the front of the Gateway for at least 10 seconds.

To reboot your Gateway:

1. Select **Reboot Router** in the Advanced page.

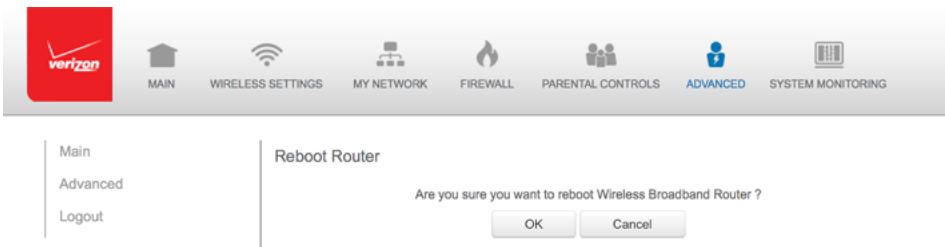

2. To reboot, click **OK**. Your Gateway reboots. This may take up to a minute.
3. To access your Gateway user interface, refresh your web browser.

8.1d/ MAC CLONING

A MAC address is a hexadecimal code that identifies a device on a network. All networkable devices have a unique MAC address.

When replacing a network device on your Gateway, you can simplify the installation process by copying the MAC address of the existing device to your Gateway.

To copy the MAC address of the existing device:

1. Select **MAC Cloning** in the Advanced page.

The screenshot shows the Verizon Gateway Advanced Settings interface. At the top is a navigation bar with icons and labels for: MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL, PARENTAL CONTROLS, **ADVANCED** (highlighted), and SYSTEM MONITORING. Below this is a sidebar with links for Main, Advanced (selected), and Logout. The main content area is titled "MAC Cloning" and contains the following text: "MAC Address Cloning provides the ability to emulate the routers MAC address to appear identical to the original hardware address. Use this feature only if your ISP requires MAC Address authentication". Below the text are two fields: "Set MAC of Device:" with a dropdown menu currently set to "Broadband Connection(Ethernet/Coax)", and "To Physical Address:" with a hexadecimal input field containing "AA : BB : CC : DD : EE : FF". There is a button labeled "Restore Factory MAC Address" below the input field. At the bottom of the form are two buttons: "Apply" and "Cancel".

2. In the **To Physical Address** field, enter the MAC address of your new device.
3. To locate the MAC address, refer to the documentation from the device manufacturer.
4. Click **Apply** to save changes.


UTILITIES

8.1e/ ARP TABLE

You can view the IP and MAC addresses of each DHCP connection.

To view the IP and MAC addresses:

1. Select **ARP Table**.

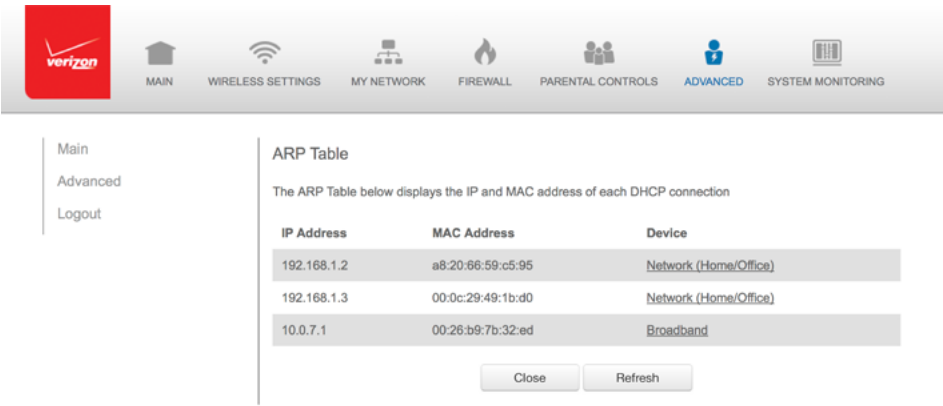


2. Review the IP and MAC address for each device.
3. When complete, click **Close**.

8.1f/ USERS

You can view the users that can currently access your wireless network. In addition, you can modify their login password and name as well as manage the number of unsuccessful login attempts a user can enter before your Gateway temporarily denies all further login attempts by that user.

To view users:

1. Select **Users** in the Advanced page.

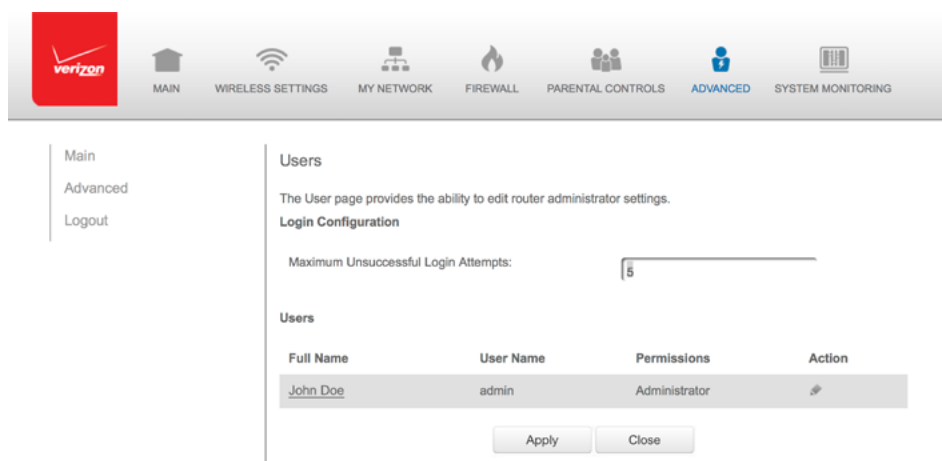

The screenshot shows the Verizon Fios Advanced Settings interface. At the top, there is a navigation bar with icons for MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL, PARENTAL CONTROLS, **ADVANCED**, and SYSTEM MONITORING. Below this, on the left, is a sidebar with links for Main, Advanced, and Logout. The main content area is titled 'Users' and includes a description: 'The User page provides the ability to edit router administrator settings.' Under the 'Login Configuration' section, there is a field for 'Maximum Unsuccessful Login Attempts' with a value of 5. Below this is a table of users.

Full Name	User Name	Permissions	Action
John Doe	admin	Administrator	

At the bottom of the Users section, there are two buttons: 'Apply' and 'Close'.

2. In the **Login Configuration** section, enter the maximum number of unsuccessful login attempts.
3. To edit usernames and passwords, click the **Edit** icon in the **Action** column. The User Settings page displays.

UTILITIES

verizon

MAIN WIRELESS SETTINGS MY NETWORK FIREWALL PARENTAL CONTROLS **ADVANCED** SYSTEM MONITORING

Main
Advanced
Logout

User Settings

General

Full Name: John Doe

User Name (case sensitive): admin

☐ Set a new password

[? Tips for creating secure passwords](#)

Permissions: Administrator

Apply Cancel


4. To edit the username and set a new password, as needed.
5. To add a new user, specify the following parameters:
 - **Full Name** - name of the user.
 - **User Name** - name the user enters to remotely access the home or office network. This field is case-sensitive.
6. To set a new Password, select the **Set a new password** check box. The **New Password** fields display.
7. Verify the level of access for the user in the **Permissions** field.
8. Click **Apply** to save changes. The Users page opens with the user information displayed.
9. Click **Apply** again to save changes and exit.

8.1g/ LOCAL ADMINISTRATION

You can grant local access on a specific port.

To grant access:

1. Select **Local Administration** in the Advanced page.

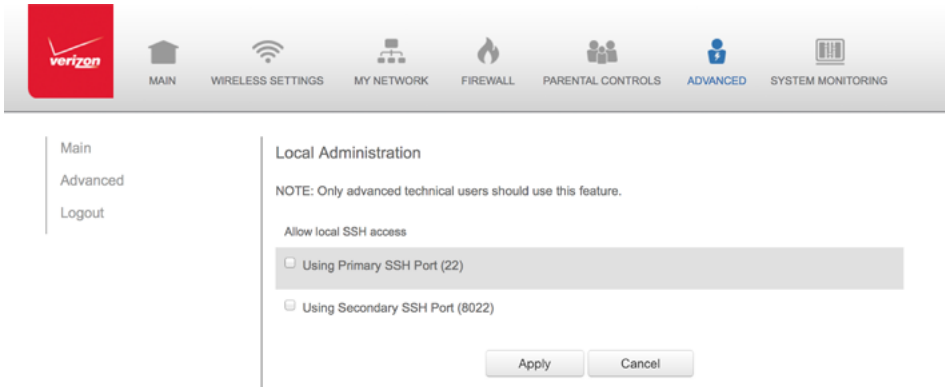

2. To grant access, select the check box for the specific SSH access.
3. Click **Apply** to save changes. Local access is granted.
4. To remove access, clear the checkbox, then click **Apply**. No local access is granted.

8.1h/ REMOTE ADMINISTRATION

The Remote Administration parameters are detailed in **Chapter 4 Configuring Your Network Settings**.

DNS SETTINGS AND NETWORK SETTINGS

8.2/ DNS SETTINGS

You can view and manage the DNS server host name and IP address as well as add a new computer. The DNS server does not require configuration.

8.2a/ DYNAMIC DNS


Typically, when connecting to the Internet, your router is assigned an unused public IP address from a pool, and this address changes periodically.

Dynamic DNS allows a static domain name to be mapped to the dynamic IP address, allowing a computer within your network to be more easily accessible from the Internet.

When using Dynamic DNS, each time the public IP address changes, the DNS database is automatically updated with the new IP address. In this way, even though the IP address changes often, the domain name remains constant and accessible.

To set up dynamic DNS:

1. Select **Dynamic DNS**

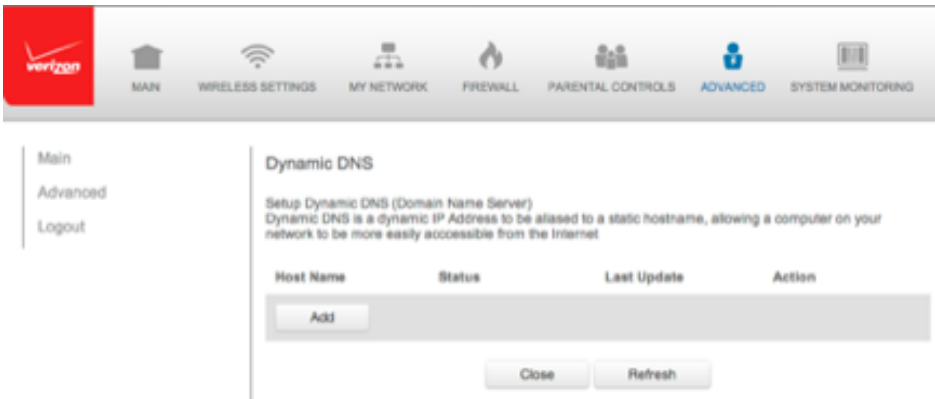


Dynamic DNS

Setup Dynamic DNS (Domain Name Server)
Dynamic DNS is a dynamic IP Address to be aliased to a static hostname, allowing a computer on your network to be more easily accessible from the Internet

Host Name	Status	Last Update	Action
Add			

- To set up a new entry, click the **Add** button.

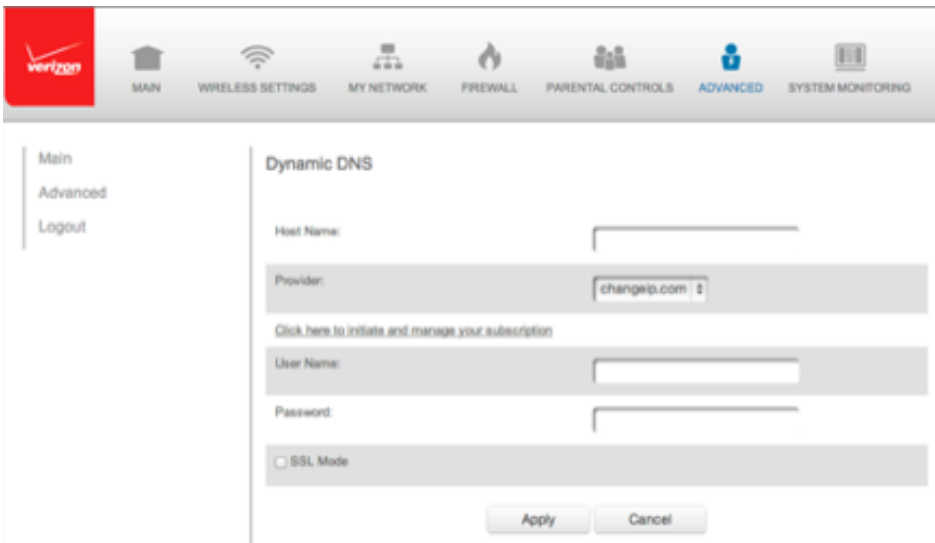

Dynamic DNS

Host Name:

Provider:

[Click here to initiate and manage your subscription](#)

User Name:

Password:

☐ SSL Mode

NETWORK SETTINGS

3. Configure the following parameters:
 - **Host Name** – enter the full domain name for your Dynamic DNS domain.
 - **Provider** – select the Dynamic DNS account provider from the menu.
 - **User Name** – enter your user name for your Dynamic DNS account.
 - **Password** – enter the password for your Dynamic DNS account.
 - **SSL Mode** – select if your Dynamic DNS service supports SSL.

Click **Apply** to save your changes.

To edit the host name or IP address:


1. In the Action column, click the Edit icon. The DNS Entry page displays.
2. Edit the settings.
3. Click **Apply** to save the changes.

8.2b/ DNS SERVER

You can edit the host name and/or IP address, if the host was manually added to the DNS table. If not, you can only modify the host name.

To access the DNS server:

1. Select **DNS Server** in the Advanced page.

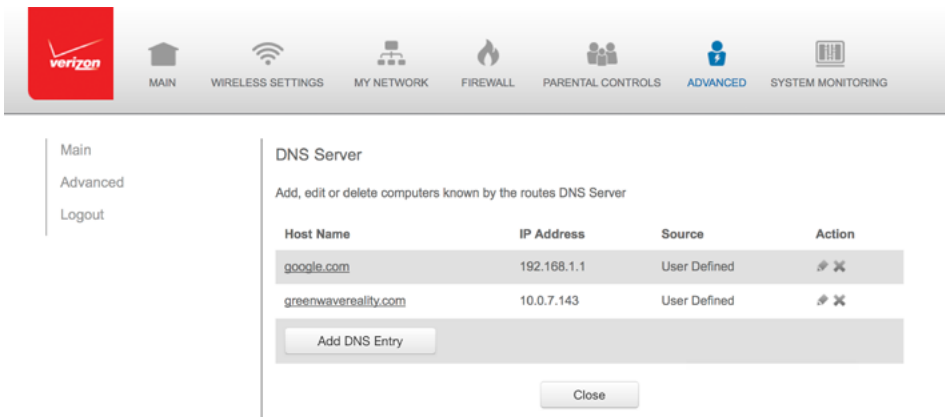

2. To view and add computers stored in the DNS table, click **Add DNS Entry**. The Add DNS Entry page displays.
3. In the **Host Name** field, enter the name of the computer, then enter the IP address and click **Apply** to save changes. The DNS Server page displays.
4. To edit the host name or IP address, click the **Edit** icon in the **Action** column. The DNS Entry page displays. Edit the host name and/or IP address, then click **Apply** to save changes.
5. To remove a host from the DNS table, click the **Delete** icon in the **Action** column.

8.3/ NETWORK SETTINGS

You can configure the following network settings:

- **Network Objects** – define a group, such as a group of computers

NETWORK SETTINGS

- **UPnP** – checks the validity of all UPnP services and rules
- **Port Forwarding Rules** – displays port forwarding rules

8.3a/ NETWORK OBJECTS

Network objects define a group, such as a group of computers, on your Gateway network by MAC address, IP address, and /or host name. The defined group becomes a network object. You can apply settings, such as configuring system rules, to all devices defined in the network object.

For example, instead of setting the same website filtering configuration individually to five computers one at a time, you can define the computers as a network object. Website filtering can then be simultaneously applied to all the computers.

You can use network objects to apply security rules based on host names, instead of IP addresses. This is useful since IP addresses change from time to time. In addition, you can define network objects according to MAC address to make the rule application more persistent against network configuration settings.

To define a network object:

1. Select **Network Objects** in the Advanced page.

The screenshot shows the Verizon FiOS Advanced Settings interface. The top navigation bar includes the Verizon logo and icons for MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL, PARENTAL CONTROLS, **ADVANCED**, and SYSTEM MONITORING. On the left, a sidebar contains links for Main, Advanced, and Logout. The main content area is titled "Network Objects" and includes a descriptive paragraph: "A Network Object is a set of host names, IP addresses, or MAC addresses. Security rules can be applied to a distinct LAN subnet using Network Objects." Below this is a table with three columns: "Network Object", "Items", and "Action".

Network Object	Items	Action
Example one	192.233.31.31 192.168.1.1 / 255.255.255.0 10.0.7.10 - 10.0.7.200	
Default	10.0.7.11 10.0.7.143 / 255.255.255.0 10.0.7.000 - 10.0.7.222	

Below the table is an "Add" button. At the bottom right of the content area is a "Close" button.

2. To define a network object, click **Add**. The Edit Network Objects page displays.

The screenshot shows the "Edit Network Objects" page. The top navigation bar and sidebar are identical to the previous screenshot. The main content area is titled "Edit Network Objects". It includes a "Network Object" section with a "Description" field containing the text "Global Object". Below this is an "Items" section with a table structure for "Item" and "Action".

Item	Action
------	--------

Below the table is an "Add" button. At the bottom right of the content area are "Apply" and "Cancel" buttons.

NETWORK SETTINGS AND ROUTING

3. In the **Description** field, enter a name for the network object.
4. Click **Add**. The Edit Item page displays.

The screenshot shows the Verizon Gateway Network Settings interface. At the top is a navigation bar with the Verizon logo and icons for MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL, PARENTAL CONTROLS, **ADVANCED**, and SYSTEM MONITORING. On the left is a sidebar with links for Main, Advanced, and Logout. The main content area is titled 'Edit Item' and contains a 'Network Object Type' dropdown menu set to 'IP Address'. Below this is a form for the 'IP Address' with four input fields, each containing a '0'. At the bottom of the form are 'Apply' and 'Cancel' buttons.

5. Select the type of network object as IP address, IP subnet, IP range, MAC address, host name, DHCP option, or protocol, and click **Apply** to save changes.
6. Repeat the above steps to create additional network objects.
7. When complete, click **Apply** to save changes.

8.3b/ UNIVERSAL PLUG AND PLAY


You can use Universal Plug and Play (UPnP) to support new devices without configuring or rebooting your Gateway.

In addition, you can enable the automatic cleanup of invalid rules. When enabled, this functionality verifies the validity of all UPnP services and rules every five minutes. Old and unused UPnP defined services are removed, unless a user-defined rule depends on it.

UPnP services are not deleted when disconnecting a computer without proper shutdown of the UPnP applications, such as messenger. Services may often not be deleted and eventually this leads to the exhaustion of rules and services, and no new services can be define. The cleanup feature locates the invalid services and removes them, preventing services exhaustion.

To access this setting:

1. Select **Universal Plug and Play** in the Advanced page.

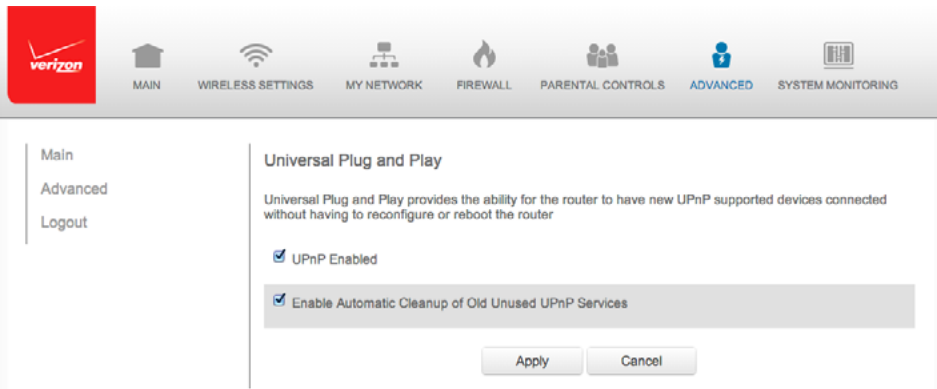

2. To enable UPnP and allow UPnP services to be defined on any network hosts, select the **UPnP Enabled** check box.
3. To enable automatic cleanup of invalid rules, select **Enable Automatic Cleanup of Old Unused UPnP Services** check box.
4. Click **Apply** to save changes.

ROUTING

8.3c/ PORT FORWARDING RULES

You can view, modify, and delete port forwarding rules.

To access the rules:

1. Select **Port Forwarding Rules** in the Advanced page.



MAIN

WIRELESS SETTINGS

MY NETWORK

FIREWALL

PARENTAL CONTROLS

ADVANCED

SYSTEM MONITORING

Main

Advanced

Logout

Port Forwarding Rules

Below is a list of currently configured Protocols that are implemented in the Wireless Broadband Router.

Protocols	Ports	Action
FTP	TCP Any -> 21	 
HTTP	TCP Any -> 80	 
HTTPS	TCP Any -> 443	 
IMAP	TCP Any -> 143	 
L2TP	UDP Any -> 1701	 
Ping	ICMP Echo Request	 
POP3	TCP Any -> 110	 
SMTP	TCP Any -> 25	 
SNMP	UDP Any -> 161	 
Telnet	TCP Any -> 23	 
FTP	UDP 1024 - 65535 -> 69	 
Traceroute	UDP 32768 - 65535 -> 33434 - 33523	 

Add

Close

2. To edit a protocol rule, click the **Edit** icon in the **Action** column. The Edit Service page displays.

The screenshot shows the Verizon FiOS Advanced Settings interface. At the top is a navigation bar with the Verizon logo and icons for MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL, PARENTAL CONTROLS, **ADVANCED**, and SYSTEM MONITORING. On the left is a sidebar with links for Main, Advanced, and Logout. The main content area is titled "Edit Service" and contains the following fields and controls:

- Service Name:** A text input field containing "PFR1".
- Service Description:** A text input field containing "Port Forward Rule 1".
- Server Ports:** A table with three columns: Protocol, Server Ports, and Action.

Protocol	Server Ports	Action
TCP	100 - 200 -> 300 - 400	
GRE		
UDP	Any -> 69	

Below the table is an "Add Server Ports" button. At the bottom right are "Apply" and "Cancel" buttons.

3. Modify the **Service Name** and **Service Description**, as needed.
4. To modify the current protocol, click the **Edit** icon in the Action column.
5. To add server ports, click **Add Server Ports**.
6. Click **Apply** to save changes.

ROUTING

8.4/ ROUTING


You can configure the following settings:

- **IPv6** – enables IPv6 support.
- **Routing** – manages the routing and IP address distribution rules.
- **IP Address Distribution** - adds computers configured as DHCP clients to the network

8.4a/ IPv6

Use the IPv6 feature settings to enable, disable, or configure an IPv6 Internet connection and IPv6 LAN settings.

1. To configure your network to use the IPv6 Internet connection type. Select IPv6 from the Advanced page to display the IPv6 service options:

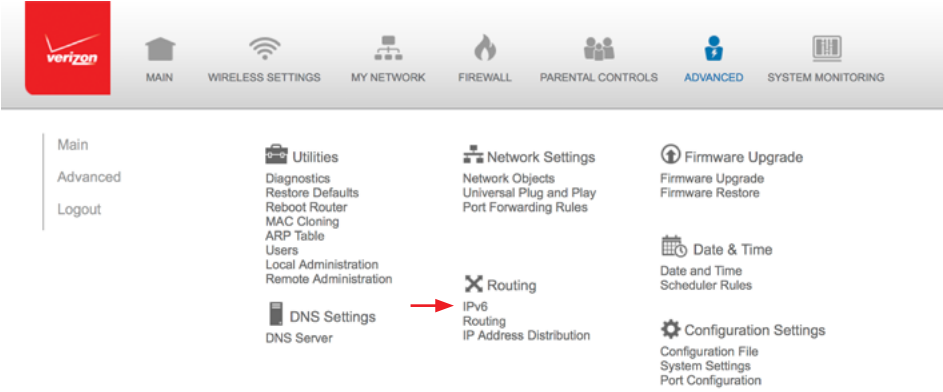

2. Select **Enable** under the Enable IPv6 Support option. (Once IPv6 is enabled the default setting will be IPv6 WAN as DHCPv6 and IPv6 LAN as Stateless).

The screenshot shows the Verizon FiOS Advanced Settings interface. The top navigation bar includes icons for Main, Wireless Settings, My Network, Firewall, Parental Controls, Advanced (selected), and System Monitoring. On the left, a sidebar lists Main, Advanced, and Logout. The main content area is titled 'IPv6 Configuration Control' and contains three sections:

- 1. Enable IPv6 Support**: Radio buttons for 'Enabled' (selected) and 'Disabled'.
- 2. Specify the method to be used to obtain your WAN IPv6 Address**: A dropdown menu for 'IPv6 WAN Configuration' is set to 'DHCPv6'. Below it are radio buttons for 'Obtain IPv6 DNS Server address automatically' (selected) and 'Use the following IPv6 DNS Server addresses'.
- 3. Specify the method to be used to assign LAN IPv6 addresses**: A dropdown menu for 'IPv6 LAN Configuration' is set to 'Stateless'. Below it are fields for 'LAN Prefix:', 'LAN IPv6 Link Local Address:', and 'Router Advertisement Lifetime:' (set to 3 minutes).

3. Select the appropriate IPv6 connection **method** from the drop-down list, as shown below to specify the method to be used to obtain your WAN IPv6 Address.

This close-up shows the 'IPv6 WAN Configuration' dropdown menu. The menu is open, displaying three options: 'None', 'Static', and 'DHCPv6'. The 'DHCPv6' option is selected, indicated by a checkmark.

4. Click Apply to have changes take effect.

ROUTING

NOTE: The Internet IPv6 service is required for this feature to work over the Internet.


- 5. To disable the IPv6 service click on the “Disable” option as shown below and click **Apply** to have changes take effect.

IPv6 Configuration Control

1. Enable IPv6 Support

☒ Enabled ☐ Disabled

Once configured using valid IPv6 WAN and LAN configurations you should not see any errors when you click on the “Apply” button and the Main page will reflect the router’s new IPv6 address as shown below.

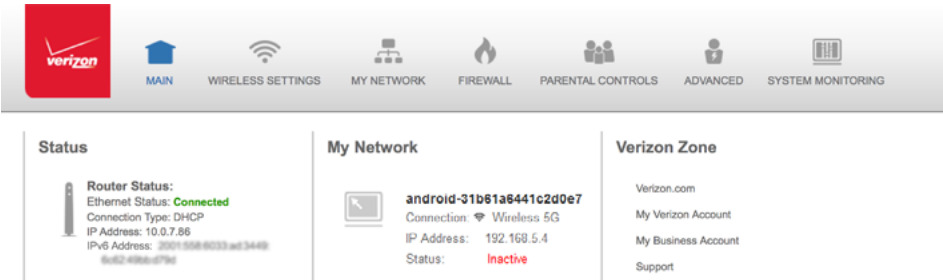

↑ Once configured your IPv6 address will show here

You should also see the IPv6 address for all IPv6 supported devices on your local network displayed on the My Network page and under the Broadband Connection (Ethernet/Coax) Properties as shown on the two pages below.



MAIN WIRELESS SETTINGS MY NETWORK FIREWALL PARENTAL CONTROLS ADVANCED SYSTEM MONITORING

Main

Network Status

Network Connections

Logout

My Network

**android-31b61a6441c2d0e7**

Connection: Wireless 5G
IP Address: 192.168.5.4
IP Address Allocation: DHCP
IPv6 Address:
MAC Address: 5c:0a:5b:2c:cc:20

Website Blocking
Block Internet Services
Port Forwarding
View Device Details
Rename This Device

Connected Devices

Ethernet:	1
Wireless 5G:	1
Wireless 2.4G:	0
Coax:	0



MAIN WIRELESS SETTINGS MY NETWORK FIREWALL PARENTAL CONTROLS ADVANCED SYSTEM MONITORING

Main

Network Status

Network Connections

Logout

Broadband Connection (Ethernet/Coax) Properties

Note: Only advanced technical users should use this feature.

Name:	Broadband Connection (Ethernet/Coax)
Status:	Connected
Network:	Broadband Connection
Connection Type:	Ethernet/Coax
MAC Address:	d4:a9:28:01:d2:d0
IP Address:	10.0.7.103
Subnet Mask:	255.255.255.0
Default Gateway:	10.0.7.1
DNS Servers:	10.0.7.1
IP Address Distribution:	Disabled
IPv6 WAN Address:	2001:558:6033:ad:3449:xxxx:xxxx:xxxx
IPv6 Link Local Address:	fe80::d6a9:28ff:fe01:xxxx
IPv6 DNS Address 1:	2001:4860:4860::8888
IPv6 DNS Address 2:	2001:4860:4860::8844

ROUTING

STATIC - WAN IPv6 ADDRESS CONNECTION

The IPv6 WAN Static configurations are IPv6 settings that you enter manually. These specific IPv6 addresses and settings are not expected to change frequently.

1. To configure IPv6 WAN **Static** mode, select the Static option on the IPv6 Configuration Control Page as shown below:

Main
Advanced
Logout

IPv6 Configuration Control

1. Enable IPv6 Support
☒ Enabled ☐ Disabled

2. Specify the method to be used to obtain your WAN IPv6 Address

IPv6 WAN Configuration: Static

IPv6 WAN Address:

Prefix Length:

Default Gateway:

Primary DNS Server:

Secondary DNS Server:

2. Specify the **Static** method to be used to obtain your WAN IPv6 Address by entering:
 - **IPv6 WAN Configuration (select Static)** as shown in drop-down list and page below:

2. Specify the method to be used to obtain your WAN IPv6 Address

IPv6 WAN Configuration:

None
✓ Static
DHCPv6

IPv6 WAN Address:

- IPv6 WAN Address
 - Prefix Length (*A numeric value between 16 and 128*)
 - Default Gateway
 - Primary DNS Server
 - Secondary DNS Server
3. After entering all appropriate IPv6 settings click Apply to have changes take effect.

STATIC - WAN IPv6 ADDRESS CONNECTION

1. To configure IPv6 LAN Stateful mode with Static WAN, select the Stateful (DHCPv6) option on the IPv6 Configuration Control Page as shown below:

3. Specify the method to be used to assign LAN IPv6 addresses

IPv6 LAN Configuration: Stateful (DHCPv6)

LAN Prefix:
LAN IPv6 Link Local Address:

LAN IPv6 Address Range: 2 - ffff

Router Advertisement Lifetime: 3 minutes (0-150)

IPv6 Address Lifetime: 30 minutes (3-150)

Interfaces

- ☒ Ethernet IPv6 Enabled
- ☒ 5.0GHz Wireless Access Point 1 IPv6 Enabled
- ☒ 2.4GHz Wireless Access Point 2 IPv6 Enabled

Apply Cancel

2. Specify the **Stateful (DHCPv6)** settings to be used to assign LAN IPv6 addresses by entering the following details:

ROUTING

- **IPv6 LAN Configuration** (select **Stateful** from the drop-down list) as shown in drop-down list and page below:

3. Specify the method to be used to assign LAN IPv6 addresses

IPv6 LAN Configuration:



- **LAN Prefix**
- **LAN IPv6 Link Local Address** (automatically populated)
- **LAN IPv6 Address Range** (*start and end*)
- **Router Advertisement Lifetime** (*minutes between 0-150*)
- **IPv6 Address Lifetime** (*minutes between 3-150*)
- **Interfaces** - check one or more of the box(s) to apply IPv6 LAN settings to the selected interfaces:
 - Ethernet/Coax IPv6 Enabled
 - Wireless Access Point 1 IPv6 Enabled
 - Wireless Access Point 2 IPv6 Enabled

3. After entering all appropriate IPv6 settings click Apply to have changes take effect.

STATIC WAN WITH LAN IPv6 STATELESS SETTINGS:

1. To configure LAN IPv6 Stateless mode with **Static** WAN, select the Stateless option on the IPv6 Configuration Control Page as shown below:

2. Specify the settings to be used to assign LAN IPv6 addresses by entering the following details:

3. Specify the method to be used to assign LAN IPv6 addresses

IPv6 LAN Configuration:

LAN Prefix:

LAN IPv6 Link Local Address:

Router Advertisement Lifetime: minutes (0-150)

Interfaces

☒ Ethernet IPv6 Enabled

☒ 5.0GHz Wireless Access Point 1 IPv6 Enabled

☒ 2.4GHz Wireless Access Point 2 IPv6 Enabled

- **IPv6 LAN Configuration** (select **Stateless** from the drop-down list) *as shown in drop-down list and page below:*

3. Specify the method to be used to assign LAN IPv6 addresses

IPv6 LAN Configuration:

- **LAN Prefix**
- **LAN IPv6 Link Local Address** (*automatically populated*)
- **Router Advertisement Lifetime** (*minutes between 0-150*)
- **Interfaces** - check one or more of the box(s) to apply IPv6 LAN settings to the selected interfaces:
 - Ethernet/Coax IPv6 Enabled
 - Wireless Access Point 1 IPv6 Enabled
 - Wireless Access Point 2 IPv6 Enabled

ROUTING

- 3. After entering all appropriate IPv6 settings click Apply to have changes take effect.


DHCPv6 - WAN IPv6 ADDRESS CONNECTION

The IPv6 WAN DHCPv6 configurations are IPv6 settings that you enter that will allow your IPv6 connection to be updated by the ISP as needed.

- 1. To configure IPv6 WAN Stateful (DHCPv6) mode, select the Stateful (DHCPv6) option on the IPv6 Configuration Control Page as shown below:




- 2. Specify the DHCPv6 method to be used to obtain your WAN IPv6 Address by entering:
 - **IPv6 WAN Configuration** (select **DHCPv6** from the drop-down list) *as shown in drop-down list and page below:*



3. Check to either 'Obtain IPv6 DNS Server address automatically', or to 'Use the following IPv6 DNS Server addresses'
4. After entering all appropriate IPv6 settings click Apply to have changes take effect.

DHCPv6 WAN WITH LAN IPv6 STATEFUL (DHCPv6) SETTINGS:

1. To configure IPv6 WAN Stateful (DHCPv6) mode, select the Stateful (DHCPv6) option on the IPv6 Configuration Control Page as shown below:

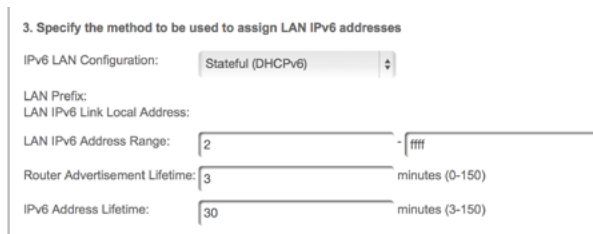

3. Specify the method to be used to assign LAN IPv6 addresses

IPv6 LAN Configuration: Stateful (DHCPv6)

LAN Prefix:

LAN IPv6 Link Local Address:

LAN IPv6 Address Range: 2 - ffff

Router Advertisement Lifetime: 3 minutes (0-150)

IPv6 Address Lifetime: 30 minutes (3-150)

2. Specify the Stateful (DHCPv6) settings to be used to assign LAN IPv6 addresses by entering the following details:
 - **IPv6 LAN Configuration** (select **Stateful** from the drop-down list) *as shown in drop-down list and page below:*



3. Specify the method to be used to assign LAN IPv6 addresses

IPv6 LAN Configuration: ✓ Stateful (DHCPv6)
Stateless

ROUTING

- LAN Prefix
 - LAN IPv6 Link Local Address (*automatically populated*)
 - LAN IPv6 Address Range (*start and end*)
 - Router Advertisement Lifetime (*minutes between 0-150*)
 - IPv6 Address Lifetime (*minutes between 3-150*)
 - **Interfaces** - check one or more of the box(s) to apply IPv6 LAN settings to the selected interfaces:
 - Ethernet/Coax IPv6 Enabled
 - Wireless Access Point 1 IPv6 Enabled
 - Wireless Access Point 2 IPv6 Enabled
3. After entering all appropriate IPv6 settings click Apply to have changes take effect.

DHCPv6 WAN WITH LAN IPv6 STATELESS SETTINGS:

1. To configure IPv6 LAN Stateless mode with DHCPv6 WAN, select the Stateless option on the IPv6 Configuration Control Page as shown below:

3. Specify the method to be used to assign LAN IPv6 addresses

IPv6 LAN Configuration: Stateless

LAN Prefix:

LAN IPv6 Link Local Address:

Router Advertisement Lifetime: minutes (0-150)

Interfaces

☒ Ethernet IPv6 Enabled

☒ 5.0GHz Wireless Access Point 1 IPv6 Enabled


☒ 2.4GHz Wireless Access Point 2 IPv6 Enabled

2. Specify the Stateless settings to be used to assign LAN IPv6 addresses by entering the following details:

- **IPv6 LAN Configuration** (select **Stateless** from the drop-down list) *as shown in drop-down list and page below:*

3. Specify the method to be used to assign LAN IPv6 addresses

IPv6 LAN Configuration:



- **LAN Prefix** (*automatically populated*)
 - **LAN IPv6 Link Local Address** (*automatically populated*)
 - **Router Advertisement Lifetime** (*minutes between 0-150*)
 - **Interfaces** - check one or more of the box(s) to apply IPv6 LAN settings to the selected interfaces:
 - Ethernet/Coax IPv6 Enabled
 - Wireless Access Point 1 IPv6 Enabled
 - Wireless Access Point 2 IPv6 Enabled
3. After entering all appropriate IPv6 settings click Apply to have changes take effect.

ROUTING

LAN IPv6 CONFIGURATION WITHOUT AN IPv6 WAN CONNECTION:

1. To configure IPv6 to use either the IPv6 LAN Stateful or Stateless mode without using an IPv6 Internet WAN connection, select the **None** option on the IPv6 Configuration Control Page as shown below:



2. After entering all appropriate IPv6 settings click Apply to have changes take effect.

LAN IPv6 STATEFUL (DHCPv6) WITH NO WAN SETTINGS:

1. To configure IPv6 LAN Stateful mode with No WAN connection, select the Stateful option on the IPv6 Configuration Control Page as shown below:

The screenshot shows the Verizon FiOS Advanced Settings interface. The top navigation bar includes the Verizon logo and links to MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL, PARENTAL CONTROLS, **ADVANCED**, and SYSTEM MONITORING. On the left, a sidebar contains links to Main, Advanced, and Logout. The main content area is titled "IPv6 Configuration Control" and contains three numbered sections:

- 1. Enable IPv6 Support**: Includes radio buttons for ☒ Enabled and ☐ Disabled.
- 2. Specify the method to be used to obtain your WAN IPv6 Address**: Includes a dropdown menu for "IPv6 WAN Configuration:" set to "None".
- 3. Specify the method to be used to assign LAN IPv6 addresses**: Includes a dropdown menu for "IPv6 LAN Configuration:" set to "Stateful (DHCPv6)", a text field for "LAN IPv6 Link Local Address:" with the value "fe80::d6a9:28ff:fe05:2d85", a text field for "LAN IPv6 Address Range:" with the value "2" and a placeholder "ffff", and a text field for "Router Advertisement Lifetime:" with the value "3" and a unit of "minutes (0-150)".

Below these sections is an "Interfaces" section with three checked items: "Ethernet IPv6 Enabled", "5.0GHz Wireless Access Point 1 IPv6 Enabled", and "2.4GHz Wireless Access Point 2 IPv6 Enabled". At the bottom right are "Apply" and "Cancel" buttons.

- Specify the **Stateful (DHCPv6)** settings to be used to assign LAN IPv6 addresses by entering the following details:

- IPv6 LAN Configuration** (select **Stateful** from the drop-down list) *as shown in drop-down list and page below:*

3. Specify the method to be used to assign LAN IPv6 addresses

IPv6 LAN Configuration:

The dropdown menu is open, showing two options: "Stateful (DHCPv6)" which is selected with a checkmark, and "Stateless".

- LAN IPv6 Link Local Address** (*automatically populated*)
- LAN IPv6 Address Range** (*start and end*)

ROUTING

- **Router Advertisement Lifetime** (*minutes between 0-150*)
 - **Interfaces** - check one or more of the box(s) to apply IPv6 LAN settings to the selected interfaces:
 - Ethernet/Coax IPv6 Enabled
 - Wireless Access Point 1 IPv6 Enabled
 - Wireless Access Point 2 IPv6 Enable
3. After entering all appropriate IPv6 settings click Apply to have changes take effect.

LAN IPv6 STATELESS WITH NO WAN SETTINGS:

1. To configure IPv6 LAN Stateless mode with No WAN connection, select the Stateless option on the IPv6 Configuration Control Page as shown below:


The screenshot shows a configuration page titled "3. Specify the method to be used to assign LAN IPv6 addresses". It contains the following fields and options:

- IPv6 LAN Configuration:** A drop-down menu set to "Stateless".
- LAN Prefix:** An empty text input field.
- LAN IPv6 Link Local Address:** An empty text input field.
- Router Advertisement Lifetime:** A text input field containing the number "3", with the unit "minutes (0-150)" to its right.
- Interfaces:** A section with three checked checkboxes:
 - ☒ Ethernet IPv6 Enabled
 - ☒ 5.0GHz Wireless Access Point 1 IPv6 Enabled
 - ☒ 2.4GHz Wireless Access Point 2 IPv6 Enabled
- At the bottom right are two buttons: "Apply" and "Cancel".

2. Specify the **Stateless** settings to be used to assign LAN IPv6 addresses by entering the following details:
- **IPv6 LAN Configuration** (select **Stateless** from the drop-down list) *as shown in drop-down list and page below:*

3. Specify the method to be used to assign LAN IPv6 addresses

IPv6 LAN Configuration:



- LAN IPv6 Link Local Address (*automatically populated*)
- Router Advertisement Lifetime (*minutes between 0-150*)
- **Interfaces** - check one or more of the box(s) to apply IPv6 LAN settings to the selected interfaces:
 - Ethernet/Coax IPv6 Enabled
 - Wireless Access Point 1 IPv6 Enabled
 - Wireless Access Point 2 IPv6 Enable

3. After entering all appropriate IPv6 settings click Apply to have changes take effect.

8.4b/ ROUTING SETTINGS

You can view the routing and IP address distribution rules as well as add, edit, or delete the rules.

To view the rules:

1. Select **Routing** in the Advanced page.

ROUTING



MAIN

WIRELESS SETTINGS

MY NETWORK

FIREWALL

PARENTAL CONTROLS

ADVANCED

SYSTEM MONITORING

Main

Advanced

Logout

Routing

This page provides the ability to add, edit, or delete routing rules

Routing Table

Name	Destination	Gateway	Netmask	Metric	Status	Action
------	-------------	---------	---------	--------	--------	--------

New Route

Routing Protocols

☒ Internet Group Management Protocol (IGMP)

☐ Domain Routing (add route entry according to interface from which DNS record is received)

Apply

Cancel

2. To add a new Gateway, click **Add New Route**.



MAIN

WIRELESS SETTINGS

MY NETWORK

FIREWALL

PARENTAL CONTROLS

ADVANCED

SYSTEM MONITORING

Main

Advanced

Logout

Route Settings

Name:

Network (Home/Office)

Destination:

0

0

0

0

Netmask:

255

255

255

255

Gateway:

0

0

0

0

Metric:

0

Apply

Cancel

3. Specify the following parameters:
 - **Name** – select the network type.
 - **Destination** – enter the destination IP of the destination host, subnet address, network address, or default route. The destination for a default route is 0.0.0.0.
 - **Netmask** – enter the network mask. This is used in conjunction with the destination to determine when a route is used.
 - **Gateway** – enter the IP address of your Gateway.
 - **Metric** – enter a measurement preference of the route. Typically, the lowest metric is the most preferred route. If multiple routes exist to a specific destination network, the route with the lowest metric is used.
4. Click **Apply** to save changes.

8.4c/ IP ADDRESS DISTRIBUTION

You can easily add computers configured as DHCP clients to the network. The DHCP server provides a mechanism for allocating IP addresses to these hosts and for delivering network configuration parameters to the hosts.

For example, a client (host) sends a broadcast message on the network requesting an IP address for itself. The DHCP server then checks its list of available addresses and leases a local IP address to the host for a specific period of time and simultaneously designates this IP address

ROUTING

as taken. At this point, the host is configured with an IP address for the duration of the lease.

The host can renew an expiring lease or let it expire. If it renews a lease, the host receives current information about network services, as it did during the original lease, allowing it to update its network configurations to reflect any changes that occurred since the first connection to the network.

If the host wishes to terminate a lease before its expiration, it sends a release message to the DHCP server. This makes the IP address available for use by other hosts.

The DHCP server performs the following functions:

- Displays a list of all DHCP host devices connected to your Gateway
- Defines the range of IP addresses that can be allocated in the network
- Defines the length of time the dynamic P addresses are allocated
- Provides the above configurations for each network device and can be configured and enabled or disabled separately for each network device
- Assigns a static lease to a network computer to receive the same IP address each time it connects to the network, even if this IP address is within the range of addresses that the DHCP server may assign to other computer
- Provides the DNS server with the host name and IP address of each computer connected to the network

To view a summary of the services provided by the DHCP server:

1. Select **IP Address Distribution** in the Advanced page.

The screenshot shows the Verizon FiOS Advanced Settings interface. The top navigation bar includes the Verizon logo and icons for MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL, PARENTAL CONTROLS, **ADVANCED**, and SYSTEM MONITORING. The left sidebar has links for Main, Advanced, and Logout. The main content area is titled "IP Address Distribution" and includes a description: "IP Address Distribution provides the ability to allocate IP addresses and configuration parameters to selected hosts". Below this is a table with the following data:

Name	Service	Subnet Mask	Dynamic IP Range	Action
Network (Home/Office)	DHCP Server	255.255.255.0	192.168.1.2-192.168.1.100	

At the bottom of the table are two buttons: "Close" and "Connection List".

DHCP SERVER SETTINGS

You can edit the DHCP server settings for a device.

To edit the settings:

1. On the IP Address Distribution page, click the **Edit** icon in the **Action** column. The DHCP Settings page opens with the device information displayed.

The screenshot shows the DHCP Settings page for Network (Home/Office). The top navigation bar is the same as the previous screenshot. The left sidebar has links for Main, Advanced, and Logout. The main content area is titled "DHCP Settings for Network (Home/Office)". Below this is the "Service" section, which includes the "IP Address Distribution:" label and a dropdown menu currently set to "DHCP Server". At the bottom are two buttons: "Apply" and "Cancel".

ROUTING

2. To enable the DHCP server, select **DHCP Server** in the **IP Address Distribution** field.

Once enabled, the DHCP server provides automatic IP assignments (IP leases) based on the preset IP range defined below.

3. To configure the DHCP server complete the following fields:
 - **Start IP Address** – enter the first IP address that your Gateway will automatically begin assigning IP addresses from. Since your Gateway's default IP address is 192.168.1.1, the default start IP address should be 192.162.1.2.
 - **End IP Address** – enter the last IP address that your Gateway will automatically stop the IP address allocation. The maximum end IP address range that can be entered is 192.168.1.254.
 - **WINS Server** – determines the IP address associated with a network device.
 - **Lease Time in Minutes** – assigns the amount of time in minutes that each device is assigned an IP address by the DHCP server when it connects to the network.

When the lease expires, the server determines if the computer has disconnected from the network. If it has, the server may reassign this IP address to a newly-connected computer.

- **Provide Host Name if Not Specified by Client** – when activated, your Gateway assigns a default name to the client, if the DHCP client has no host name.

4. Click **Apply** to save changes.

DHCP CONNECTIONS

You can view a list of the connections currently assigned and recognized by the DHCP server. In addition, you can add a new connection with a fixed IP address.

NOTE: The fixed IP address of a device is assigned to the MAC address of the network card installed on the network computer. If this network card is replaced, you must update the device entry in the DHCP Connections list with the MAC address of the new network card.

To view a list of computers:

1. On the IP Address page, click **Connection List**.

The screenshot shows the Verizon FiOS Advanced Settings interface. At the top is a navigation bar with icons and labels for: MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL, PARENTAL CONTROLS, **ADVANCED**, and SYSTEM MONITORING. Below this is a sidebar with links for Main, Advanced, and Logout. The main content area is titled "DHCP Connections" and contains a table with the following data:

Host Name	IP Address	Physical Address	Lease Type	Connection Name	Status	Expires In	Action
Work-Laptop	192.168.1.33	1c:75:08:8d:8b:7b	Dynamic	Network (Home/Office)	Active	1440 minutes	 
new-host-1	192.168.1.153	e8:99:c4:97:27:cf	Dynamic	Network (Home/Office)	Active	1391 minutes	 

Below the table is a button labeled "Add Static Connection". At the bottom of the section, there is a message: "Press the Refresh button to update the data." with two buttons: "Close" and "Refresh".

DATE AND TIME

2. To define a new Static Connection with a fixed IP address, click **Add Static Connection**.

The screenshot shows the Verizon router's web interface. At the top is a navigation bar with the Verizon logo and icons for MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL, PARENTAL CONTROLS, **ADVANCED**, and SYSTEM MONITORING. On the left is a sidebar with links for Main, Advanced, and Logout. The main content area is titled 'DHCP Connection Settings'. It contains three input fields: 'Host Name' with the text 'new-host', 'IP Address' with four empty boxes for octets, and 'MAC Address' with six empty boxes for the hexadecimal digits. At the bottom right are 'Apply' and 'Cancel' buttons.

3. Enter the host name.
4. Enter the fixed IP address to be assigned.
5. Enter the MAC address of the network interface of the computer used with this DHCP static connection.
6. Click **Apply** to save changes.

8.5/ DATE AND TIME

You can configure the following settings:

- **Date and Time Settings** – sets the time zone and enables automatic time updates.
- **Scheduler Rules** – limits the activation of firewall rules to specific time periods.

8.5a/ DATE AND TIME SETTINGS

You can set the time zone and enable automatic time updates.

To configure the settings:

1. Select **Date and Time** in the Advanced page.

The screenshot shows the Verizon Gateway Advanced settings page. The top navigation bar includes the Verizon logo and icons for MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL, PARENTAL CONTROLS, **ADVANCED**, and SYSTEM MONITORING. On the left, a sidebar lists Main, Advanced, and Logout. The main content area is titled "Date and Time" and contains the following sections:

- Localization**
 - Local Time: Feb 28, 2014 14:55:50
 - Time Zone: Eastern_Time (GMT-05:00) [dropdown arrow]
- Automatic Time Update**
 - ☒ Enabled
 - Protocol: Network Time Protocol (NTP)
 - Time Server: Action
 - 0.north-america.pool.ntp.org [refresh icon] [X icon]
 - 1.north-america.pool.ntp.org [refresh icon] [X icon]
 - [Add button]

2. Select the local time zone. Your Gateway automatically detects daylight saving times for selected time zone.
3. In the **Automatic Time Update** section, select the **Enabled** check to perform an automatic time update.
4. Define the time server addresses by clicking **Add**. The Time Server Settings page displays.

DATE AND TIME

The screenshot shows the Verizon Gateway Advanced settings interface. At the top is a navigation bar with the Verizon logo and icons for MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL, PARENTAL CONTROLS, ADVANCED (selected), and SYSTEM MONITORING. On the left is a sidebar with links for Main, Advanced, and Logout. The main content area is titled 'Time Server Settings' and contains the instruction 'Enter server IP address or domain name:'. Below this is a text input field labeled 'Time Server:' and two buttons, 'Apply' and 'Cancel'.

5. Enter the IP address or domain name of the time server, then click **Apply** to save changes.

8.5b/ SCHEDULER RULES

Scheduler rules are used for limiting the activation of firewall rules to specific time periods. The time periods are either for days of the week or for hours of each day based on activity or inactivity.

To define a rule:

1. Verify that the date and time of your Gateway is correct.
2. Select **Scheduler Rules** in the Advanced page.

The screenshot shows the Verizon FiOS Advanced Settings interface. The top navigation bar includes the Verizon logo and icons for MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL, PARENTAL CONTROLS, ADVANCED (selected), and SYSTEM MONITORING. On the left, a sidebar contains links for Main, Advanced, and Logout. The main content area is titled "Scheduler Rules" and includes a descriptive paragraph: "Scheduler rules are used for limiting the activation of firewall rules to specific time periods, either for days of the week, or for hours of each day". Below this is a table with columns for Rule Name, Settings, Status, and Action. Two rules are listed: "At Night" and "NightWork", both with inactive status and edit/delete icons. An "Add" button is at the bottom of the table, and "Close" and "Refresh" buttons are at the bottom of the page.

Rule Name	Settings	Status	Action
At Night	Mon, Tues, Wed, Thurs, and Fri between 12:12-13:13, and 14:14-15:15	Inactive	
NightWork	Mon, Tues, Wed, Thurs, Fri, Sat, and Sun between 12:12-13:13, and 14:14-15:15 Mon, Tues, Wed, Thurs, and Fri between 12:12-13:13, and 14:14-15:15	Inactive	

[Add](#)

[Close](#) [Refresh](#)

3. Click **Add**. The Set Rule Schedule page displays.

The screenshot shows the "Set Rule Schedule" page in the Verizon FiOS Advanced Settings interface. The top navigation bar and sidebar are identical to the previous screenshot. The main content area is titled "Set Rule Schedule". It features a "Rule Name:" label followed by a text input field containing "Scheduler Rule". Below this is the "Rule Settings" section with two radio buttons: "Rule will be Active at the Scheduled Time" (selected) and "Rule will be Inactive at the Scheduled Time". The "Rule Schedule" section includes a table with columns for Rule Schedule and Action, with an "Add Rule Schedule" button in the first column. At the bottom are "Apply" and "Cancel" buttons.

Rule Name:

Rule Settings

☒ Rule will be Active at the Scheduled Time

☐ Rule will be Inactive at the Scheduled Time

Rule Schedule	Action
Add Rule Schedule	

[Apply](#) [Cancel](#)

CONFIGURATION SETTINGS

- 4. Enter the name of the rule.
- 5. In the **Rule Settings** section, specify if the rule is active at the scheduled time or inactive at the scheduled time.
- 6. Click the **Add Rule Schedule**. The Edit Rule Schedule page displays.



MAIN

WIRELESS SETTINGS

MY NETWORK

FIREWALL

PARENTAL CONTROLS

ADVANCED

SYSTEM MONITORING

Main

Advanced

Logout

Edit Rule Schedule

Days of Week

☐ Monday

☐ Tuesday

☐ Wednesday

☐ Thursday

☐ Friday

☐ Saturday

☐ Sunday

Hours Range

Start

End

Action

New Hours Range Entry

Apply

Cancel

- 7. Select the active or inactive days of the week.
- 8. To define a new active or inactive hourly range, click **New Hours Range Entry**.

9. Enter the start and end time, then click **Apply** to save changes.
10. Click **Apply** again to save the rule schedule.

8.6/ CONFIGURATION SETTINGS

You can configure the following configuration settings:

- **Configuration File** – used for file backups and restoring configuration files
- **System Settings** – configures various system and management parameters
- **Port Configuration** – sets up Ethernet ports

8.6a/ CONFIGURATION FILE

You can use the Configuration File functionality to view, save, and load configuration files. These files are used to backup and restore the current configuration of your Gateway.


Only configuration files saved on a specific Gateway can be applied to that Gateway. You cannot transfer configuration files between Gateways.

WARNING: *Manually editing a configuration file can cause your Gateway to malfunction or become completely inoperable.*

To save or load the configuration file:

1. Select **Configuration File**.

CONFIGURATION SETTINGS

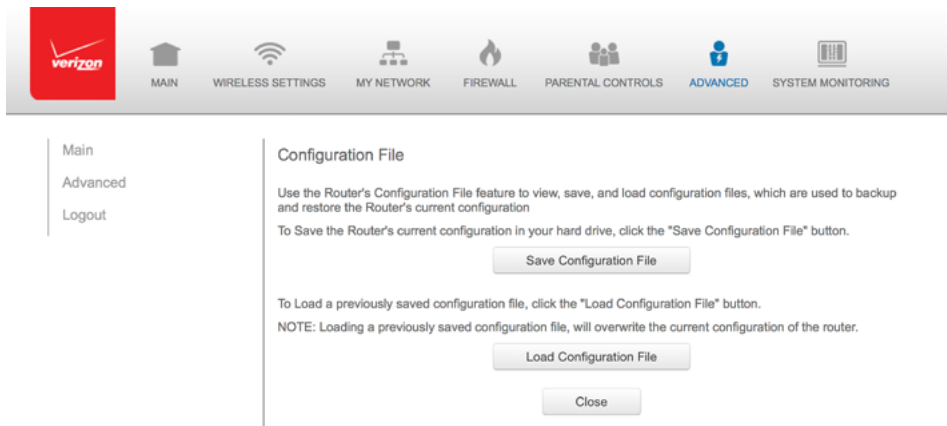

2. To save the current configuration to a file, click **Save Configuration File**. The configuration file is saved to your web browser's download folder.
3. To load a previously saved configuration file, click **Load Configuration File**.


Browse to the location of the file, then click **Apply** to begin the configuration uploading process. Your Gateway will automatically restart with that configuration.

8.6b/ SYSTEM SETTINGS

You can configure various system and management parameters.

To configure system settings:

1. Select **System Settings** in the Advanced page.

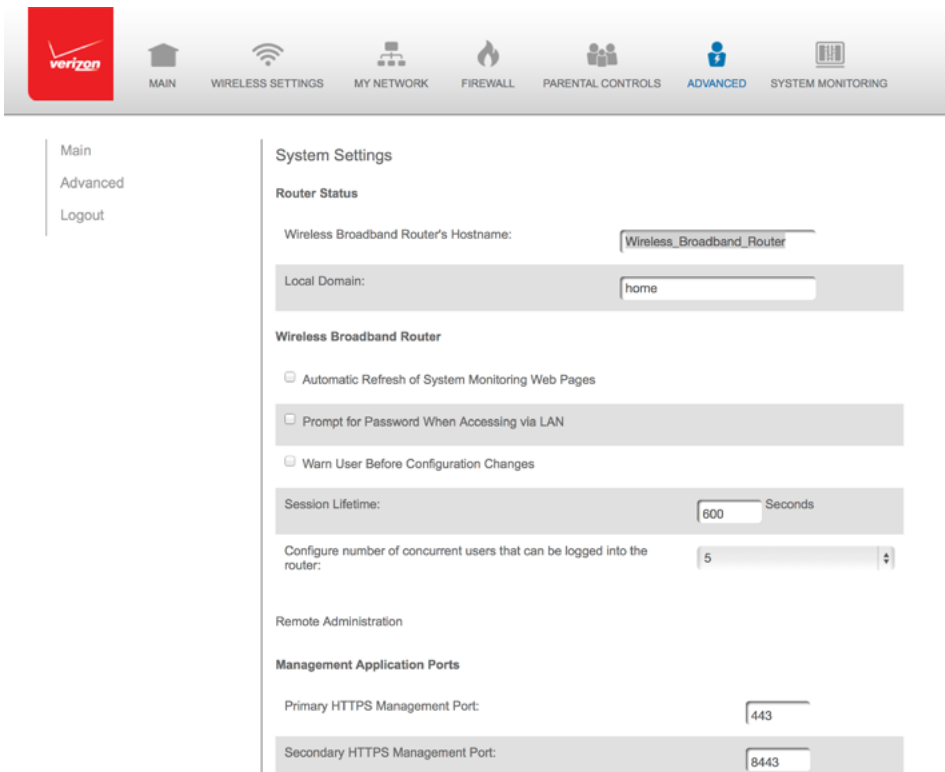

System Settings

Router Status

Wireless Broadband Router's Hostname:

Local Domain:

Wireless Broadband Router

☒ Automatic Refresh of System Monitoring Web Pages

☐ Prompt for Password When Accessing via LAN

☒ Warn User Before Configuration Changes

Session Lifetime: Seconds

Configure number of concurrent users that can be logged into the router:

Remote Administration

Management Application Ports

Primary HTTPS Management Port:

Secondary HTTPS Management Port:

2. In the **Router Status** section, configure the following:
 - **Wireless Broadband Route's Hostname** – enter the host name or URL address of your Gateway. Both names are the same.
 - **Local Domain** – view the local domain of the network.
3. In the **Wireless Broadband Router** section, configure the following by selecting the check box:

CONFIGURATION SETTINGS

- ***Automatic Refresh of System Monitoring Web Pages*** – activates the automatic refresh of system monitoring web pages.
- ***Prompt for Password when Accessing via LAN*** – causes your Gateway to ask for a password when trying to connect to the network.
- ***Warn User Before Configuration Changes*** – activates user warnings before network configuration changes take effect.

In the **Session Lifetime** field, specify the length of time required before reentering a user name and password after your Gateway has been inactive.

In the **Configure a Number of Concurrent Users** field, select the number of users that can access your Gateway at any time.

4. Select **Remote Administration** to configure the remote administration to your Gateway.
5. In the **Management Application Ports** section, change the primary and secondary HTTP management ports.
6. In the **System Logging** section, configure the following system log options:
 - ***Enable Logging*** – activates system logging.
 - ***Low Capacity Notification Enabled*** – activates low capacity notification. This works in conjunction with the Allowed Capacity before Email Notification and System

Log Buffer Size.

- **Allowed Capacity before Email Notification** – specify the capacity before an email notification is sent.
- **System Log Buffer Size** – specify the size of the system log buffer.
- **Remote System Notify Level** – specify the type of information, such as none, error, warning, and information, received for remote system logging.

The screenshot shows a configuration window with three sections: 'System Logging', 'Security Logging', and 'Auto WAN Detection'. In the 'System Logging' section, 'Enable Logging' is checked, and 'Remote System Notify Level' is set to 'None'. The 'Security Logging' section has 'Remote Security Notify Level' set to 'None'. The 'Auto WAN Detection' section has 'DHCP Timeout' set to '90' seconds. At the bottom are 'Apply' and 'Cancel' buttons.

Section	Setting	Value
System Logging	Enable Logging	☒
	Remote System Notify Level	None
Security Logging	Remote Security Notify Level	None
Auto WAN Detection	DHCP Timeout	90 Seconds

7. In the **Security Logging** section, configure the following security logging options:

- **Low Capacity Notification Enabled** – activates low capacity notification. This works in conjunction with the Allowed Capacity before Email Notification and System Log Buffer Size.

CONFIGURATION SETTINGS

- *Allowed Capacity before Email Notification* – specify the capacity before an email notification is sent.
 - *System Log Buffer Size* – specify the size of the system log buffer.
 - *Remote System Notify Level* – specify the type of information, such as none, error, warning, and information, received for remote system logging.
8. In the **Auto WAN Detection** section, specify the DHCP timeout.
 9. Click **Apply** to save changes.

8.6c/ ETHERNET PORT CONFIGURATION

Ethernet port configuration allows you to set up the Ethernet ports as either full- or half-duplex ports, at either 10 Mbps, 100 Mbps, or 1000 Mbps.

To configure the ports:

1. Select **Port Configuration** in the Advanced page.

The screenshot shows the Verizon FiOS Advanced Settings interface. At the top is a navigation bar with icons for MAIN, WIRELESS SETTINGS, MY NETWORK, FIREWALL, PARENTAL CONTROLS, ADVANCED (selected), and SYSTEM MONITORING. Below this is a sidebar with links for Main, Advanced, and Logout. The main content area is titled "Ethernet Port Configuration" and contains a table with the following data:

Port	Speed & Duplex	Status
WAN Port	1000 Full-Duplex (selected) / 10 Half-Duplex	Connected / CRC 0
LAN Port 1	10 Full-Duplex (selected) / 10 Full-Duplex	Disconnected
LAN Port 2	100 Half-Duplex (selected) / 100 Half-Duplex	Disconnected
LAN Port 3	100 Full-Duplex (selected) / 1000 Full-Duplex	Disconnected
LAN Port 4	Auto	Disconnected

At the bottom of the table are "Apply" and "Cancel" buttons.

2. To emulate the speed and duplex configuration of the port with which it's communicating, select **Auto** or select the port speed and duplicity.
3. Click **Apply** to save changes.

09/

MONITORING YOUR GATEWAY

- 9.0** Gateway Status
- 9.1** Advanced Status
- 9.2** System Logging
- 9.3** Full Status/System wide
Monitoring of Connections
- 9.4** Traffic Monitoring
- 9.5** Bandwidth Monitoring

System Monitoring displays system information, including basic settings, system log, key network device parameters, and network traffic statistics.

GATEWAY STATUS AND ADVANCED STATUS

9.0/ GATEWAY STATUS

You can view the basic settings of your Gateway.

To view the basic settings:

1. Select **System Monitoring** in the Main menu. The Router Status page displays.



MAIN

WIRELESS SETTINGS

MY NETWORK

FIREWALL

PARENTAL CONTROLS

ADVANCED

SYSTEM MONITORING

Main

Router Status

Advanced Status

Logout

Router Status

UI Version:	1.0.18
Firmware Version	0.16.25
Model Name:	FIOS-G1100
Hardware Version:	1.01
Serial Number:	GN19-1159-00126
Physical Connection Type:	Ethernet
Broadband Connection Type:	DHCP
Broadband Connection Status:	Connected
Broadband IP Address:	10.0.7.86
Subnet Mask:	255.255.255.0
Broadband MAC Address:	d4:a9:28:05:2d:84
Default Gateway:	10.0.7.1
DNS Server:	10.0.7.1, 0.0.0.0
Broadband IPv6 Address:	
Active Status (Router Has Been Active For):	3 hours, 2 minutes
NATs Supported (Max):	30,000

Close

Automatic Refresh Off

Refresh

2. To refresh the page, click **Refresh**.

3. To continuously refresh the page, click **Automatic Refresh On**.


9.1/ ADVANCED STATUS

You can view the details and status of:

- *System Logging*
- *Full Status/System wide Monitoring of Connections*
- *Traffic Monitoring*
- *Broadband Monitoring*

To view the advanced status:

1. Select **Advanced Status**. A warning page displays.
2. Click **Yes**. The Advanced Status page displays.

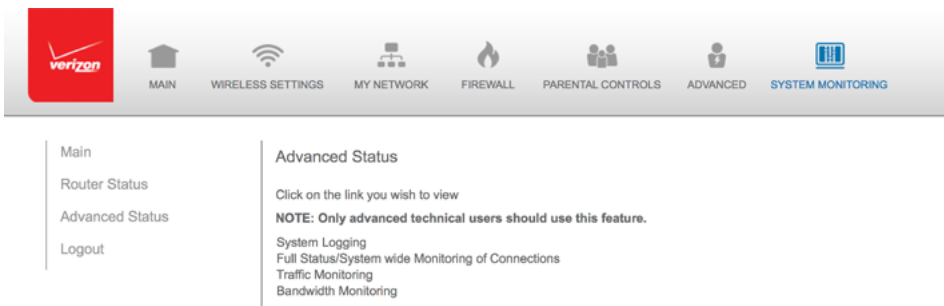

3. To view the details of the listed monitoring options, click the link.

SYSTEM LOGGING AND FULL STATUS/ SYSTEM WIDE MONITORING OF CONNECTIONS

9.2/ SYSTEM LOGGING

System logging provides a view of the most recent activity of your Gateway. In addition, you can view additional logs, such as the security, advanced, firewall, WAN, DHCP, and LAN DHCP.

To view the system log:

1. In the Advanced Status page, click the **System Logging** link.



MAIN

WIRELESS SETTINGS

MY NETWORK

FIREWALL

PARENTAL CONTROLS

ADVANCED

SYSTEM MONITORING

Main

System Log

Security Log

Advanced Log

Firewall Log

WAN DHCP Log

LAN DHCP Log

Logout

System Log

View Options

Close

Clear Log

Save Log

Refresh

Time	Event-Type	Log Level	Details
Feb 28 12:34:11 2014	dhcpd	info<158>	DHCPACK on 192.168.1.154 to 68:5b:35:a9:5f:77 via br-lan
Feb 28 12:34:11 2014	dhcpd	info<158>	DHCPREQUEST for 192.168.1.154 (192.168.1.1) from 68:5b:35:a9:5f:77 via br-lan
Feb 28 12:34:11 2014	dhcpd	info<158>	Wrote 4 leases to leases file.
Feb 28 12:34:11 2014	dhcpd	info<158>	Wrote 0 class decls to leases file.
Feb 28 12:34:11 2014	named[19718]	info<142>	zone flos-router.home/IN: sending notifies (serial 2008122601)

2. To view a specific type of log event such as Security Log, WAN DHCP Log, etc., click the appropriate link in the menu in the left column.
3. To update the data, click **Refresh**.

9.3/ FULL STATUS/SYSTEM WIDE MONITORING OF CONNECTIONS

You can view a summary of the monitored data collected for your Gateway.

To view your Gateway's full system status:

1. In the Advanced Status page, click **Full Status/System wide Monitoring of Connections**.



MAIN

WIRELESS SETTINGS

MY NETWORK

FIREWALL

PARENTAL CONTROLS

ADVANCED

SYSTEM MONITORING

Main

Router Status

Advanced Status

Logout

Full Status/System wide Monitoring of Connections

Name	Network (Home/Office)	Broadband Connection (Ethernet/Coax)	5.0GHz Wireless Access Point 1	2.4GHz Wireless Access Point 2	Ethernet
Status	Connected	Disconnected	Connected	Connected	Connected
Network	Network (Home/Office)	Broadband Connection	Network (Home/Office)	Network (Home/Office)	Network (Home/Office)
Underlying Device	5.0GHz Wireless Access Point 1 2.4GHz Wireless Access Point 2 Ethernet Coax				
Connection type	Bridge	Ethernet/Coax	Wireless 802.11 5.0GHz Access Point	Wireless 802.11 2.4GHz Access Point	Hardware Ethernet Switch
MAC Address	d4:a9:28:05:2d:85	00:00:00:00:00:00	d4:a9:28:05:2d:87	d4:a9:28:05:2d:88	d4:a9:28:05:2d:85
IP Address	192.168.1.1	0.0.0.0			
Subnet Mask	255.255.255.0	0.0.0.0			
Default Gateway		0.0.0.0/0			

2. To modify the connection properties, click the individual connection links.

TRAFFIC MONITORING AND BANDWIDTH MONITORING

- 3. To refresh the page, click **Refresh**.
- 4. To continuously refresh the page, click **Automatic Refresh On**.

9.4/ TRAFFIC MONITORING

Your Gateway continually monitors traffic in the local area network and between the local network and the Internet. You can view up to the second statistical information about data received from and transmitted to the Internet as well as data received from and transmitted to computers in the local network.

To view the traffic monitoring data:

- 1. In the Advanced Status page, select **Traffic Monitoring**.



MAIN

WIRELESS SETTINGS

MY NETWORK

FIREWALL

PARENTAL CONTROLS

ADVANCED

SYSTEM MONITORING

Main

Router Status

Advanced Status

Logout

Traffic Monitoring

Name	Network (Home/Office)	Broadband Connection (Ethernet/Coax)	5.0GHz Wireless Access Point 1	2.4GHz Wireless Access Point 2	Ethernet	Coax
Status	Connected	Disconnected	Connected	Connected	Connected	Connected
Network	Network (Home/Office)	Broadband Connection	Network (Home/Office)	Network (Home/Office)	Network (Home/Office)	Network (Home/Office)
Underlying Device	5.0GHz Wireless Access Point 1	2.4GHz Wireless Access Point 2	Ethernet	Coax		
Connection type	Bridge	Ethernet/Coax	Wireless 802.11 5.0GHz Access Point	Wireless 802.11 2.4GHz Access Point	Hardware Ethernet Switch	Hardware MoCA


2. To refresh the page, click **Refresh**.
3. To continuously refresh the page, click **Automatic Refresh On**.

9.5/ BANDWIDTH MONITORING

You can view and monitor the recorded bandwidth usage measured in Kbps.

To view the bandwidth:

1. In the Advanced Status page, select **Bandwidth Monitoring**.

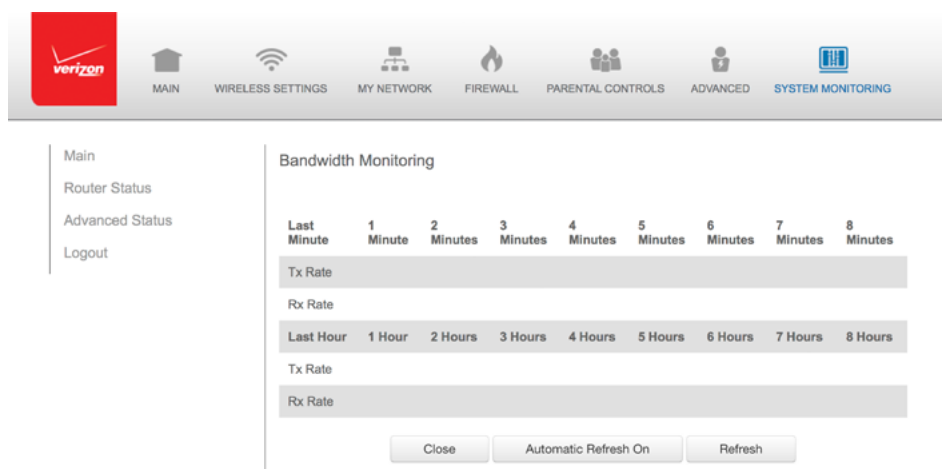

2. To refresh the page, click **Refresh**.
3. To continuously refresh the page, click **Automatic Refresh On**.

10/

TROUBLE SHOOTING

10.0 Troubleshooting Tips

10.1 Frequently Asked
Questions

This chapter lists solutions for issues that may be encountered while using your Gateway as well as frequently asked questions.

TROUBLESHOOTING TIPS

NOTE: *The advanced settings should only be configured by experienced network technicians to avoid adversely affecting the operation of your Gateway and your local network.*

10.0/ TROUBLESHOOTING TIPS

10.0a/ IF YOU ARE UNABLE TO CONNECT TO THE INTERNET:

- The first thing to check is whether your Gateway is powered on and it is connected to the Internet. Check the Power/Internet light on the front of the Gateway;  if it is lit a solid white color, then the Gateway itself has successfully connected to the Internet, and the problem lies elsewhere. If the Power/Internet light is red, the Gateway is on but is unable to connect to the Internet. In that case, check the WAN cable (Ethernet or Coax) connecting your Gateway to the Internet to make sure it is properly connected on both ends.
- Be sure your wireless device is within range of your Wi-Fi Gateway, move it closer to see if your connection improves.
- Check your network device's Wi-Fi settings to be sure your device's Wi-Fi is on (enabled) and that you have the correct Wi-Fi network and password (if using a Wi-Fi password) as configured on your Gateway.
- Be sure you are connecting to the correct Wi-Fi network, check to be sure you are using your Gateway's ESSID. In some cases, if using a wireless password, you may need to enter the Wi-Fi password into your network device again to be sure your device accepts the password.
- Check to be sure you are running the latest software for your network device.

- Try turning your network device's Wi-Fi off and on and try to connect.
- If you have made any changes in your network settings and turning your network device's Wi-Fi off and on does not help, try to restart your network device.
- As a final tip you may need to turn your gateways' Wi-Fi settings from on to off, and back to on again and apply the changes.

10.0a/ ACCESSING YOUR GATEWAY IF YOU ARE LOCKED OUT

If your Gateway connection is lost while making configuration changes, a setting that locks access to your Gateway's GUI may have inadvertently been activated.

The common ways to lock access to your Gateway are:

- **Scheduler** - If a schedule has been created that applies to the computer over the connection being used, your Gateway will not be accessible during the times set in the schedule.
- **Access Control** - If the access control setting for the computer is set to block the computer, access to your Gateway is denied.

To gain access, restore the default settings to your Gateway.

10.0b/ RESTORING YOUR GATEWAY'S DEFAULT SETTINGS

There are two ways to restore your Gateway's default settings. It is important to note that after performing either procedure, all previously save settings on your Gateway will be lost.

TROUBLESHOOTING TIPS

- Using the tip of a ballpoint pen or pencil, press and hold the **Reset** button on the back of your Gateway for three seconds.
- Access the GUI and navigate to the Advanced Settings page. Select the **Restore Defaults** option. After saving your configuration, if desired, click the **Restore Defaults** button. For additional details, refer to the **Restore Defaults** section of this guide.

10.0c/ LAN CONNECTION FAILURE

To troubleshoot a LAN connection failure:

- Verify your Gateway is properly installed, LAN connections are correct, and that the Gateway and communicating network devices are all powered on.
- Confirm that the computer and Gateway are both on the same network segment.

If unsure, let the computer get the IP address automatically by initiating the DHCP function, then verify the computer is using an IP address within the default range of 192.168.1.2 through 192.168.1.254.

If the computer is not using an IP address within the correct IP range, it will not connect to your Gateway.

- Verify the subnet mask address is set to 255.255.255.0.

10.0d/ TIMEOUT ERROR OCCURS WHEN ENTERING THE URL OR IP ADDRESS

Verify the following:

- All computers are working properly.
- IP settings are correct.
- Gateway is on and connected properly.
- Gateway settings are the same as the computer.

10.0e/ FRONT LIGHTED INDICATORS

Flash Speed

- **Slow flash** – Two times per second
- **Fast flash** – Four times per second

Power/Internet Light

- **Slow flash white** – Gateway is starting
- **Solid white** – Gateway is powered on and connected to the Internet
- **Slow flash red** – Gateway has malfunctioned
- **Solid red** – Unable to connect to the Internet
- **Fast flash red** – Gateway is overheating. Please verify your Gateway is upright and has sufficient ventilation

TROUBLESHOOTING TIPS AND FREQUENTLY ASKED QUESTIONS

Wireless Light



- **Solid white** – Wi-Fi is on

Additional Functions when pressing WPS button:

- **Slow flash white** – When the WPS button is pressed, the Wireless Light slowly flashes white, while waiting for a WPS device to connect. This can require up to two minutes.
- **Fast flash white** – When a device begins connecting to the Gateway using WPS, the Wireless Light fast flashes white for two seconds as establishing connection.
- **Solid white** – When a device successfully completes its WPS association to the Gateway, the Wireless Light returns to solid white.
- **Fast flash red** – If an error occurs during Wi-Fi Protected Setup, the Wireless Light flashes red rapidly for two minutes.

10.0f/ REAR LIGHTED INDICATORS

Flash Speed

- **Slow flash** – Two times per second
- **Fast flash** – Four times per second

WAN Ethernet

- **Unlit** – Indicates no Ethernet link
- **Solid green** – Indicates a network link

- **Fast flash green** – Indicates network activity. The traffic can be in either direction.

LAN Ethernet – Upper LED

- **Unlit** – Indicates no 1 Gbps link
- **Solid green** – Indicates 1 Gbps link
- **Fast flash green** – Indicates LAN activity. The traffic can be in either direction.

LAN Ethernet – Lower LED

- **Unlit** – Indicates no 10/100 Mbps link
- **Solid green** – Indicates 10/100 Mbps link
- **Fast flash green** – Indicates LAN activity. The traffic can be in either direction.

LAN Coax

- **Unlit** – Indicates no MoCA network connection to the device
- **Solid green** – Indicates network link

WAN Coax

- **Unlit** – Indicates no link to the upstream MoCA device
- **Solid green** – Indicates network link

FREQUENTLY ASKED QUESTIONS

10.1/ FREQUENTLY ASKED QUESTIONS

10.1a/ I'VE RUN OUT OF ETHERNET PORTS ON MY GATEWAY. HOW DO I ADD MORE COMPUTERS OR DEVICES?

Plugging in an Ethernet hub or switch expands the number of ports on your Gateway.

- Run a straight-through Ethernet cable from the Uplink port of the new hub to the Gateway.

Use a crossover cable if there is no Uplink port/switch on your hub, use a crossover cable.

- Remove an existing device from the yellow Ethernet port on your Gateway and use that port.

10.1b/ HOW DO I CHANGE THE PASSWORD ON MY GATEWAY GUI?

To change the password:

1. On the Main screen, select **Advanced**, then select **Users**.
2. In the Users page, select **Admin**. The User Settings page displays.
3. In the **General** section, change the password.

10.1c/ IS THE WIRELESS OPTION ON BY DEFAULT ON MY GATEWAY?

Yes, your Gateway's wireless option is activated out of the box.

10.1d/ IS THE WIRELESS SECURITY ON BY DEFAULT WHEN THE WIRELESS OPTION IS ACTIVATED?

Yes, with the unique WPA2 (Wi-Fi Protected Access II) key that is printed on the sticker on the side of your Gateway.

10.1e/ WHICH CONNECTION SPEEDS DOES MY GATEWAY SUPPORT?

The Ethernet WAN Internet connection supports 10/100/1000 Mbps. The LAN Ethernet connections support 10/100/1000 Mbps. The 802.11ac wireless connection supports up to 1300 Mbps and the 802.11n supports up to 450 Mbps, depending on signal quality. The Coax (MoCA 2.0) connection supports 700 Mbps.

10.1f/ ARE MY GATEWAY'S ETHERNET PORTS AUTO-SENSING?

Yes. Either a straight-through or crossover Ethernet cable can be used.

10.1g/ CAN I USE AN OLDER WIRELESS DEVICE TO CONNECT TO MY GATEWAY?

Yes, your Gateway can interface with 802.11b, g, n, or ac devices. Your Gateway can be setup to handle only n wireless cards, g wireless cards, b wireless cards, or any combination of the three.

FREQUENTLY ASKED QUESTIONS

10.1h/ CAN MY WIRELESS SIGNAL PASS THROUGH FLOORS, WALLS, AND GLASS?

The physical environment surrounding your Gateway can have a varying effect on signal strength and quality. The denser the object, such as a concrete wall compared to a plaster wall, the greater the interference. Concrete or metal-reinforced structures experience a higher degree of signal loss than those made of wood, plaster, or glass.

10.1i/ HOW DO I LOCATE THE IP ADDRESS THAT MY COMPUTER IS USING?

In Windows 7, click the **Windows** button and select **Control Panel**, then click **View Network Status and Tasks**. In the next window, click **Local Area Connection**. In the Local Area Network Connection Status window, click **Details**.

On Mac OS X, open **System Preferences** and click the **Network** icon. The IP address displays near the top of the screen.

10.1j/ MY COMPUTER CANNOT CONNECT TO THE INTERNET USING MOCA. WHAT SHOULD I DO?

A computer cannot be connected directly using a coaxial cable. It must go through a MoCA bridge to connect. The bridge converts the coax (MoCA) signal to an Ethernet signal the computer can understand. The FiOS Quantum Gateway has an integrated MoCA bridge.

First, check the connection and verify all cables are connected correctly. Then verify the Gateway is still connected and check the Ethernet connection to the Gateway from the computer.

10.1k/ I USED DHCP TO CONFIGURE MY NETWORK. DO I NEED TO RESTART MY COMPUTER TO REFRESH MY IP ADDRESS?

No. In Windows 7, unplug the Ethernet cable or wireless card, then plug it back in.

10.1l/ I CANNOT ACCESS MY GATEWAY GUI. WHAT SHOULD I DO?

If you cannot access the GUI, verify the computer connected to your Gateway is set up to dynamically receive an IP address.

10.1m/ I HAVE A FTP OR WEB SERVER ON MY NETWORK. HOW CAN I MAKE IT AVAILABLE TO USERS ON THE INTERNET?

For a web server, enable port forwarding for port 80 to the IP address of the server. Also, set up the web server to receive that port. Configuring the server to use a static IP address is recommended.

For a FTP server, enable port forwarding for port 21 to the IP address of the server. Also, set up the web server to receive that port. Configuring the server to use a static IP address is recommended.

FREQUENTLY ASKED QUESTIONS

10.1n/ HOW MANY COMPUTERS CAN BE CONNECTED THROUGH MY GATEWAY?

Your Gateway is capable of 254 connections, but we recommend having no more than 45 connections. As the number of connections increase, the available speed for each computer decreases.

11/

SPECIFICATIONS

11.0 General Specifications

11.1 LED Indicators

11.2 Environmental
Parameters

GENERAL SPECIFICATIONS

The specifications for your FiOS Quantum Gateway are as follows.

This includes standards, cabling types, and environmental parameters.

NOTE: The specifications listed in this chapter are subject to change without notice.

11.0/ GENERAL SPECIFICATIONS

Model Number:	Model: FiOS-G1100
Standards:	IEEE 802.3x, 802.3u IEEE 802.11b/g/n/ac
IP:	IP versions 4 and 6
MoCA:	MoCA WAN: 1350 - 1675 MHz and 975 - 1025 MHz MoCA LAN: 1125 - 1225 MHz
Speed:	Wired WAN Ethernet: 10/100/1000 Mbps auto-sensing Wired LAN Ethernet: 10/100/1000 Mbps auto-sensing

LED INDICATORS AND ENVIRONMENTAL PARAMETERS

	<i>Wireless LAN:</i>
	802.11b - up to 11 Mbps
	802.11g - up to 54 Mbps
	802.11n - up to 450 Mbps
	802.11ac - up to 1300 Mbps
<i>Cabling Type:</i>	<i>Ethernet 10BaseT: UTP/STP Category 3 or 5</i> <i>Ethernet 100BaseT: UTP/STP Category 5</i> <i>Ethernet 1000BaseT: UTP/STP Category 5e</i>
<i>Firewall:</i>	ICSA certified

11.1/ LED INDICATORS

<i>Front Panel:</i>	Power/Internet, Wi-Fi
<i>Rear Panel:</i>	WAN Coax, LAN Coax, WAN Ethernet, and LAN Ethernet [4]

11.2/ ENVIRONMENTAL PARAMETERS

DIMENSIONS AND WEIGHT

<i>FiOS Quantum Gateway (unit only)</i>
<i>Size: 3.63" width x 9.56" height x 8.50" depth</i>
<i>Weight: 1.56 lbs / 0.71 kg</i>

*Complete System (including packaging)**Size: 10.16" / 258 mm width x 3.78" / 96 mm height x 10.35" / 263 mm depth**Weight: 2.63 lbs / 1.19 kg**Power: External, 12V DC, 3.0A**Certifications: FCC Part 15, UL 60950-1**Operating Temperature: 10° C to 40° C (50° F to 104° F)**Storage Temperature: -20° C to 85° C (-4° F to 185° F)**Operating Humidity: 8% to 95% (non-condensing)**Storage Humidity: 5% to 100% (non-condensing)*

12/ NOTICES

12.0 Regulatory Compliance
Notices

This chapter lists various compliance and modification notices, as well as the NEBS requirements and GPL.

REGULATORY COMPLIANCE NOTICES

12.0/ REGULATORY COMPLIANCE NOTICES

12.0a/ CLASS B EQUIPMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by implementing one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment to an outlet on a circuit different from the one to which the receiver is connected
- Consult the dealer or an experienced radio or television technician for help

12.0b/ MODIFICATIONS

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Verizon may void the user's authority to operate the equipment.

Declaration of conformity for products marked with the FCC logo – United States only.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference
- This device must accept any interference received, including interference that may cause unwanted operation

Note: *To comply with FCC RF exposure compliance requirements, the antenna used for this transmitter must be installed to provide a separation distance of at least 28 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.*

For operation within the 5.15 ~ 5.25 GHz frequency range, this device is restricted to indoor environments. This device meets all the other requirements specified in Part 15E, Section 15.407 of the FCC Rules.

For questions regarding your product or the FCC declaration, contact:

Verizon

One Verizon Way
Basking Ridge, NJ 07920


Attn: FCC declaration
1-800-VERIZON (1-800-837-4966)
www.verizon.com/support

REGULATORY COMPLIANCE NOTICES

12.0c/ NEBS REQUIREMENTS

The coaxial cable screen shield must be connected to the Earth at the building entrance per ANSI/NFPA 70, the National Electrical Code (NEC), in particular Section 820.93, “Grounding of Outer Conductive Shield of a Coaxial Cable,” or in accordance with local regulation.

Warning! The WAN Coax Port is intended for connection to Verizon FiOS only. It must not be connected to any exterior or interior coaxial wires not designated for Verizon FiOS.

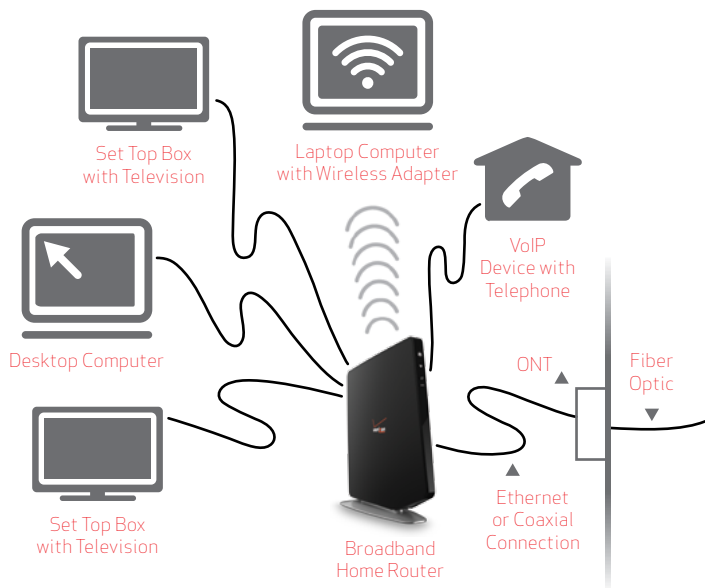

Typical Broadband Home Router Installation

Caution: *The Broadband Home Router must be installed inside the home. The Router is not designed for exterior installation.*

12.0d/ GENERAL PUBLIC LICENSE

This product contains certain software that is covered by open source licensing requirements. Copies of the licenses and a downloadable copy of the source code for the open source software that is used in this product are available on the following website:

<http://verizon.com/opensource/>

All open source software contained in this product is distributed WITHOUT ANY WARRANTY. All such software is subject to the copyrights of the authors and to the terms of the applicable licenses included in the download.

You may also obtain a copy of the source code for the open source software used in this product for a period of three years after your receipt of the product by sending a check for \$10, payable to VERIZON, to the address below:

Verizon
One Verizon Way
Basking Ridge, NJ 07920
Attn: Legal, Open Source Requests

NOTE: *This information is provided for those who wish to edit or otherwise change such programs. You do not need a copy of any of such open source software source code to install or operate the device.*

01/

CHOICE. COUNTLESS
REASONS. THAT'S
POWERFUL.

Version: 1.0.5

