



FURY NO4

BLUETOOTH 3/4 HELMET

HD SPEAKERS

USER'S GUIDE

Version 1.0.0

ENGLISH



TABLE OF CONTENTS


1.	ABOUT THE FURY N04	5
1.1	Product Features	5
1.2	General Information	6
1.3	Product Details	7
1.4	Package Contents	8
2.	WEARING THE HELMET	9
2.1	Putting on the Helmet	9
2.2	Removing the Helmet	9
2.3	Pre-Ride Helmet Inspection	10
2.3.1	Checking the Exterior	10
2.3.2	Checking the Chinstrap	10
2.4	Accessory Installation: Visor	10
3.	GETTING STARTED	11
3.1	Downloadable Software	11
3.1.1	Sena Motorcycles App	11
3.1.2	Boom Audio Bluetooth Device Manager	11
3.2	Charging	11
3.3	Legend	12
3.4	Powering On and Off	12
3.5	Checking the Battery Level	12
3.6	Volume Adjustment	13
4.	PAIRING THE BLUETOOTH SYSTEM WITH OTHER BLUETOOTH DEVICES	14
4.1	Phone Pairing	14
4.1.1	Initially Pairing the FURY N04	14
4.1.2	Pairing When the FURY N04 is Turned Off	15
4.1.3	Pairing When the FURY N04 is Turned On	15

4.2	Pairing with the H-D WHIM Wireless Headset Interface Module	16
4.3	Second Mobile Phone Pairing - Second Mobile Phone, GPS, and SR10	17
4.4	GPS Pairing	17
5.	MOBILE PHONE USAGE	18
5.1	Making and Answering Calls	18
5.2	Speed Dialing	18
5.2.1	Assigning Speed Dial Presets	18
5.2.2	Using Speed Dial Presets	18
6.	STEREO MUSIC	20
6.1	Playing Music with Bluetooth Devices	20
6.2	Music Sharing	20
7.	MESH INTERCOM	21
7.1	What is Mesh Intercom?	21
7.1.1	Open Mesh	22
7.1.2	Group Mesh	22
7.2	Starting Mesh Intercom	23
7.3	Using the Mesh in Open Mesh	23
7.3.1	Channel Setting (Default: channel 1)	23
7.4	Using Mesh in Group Mesh	24
7.4.1	Creating a Group Mesh	24
7.4.2	Joining an Existing Group Mesh	25
7.5	Enable/Disable Mic (Default: Enable)	26
7.6	Toggling Open Mesh/Group Mesh	26
7.7	Reset Mesh	26
8.	MESH AUDIO MULTITASKING (ALWAYS ON)	27

9.	USING THE FM RADIO	28
9.1	FM Radio On/Off	28
9.2	Seek and Save Radio Stations	28
9.3	Scan and Save Radio Stations	29
9.4	Navigating Preset Stations	29
9.5	Temporary Station Preset	30
10.	FUNCTION PRIORITY AND FIRMWARE UPGRADES	31
10.1	Function Priority	31
10.2	Firmware Upgrades	31
11.	CONFIGURATION SETTING	32
11.1	Bluetooth system Configuration Menu	32
11.2	Software Configuration Setting	32
11.2.1	Headset Language	33
11.2.2	Audio Equalizer (Default: Off)	33
11.2.3	HD Voice (Default: Enable)	33
11.2.4	Voice Prompt (Default: Enable)	33
11.2.5	RDS AF Setting (Default: Disable)	34
11.2.6	FM Station Guide (Default: Enable)	34
11.2.7	Region Selection	34
12.	TROUBLESHOOTING	35
12.1	Fault Reset	35
12.2	Factory Reset	35

1. ABOUT THE FURY N04

1.1 Product Features

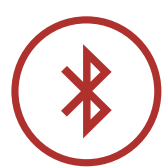

Bluetooth® 5.1



Mesh Intercom up to 1.2 km (0.7 mi)*



Audio Multitasking™



Music Sharing



FM Radio

* in open terrain

1.2 General Information


This product is a Motorcycle Open-Face Helmet.

Do not use it for any other purpose than riding a motorcycle. If you use the helmet for anything else, it may not provide sufficient protection in an accident. No helmet can protect the wearer against all possible impact scenarios.

For maximum protection, the helmet must fit properly on the head and its retention strap securely fastened under the chin. With the retention system comfortably but firmly adjusted, the helmet should allow sufficient peripheral vision when secured. If the helmet is too large, it may move on your head while riding. If the helmet can be removed when pulled from the back in an upward and forward direction, it's not fitted properly. This could cause the helmet to obstruct your vision while riding or come off in an accident, resulting in personal injury or death.

Please refer to **Section 2: "Wearing the Helmet"** for more details about properly securing and wearing your helmet. The contents of this helmet User's Guide are subjected to change without notice. Its illustration may differ from the actual product. The copyrights for the User's Guide belong to Harley-Davidson. Reproduction or copying of the User's Guide without permission is strictly prohibited.


1.3 Product Details

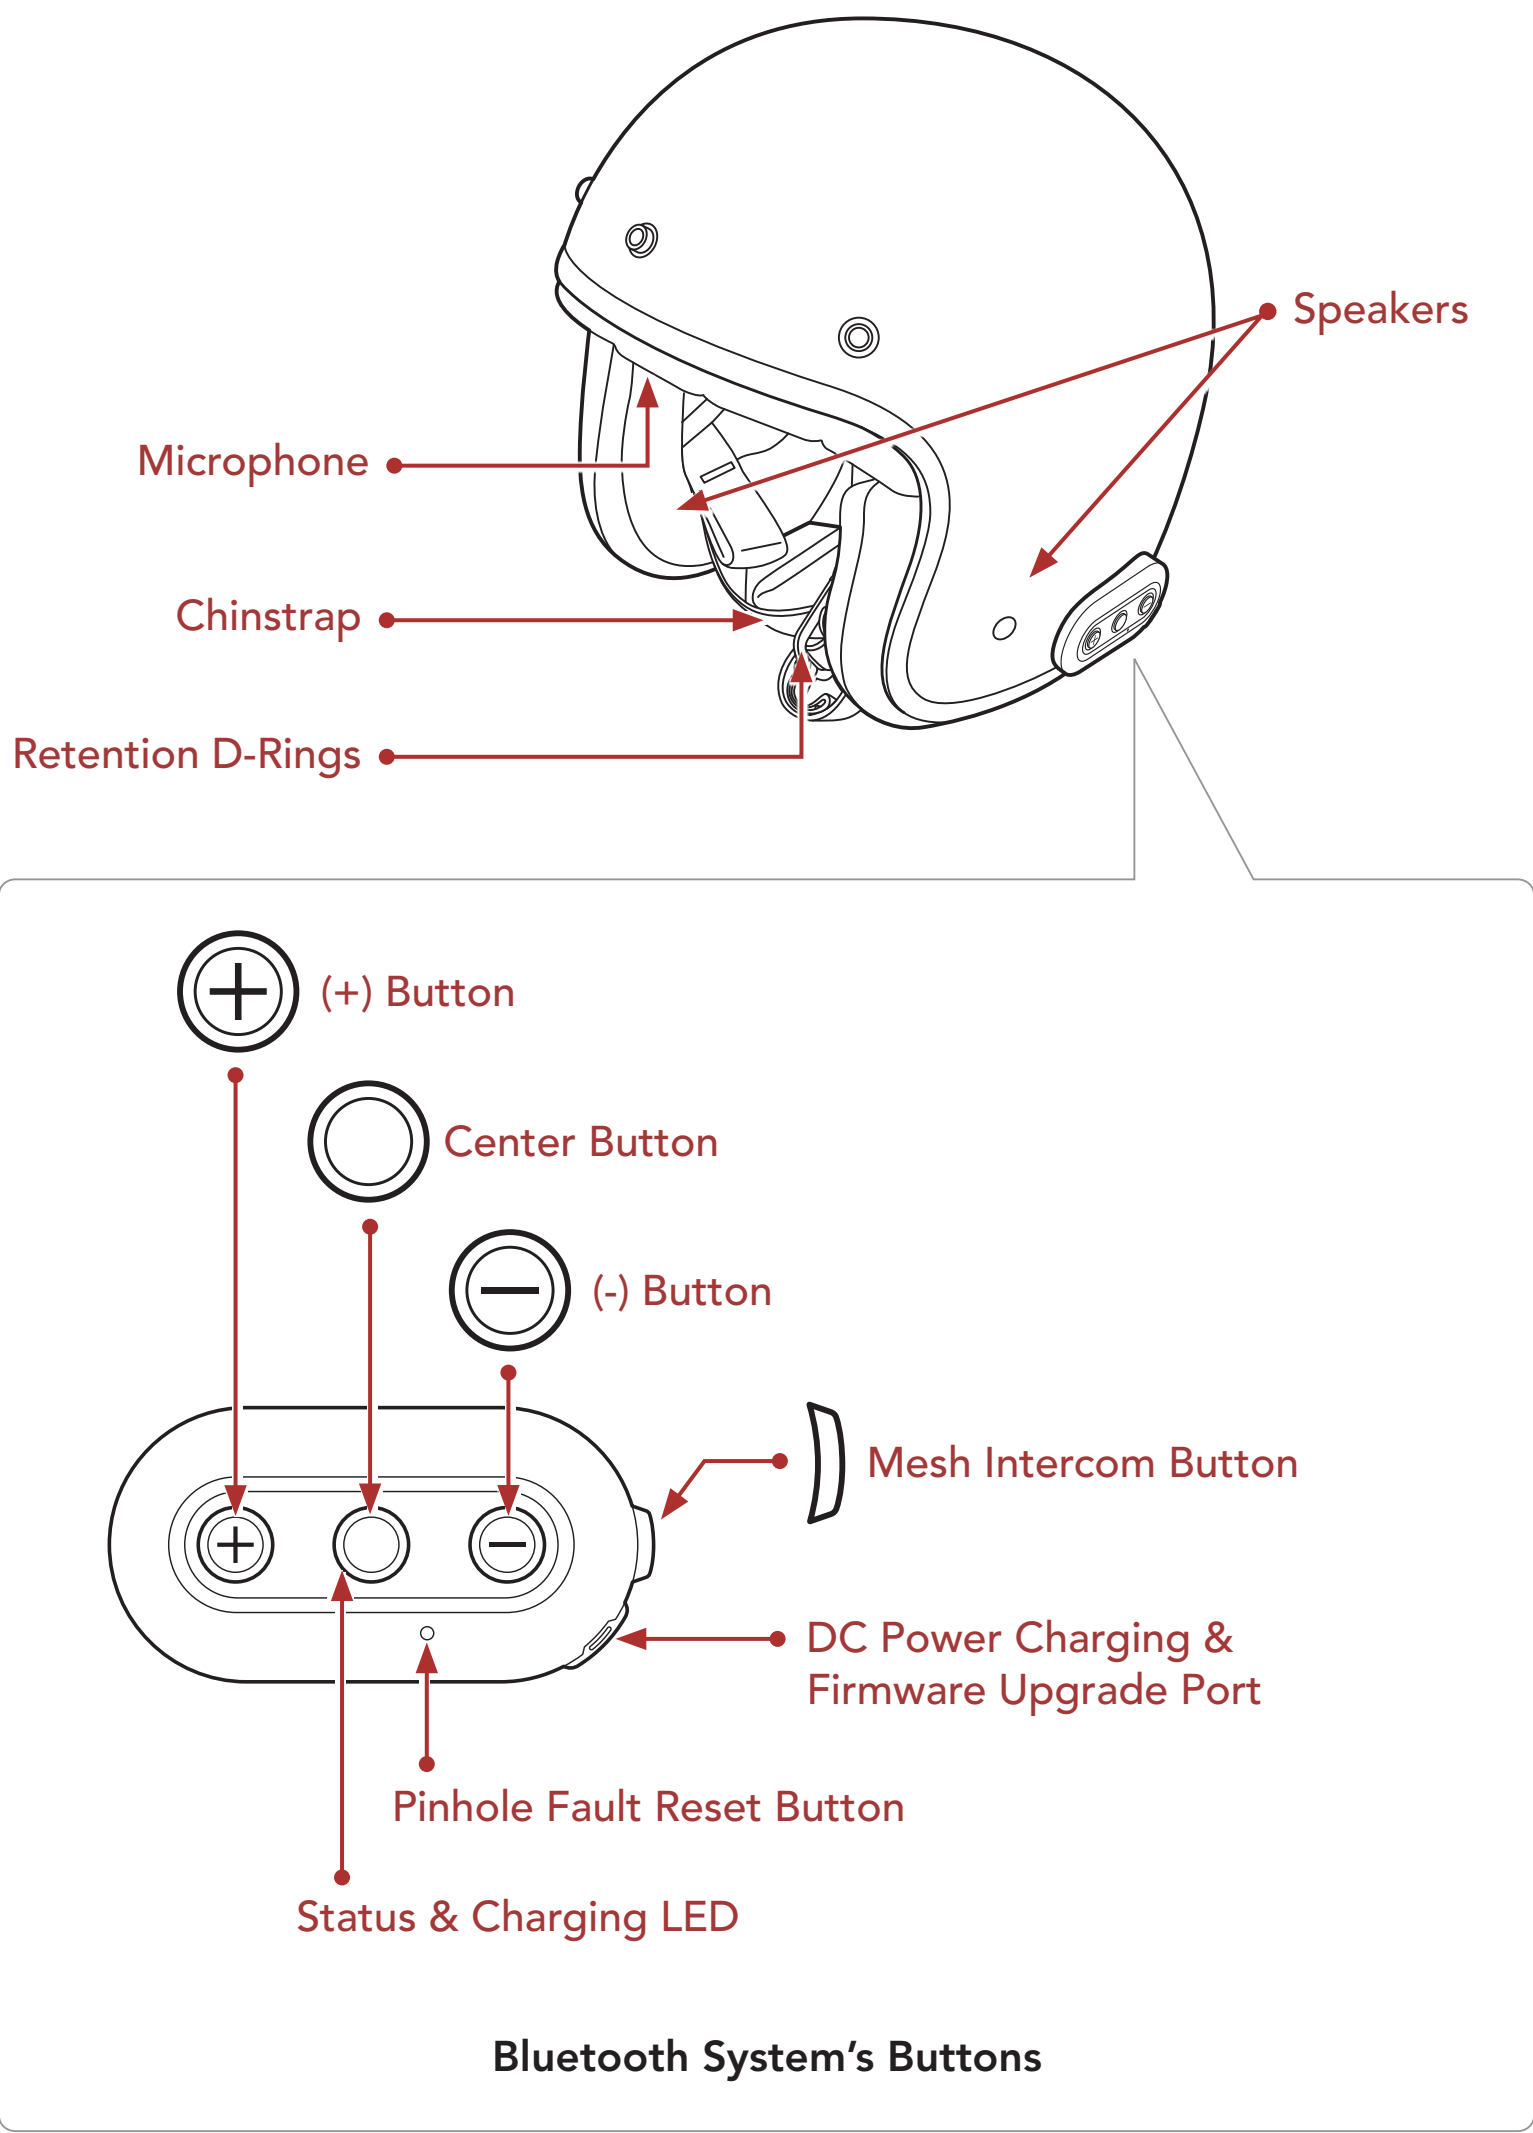


1.4 Package Contents




Helmet

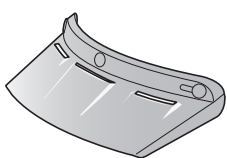

Long Visor

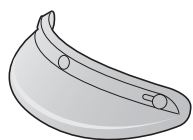

Short Visor

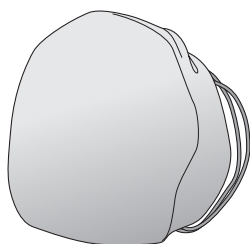

Helmet Pouch



USB Power & Data Cable
(USB-C)



Reflex Stickers (4)*

* Included only in Europe package


2. WEARING THE HELMET

2.1 Putting on the Helmet

1. Unfasten the chinstrap.
2. Gently pull the chinstrap outward and slide the helmet onto your head.

Note: A “chinstrap” is the nylon webbing that goes through the D-Rings.

3. Route the chinstrap under your chin, then thread it through both D-Rings.
4. To fasten securely, thread chinstrap back through the D-Ring closest to your neck, and pull.

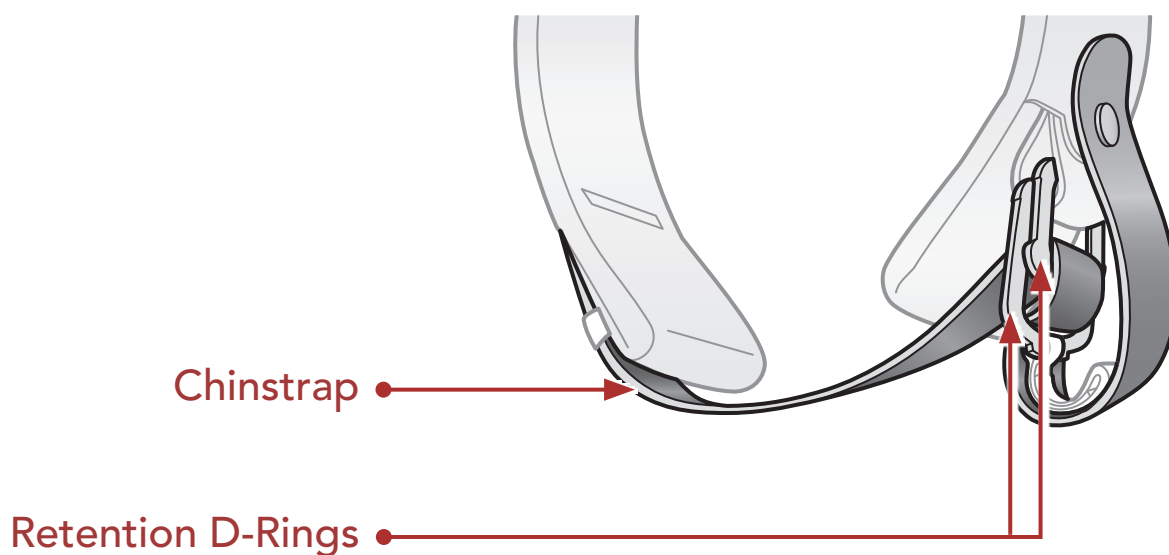

2.2 Removing the Helmet

1. Loosen the chinstrap by pulling the red tab attached to the D-Rings.
2. Pull the chinstrap out from within the D-rings.
3. Gently pull the padded chinstrap outward and slide the helmet off your head.

Note: Fastening the chinstrap after removing the helmet will help avoid scratching surfaces it's placed upon.

2.3 Pre-Ride Helmet Inspection

2.3.1 Checking the Exterior

Check the helmet regularly for damage. Small, superficial scratches will not impair the helmet's protective qualities. In the case of more serious damage (cracks, dents, flaking and cracking paint, etc.), the helmet should no longer be used.

2.3.2 Checking the Chinstrap


1. Ensure that the chinstrap is properly routed under your chin.
2. To test the chinstrap tension, slip your index finger under the chinstrap and pull. If the chinstrap is loose under the chin, it needs to be tightened. If the chinstrap loosens when you pull on it, the helmet is not properly fitted. Undo the chinstrap completely and try fastening it again, then repeat the test.
3. If you are unable to fasten the chinstrap so that it fits firmly against the chin, check that your helmet is still the right size for you.

Note: Repeat the test after each adjustment.

⚠ CAUTION: Never ride with the chinstrap unfastened or incorrectly adjusted. The chinstrap should fit correctly and should not become loose when pulled. The fastener is not correctly closed if the chinstrap becomes loose when pulled.

2.4 Accessory Installation: Visor

To protect your eyes from the sun or other bright lights, you can use the visor. Harley-Davidson provides both a long and short visor in the package. Align the buttons of the visor with the helmet and press hard to attach.

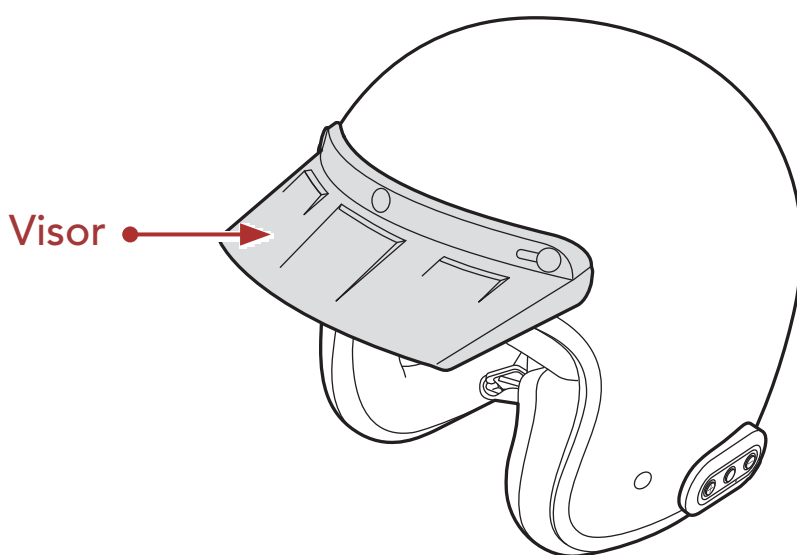

3. GETTING STARTED

3.1 Downloadable Software

3.1.1 Sena Motorcycles App

By simply pairing your phone with your Bluetooth system, you can use the **Sena Motorcycles App** for quicker, easier set up and management.



- Download the **Sena Motorcycles App** on **Google Play Store** or **App Store**.

3.1.2 Boom Audio Bluetooth Device Manager


The **Boom Audio Bluetooth Device Manager** allows you to upgrade firmware and configure settings directly from your PC.



- Download the **Boom Audio Bluetooth Device Manager** at www.H-D.com/infotainment-support.

3.2 Charging

Charging the Bluetooth system

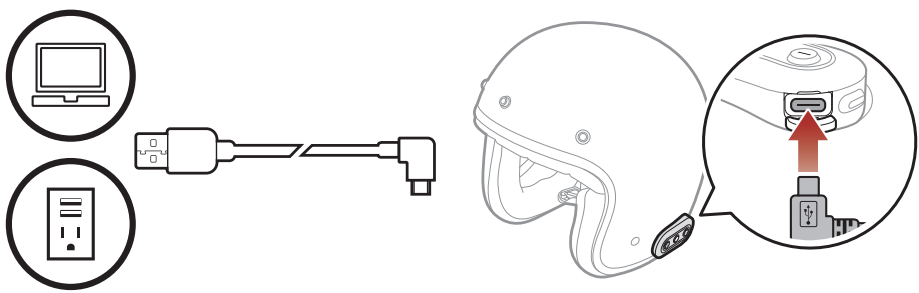

Depending upon the charging method, the Bluetooth system will be fully charged in about 2.5 hours.

Note:

- Please make sure to take off your helmet while charging. The Bluetooth system automatically turns off during charging.
- Any 3rd party USB charger can be used with Harley-Davidson products if the charger is approved by either the FCC, CE, IC or other locally approved agencies.
- Use of a non-approved charger may cause fire, explosion, leakage, and other hazards which may also reduce the life time or performance of the battery.
- The **Bluetooth system** is compatible with 5 V input USB-charged devices only.

3.3 Legend



Tap button the specified number of times



Press and Hold button for the specified amount of time



"Hello"

Audible prompt

3.4 Powering On and Off

Powering On




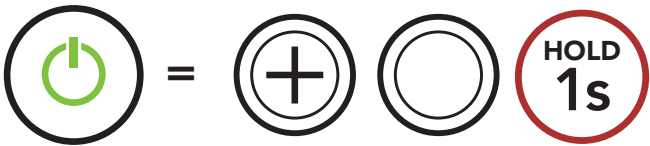
Powering Off




3.5 Checking the Battery Level


Instructions are for when powering the Bluetooth system on.

Powering On





=

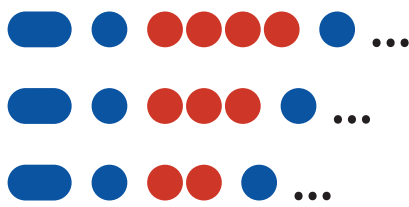


...

Note: When the battery is low while in use, you will hear a voice prompt saying **"Low battery"**.


3.6 Volume Adjustment

You can raise or lower the volume by tapping the **(+) Button** or the **(-) Button**. Volume is set and maintained independently at different levels for each audio source (i.e., phone, intercom), even when the Bluetooth system is rebooted.

Volume Up

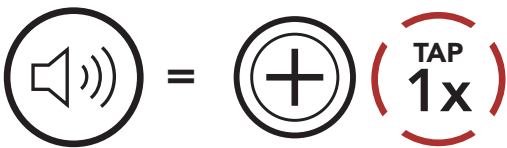


Volume Down

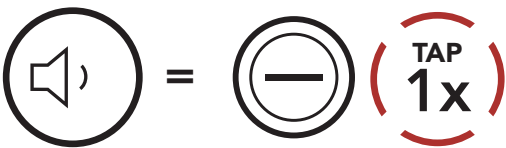

4. PAIRING THE BLUETOOTH SYSTEM WITH OTHER BLUETOOTH DEVICES

When using the Bluetooth system with other Bluetooth devices for the first time, they will need to be “paired.” This enables them to recognize and communicate with one another whenever they are within range.

The Bluetooth system can pair with multiple Bluetooth devices such as a mobile phone, GPS, MP3 player or Sena SR10 Two-Way Radio Adapter via **Mobile Phone Pairing, Second Mobile Phone Pairing and GPS Pairing.**

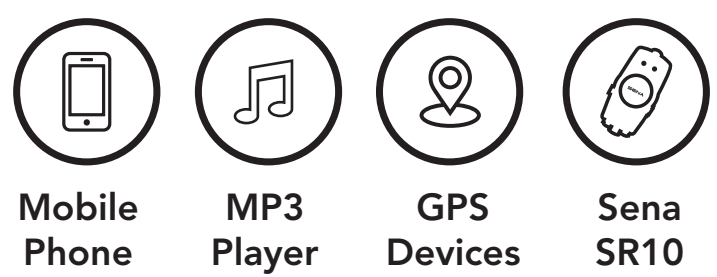

4.1 Phone Pairing

There are three ways to pair the phone.

4.1.1 Initially Pairing the FURY N04

The Bluetooth system will automatically enter the phone pairing mode when you initially turn on the Bluetooth system or in the following situation:

- Rebooting after executing **Factory Reset.**
1. Press and hold the **Center Button** and the **(+) Button** for **1 second.**



Note:

- The phone pairing mode lasts for **3 minutes.**
- To cancel phone pairing, tap the **Center Button.**

- 2. Select **FURY N04** in the list of Bluetooth devices detected. If your mobile phone asks for a PIN, enter 0000.



4.1.2 Pairing When the FURY N04 is Turned Off

- 1. While the Bluetooth system is off, press and hold the **Center Button** and the **(+) Button** until the LED flashes red and blue alternately and you hear a voice prompt, **"Phone pairing."**



- 2. Select **FURY N04** in the list of Bluetooth devices detected. If your mobile phone asks for a PIN, enter 0000.



4.1.3 Pairing When the FURY N04 is Turned On

- 1. While the Bluetooth system is on, press and hold the **Center Button** for **5 seconds**.



- 2. Select **FURY N04** in the list of Bluetooth devices detected. If your mobile phone asks for a PIN, enter 0000.




4.2 Pairing with the H-D WHIM Wireless Headset Interface Module

The H-D WHIM built-in Boom! Box is a Wireless Headset Interface for group communication. You can pair the Bluetooth system with an H-D WHIM built-in Boom! Box by mobile phone pairing.

1. Press and hold the **Center Button** for **10 seconds** and you will hear a voice prompt, **"Configuration menu."**
2. Tap the **(+) Button** and you will hear a voice prompt, **"Phone pairing."**
3. Turn on the Boom! Box system and follow the **"Wireless Headset Setup"** procedure to complete the process. Please refer to the Boom! Box Owner's Manual for details.
4. When the pairing is completed, you will hear a voice prompt, **"Your headset is paired."**
5. If the pairing process is not completed within three minutes, the Bluetooth system will return to stand-by mode.


The H-D WHIM built-in Boom! Box can be connected to the rider and the passenger's Bluetooth system. Also, the H-D WHIM built-in Boom! Box can be connected to the rider's mobile phone. The rider's Bluetooth system should be paired first followed by the passenger's. Please refer to the Boom! Box Owner's Manual for details. You can listen to music, answer a mobile call, and have an intercom conversation via the H-D WHIM built-in Boom! Box for group communication as shown in the figure.

Parallel Connection of H-D WHIM built-in Boom! Box and Mobile Phone by Mobile Phone Pairing

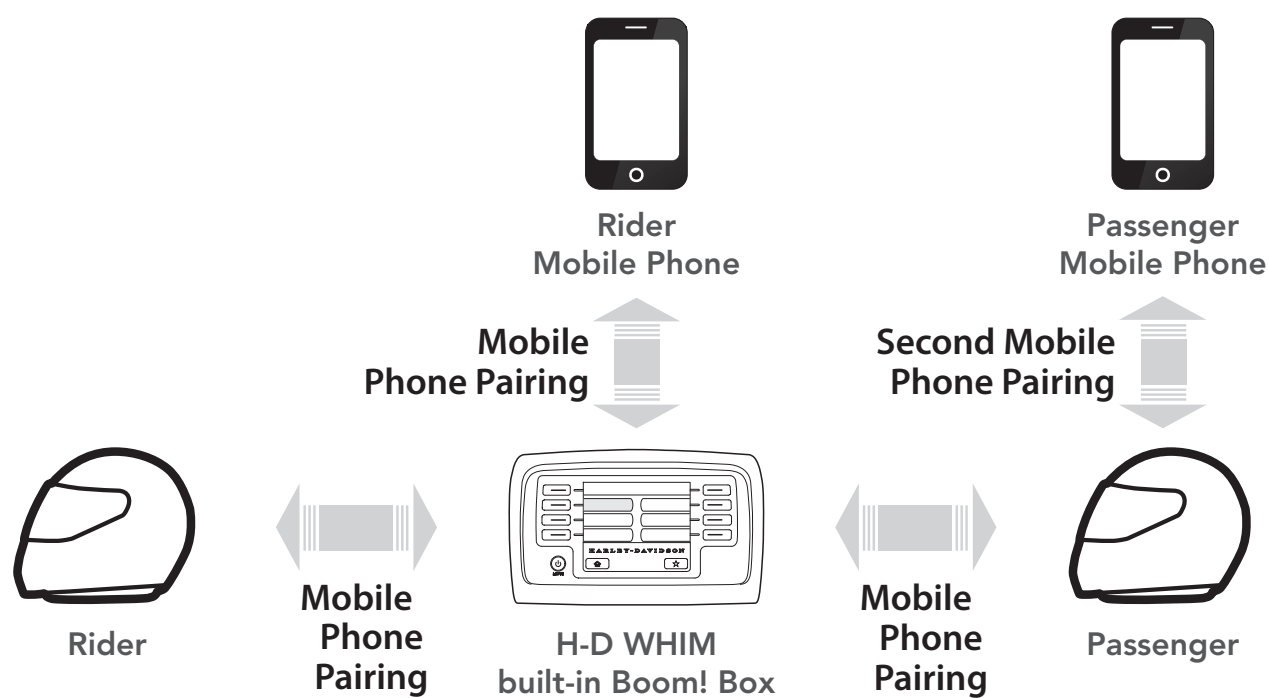

4.3 Second Mobile Phone Pairing - Second Mobile Phone, GPS, and SR10

1. Press and hold the **Center Button** for **10 seconds**.

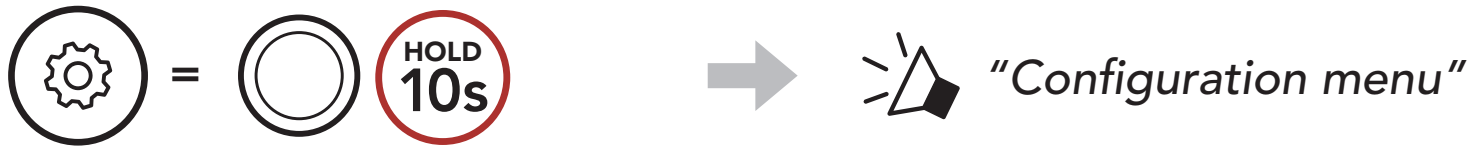

2. Tap the **(+) Button**.




3. Select **FURY N04** in the list of Bluetooth devices detected. If your Bluetooth device asks for a PIN, enter 0000.



4.4 GPS Pairing

1. Press and hold the **Center Button** for **10 seconds**.

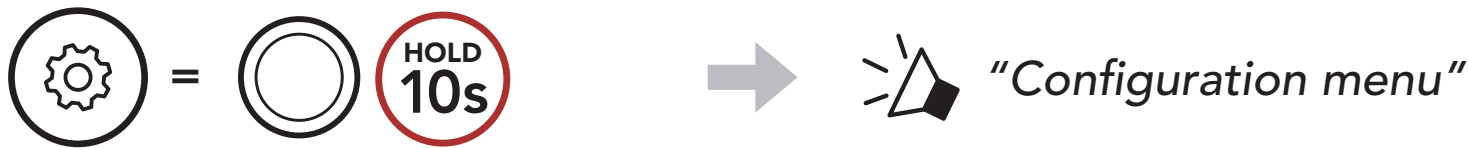

2. Double tap the **(+) Button**.



3. Select **FURY N04** in the list of devices detected. If your Bluetooth device asks for a PIN, enter 0000.




Note: If you pair your GPS device via GPS Pairing, its instruction will interrupt your Mesh Intercom conversations.


5. MOBILE PHONE USAGE

5.1 Making and Answering Calls


Answer a Call

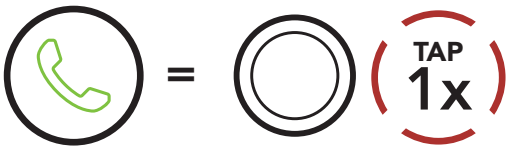

End a Call

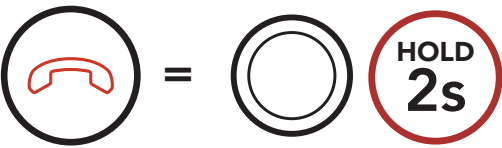

Reject a Call

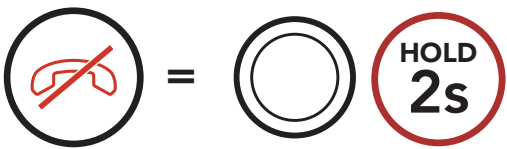

Make a Call with Voice



in stand by mode

Note: If you have a GPS device connected, you will not hear its voice navigations during a phone call.


5.2 Speed Dialing

5.2.1 Assigning Speed Dial Presets


Speed Dial Presets could be assigned through the **Boom Audio Bluetooth Device Manager** or the **Sena Motorcycles App**.

5.2.2 Using Speed Dial Presets

1. Enter into the **Speed Dial** menu.

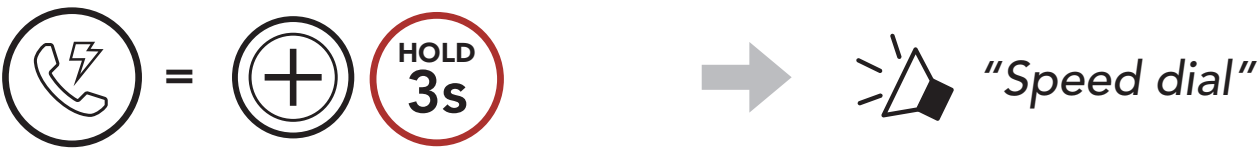

2. Navigate forward or backward through **Speed Dial Preset** numbers.

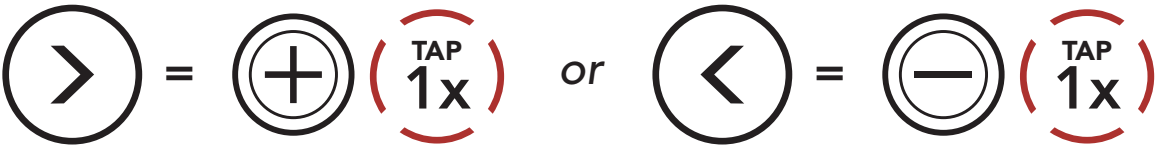

- (1) Last number redial
- (2) Speed dial 1
- (3) Speed dial 2


- (4) Speed dial 3
- (5) Cancel

3. Call one of your **Speed Dial Presets** numbers.



4. Redial the last number called.


Redial Last Number

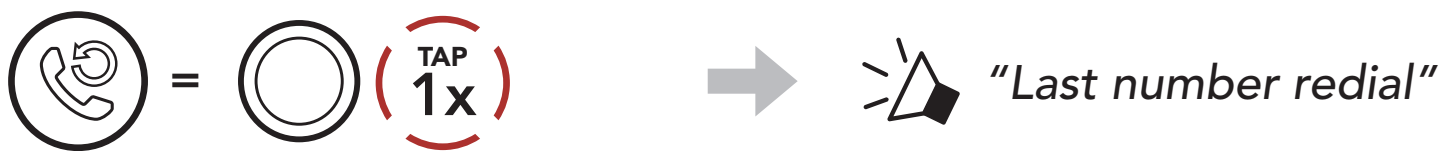


6. STEREO MUSIC

6.1 Playing Music with Bluetooth Devices

Play/Pause Music

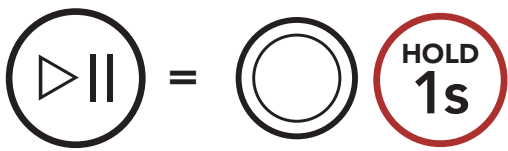

Track Forward/Backward

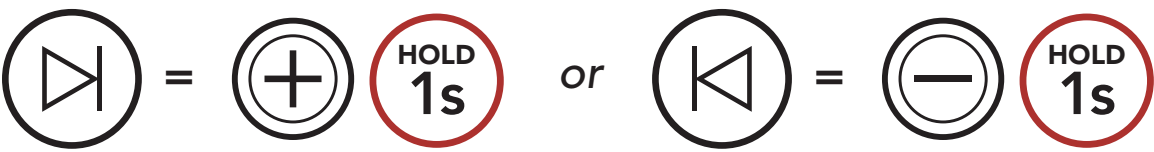


6.2 Music Sharing

You can start sharing music with one participant of a **Mesh Intercom**. Both you and a participant can remotely control music playback such as track forward and track back.

Start Sharing Music

1. The **Creator** will send a request message to **participants** connected during **Mesh Intercom**.


[Creator]

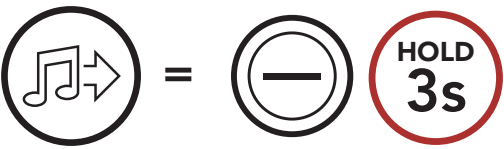

[Creator]




[Participants]

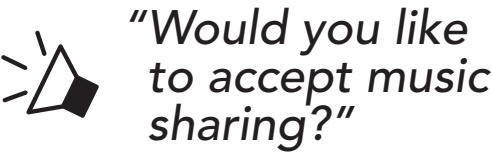


2. The **Creator** will share music with the **first participant** that accepts the request.


[Participant] Accept

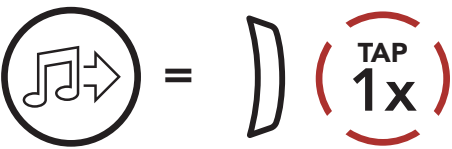

[Participant] Refuse

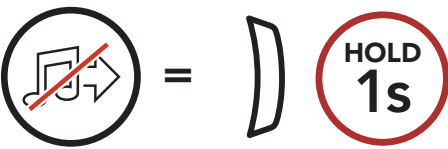

Terminate Sharing Music

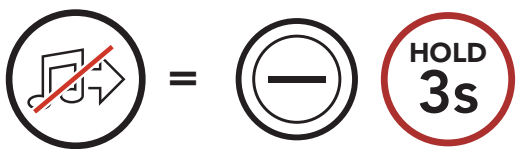


7. MESH INTERCOM

7.1 What is Mesh Intercom?


Mesh Intercom™ is a dynamic communication system created by Sena that provides instant and effortless bike-to-bike communication without a pre-grouping process. **Mesh Intercom** allows riders to connect and communicate with nearby users without the need to pair each Bluetooth system together.

The working distance between each **FURY N04** in **Mesh Intercom** can be up to 1.2 km (0.7 miles) in open terrain. In open terrain, the **Mesh** can be extended up to 4.8 km (3 miles) between a minimum of six users. Within the same channel in **Open Mesh™** or the same private group in **Group Mesh™**, six users can talk at the same time and enjoy the optimal quality for their conversation.

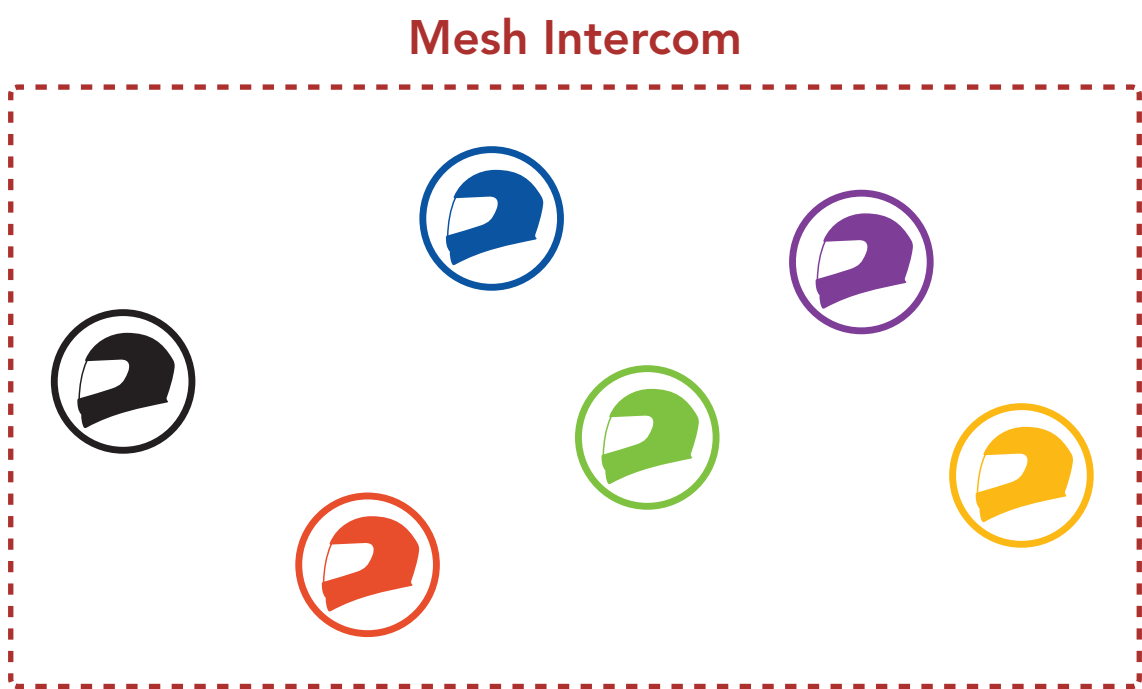

7.1.1 Open Mesh


Open Mesh is an open group intercom function. Users can freely communicate with each other in the same **Open Mesh** channel and select which channel (1-9) to use through the Bluetooth system. It can connect with a virtually unlimited number of users in each channel.

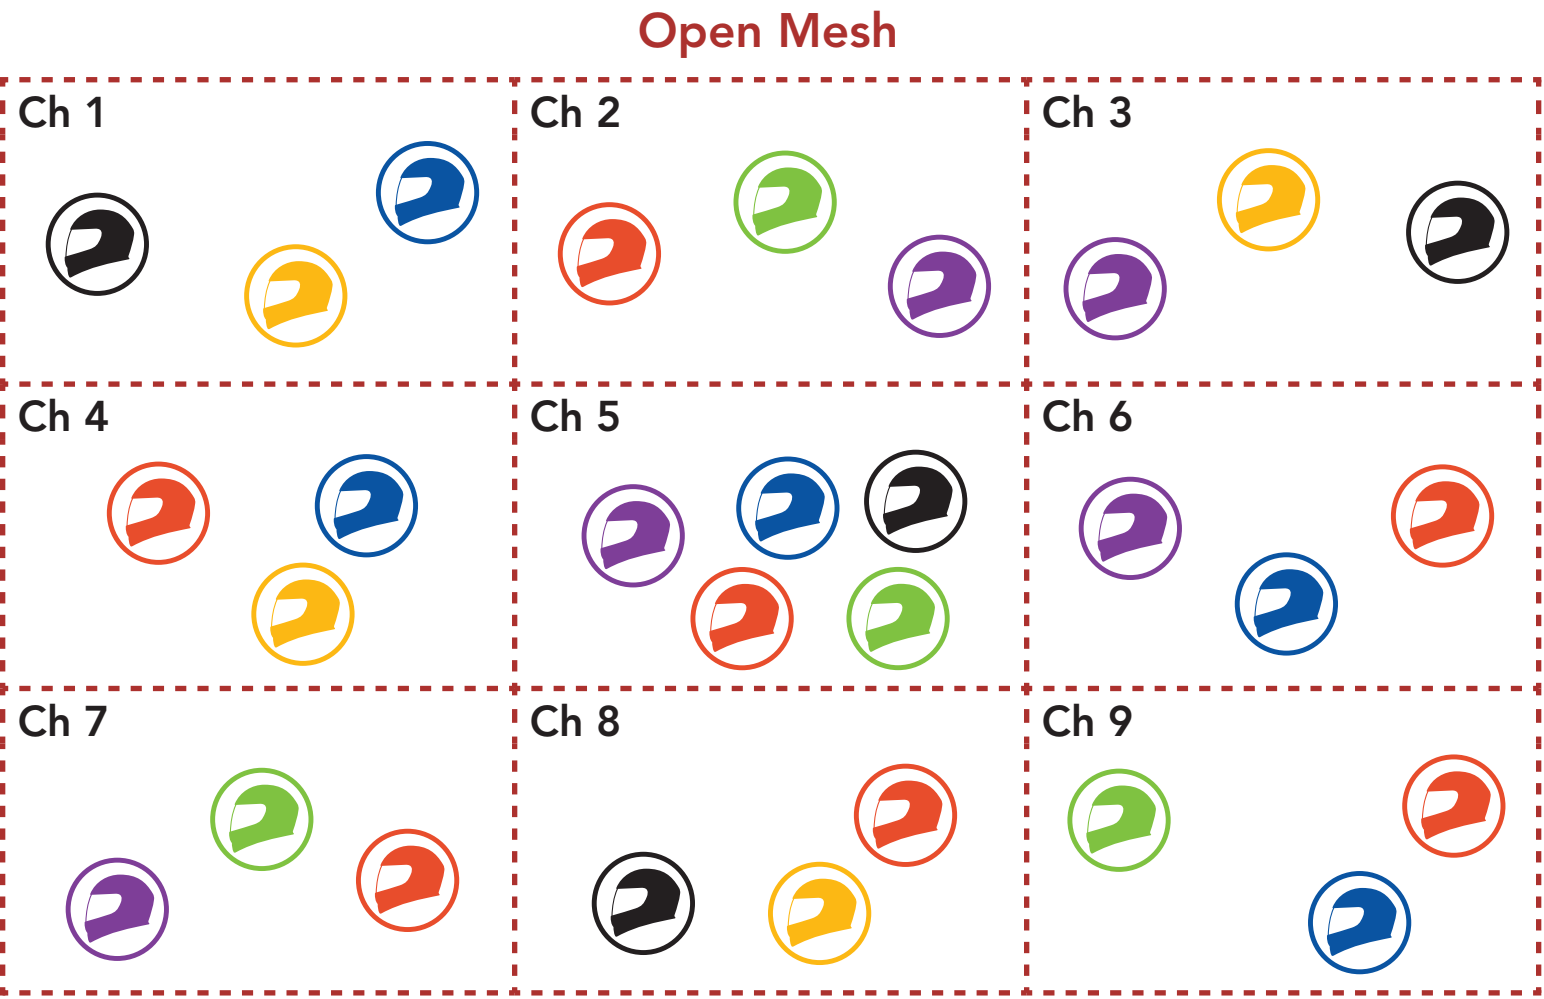

7.1.2 Group Mesh

Group Mesh is a closed group intercom function that allows users to join, leave, or rejoin a group intercom conversation without pairing each Bluetooth system. Users can freely communicate with each other in the same private group in **Group Mesh**.


For closed intercom conversations using **Mesh Intercom**, a **Group Mesh** needs to be created by the users. When users create a private group in **Group Mesh** by **Mesh Grouping**, the Bluetooth system automatically switches from **Open Mesh** to **Group Mesh**. Up to 24 users can all be connected in each private group.

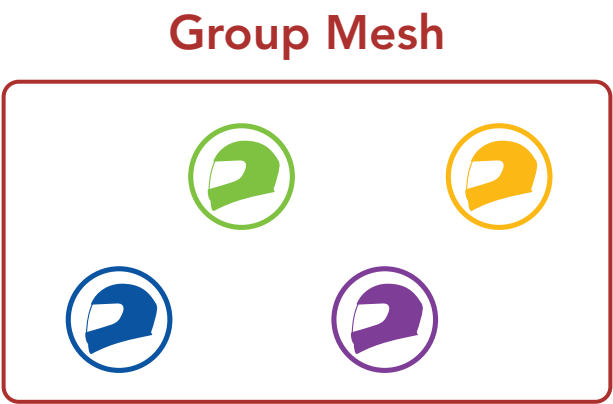

7.2 Starting Mesh Intercom

When **Mesh Intercom** is enabled, the **FURY N04** will automatically connect to nearby **FURY N04** users and allow them to talk to each other by pressing the **Mesh Intercom Button**.

Mesh Intercom On

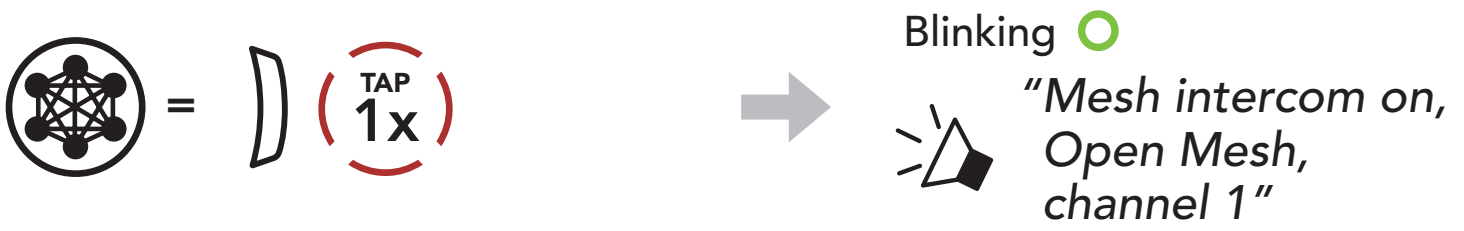

Mesh Intercom Off



7.3 Using the Mesh in Open Mesh

When **Mesh Intercom** is enabled, the Bluetooth system will be in **Open Mesh (default: channel 1)** initially.

7.3.1 Channel Setting (Default: channel 1)

If the **Open Mesh** communication experiences interference because other groups are also using **channel 1 (default)**, change the channel. You can select from channels 1 to 9.

1. Double tap the **Mesh Intercom Button**.



2. Navigate between channels.
(1 → 2 → ... → 8 → 9 → Exit → 1 → ...)



3. Save the channel.




Note:

- **Channel Setting** always starts with channel 1.
- If you do not press any button for approximately **10 seconds** in a specific channel, the channel is automatically saved.
- The channel will be remembered even if you turn off the **FURY N04**.
- You can use the **Sena Motorcycles App** to change the channel.

7.4 Using Mesh in Group Mesh

7.4.1 Creating a Group Mesh

Creating a **Group Mesh** requires **two or more Open Mesh users**.

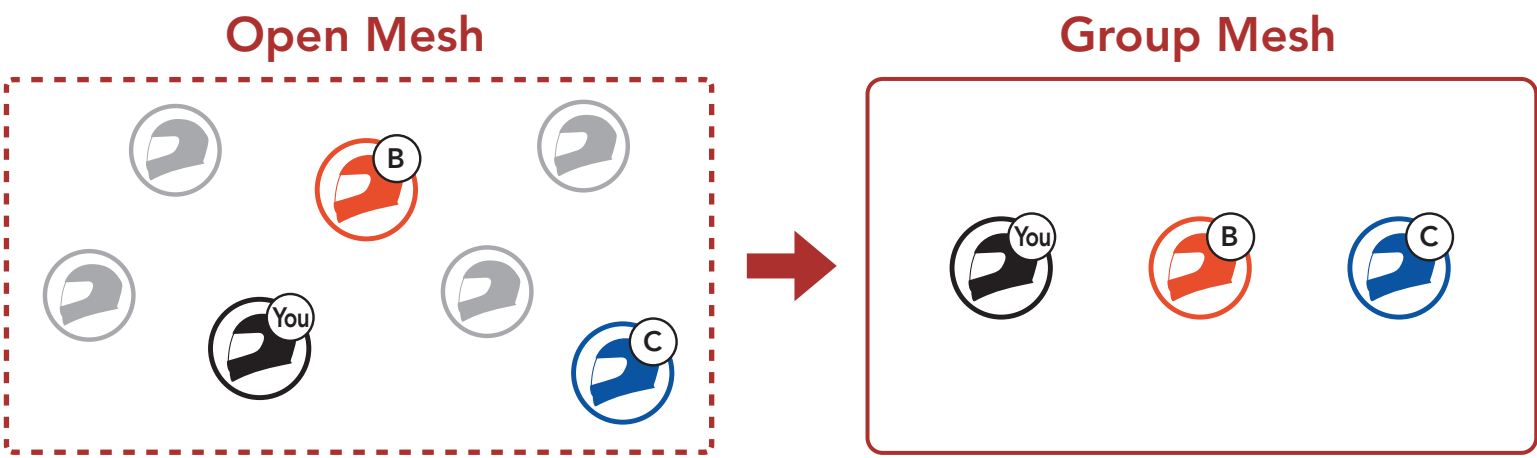

1. To enter **Mesh Grouping** to create a **Group Mesh**, press and hold the **Mesh Intercom Button** for **5 seconds** on the Bluetooth system of the **users (You, B, and C)**.



2. When **Mesh Grouping** is completed, the **users (You, B and C)** will hear a voice prompt on their Bluetooth systems as **Open Mesh** switches to **Group Mesh**.




Note:

- If the **Mesh Grouping** is not completed within **30 seconds**, users will hear a voice prompt, **"Grouping failed"**.
- If you want to cancel during the **Mesh Grouping**, tap the **Mesh Intercom Button**.

7.4.2 Joining an Existing Group Mesh

One of the **current users** in an **Existing Group Mesh** can allow **new users (one or more)** in **Open Mesh** to join the **Existing Group Mesh**.

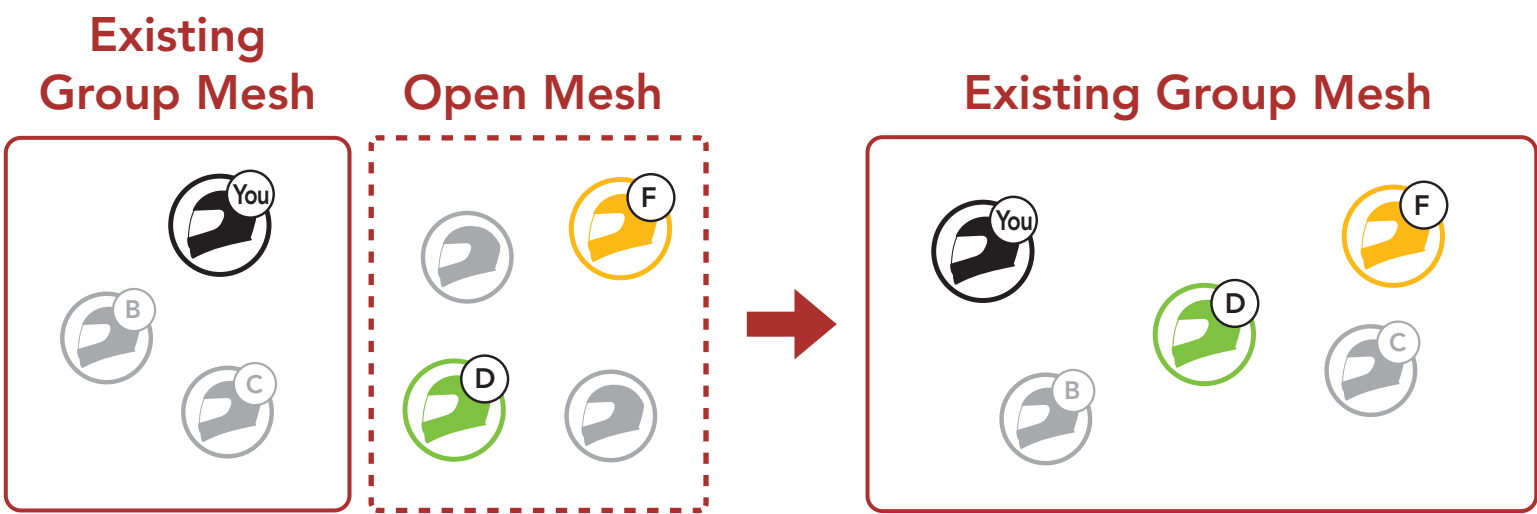

1. To enter **Mesh Grouping** to join the **Existing Group Mesh**, press and hold the **Mesh Intercom Button** for **5 seconds** on the Bluetooth systems of **one (You) of the current users** in the **Existing Group Mesh** and the **new users (D and F)** in **Open Mesh**.




2. When **Mesh Grouping** is completed, the **new users (D and F)** will hear a voice prompt on their Bluetooth systems as **Open Mesh** switches to **Group Mesh**.



Note: If the **Mesh Grouping** is not completed within **30 seconds**, the current user (You) will hear a low tone double beep and the new users (D and F) will hear a voice prompt, **"Grouping failed"**.

7.5 Enable/Disable Mic (Default: Enable)

Users can enable/disable the microphone when communicating in a **Mesh Intercom**.

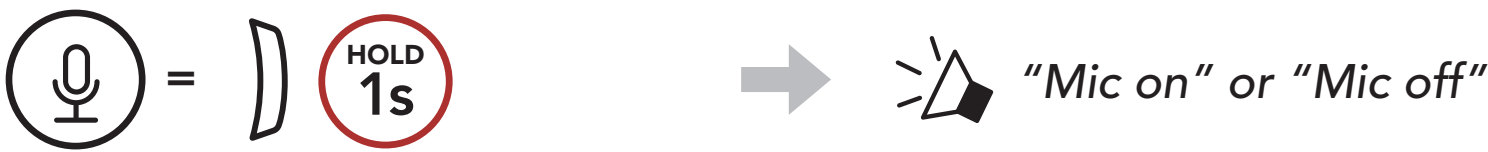


7.6 Toggling Open Mesh/Group Mesh

Users are able to toggle between **Open Mesh** and **Group Mesh** without resetting the **Mesh**. This allows users to keep the **Group Mesh Network** connection information while in **Open Mesh**.

Users can toggle to **Group Mesh** to communicate with participants from the stored **Group Mesh Network** connection information.

Toggle Between Open Mesh and Group Mesh

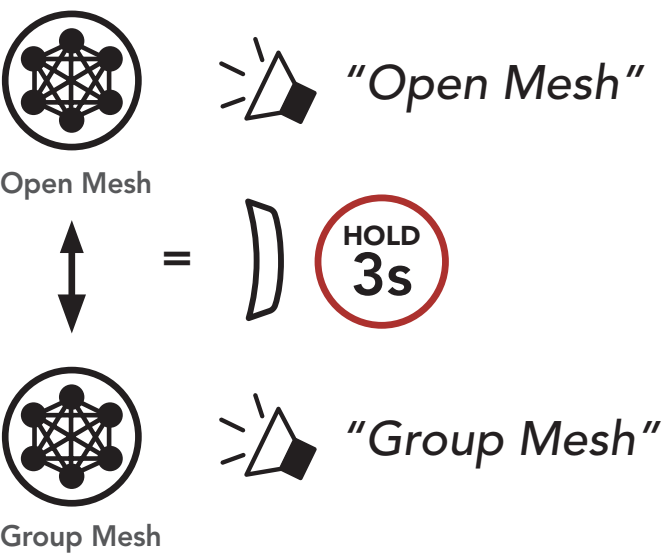

Note: If you have never participated in **Group Mesh**, you cannot toggle between **Open Mesh** and **Group Mesh**. You will hear a voice prompt, **"No Group Available"**.

7.7 Reset Mesh

If a Bluetooth system in an **Open Mesh** or **Group Mesh** resets the **Mesh**, it will automatically return to **Open Mesh (default: channel 1)**.



8. MESH AUDIO MULTITASKING (ALWAYS ON)

Audio Multitasking allows you to have an intercom conversation while simultaneously listening to music.

The overlaid audio is played in the background with reduced volume whenever there is an intercom conversation and will return to normal volume once the conversation is finished.

The **Audio Multitasking** can be configured through the **Intercom-Audio Overlay Sensitivity** and the **Audio Overlay Volume Management settings**.

The **Intercom-Audio Overlay Sensitivity** and the **Audio Overlay Volume Management settings** can be found in the **Software Configuration Setting**, accessible through the **Boom Audio Bluetooth Device Manager** or the **Sena Motorcycles App**.

9. USING THE FM RADIO

9.1 FM Radio On/Off

FM Radio On



FM Radio Off




9.2 Seek and Save Radio Stations


The **"Seek"** feature searches for radio stations.

- 1. Search for radio stations.

Seek Stations Forward

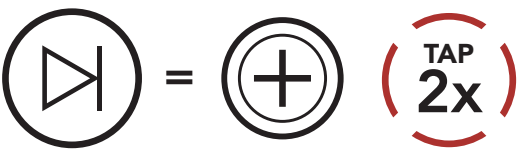

Seek Stations Backward

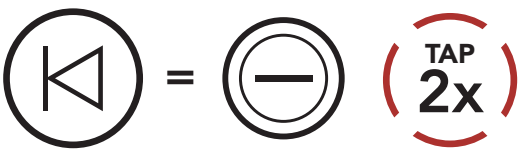

- 2. Save the current station.

Enter Preset Selection Mode




- 3. Navigate through the preset numbers that you want to store.

Navigate Forward/Backward Through Preset Stations




- 4. Save the station in the preset number you choose or delete the station from memory.

Save Station to the Preset Number

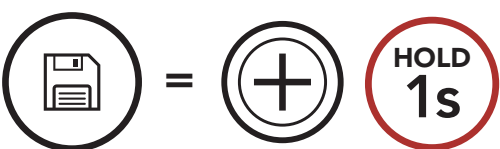

Delete Station from Memory

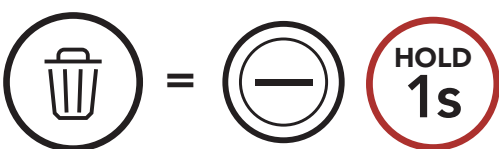


9.3 Scan and Save Radio Stations


The **“Scan”** function automatically searches for radio stations, starting with the current station’s frequency, then up from there.

1. Scan for stations.

Start Scanning

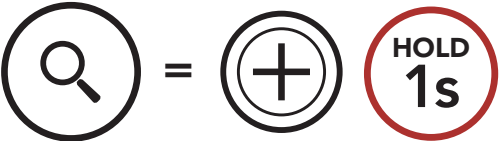

Stop Scanning

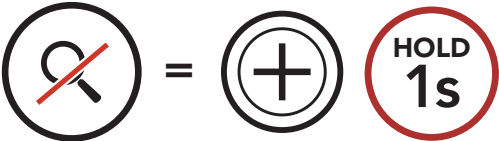

2. The Harley-Davidson tuner pauses at each station it finds for **8 seconds** before moving to the next.
3. Save the current station. The station will be saved as the next preset number.

Save the Current Station




Note: You can use the **Boom Audio Bluetooth Device Manager** or the **Sena Motorcycles App** to save the preset stations.

9.4 Navigating Preset Stations

Using the methods above, up to 10 radio stations can be stored. You can navigate through the saved stations.

Navigate through Preset Stations

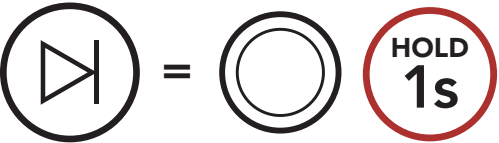


9.5 Temporary Station Preset

The **Temporary Preset** feature automatically finds and saves the nearest 10 radio stations without changing your existing preset stations.

1. Automatically find and save 10 stations.

Temporary Stations

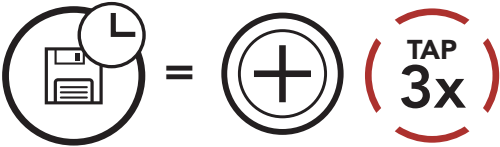

2. The temporary preset stations will be cleared when the Bluetooth system reboots.

10. FUNCTION PRIORITY AND FIRMWARE UPGRADES

10.1 Function Priority

The Bluetooth system prioritizes connected devices in the following order:

- (highest)** Mobile phone
- Mesh Intercom
- Music sharing via Bluetooth stereo music
- FM radio
- (lowest)** Bluetooth stereo music

A lower-priority function gets interrupted by a higher-priority function. For example, stereo music will be interrupted by an incoming mobile phone call.

10.2 Firmware Upgrades

You can upgrade firmware using the **Boom Audio Bluetooth Device Manager**.

The **USB Power & Data Cable (USB-C)** must be connected to your PC to upgrade firmware using the **Boom Audio Bluetooth Device Manager**.


Please visit **www.H-D.com/infotainment-support** to download the **Boom Audio Bluetooth Device Manager**.

Click Here to Visit www.H-D.com/infotainment-support



11. CONFIGURATION SETTING

11.1 Bluetooth system Configuration Menu


Access the Configuration Menu

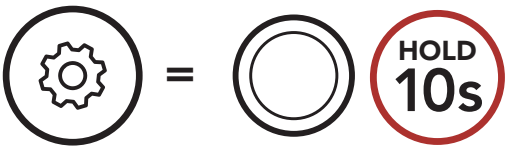

Navigate Between Menu Options

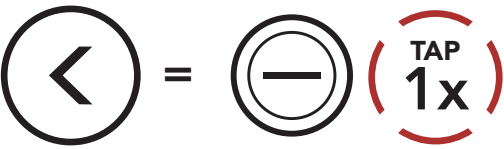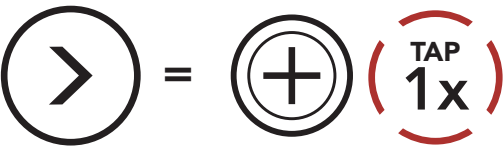

Execute Menu Options

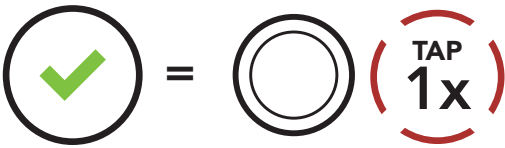

Bluetooth system Configuration Menu

Voice Configuration Menu	Tap the Center Button
Second Mobile Phone Pairing	None
GPS Pairing	None
Factory Reset	Execute
Exit	Execute

11.2 Software Configuration Setting

You can change the settings of the Bluetooth system through the **Boom Audio Bluetooth Device Manager** or the **Sena Motorcycles App**.



Sena Motorcycles



Boom Audio Bluetooth Device Manager

11.2.1 Headset Language

You can select the device language. The selected language is maintained even when the Bluetooth system is rebooted.

11.2.2 Audio Equalizer (Default: Off)

You can use the **Audio Equalizer** to increase/decrease the decibel level of different frequency ranges of audio.

- **Balance** will adjust all of the frequency ranges to be the same volume level (0 dB).
- **Bass Boost** will increase the bass range of audio (20 Hz - 250 Hz).
- **Mid Boost** will increase the mid range of audio (250 Hz - 4 kHz).
- **Treble Boost** will increase the high range of audio (4 kHz - 20 kHz).

11.2.3 HD Voice (Default: Enable)

HD Voice allows you to communicate in high-definition during phone calls. This feature increases the quality so that the audio will be crisp and clear during phone call conversations.

If this feature is enabled, incoming phone calls will interrupt intercom conversations and audio from the SR10 will not be heard during intercom conversations.

Note: Refer to the manufacturer of your Bluetooth device that will be connected to the Bluetooth system to see if it supports **HD Voice**.

11.2.4 Voice Prompt (Default: Enable)

You can disable **Voice Prompts** by software configuration settings, but the following voice prompts are always on.

- Bluetooth system configuration settings menu, battery level indicator, speed dial, FM radio functions

11.2.5 RDS AF Setting (Default: Disable)

Radio Data System (RDS) Alternative Frequency (AF) Setting allows a receiver to re-tune to the second frequency location when the first signal becomes too weak. With **RDS AF** enabled on the receiver, a radio station with more than one frequency can be used.

11.2.6 FM Station Guide (Default: Enable)

When **FM Station Guide** is enabled, FM station frequencies are given by voice prompts as you select preset stations. When **FM Station Guide** is disabled, the voice prompts on FM station frequencies will not be given as you select preset stations.

11.2.7 Region Selection

You can select the proper FM frequency range for your location. Using the region setting, you can optimize the seek function to avoid unnecessary frequency ranges.

Region	Frequency range	Step
Worldwide	76.0 ~ 108.0 MHz	± 100 kHz
North America, South America and Australia	87.5 ~ 107.9 MHz	± 200 kHz
Asia and Europe	87.5 ~ 108.0 MHz	± 100 kHz
Japan	76.0 ~ 95.0 MHz	± 100 kHz

12. TROUBLESHOOTING


Please visit www.H-D.com/infotainment-support for more troubleshooting information.

- Customer Support: www.H-D.com/infotainment-support

12.1 Fault Reset

When the Bluetooth system is not working properly, you can easily reset the unit:

1. Locate the **Pinhole Fault Reset Button** below the **Center Button**.
2. Gently insert a paperclip into the hole and tap the **Pinhole Fault Reset Button** with light pressure. The Bluetooth system will shut down.

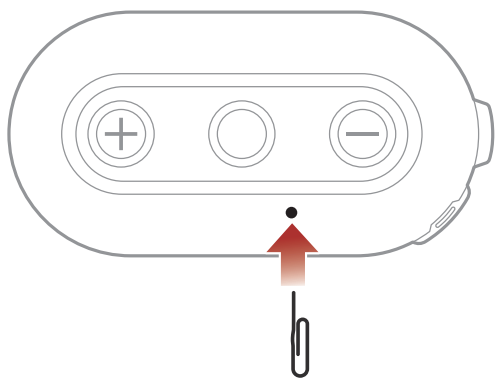

Note: Fault Reset will not restore the Bluetooth system to factory default settings.

12.2 Factory Reset

To erase all of your settings and start fresh, the Bluetooth system can be restored to factory default settings using the **Factory Reset** feature.

1. = **HOLD 10s** → "Configuration menu"
2. = **TAP 2x** → "Factory reset"
3. = **TAP 1x** → "Headset reset, good-bye"