

**Compact Industrial 5-Port 10/100TX  
Ethernet Switch**

**ISW-500T-E**

User's Manual


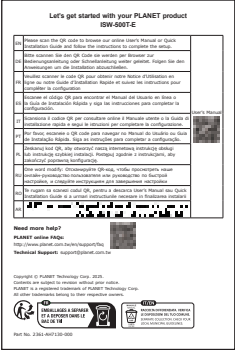

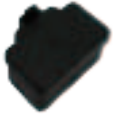
## Table of Contents

1. Package Contents .....	3
2. Product Specifications .....	4
3. Hardware Introduction .....	6
3.1 Three-View Diagram.....	6
3.2 Front View .....	7
3.3 LED Definition: .....	7
3.4 Top View.....	8
3.5 Wiring the Power Inputs.....	8
3.6 Grounding the Device.....	9
4. Installation.....	10
4.1 DIN-rail Mounting Installation.....	10
4.2 Wall-mount Plate Mounting .....	11
5. Customer Support .....	12

# 1. Package Contents

Thank you for purchasing PLANET Compact Industrial 5-port 10/100TX Ethernet Switch, ISW-500T-E. In the following section, the term **“Industrial Ethernet Switch”** means the ISW-500T-E.

Open the box of the Industrial Ethernet Switch and carefully unpack it. The box should contain the following items:

Industrial Ethernet Switch x 1		QR Code Sheet x 1	
			
DIN-rail Kit	Wall-mount Kit	RJ45 Dust Ca x 5	
			

If any of these are missing or damaged, please contact your dealer immediately; if possible, retain the carton including the original packing material, and use them again to repack the product in case there is a need to return it to us for repair.

## 2. Product Specifications

Product	ISW-500T-E
Hardware Specifications	
Copper Ports	5 x 10/100BASE-TX RJ45 auto-MDI/MDI-X ports, auto negotiation
Switch Architecture	Store-and-Forward
Switch Fabric	1Gbps (non-blocking)
Throughput (packet per second)	0.744Mpps@ 64 bytes
Address Table	1K entries
Shared Data Buffer	448K bits
Flow Control	IEEE 802.3x pause frame for full-duplex Back pressure for half-duplex
ESD Protection	6KV DC
Enclosure	IP40 metal case
Installation	DIN-rail kit and wall-mount kit
Connector	Removable 4-pin terminal block for power input Pin 1/2 for Power 1, Pin 3/4 for Power 2 One for DC jack with central pole 2.1mm with Power 3
LED Indicator	System: Power (Green) Per 10/100TX RJ45 Ports: 10/100 LNK/ACT (Green)
Dimensions (W x D x H)	30.2 x 76.1 x 100 mm
Weight	266g
Power Requirements	12~55V DC (Support Polarity Protection) Redundant power support
Power Consumption	Max. 1.1 watts/3.75 BTU (Ethernet full loading)

DIP Switch	<p>Standard: In the normal mode, all interfaces can communicate with each other. Transmission distance is within 100 meters, and transmission rate is 10/100Mbps.</p> <p>Extend: In the link extension mode, the data transmission distance for Port 1-4 can be extended to 250 meters, and transmission speed is 10Mbps.</p>
Standards Conformance	
Regulatory Compliance	FCC Part 15 Class A, CE
Stability Testing	<p>IEC60068-2-32 (free fall)</p> <p>IEC60068-2-27 (shock)</p> <p>IEC60068-2-6 (vibration)</p>
Standards Compliance	<p>IEEE 802.3 10BASE-T</p> <p>IEEE 802.3u 100BASE-TX</p> <p>IEEE 802.3x flow control and back pressure</p> <p>IEEE 802.3az Energy Efficient Ethernet (EEE)</p>
Environment	
Operating Temperature	-40 ~ 75 degrees C
Storage Temperature	-40 ~ 85 degrees C
Operating Humidity	10 ~ 90% (non-condensing)
Storage Humidity	5 ~ 95% (non-condensing)

### 3. Hardware Introduction

#### 3.1 Three-View Diagram

The three-view diagram of the **Industrial Ethernet Switch** consists of five auto-sensing 10/100/BASE-TX **RJ45 ports** and one **removable 4-pin terminal block**. The LED indicators are also located on the front panel.

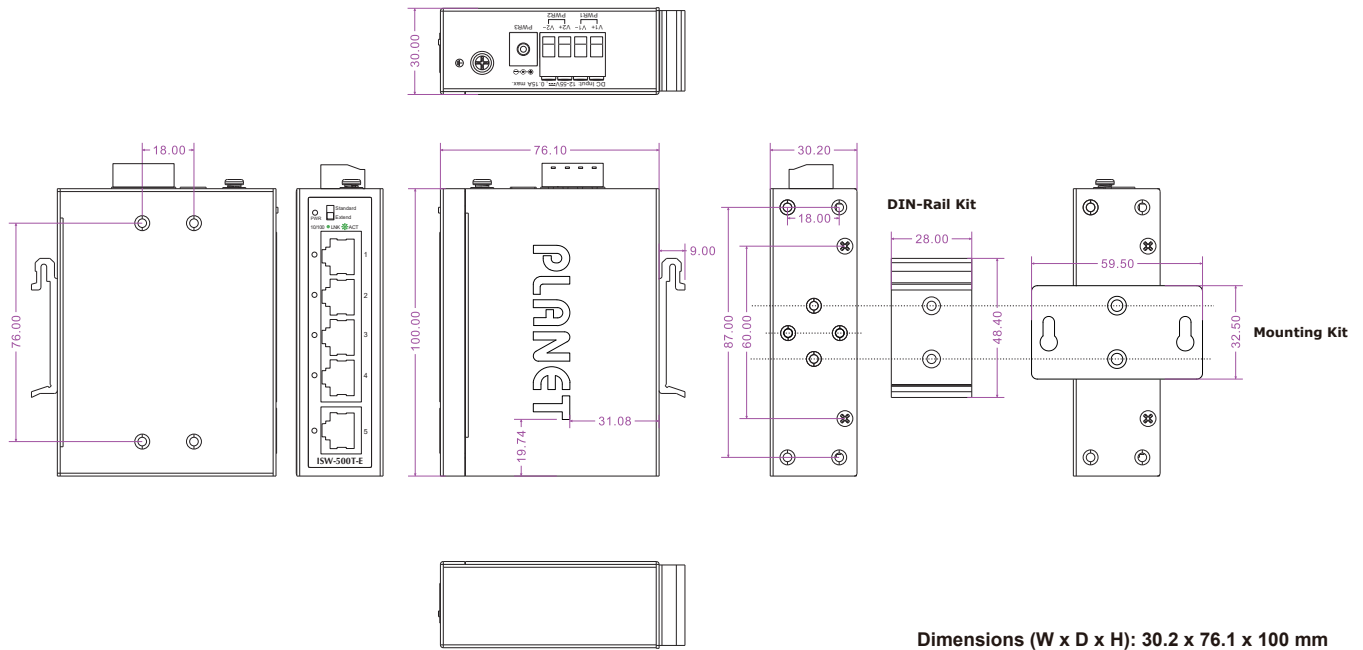


Figure 1: ISW-500T-E Three-View Diagram

3.2 Front View

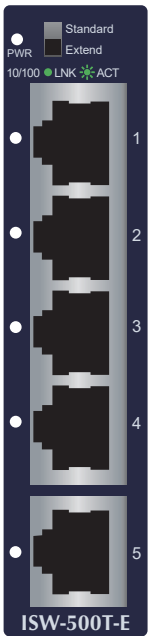


Figure 2: ISW-500T-E Front View

3.3 LED Definition:


■ System

LED	Color	Function
PWR	Green	<b>Lights</b> to indicate DC power input has power.

■ Per 10/100BASE-TX Port

LED	Color	Function	
10/100 LNK/ACT	Green	<b>Lights</b>	Indicating the port is running at <b>10/100Mbps</b> and successfully established.
		<b>Blinks</b>	Indicating that the switch is actively sending or receiving data over that port.

### 3.4 Top View

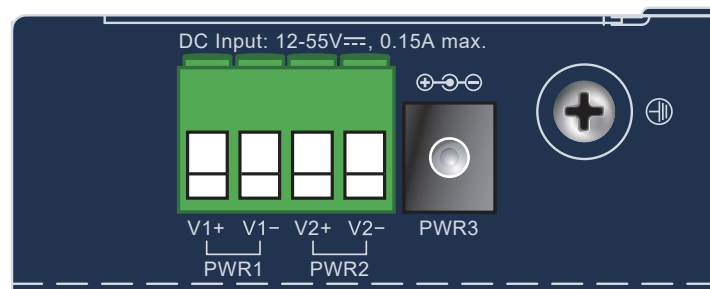

**Figure 3:** ISW-500T Top View

### 3.5 Wiring the Power Inputs


The 4-contact terminal block connector on the top panel of Industrial Ethernet Switch is used for two DC redundant power inputs. Please follow the steps below to insert the power wire.



Caution

When performing any of the procedures like inserting the wires or tightening the wire-clamp screws, make sure the power is OFF to prevent from getting an electric shock.

1. Insert positive and negative DC power wires into contacts 1 and 2 for POWER 1, or contacts 3 and 4 for POWER 2.

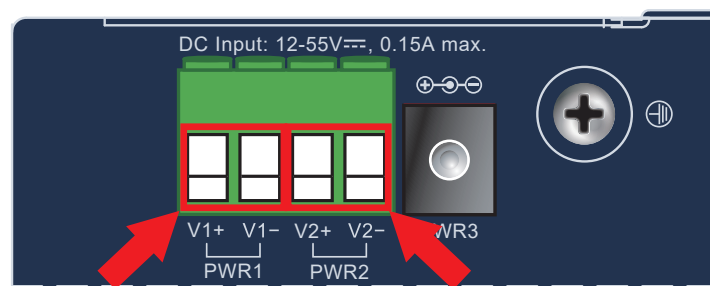



2. Tighten the wire-clamp screws for preventing the wires from loosening.



1	2	3	4
Power 1		Power 2	
+	-	+	-




Note

1. The wire gauge for the terminal block should be in the range between 12 and 24 AWG.
2. The DC power input range is 12V ~ 55V DC

### 3.6 Grounding the Device

Users **MUST** complete grounding wired with the device; otherwise, a sudden lightning could cause fatal damage to the device. EMD (Lightning) DAMAGE IS NOT COVERED UNDER WARRANTY.

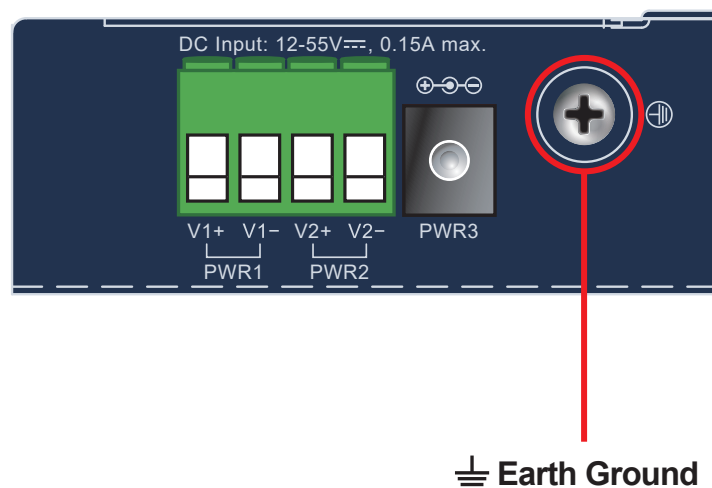



## 4. Installation

This section describes the functionalities of the Industrial Ethernet Switch's components and guides you to installing it on the DIN rail and wall. Please read this chapter completely before continuing.




This following pictures show the user how to install the device, and the device is not ISW-500T-E.

### 4.1 DIN-rail Mounting Installation

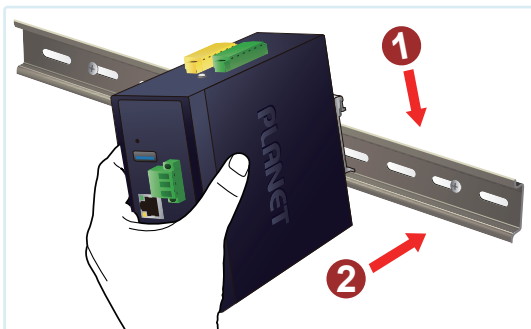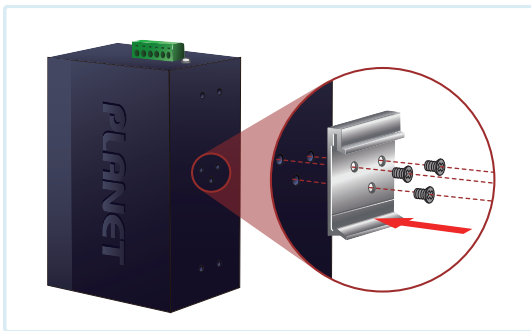

Place the bracket on the back of the device and with the given 3 screws, tighten them. Slide the device with the bracket mounted through the DIN-rail to finish the installation.

## 4.2 Wall-mount Plate Mounting

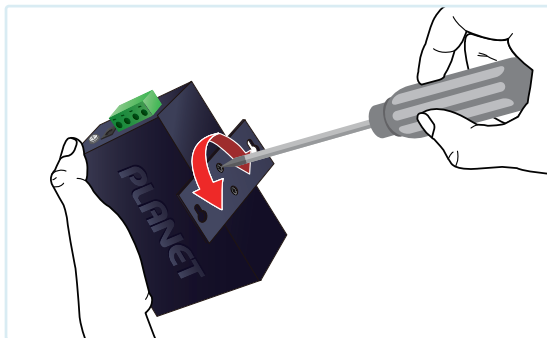

Place mounting plates on the back of the device, and tighten them with the given screws. Then put the device with the plates mounted on the wall, and screw them of finish the installation.



Caution

You must use the screws supplied with the wall-mounting brackets. Damage caused to the parts by using incorrect screws would invalidate your warranty.

## **5. Customer Support**

Thank you for purchasing PLANET products. You can browse our online FAQ resource on PLANET web site first to check if it could solve your issue. If you need more support information, please contact PLANET switch support team.

PLANET online FAQs:

<https://www.planet.com.tw/en/support/faq.php>

Switch support team mail address:

[support@planet.com.tw](mailto:support@planet.com.tw)

Copyright © PLANET Technology Corp. 2025.

Contents are subject to revision without prior notice.

PLANET is a registered trademark of PLANET Technology Corp.

All other trademarks belong to their respective owners.

## **Trademarks**

Copyright © PLANET Technology Corp. 2025.

Contents are subject to revision without prior notice.

PLANET is a registered trademark of PLANET Technology Corp.

All other trademarks belong to their respective owners.

## **Disclaimer**

PLANET Technology does not warrant that the hardware will work properly in all environments and applications, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose. PLANET has made every effort to ensure that this User's Manual is accurate; PLANET disclaims liability for any inaccuracies or omissions that may have occurred.

Information in this User's Manual is subject to change without notice and does not represent a commitment on the part of PLANET. PLANET assumes no responsibility for any inaccuracies that may be contained in this User's Manual. PLANET makes no commitment to update or keep current the information in this User's Manual, and reserves the right to make improvements to this User's Manual and or to the products described in this User's Manual, at any time without notice.

If you find information in this manual that is incorrect, misleading, or incomplete, we would appreciate your comments and suggestions.

## **FCC Warning**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the Instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at whose own expense.

## **CE Mark Warning**

This device is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.

## WEEE Warning



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

## Energy Saving Note of the Device

This power required device does not support Standby mode operation. For energy savings, please remove the DC plug or slide the hardware-based Power Switch to the OFF position to disconnect the device from the power circuit. Without removing the DC plug from or switching off the device, the device will still consume power from the power source. In view of Saving the Energy and reducing the unnecessary power consumption, it is strongly suggested to power off or to remove the DC plug from the device if this device is not intended to be active.