

## Charger for Lead Acid Batteries

### **EN** User Manual

Updates and language specific user manuals are available on  
**[www.mascot.no/downloads/usermanuals](http://www.mascot.no/downloads/usermanuals)**



Bruksanvisning  
Käyttöohjeet  
Bedienungsanleitung  
Mode d'emploi  
Manual de instrucciones  
Istruzioni per l'uso



**MASCOT ELECTRONICS AS**  
P.O.Box 177, N-1601 Fredrikstad, NORWAY  
Phone: +47 69 36 43 00 • Telefax: +47 69 36 43 01  
E-mail: [sales@mascot.no](mailto:sales@mascot.no) • Web: [www.mascot.no](http://www.mascot.no)

Doc.no. 5150G - Part No. 205150 - 11.02.2025



## IMPORTANT SAFETY INSTRUCTIONS!



**TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK:**

**READ THROUGH THESE INSTRUCTIONS PRIOR TO USING THE PRODUCT.**

**CAREFULLY FOLLOW THESE INSTRUCTIONS WHEN USING THE PRODUCT.**

**RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.**



**CAUTION! DOUBLE POLE / NEUTRAL FUSING!**



This product is designed for indoor use.  
(Not applicable to products marked "IP67")

**IP41 IP4X IP44 ■■■IP67**

A version of this product marked "IP41" may be available. This version is protected against ingress of solid objects larger than 1.0 mm and the effects of vertically falling drops of water according to standard EN/IEC 60529.

A version of this product marked "IP4X" or "IP40" may be available. This version is protected against ingress of solid objects larger than 1.0 mm.

A version of this product marked "IP44" may be available. This version is protected against ingress of solid objects larger than 1.0 mm and the effects of water splashed against the enclosure from any direction according to standard EN/IEC 60529.

A version of this product, marked with a symbol with two drops of water and/or "IP67", may be available. This version is filled with a potting

compound and is dust-tight and protected against the effects of temporary immersion in water according to standard EN/IEC 60529, but must not be immersed in water for longer periods of time.



Products marked with the "double square symbol" are double insulated (Insulation Class II). Products without this mark are Class I (relies on safety earth for protection).

**WARNING:** To avoid risk of electric shock, Class I products must only be connected to a supply mains with protective earth.



At the end of their service life electric and electronic equipment and their accessories shall not be discarded with the municipal waste but be disposed of using separate collection, treatment, recovery/recycling and environmentally sound disposal. This also applies to any potentially bio hazardous parts and accessories. If in doubt, contact your local authorities to determine the proper method.

Technical specifications for your product: see tables, the marking on the product or [www.mascot.no](http://www.mascot.no)

## Cautions to observe prior to use

- The intended use for this product is to charge a battery or a battery powered electrical accessory (NiCd/NiMH, Lead-Acid, Lithium-Ion or LiFe-PO<sub>4</sub> batteries) or to be used as a Power Supply to power an electrical accessory. Please see the marking on the product you have to verify the type of product you have and read the applicable instructions and technical specifications included with this manual.
- This product may be used by unskilled operators, under the condition that these instructions are followed.
- Unskilled operators may contact the supplier or manufacturer for assistance, if needed, in setting up, using or maintaining this product and to report unexpected operation or events.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Do not allow small children to handle this product while unattended as cables may represent a risk for strangulation and small parts may represent a risk for inhalation or swallowing.
- Do not allow animals to come into contact with this product. Some animals are known to cause damage to cables etc which may be a potential for risk of electric shock and excessive temperatures. Also, cables and small parts may represent a strangulation risk for the animal.
- If the product is equipped with a mains cord, please check that the cord is not damaged. If the cord is damaged, the product must not be used until the cord is replaced. Replacement should be carried out by qualified personnel.
- The mains socket outlet used should always be easily accessible to facilitate immediate removal of the products mains supply should an operational error occur during use. If the product has a detachable mains cord the appliance coupler may be used as a disconnect device.
- The product is "switched on" by inserting the mains plug into the mains socket and "switched off" by disconnecting the mains plug from the mains socket.
- The product may be connected to an IT type mains supply.
- For use in U.S.A.:
  - Be sure to use 125V 15A receptacle configuration before plugging in.
  - Use a UL817-standard compliant mains cord (plug type NEMA 1-15, cord type SJT or SVT).
- For use outside U.S.A.:
  - Use a mains cord compliant with the country specific requirements.
- The time from powering this product until its full function starts may exceed 15 seconds.
- Should an operational error or unexpected change in the performance occur during use, disconnect the product from the mains immediately by disconnecting the mains plug from the mains socket and contact the supplier or manufacturer (see contact details on the front of this document).
- When not in use please think about disconnecting the product from the mains. This will reduce the risk of hazards, reduce the products environmental impact and save electricity costs.
- To avoid overheating make sure there is sufficient room for the circulation of air around the product when in use. Do not cover it up.

- Even though this product complies with relevant safety standards it should not be in contact with human skin for long periods as some people may get allergies or injuries from long-term contact with moderate temperatures and/or plastic materials.
- Prior to using this product with accessories and/or interconnected equipment please carefully read its respective User Manuals.
- If the product is supplied with exchangeable output plugs, please see separate page for assembly.
- Output cables having a modular plug ( similar to a telephone connector) must never be connected to a telephone outlet.
- Products with a welded plastic housing or rated IP 67 are not repairable. For such products the supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped. Please contact your supplier for replacement part.
- This product contains hazardous voltages and there are no user replaceable parts inside the product. Never attempt to remove the cover.  
**WARNING:** No modification of this equipment is allowed. Any repair/service should be carried out by qualified personnel who may get assistance by contacting the manufacturer or the manufacturer's agent.
- Products specified to have automatic polarity protection must be switched off if a battery is connected with reverse polarity. The protection will be automatically reset when the polarity has been corrected.
- In chargers specified to have a replaceable fuse as polarity protection the fuse must be replaced if the battery has been connected with reverse polarity. When replacing the fuse, a fuse of the same type and rating must be used.
- If the product is specified to comply with the standard for Medical Electrical Equipment (standards based on IEC60601-1) it complies with some of the requirements for medical electrical equipment and may be used in medical applications and hospital environments.
- The product must be kept away from sources of heat and may not be used in the vicinity of flammable anesthetic gases or in other environments with flammable or explosive atmosphere.
- If the product is specified to comply with the standard for Medical Electrical Equipment for Home Healthcare Environment (standard IEC60601-1-11) it may be used in medical applications used in a home healthcare environment.  
**NOTE!** Products relying on safety earth for protection (Class I) may not be used in home healthcare environment unless they are permanently wired to the building installation: Installation must only be carried out by qualified service personnel, following the below instructions:
  - The protective earth conductor must be min. 0.75 mm<sup>2</sup>.
  - Connect the protective earth conductor to the external protective earthing system.
  - Verify that the protective earth terminal used is connected to the external protective earthing system.
  - Verify the integrity of the external protective earthing system.
- This product converts the mains voltage to a safety extra low voltage.  
The output from products applying with 2MOPP insulation ( model names followed by "P") may be treated as Applied Part Type B or Type BF according to standard EN/IEC 60601-1 and may come in physical contact with a patient. The housing of the product shall not be allowed to contact the patient.

- This product must be operated in an environment within temperature range +5 to +40°C, humidity 15 - 93 % RH and atmospheric pressure 70 - 106 kPa (700 - 1060 hPa). If the product has recently been stored or transported at conditions outside this range, please wait for 30 minutes before operating the product.
- Expected service life of this product and accessories delivered with this product is three (3) years, if operated as indicated above. However, the guarantee times indicated in document "TERMS OF SALES AND DELIVERY FOR MAS-COT AS" apply (available at [www.mascot.com](http://www.mascot.com)).
- Environmental parameters during transport and storage between uses: temperature range -25 to +85 °C, humidity 15 - 93% RH NC and atmospheric pressure 70 - 106 kPa (700 - 1060 hPa).
- If stored for longer periods of time the environmental parameters should be within the temperature range +5 to +35°C, humidity range 10 - 75% RH NC and atmospheric pressure 70 - 106 kPa (700 - 1060 hPa) to maintain the products expected service life.
- Expected shelf life of this product is one (1) year, if stored as indicated above.
- This product complies with the requirements to electromagnetic compatibility for medical electric equipment and for use in residential, office or light industrial environment but all electric products imply a potential for electromagnetic or other interference between the product and other devices. If such interference is suspected please disconnect the product from the mains and consult a qualified technician, your supplier or the manufacturer.
- No special maintenance procedure is required but if the product gets dusty or dirty it should be wiped clean using a dry cloth while the product is disconnected from the mains. No other maintenance should be necessary.
- For products having a plastic casing, please avoid any contact with lotions, oils, grease and solvents as most types of plastic may be degraded by such chemicals. Also make sure to position, operate and store such products away from UV-light and direct sunlight.
- Position, operate and store this product only under reasonable foreseeable environmental conditions with respect to magnetic fields, EM-fields, electrostatic discharges, pressure or variations in pressure, acceleration etc.
- If this product is used with or mounted in a vehicle it may only be used when the vehicle is not in use.
- When in use, position this product so that the label can be read – within 40 cm of the operator.
- Turn the product off and allow it's housing to cool down prior to moving it to another location.


## **Cautions to observe prior to charging Lead-Acid batteries**

- Lead-Acid chargers are designed for charging Lead-Acid batteries only.
- Do not attempt to charge batteries that are not rechargeable.
- Make sure you have the correct battery charger for the Lead-Acid battery you wish to charge. For safety reasons, individual battery types should have a minimum capacity - please refer to the specifications at the end of this manual.
- Please check that the specifications for your battery allows for the maximum charge current indicated on the charger.
- Please check that the specifications for your

battery allows for the environmental conditions present during charging.


- If in doubt, contact the battery manufacturer for the specific battery.
- Before charging flooded lead-acid batteries, check the electrolyte level. If necessary top up with distilled water up to 5-10 mm over the lead-plates.
- Old, sulfated Lead-Acid batteries usually have a reduced capacity and are difficult to charge. The charge current will fall rapidly as if the battery had received a full charge. Even though a battery in this condition should be replaced, it will retain a small charge.
- As explosive gases may arise during charging lead-acid batteries the charger and the battery should be placed in a well-ventilated area during charging. Avoid sparks and open flames.
- Make sure the charger is disconnected from the mains. Connect the charger to the battery before connecting it to the mains (to avoid possible sparks).
- Please ensure correct polarity when connecting to the battery terminals. Reverse polarity connection may, in some chargers, result in a fuse blowing, leaving the charger useless.
- When charging batteries other than vehicle batteries, it is recommended that you connect the charger to the mains before connection is made to the battery. This will reduce the sparks that may occur due to difference in potential between charger terminals and battery terminals. Note! Make sure the charger terminals are not short-circuited and ensure that the polarity is correct.
- If the charger is equipped with battery clips, first connect the positive clip (RED) to the positive battery pole, then connect the other clip (BLACK) to the battery's negative pole.
- To charge batteries in vehicles, first connect the positive clip (RED) to the positive battery pole (the one not connected to the vehicle's chassis), then connect the other clip (BLACK) to the vehicle's chassis - a good distance from the battery and fuel system (fuel hoses, fuel pump etc.).
- The charge cycle starts when the charger is connected to the mains.
- If the charger is disconnected from the mains voltage during a charge cycle the charger will start a new charge cycle when it is reconnected to the mains.
- When charging is complete, disconnect the charger from the mains before removing battery connections. If the charger is equipped with battery clips: first disconnect the clip from the battery's positive pole then the other from the negative battery pole/vehicle chassis, in this order.
- The recommended minimum battery capacity for which the specific charger can be used vary from battery to battery. Some do not have a capacity restriction at the specified boost voltage level while others have restrictions. Please follow the datasheet and recommendations from the battery manufacturer. In our tables we use typical C/5 as a maximum charge current for Lead Acid cells. C/5 means that charge current for a 10Ah battery should be max 2A. Thus the typical minimum capacity recommendation is then 10Ah for a 2A charger. For max battery capacity we have used 50 times charge current for chargers with timer (and/or uC) and 50 times current detection levels for chargers using only this termination method. For a 2A charger with 0.25A current detection level the max capacity recommended will be  $50 \times 0.25A = 12.5Ah$ . Again this is just typical recommendations. Please read recommendations and datasheets from battery manufacturer.

## How to connect exchangeable DC-output plugs

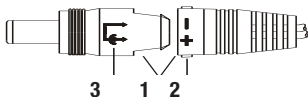

1. To connect for desired polarity, both plug ends are clearly marked.
2. When connected, the female plug is also marked on each side to identify plug polarity.
3. Shows the center polarity of the plug.

## How to connect exchangeable AC-plugs

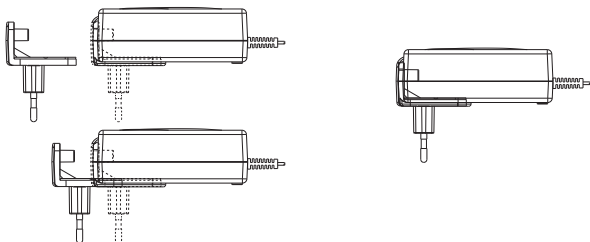

### The following exchangeable AC plugs are available:

"EURO"	250V 2.5A (EN50075/IEC83 C5 II)
"US"	125V 2.5A (NEMA 1-15 / CSA-C22.2 No.42)
"UK"	250V 2.5A (BS 1363)
"AUS"	250V 2.5A (AS/NZS 3112)

Mains Cord Set is available on request if you wish your product to be "DeskTop"

## Mounting and use for bracket Mascot, part no. 205800

Wall mount: Fix the bracket to the wall using screws suitable for the wall material and:

head diameter: 8 - 9.5 mm, head height: max. 3 mm,

thread diameter: 4 - 5.5 mm, thread length: min. 16 mm.

Use one screw for each of the oval openings in the bracket, total four screws.

Place the Power Supply / Charger centred on the bracket so that the slot in the bottom housing is in line with the tabs on the bracket.

Push down on the handle marked "Push" while pushing the product against the wall. Release and the product locks to the wall mount.

Release the product from the wall mount by pushing down on the handle marked "Push" while pulling the product from the wall.

If not fixed to a wall the bracket may be used as a handle, following the same procedure.

# Explanation of Lead-Acid charge cycle

(See tables for methods for each charger model)

## Charging method A

### STEP 1 - BOOST CHARGE

To start a charge cycle, connect the charger to the mains.

The charger is in constant current mode, charging with the maximum current indicated on the charger, the LED-indication on the charger is ORANGE. This step allows rapid charging of your battery until the battery reaches typically 80 - 95% of its capacity.



### STEP 2 – TOP-UP CHARGE

The charger is in constant voltage mode, charging with a decreasing current until the current is below the charger's charge termination level (indicated on the charger).

The LED-indication on the charger is ORANGE. The battery is charged to its full capacity at the end of this step.




### STEP 3 – FLOAT CHARGE

The LED-indication on the charger is GREEN and the battery is fully charged.

The charger is in standby mode. The charge voltage is at standby level and the charger may remain connected to the battery.

The charger will return to boost charging if the battery is used.

A load larger than the cut-off current will initiate a new charge cycle.

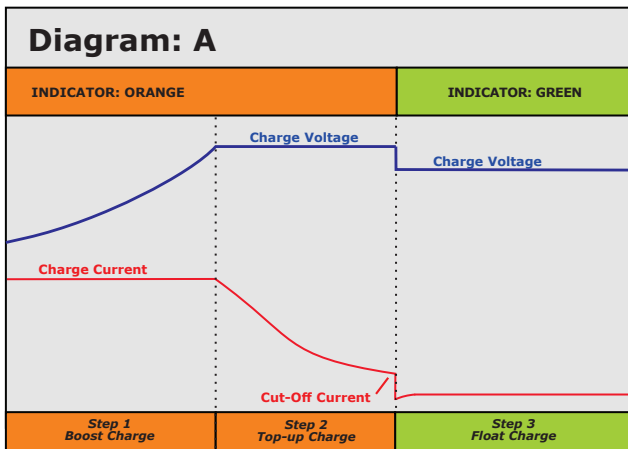



## Charging method B

### STEP 1 - BOOST CHARGE


To start a charge cycle, connect the charger to the mains.

The charger is in constant current mode, charging with the maximum current indicated on the charger, the LED-indication on the charger is ORANGE.



### STEP 2 – TOP-UP CHARGE

The charger is in constant voltage mode, charging with a decreasing current until the current is below the charger's charge termination level (indicated on the charger). The LED-indication will turn to YELLOW during Top-up charge. The battery is typically 90-95% fully charged when the LED indicator changes to yellow. The charger stays in this mode until the charge current decreases to charge termination level. The battery is charged to its full capacity at the end of this step.

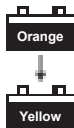


### STEP 3 – FLOAT CHARGE

The LED-indication on the charger is GREEN and the battery is fully charged.

The charger is in standby mode. The charge voltage is at standby level and the charger may remain connected to the battery.

The charger will return to boost charging if the battery is used.

A load larger than the cut-off current will initiate a new charge cycle.

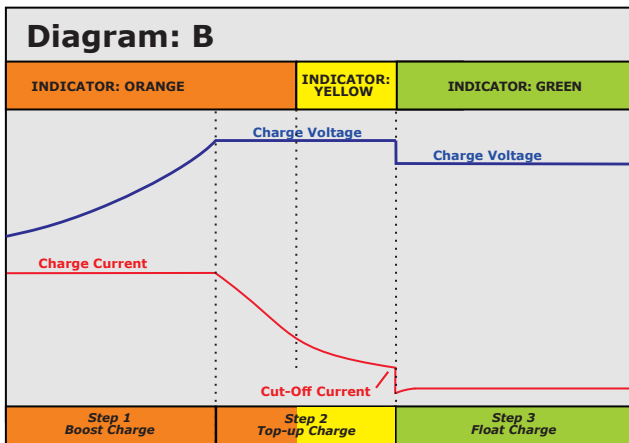

## Charging method C

### STEP 1 - BOOST CHARGE

To start a charge cycle, connect the charger to the mains.

The charger is in constant current mode, charging with the maximum current indicated on the charger, the LED-indication on the charger is ORANGE (or RED 9640).

This step allows rapid charging of your battery until the battery reaches typically 80 - 95% of its capacity.



### STEP 2 – TIMER CHARGE

The charger is in constant voltage mode, charging with a decreasing current.

The LED-indication on the charger is YELLOW. The charger is now in timer mode indicated by the YELLOW LED and will remain in this mode until time interval is completed.

The battery is charged to its full capacity at the end of this step.



### STEP 3 – FLOAT CHARGE

The LED-indication on the charger is GREEN and the battery is fully charged.


The charger is in standby mode. The charge voltage is at standby level which means that the charger can continue to be connected to the battery.

The charger will return to boost charging if the battery is used.

A load current equal to the constant current level will initiate a new charge cycle.



**Diagram: C**

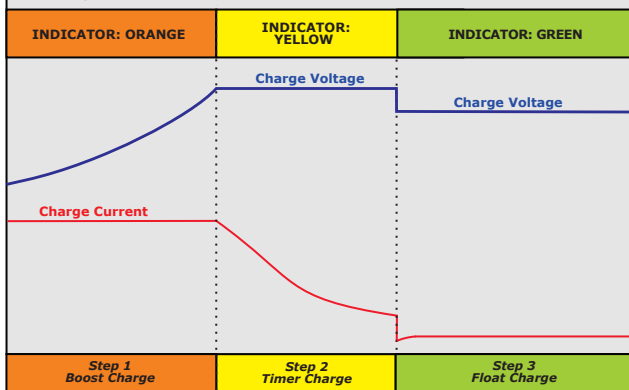

## Charging method D

### STEP 1 - BOOST CHARGE

LED-indicator: YELLOW

The charger is in constant current mode (CC), charging with the maximum current until battery voltage reach Top-Up level.



### STEP 2 – TOP-UP CHARGE

The charger is in constant voltage mode. The LED-indication will be FLASHING YELLOW during Top-up charge. The charger stays in this mode until the charge current decreases to charge termination level or the Top-Up Charge Timer runs out. The battery is charged to its full capacity at the end of this step.



### STEP 3 – FLOAT CHARGE

The LED-indication on the charger is GREEN and the battery is fully charged.


The charger is in standby mode. The charge voltage is at standby level and the charger may remain connected to the battery.

The charger will return to boost charge if the battery is used.



### BATTERY NOT CONNECTED INDICATIONS

Battery not connected is indicated by FLASHING GREEN

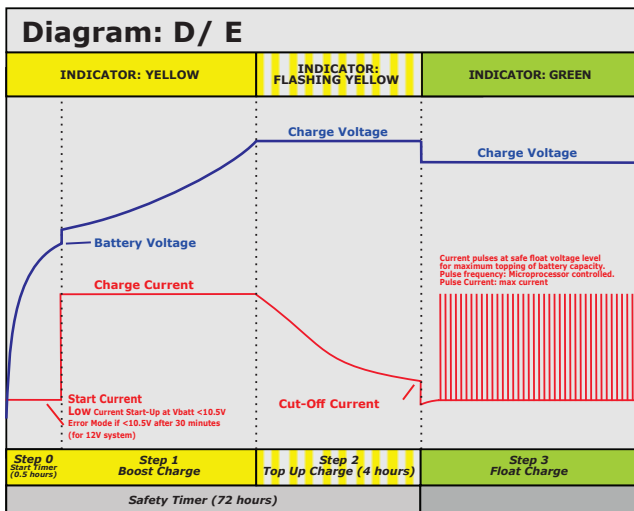

## Charging method E

### STEP 1 - BOOST CHARGE

LED-indicator: YELLOW

The charger is in constant current mode (CC), charging with the maximum current until battery voltage reach Top-Up level.



### STEP 2 – TOP-UP CHARGE

The charger is in constant voltage mode. The LED-indication will be FLASHING YELLOW during Top-up charge. The charger stays in this mode until the charge current decreases to charge termination level or the Top-Up Charge Timer runs out. The battery is charged to its full capacity at the end of this step.



### STEP 3 – FLOAT CHARGE

The LED-indication on the charger is GREEN and the battery is fully charged.

The charger is in standby mode. The charge voltage is at standby level and the charger may remain connected to the battery.

The charger will return to boost charge if the battery is used.



### BATTERY NOT CONNECTED INDICATIONS

Battery not connected is indicated by FLASHING GREEN.



In this mode charger will apply short pulses attempting to wake up deeply discharged batteries. ★

### WAIT MODE INDICATIONS

Yellow with 1 red blink:

Battery temperature is too low

Yellow with 2 red blinks:

Battery temperature is too high



### ERROR INDICATIONS

- 2 red blinks : Battery is connected to charger with wrong polarity!
- 3 red blinks : Charger output is shorted. Check output cable connection! ★
- 4 red blinks : Battery voltage is low. Check battery status or voltage (ss timer).
- 5 red blinks : Timeout Safety timer.
- 6 red blinks : Defect battery.
- 7 red blinks : Warm error. Temperature too high. Disconnect mains to reset.
- 8 red blinks : Thermistor open or short (if mandatory)
- LED off : Battery voltage is too high. Check battery voltage.

★ NOT USED FOR 3540

## Electromagnetic Compatibility

In order to regulate the requirements for EMC (electromagnetic compatibility) with the aim of preventing unsafe product situations, the EMC EN60601-1-2 standard has been implemented. This standard defines the levels of immunity to electromagnetic interference as well as maximum levels of electromagnetic emissions for medical devices. Medical devices manufactured by Mascot have been tested and conform with the requirements of IEC/EN 60601-1-2, 3rd & 4th edition, nevertheless, special precautions may need to be observed:

The Mascot products are suitable for use in Domestic, Residential, Office and Hospital environments, except in special locations where EM Disturbances are known to be high, such as near High Frequency Surgical Equipment or Magnetic Resonance Imaging systems.

When used according to its specification the User can expect the product to fulfil its essential performance, being powering Medical Electrical Devices or charging batteries for Medical Electrical Devices.

**WARNING: Use of this equipment adjacent to or stacked with other equipment should be avoided because it may result in improper operation. If such use is necessary, this equipment and the other equipment should be observed to verify that they are operating normally.**

**WARNING: Use of accessories, transducers and cables other than provided by the manufacturer could result in increased electromagnetic emissions or decreased electromagnetic immunity of this equipment and result in improper operation.**

**WARNING: Portable RF communications equipment should be used no closer than 30 cm (12 inches) to any part of the power supply or battery charger, including cables. Otherwise, degradation of the performance of this equipment could result.**

### GUIDANCE AND MANUFACTURER'S DECLARATION

The Mascot products are intended for use in the electromagnetic environment specified below. The customer or user should ensure that it is used in such an environment.

Test / Standard	Compliance level	Guidance
Emission:		
RF emissions, CISPR 11	Group 1, Class B	Suitable for use in all establishments, including domestic establishments and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes. RF emissions not likely to cause any interference in nearby electronic equipment. However, a separation distance of 30 cm shall be maintained.
Harmonic emissions, IEC 61000-3-2	-	
Voltage fluctuations / flicker emissions, IEC 61000-3-3	-	

Test / Standard	Compliance level	Guidance
Immunity:		
Electrostatic discharge (ESD), IEC 61000-4-2	± 8 kV contact ± 15 kV air	Temporary loss of function may be experienced while the product is subject to the phenomena. The product is expected to recover to its normal operation.
Electrostatic fast transient / burst, IEC 61000-4-4	± 2 kV for AC-power lines ± 1 kV for output lines	
Surge, IEC 61000-4-5	± 1 kV line to line ± 2 kV line to earth (if applicable).	
Voltage dips, short interruptions and voltage variations on power supply lines, IEC 61000-4-11	<5% $U_T$ (0.5 cycle) 40% $U_T$ (5 cycles) 70% $U_T$ (25 cycles) <5% $U_T$ for 5 s $U_T$ = AC Input Voltage prior to test.	
Power frequency magnetic field IEC 61000-4-8	3 A/m (50/60 Hz)	Not applicable for non-magnetic field sensitive devices.
Conducted RF, IEC 61000-4-6	3 Vrms 150 kHz to 80 MHz	Temporary loss of function may be experienced while the product is subject to the phenomena. The product is expected to recover to its normal operation.
Radiated RF, IEC 61000-4-3	3V/m for Professional healthcare environment. 10 V/m for Home Healthcare environment. 80 MHz to 2.7 GHz	

These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people and field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcasts and TV broadcasts cannot be predicted theoretically with accuracy.

To assess the electromagnetic environment due to fixed RF transmitters an EM site survey may be considered. If the measured field strength in the location exceeds the applicable RF compliance level above, the Mascot product should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as re-orienting or relocating the product.

## Technical data (If not appearing in table see marking on the product)

### Charge diagram A

	Input voltage	Charge LED indicator	6V	12V	24V	36V	48V
<b>2240(P) 2241(P)</b>	100-240Vac 50-60Hz max. 0.35A	Orange CC ch.: Orange CV ch.: Green Float ch.: Rec. batt. capacity:	1.3A < 7.35V 7.35V > 250mA 6.85V < 250mA 6.5Ah – 12.5Ah	1A < 14.7V 14.7V > 250mA 13.7V < 250mA 5Ah – 12.5Ah	0.56A < 29.4V 29.4V > 250mA 27.4V < 250mA 2.8Ah – 12.5Ah	0.35A < 44.1V 44.1V > 150mA 41.1V < 150mA 1.8Ah – 7.5Ah	0.27A < 58.8V 58.8V > 100mA 54.8V < 100mA 1.4Ah – 5Ah
<b>2740</b>	100-240Vac 50-60Hz	Orange CC ch.: Orange CV ch.: Green Float ch.: Rec. batt. capacity:	1.0A < 7.35V 7.35V > 200mA 6.85V < 200mA 5Ah – 10Ah	0.7A < 14.7V 14.7V > 200mA 13.7V < 200mA 3.5Ah – 10Ah	0.35A < 29.4V 29.4V > 100mA 27.4V < 100mA 1.8Ah – 5Ah	0.24A < 44.1V 44.1V > 100mA 41.1V < 100mA 1.2Ah – 5Ah	0.18A < 58.8V 58.8V > 50mA 54.8V < 50mA 0.9Ah – 2.5Ah

### Charge diagram B

	Input voltage	Charge LED indicator	6V	12V	24V	36V	48V
<b>2541(P) 2541B(P) 2542(P)</b>	100-240Vac 50-60Hz max. 0.9A	Orange CC ch.: Orange CV ch.: Yellow CV ch.: Green Float ch.: Rec. batt. capacity:	2.7A < 7.35V 7.35V > 1.2A 7.35V < 1.2A 6.85V < 250mA 11Ah – 12.5Ah	2.2A < 14.7V 14.7V > 1A 14.7V < 1A 13.7V < 250mA 11Ah – 12.5Ah	1.2A < 29.4V 29.4V > 0.5A 29.4V < 0.5A 27.4V < 250mA 6Ah – 12.5Ah	0.8A < 44.1V 44.1V > 0.4A 44.1V < 0.4A 41.1V < 250mA 4Ah – 12.5Ah	0.6A < 58.8V 58.8V > 0.25A 58.8V < 0.25A 54.8V < 100mA 3Ah – 5Ah
<b>2544</b>	10-30Vdc	Orange CC ch.: Orange CV ch.: Yellow CV ch.: Green Float ch.: Rec. batt. capacity:	2.7A < 7.35V 7.35V > 1.15A 7.35V < 1.15A 6.85V < 250mA 12Ah – 12.5Ah	2A < 14.7V 14.7V > 0.85A 14.7V < 0.85A 13.7V < 250mA 10Ah – 12.5Ah	1.2A < 29.4V 29.4V > 0.5A 29.4V < 0.5A 27.4V < 250mA 6Ah – 12.5Ah	0.8A < 44.1V 44.1V > 0.4A 44.1V < 0.4A 41.1V < 250mA 4Ah – 12.5Ah	0.6A < 58.8V 58.8V > 0.25A 58.8V < 0.25A 54.8V < 100mA 3Ah – 5Ah

(P)=2MOPP version. B=Special open frame PCB. (All standard versions are also available as open frame units).

## Charge diagram B

	Input voltage	Charge LED indicator	6V	12V	24V	36V	48V
3044	10-30Vdc	Orange CC ch.: Orange CV ch.: Yellow CV ch.: Green Float ch.: Rec. batt. capacity:	4A < 7.35V 7.35V > 2A 7.35V < 2A 6.85V < 500mA 20Ah – 25Ah	4A < 14.7V 14.7V > 2A 14.7V < 2A 13.7V < 500mA 20Ah – 25Ah	2A < 29.4V 29.4V > 0.85A 29.4V < 0.85A 27.6V < 250mA 10Ah – 12.5Ah	1.5A < 44.1V 44.1V > 0.7A 44.1V < 0.7A 41.4V < 250mA 7.5Ah – 12.5Ah	1A < 58.8V 58.8V > 0.5A 58.8V < 0.5A 54.8V < 250mA 5Ah – 12.5Ah
2641 per channel	100-240Vac 50-60Hz	Orange CC ch.: Orange CV ch.: Yellow CV ch.: Green Float ch.: Rec. batt. capacity:	2.7A < 7.35V 7.35V > 1.15A 7.35V < 1.15A 6.85V < 500mA 13.5Ah – 25Ah	2A < 14.7V 14.7V > 0.8A 14.7V < 0.85 13.7V < 250mA 10Ah – 12.5Ah	1.0A < 29.4V 29.4V > 0.4A 29.4V < 0.4A 27.4V < 250mA 5Ah – 12.5Ah	0.6A < 44.1V 44.1V > 0.35A 44.1V < 0.35A 41.1V < 250mA 3Ah – 12.5Ah	0.5A < 58.8V 58.8V > 0.35A 58.8V < 0.35A 54.8V < 250mA 2.5Ah – 12.5Ah
2840(P) 2840B(P) 3140(P)	220-240Vac 50-60Hz	Orange CC ch.: Orange CV ch.: Yellow CV ch.: Green Float ch.: Rec. batt. capacity:	8.5A < 7.35V 7.35V > 4.25A 7.35V < 4.25A 6.85V < 1.6A 42.5Ah – 80Ah	7A < 14.7V 14.7V > 3.5A 14.7V < 3.5A 13.7V < 1.6A 35Ah – 80Ah	3.5A < 29.4V 29.4V > 1.7A 29.4V < 1.7A 27.4V < 0.8A 17.5Ah – 40Ah	2.3A < 44.1V 44.1V > 1.1A 44.1V < 1.1A 41.1V < 0.5A 11.5 – 25Ah	1.7A < 58.8V 58.8V > 0.9A 58.8V < 0.9A 54.8V < 0.4A 8.5Ah – 20Ah
3240(P) 3240B(P)	110-120Vac/ 220-240Vac 50-60Hz	Orange CC ch.: Orange CV ch.: Yellow CV ch.: Green Float ch.: Rec. batt. capacity:	8.5A < 7.35V 7.35V > 4.25A 7.35V < 4.25A 6.85V < 1.6A 42.5Ah – 80Ah	7A < 14.7V 14.7V > 3.5A 14.7V < 3.5A 13.7V < 1.6A 35Ah – 80Ah	3.5A < 29.4V 29.4V > 1.7A 29.4V < 1.7A 27.4V < 0.8A 17.5Ah – 40Ah	2.3A < 44.1V 44.1V > 1.1A 44.1V < 1.1A 41.1V < 0.5A 11.5 – 25Ah	1.7A < 58.8V 58.8V > 0.9A 58.8V < 0.9A 54.8V < 0.4A 8.5Ah – 20Ah
3340	220-240Vac 50-60Hz	Orange CC ch.: Orange CV ch.: Yellow CV ch.: Green Float ch.: Rec. batt. capacity:	N.A.	N.A.	N.A.	15A < 44.1V 44.1V > 8A 44.1V < 8A 41.1V < 5A 75Ah – 250Ah	11A < 58.8V 58.8V > 6A 58.8V < 6A 54.8V < 4A 55Ah – 200Ah

(P) = 2MOPP version. B =Special open frame PCB. (All standard versions are also available as open frame units).



## Charge diagram C

	Input voltage	Charge LED indicator	6V	12V	24V	36V	48V
9640 9641	220-240Vac (115Vac) 50-60Hz	Red/Orange CC ch.: Yellow Timer CV ch.: Green Float ch.: Rec. batt. capacity:	2.7A < 7.35V 7.35V < 2.7A (2h) 6.9V 13.5Ah – 135Ah	2.7A < 14.7V 14.7V < 2.7A (2h) 13.8V 13.5Ah – 135Ah	1.5A < 29.5V 29.5V < 1.5A (2h) 27.6V 7.5Ah – 75Ah	1.0A < 44.1V 44.1V < 1A (2h) 41.1V 5Ah – 50Ah	N.A.
9940 9941	100-240Vac 50-60Hz	Orange CC ch.: Yellow Timer CV ch.: Green Float ch.: Rec. batt. capacity:	N.A.	2.3A < 14.7V 14.7V < 2.3A (2h) 13.8V 11.5Ah – 115Ah	1.3A < 29.5V 29.5V < 1.3A (2h) 27.6V 6.5Ah – 65Ah	0.9A < 44.1V 44.1V < 0.9A (2h) 41.4V 4.5Ah – 45Ah	N.A.
2040(P) 2041(P) 2042(P) 2140(P)	100-240Vac 50-60Hz max. 1.2A	Orange CC ch.: Yellow Timer CV ch.: Green Float ch.: Rec. batt. capacity:	N.A.	4A < 14.7V 14.7V < 4A (2h) 13.8V 20Ah – 200Ah	2A < 29.5V 29.5V < 2A (2h) 27.6V 10Ah – 100Ah	1.4A < 44.1V 44.1V < 1.4A (2h) 41.4V 7Ah – 70Ah	1A < 58.8V 58.8V < 1A (4h) 54.8V 5Ah – 50Ah
9840	220-240Vac 50-60Hz	Orange CC ch.: Yellow Timer CV ch.: Green Float ch.: Rec. batt. capacity:	5A < 7.35V 7.35V < 5A (2h) 6.85V 25Ah – 250Ah	5A < 14.7V 14.7V < 5A (2h) 13.7V 25Ah – 250Ah	2.5A < 29.4V 29.4V < 2A (2h) 27.4V 12.5Ah – 125Ah	1.7A < 44.1V 44.1V < 1.7A (2h) 41.1V 8.5Ah – 85Ah	1.3A < 58.8V 58.8V < 1.3A (4h) 54.8V 6.5Ah – 65Ah
2047 9740	220-240Vac 50-60Hz	Orange CC ch.: Yellow Timer CV ch.: Green Float ch.: Rec. batt. capacity:	10A < 7.35V 7.35V < 10A (4h) 6.85V 50Ah – 500Ah	10A < 14.7V 14.7V < 10A (4h) 13.7V 50Ah – 500Ah	5A < 29.4V 29.4V < 5A (4h) 27.4V 25Ah – 250Ah	3.3A < 44.1V 44.1V < 5A (4h) 40.8V 16.5Ah – 165Ah	2.5A < 58.8V 58.8V < 2.5A (4h) 54.8V 12.5Ah – 125Ah
9740	115Vac 50-60Hz	Orange CC ch.: Yellow Timer CV ch.: Green Float ch.: Rec. batt. capacity:	10A < 7.35V 7.35V < 10A (4h) 6.85V 50Ah – 500Ah	10A < 14.7V 14.7V < 10A (4h) 13.7V 50Ah – 500Ah	5A < 29.4V 29.4V < 5A (4h) 27.4V 25Ah – 250Ah	3.3A < 44.1V 44.1V < 5A (4h) 40.8V 16.5Ah – 165Ah	2.5A < 58.8V 58.8V < 2.5A (4h) 54.8V 12.5Ah – 125Ah
4049	100-240Vac 50-60Hz	Red/Orange CC ch.: Yellow Timer CV ch.: Green Float ch.: Rec. batt. capacity:		2.0A < 14.7V 14.7V < 2.0A (4h) 13.7V 10Ah – 100Ah	1.0A < 29.4V 29.4V < 1.0A (4h) 27.4V 5Ah – 50Ah 6.8Ah – 68Ah		

(P) = 2MOPP version. (All standard versions are also available as open frame units).

## Charge diagram C

	Input voltage	Charge LED indicator	6V	12V	24V	36V	48V
<b>2043</b>	100-240Vac 50-60Hz	Orange CC ch.: Yellow Timer CV ch.: Green Float ch.: Rec. batt. capacity:	10A < 7.35V 7.35V < 10A (4h) 6.85V 50Ah – 500Ah	10A < 14.7V 14.7V < 10A (4h) 13.7V 50Ah – 500Ah	5A < 29.4V 29.4V < 5A (4h) 27.4V 25Ah – 250Ah	3.3A < 44.1V 44.1V < 3.3A (4h) 40.8V 16.5Ah – 165Ah	2.5A < 58.8V 58.8V < 2.5A (4h) 54.8V 12.5Ah – 125Ah
<b>2044 2045</b>	220-240Vac 50-60Hz	Orange CC ch.: Yellow Timer CV ch.: Green Float ch.: Rec. batt. capacity:	20/25A < 7.35V 7.35V < 20A/25A (4h) 6.85V 100Ah – 1000Ah	20A/25A < 14.7V 14.7V < 20A/25A (4h) 13.7V 100Ah – 1000Ah	10A < 29.4V 29.4V < 10A (4h) 27.4V 50Ah – 500Ah	6.7A < 44.1V 44.1V < 6.7A (4h) 41.1V 33.5Ah – 335Ah	5A < 58.8V 58.8V < 5A (4h) 54.8V 25Ah – 250Ah
<b>2640 per channel</b>	220-240Vac 50-60Hz	Orange CC ch.: Yellow Timer CV ch.: Green Float ch.: Rec. batt. capacity:	10A < 7.35V 7.35V < 10A (4h) 6.85V 50Ah – 500Ah	10A < 14.7V 14.7V < 10A (4h) 13.7V 50Ah – 500Ah	5A < 29.4V 29.4V < 5A (4h) 27.4V 25Ah – 250Ah	3.3A < 44.1V 44.1V < 3.3A (4h) 41.1V 16.5Ah – 165Ah	2.5A < 58.8V 58.8V < 2.5A (4h) 54.8V 12.5Ah – 25Ah
<b>9541 per channel</b>	220-240Vac 50-60Hz	Orange CC ch.: Yellow Timer CV ch.: Green Float ch.: Rec. batt. capacity:	25A < 7.35V 7.35V < 25A (4h) 6.85V 125Ah – 1250Ah	25A < 14.7V 14.7V < 25A (4h) 13.7V 125Ah – 1250Ah	10A < 29.4V 29.4V < 10A (4h) 27.4V 50Ah – 500Ah	6.7A < 44.1V 44.1V < 6.7A (4h) 41.1V 33.5Ah – 335Ah	5A < 58.8V 58.8V < 5A (4h) 54.8V 25Ah – 250Ah

(All standard versions are also available as open frame units).

## Charge diagram D

	Input voltage	Charge LED indicator	6V	12V	24V	36V	48V
2745	115Vac/ 230Vac 50-60Hz	Yellow CC ch.: Flash Yellow CV ch.: Green Float ch.: Rec. batt. capacity:	20A < 7.35V 7.35V 2.5 – 20A,<4h 6.85V 0 – 20A 100Ah – 1000Ah	20A < 14.7V 14.7V 2.5 – 20A,<4h 13.7V 0 – 20A 100Ah – 1000Ah	10A < 29.4V 29.4V 1.4 – 10A,<4h 27.4V 0 – 10A 50Ah – 500Ah	6.7A < 44.1V 44.1V 1 – 6.7A,<4h 41.1V 0 – 6.7A 33.5Ah – 335Ah	5A < 58.8V 58.8V 0.7 – 5A <4h 54.8V 0 – 5A 25Ah – 250Ah
2944 2945	220-240Vac 50-60Hz	Yellow CC ch.: Flash Yellow CV ch.: Green Float ch.: Rec. batt. capacity:	20A < 7.35V 7.35V 2.5 – 20A,<4h 6.85V 0 – 20A 100Ah – 1000Ah	20/25A < 14.7V 14.7V 2.5 – 20A,<4h 13.7V 0 – 20A 100Ah – 1000Ah	10A < 29.4V 29.4V 1.4 – 10A,<4h 27.4V 0 – 10A 50Ah – 500Ah	6.7A < 44.1V 44.1V 1 – 6.7A,<4h 41.1V 0 – 6.7A 33.5Ah – 335Ah	5A < 58.8V 58.8V 0.7 – 5A <4h 54.8V 0 – 5A 25Ah – 250Ah
2841 per channel	220-240Vac 50-60Hz	Yellow CC ch.: Flash Yellow CV ch.: Green Float ch.: Rec. batt. capacity:	5A < 7.35V 7.35V 1.5 – 5A,<4h 6.85V 0 – 5A 25Ah – 250Ah	5A < 14.7V 14.7V 1.5 – 5A,<4h 13.7V 0 – 5A 25Ah – 250Ah	2.5A < 29.4V 29.4V 0.6 – 2.5A,<4h 27.6V 0 – 2.5A 12.5Ah – 125Ah	1.7A < 44.1V 44.1V 0.4 – 1.7A,<4h 41.1V 0 – 1.6A 8.5Ah – 85Ah	1.2A < 58.8V 58.8V 0.3 – 1.2A <4h 54.8V 0 – 1.2A 6Ah – 60Ah
2245	220-240Vac (115Vac) 50-60Hz	Yellow CC ch.: Flash Yellow CV ch.: Green Float ch.: Rec. batt. capacity:	40A < 7.35V 7.35V 5 – 40A,<4h 6.85V 0 – 40A 200Ah – 2000Ah	40A < 14.7V 14.7V 5 – 40A,<4h 13.7V 0-40A 200Ah – 2000Ah	20A < 29.4V 29.4V 2.5 – 20A,<4h 27.4V 0-20A 100Ah – 1000Ah	N.A.	N.A.
2440(P) 2440B(P)	100-240Vac 50-60Hz max.1.6A	Yellow CC ch.: Flash Yellow CV ch.: Green Float ch.: Rec. batt. capacity:	4.5A < 7.35V 7.35V 1.2 – 4.5A,<4h 6.85V 0 – 4.5A 22.5Ah – 225Ah	4A < 14.7V 14.7V 1.2 – 4A,<4h 13.7V 0 – 4A 20Ah – 200Ah	2.5A < 29.4V 29.4V 0.6 – 2.5A,<4h 27.6V 0 – 2.5A 12.5Ah – 125Ah	1.6A < 44.1V 44.1V 0.4 – 1.6A,<4h 41.1V 0 – 1.6A 8Ah – 80Ah	1.2A < 58.8V 58.8V 0.3 – 1.2A <4h 54.8V 0 – 1.2A 6Ah – 60Ah

(P) = 2MOPP version. B =Special open frame PCB. (All standard versions are also available as open frame units).

## Charge diagram E

	Input voltage	Charge LED indicator	6V	12V	18V	24V	36V	48V
<b>3743(P)</b> <b>3743B(P)</b> <b>3743T(P)</b>	100Vac/ 240Vac 50-60Hz	Yellow CC ch.: Flash Yellow CV ch.: Green Float ch.: Rec. batt. capacity:	1.5A < 7.35V 7.35V 0.4-1.5A<4h 6.85V 0-1.5A 7.5Ah-75Ah	1A<14.7V 14.7V 0.25-1A<4h 13.7V 0-1A 5Ah-50Ah		0.56A<29.4V 29.4V 0.15-0.56A<4h 27.4V 0-0.56A 2Ah-28Ah	0.4A<44.1V 44.1V 0.1-0.4A<4h 41.1V 0-0.4A 2Ah-20Ah	0.3A<58.8V 58.8V 0.1-0.3A<4h 54.8V 0-0.3A 1.5Ah-15Ah
<b>3546(P)</b> <b>3546B(P)</b>	100Vac/ 240Vac 50-60Hz	Yellow CC ch.: Flash Yellow CV ch.: Green Float ch.: Rec. batt. capacity:	2.7A < 7.35V 7.35V 0.5-2.7A<4h 6.85V 0-2.7A 13.5Ah-135Ah	2A < 14.7V 14.7V 0.5-2A<4h 13.7V 0-2A 10Ah- 100Ah	1.3A<22.05V 22.05V 0.3-1.3A<4h 20.5V 0-1.3A 6.5Ah-65Ah	1A<29.4V 29.4V 0.25-1A<4h 27.4V 0-1A 5Ah-50Ah	0.65A<44.1V 44.1V 0.15-0.65A<4h 41.1V 0-0.65A 3.25Ah-32.5Ah	0.5A<58.8V 58.8V 0.12-0.5A<4h 54.8V 0-0.5A 2.5Ah-25Ah
<b>* 3540(P)</b> <b>3540B(P)</b>	220- 240Vac 50Hz Max. 2.4A	Yellow CC ch.: Yellow CV ch.: Flash Yellow CV ch.: Green Float ch.: Rec. batt. capacity:	20A < 7.35V 7.35V>15.5A 7.35V <15.5A<4h 6.85V 0-18A 100Ah – 1000Ah	20A < 14.7V 14.7V>14.5A 14.7V <14.5A<4h 13.7V 0 – 18A 100Ah – 1000Ah	13.2A < 22.05V 22.05 V>10.5 A 22.05 V <9.0A<4h 20.55V 0 – 11A 66Ah – 660Ah	10A < 29.4V 29.4V>8.0A 29.4V <8.0A<4h 27.4V 0 – 8.5A 50Ah – 500Ah	6.6A < 44.1V 44.1V>5.5A 44.1V <5.5A<4h 41.1V 0-5.7A 33Ah – 330Ah	5A < 58.8V 58.8V>3.5A 58.8V <3.5A<4h 54.8V 0-4.3A 25Ah – 250Ah
<b>* 3540(P)</b> <b>3540B(P)</b>	115Vac 50-60Hz Max 4.3A	Yellow CC ch.: Yellow CV ch.: Flash Yellow CV ch.: Green Float ch.: Rec. batt. capacity:	20A < 7.35V 7.35V>14.5A 7.35V <14.5A<4h 6.85V 0-15A 100Ah – 1000Ah	17A < 14.7V 14.7V>14.5A 14.7V <14.5A<4h 13.7V 0 – 15A 85Ah – 850Ah	11.3A < 22.05V 22.05V>9.0A 22.05V <9.0A<4h 22.55V 0 – 9.5A 56.5Ah – 565Ah	8.5A < 29.4V 29.4V>7.0A 29.4V <7.0A<4h 27.4V 0 – 7.5A 42.5Ah – 425Ah	5.7A < 44.1V 44.1V>4.5A 44.1V <4.5A<4h 41.1V 0-4.7A 28.5Ah – 285Ah	4.3A < 58.8V 58.8V>3.5A 58.8V <3.5A<4h 54.8V 0-3.6A 21.5Ah – 230Ah
<b>* 4040(P)</b> <b>4040B(P)</b>	100Vac/ 240Vac 50-60Hz Max. 1.6A	Yellow CC ch.: Yellow CV ch.: Flash Yellow CV ch.: Green Float ch.: Rec. batt. capacity:	10A < 7.35V 7.35V > 7A 7.35V < 7A<4h 6.85V 0-10A 50Ah-500Ah	8.0A < 14.7V 14.7V > 5.5A 14.7V < 7.57A<4h 13.7V 0-8.0A 40Ah-400Ah	5.3A < 22.05V 22.05V >3.7A 22.05V <3.7A<4h 20.55V 0 – 3.6A 26.5Ah – 265Ah	4A < 29.4V 29.4V>2.8A 29.4V <2.8A<4h 27.4V 0 – 4.0A 20Ah – 200Ah	2.6A < 44.1V 44.1V>1.8A 44.1V <1.8A<4h 41.1V 0-2.6A 13Ah – 130Ah	2.0A < 58.8V 58.8V>1.4A 58.8V <1.4A<4h 54.8V 0-2.0A 10Ah – 100Ah
<b>* 4340(P)</b> <b>4340B(P)</b>	100Vac/ 240Vac 50-60Hz Max. 1.6A	Yellow CC ch.: Yellow CV ch.: Flash Yellow CV ch.: Green Float ch.: Rec. batt. capacity:	8.0A < 7.35V 7.35V>5.6A 7.35V <5.6A<4h 6.85V 0-8.0A 40Ah – 400Ah	5.4A < 14.7V 14.7V >3.8A 14.7V <3.8A<4h 13.7V 0 – 5.4A 27Ah – 270Ah	3.6A < 22.05V 22.05V >2.5A 22.05V <2.5A<4h 20.55V 0 – 3.6A 18Ah – 180Ah	2.7A < 29.4V 29.4V>2.0A 29.4V <2.0A<4h 27.4V 0 – 2.7A 13.5Ah – 135Ah	1.8A < 44.1V 44.1V>1.4A 44.1V <1.4A<4h 41.1V 0-1.8A 9Ah – 90Ah	1.35A < 58.8V 58.8V>1.0A 58.8V <1.0A<4h 54.8V 0-1.35A 6.8Ah – 68Ah

(P) = 2MOPP version. B =Special open frame PCB. \* Output automatically derated when operated at high amb. temperature.

T= Charge diagram C.

The max. battery capacities given in the tables above are for guidance only.

For import to the U.S.A.: see the U.S. DOE Compliance Certification Database for maximum battery capacity allowed.