

75.00 mm

80.00 mm

steadyTM

TIRE SUPPLY


STS-SENSOR

PROGRAMMABLE

UNIVERSAL

FC IC

SENSOR VIEW

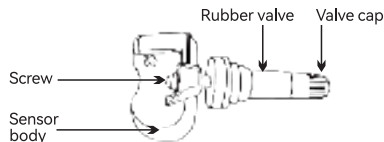

SENSOR SPECIFICATION


| | |
|------------------------|--|
| Working Temperature | -40°C~+125°C |
| Storage Temperature | -40°C~+85°C |
| Pressure Range | 100~900kPa |
| Pressure Accuracy | ±5kPa(-20°C~+90°C) ±10kPa(-40°C~+125°C) |
| Temperature Accuracy | ±3C(-20°C~+90°C) ±5C(-40°C~+125°C) |
| Transmission Frequency | 433.92MHz & 315MHz |
| Screw Torque | 1.2+0.2Nm |
| Protection Class | IP6K9K |

WARNING

- Please read the warnings and review the instructions before installation.
- Professional installation only. Failure to follow installation guide may result in the failure of the TPMS sensor to operate properly.

CAUTION


- 1, The sensor installation should be carried out by professionals.
- 2, The sensor is replacement or maintenance parts for the vehicles that have a factory installed TPMS only.
- 3, Make sure to program the sensor by programming tools for the specific vehicle make, model and year before the installation.
- 4, Do not install the sensor in damaged wheels.
- 5, Pictures in the manual are just for illustration.
- 6, The content and specification are subject to change without prior notice.

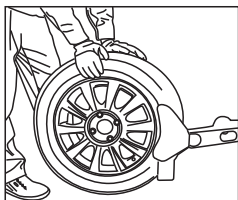

Step 1

Unload from the vehicle and deflate the tire.


Remove the original sensor.

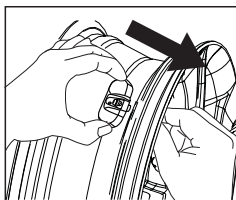

Step 2


Line the sensor up with rim hole.

Pull the valve stem straight through the valve hole and adjust the installation position.

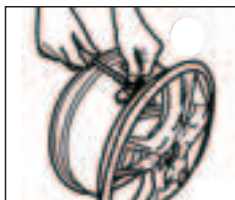

Step 3

Screw the sensor into the top of the stem. Use a wrench to hold valve stem and maintain vertical position, then tighten screw with 1.2Nm torque.

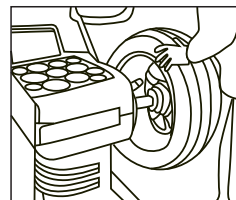

Step 4

Mount the tire over the rim.



TPMS SENSOR

Add: 1310 René-Lévesque, Suite 902,
Montreal, QC, H3G 0B8 Canada
Website: www.steadytiresupply.ca

FC FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.