



2014 USER GUIDE

If you are the first registered retail owner of your vehicle, you may obtain a complimentary printed copy of the Owner's Manual, Navigation/Uconnect® Manuals or Warranty Booklet by calling 1-888-242-6342 (U.S.) or 1-800-387-1143 (Canada) or by contacting your dealer.

The driver's primary responsibility is the safe operation of the vehicle. Driving while distracted can result in loss of vehicle control, resulting in a collision and personal injury. Chrysler Group LLC strongly recommends that the driver use extreme caution when using any device or feature that may take their attention off the road. Use of any electrical devices such as cell phones, computers, portable radios, vehicle navigation or other devices by the driver while the vehicle is moving is dangerous and could lead to a serious collision. Texting while driving is also dangerous and should never be done while the vehicle is moving. If you find yourself unable to devote your full attention to vehicle operation, pull off the road to a safe location and stop your vehicle. Some States or Provinces prohibit the use of cellular telephones or texting while driving. It is always the driver's responsibility to comply with all local laws.

IMPORTANT: This User Guide is intended to familiarize you with the important features of your vehicle. The DVD enclosed contains your Owner's Manual, Navigation/Uconnect® Manuals, Warranty Booklets, Tire Warranty and 24-Hour Towing Assistance (new vehicles purchased in the U.S.) or Roadside Assistance (new vehicles purchased in Canada) in electronic format. We hope you find it useful. Replacement DVD kits may be purchased by visiting www.techauthority.com. FIAT is a registered trademark of Fiat Group Marketing & Corporate Communication S.p.A., used under license by Chrysler Group LLC. Copyright 2013 Chrysler Group LLC.

TABLE OF CONTENTS

INTRODUCTION/WELCOME

WELCOME FROM FIAT	2
-------------------	---

CONTROLS AT A GLANCE

DRIVER COCKPIT	4
INSTRUMENT CLUSTER	6

GETTING STARTED

KEY FOB	8
THEFT ALARM	8
POWER DOOR LOCKS	9
SEAT BELT	10
SUPPLEMENTAL RESTRAINT SYSTEM (SRS) - AIR BAGS	11
CHILD RESTRAINTS	12
FRONT SEATS	14
REAR SEATS	15
HEATED SEATS	17
TILT/TELESCOPING STEERING COLUMN	17

OPERATING YOUR VEHICLE

ENGINE BREAK-IN RECOMMENDATIONS	18
TURN SIGNAL/LIGHTS/HIGH BEAM LEVER	18
WIPER/WASHER LEVER	19
SPEED CONTROL	20
MANUAL CLIMATE CONTROLS	22
AUTOMATIC TEMPERATURE CONTROLS (ATC)	23
REAR PARK ASSIST	24
POWER SUNROOF	24
SIX-SPEED AUTOMATIC TRANSMISSION	25
ADDING FUEL	28
ELECTRONIC STABILITY CONTROL (ESC)	29

ELECTRONICS

YOUR VEHICLE'S SOUND SYSTEM	30
IDENTIFYING YOUR RADIO	32
Uconnect® 5.0	33
Uconnect® 6.5N	42
STEERING WHEEL AUDIO CONTROLS	57
ELECTRONIC VEHICLE INFORMATION CENTER (EVIC)	57
PROGRAMMABLE FEATURES	58
UNIVERSAL GARAGE DOOR OPENER (HomeLink®)	59
POWER INVERTER	61
POWER OUTLETS	62

UTILITY

TRAILER TOWING	64
RECREATIONAL TOWING (BEHIND MOTORHOME, ETC.)	64

WHAT TO DO IN EMERGENCIES

INSTRUMENT CLUSTER WARNING LIGHTS	65
IF YOUR ENGINE OVERHEATS	69
JACKING AND TIRE CHANGING	70
TIREFIT KIT	76
JUMP-STARTING PROCEDURE	81
SHIFT LEVER OVERRIDE	83
TOWING A DISABLED VEHICLE	84
FREED A STUCK VEHICLE	85
CAP-LESS FUEL FILL FUNNEL	86

MAINTAINING YOUR VEHICLE

OPENING THE HOOD	87
ENGINE COMPARTMENT	88
FLUIDS AND CAPACITIES	89
MAINTENANCE SCHEDULE	90
FUSES	94
TIRE PRESSURES	97
WHEEL AND WHEEL TRIM CARE	98
EXTERIOR BULBS	98

CONSUMER ASSISTANCE

FIAT CUSTOMER CENTER	99
ASSISTANCE FOR THE HEARING IMPAIRED	99
PUBLICATIONS ORDERING	99
REPORTING SAFETY DEFECTS IN THE UNITED STATES	100

MOPAR ACCESSORIES

AUTHENTIC ACCESSORIES BY MOPAR®	101
---------------------------------	-----

INDEX	99
-------	----

FAQ (How To?)

FREQUENTLY ASKED QUESTIONS	102
----------------------------	-----

INTRODUCTION/WELCOME

WELCOME FROM FIAT

Congratulations on selecting your new FIAT vehicle. Be assured that it represents precision workmanship, distinctive styling, and high quality - all essentials that are traditional to our vehicles.

Your new FIAT vehicle has characteristics to enhance the driver's control under some driving conditions. These are to assist the driver and are never a substitute for attentive driving. They can never take the driver's place. Always drive carefully.

Your new vehicle has many features for the comfort and convenience of you and your passengers. Some of these should not be used when driving because they take your eyes from the road or your attention from driving. Never text while driving or take your eyes more than momentarily off the road.

This guide illustrates and describes the operation of features and equipment that are either standard or optional on this vehicle. This guide may also include a description of features and equipment that are no longer available or were not ordered on this vehicle. Please disregard any features and equipment described in this guide that are not available on this vehicle. Chrysler Group LLC reserves the right to make changes in design and specifications and/or make additions to or improvements to its products without imposing any obligation upon itself to install them on products previously manufactured.

This User Guide has been prepared to help you quickly become acquainted with the important features of your vehicle. It contains most things you will need to operate and maintain the vehicle, including emergency information.

The DVD includes a computer application containing detailed owner's information which can be viewed on a personal computer or MAC computer. The multimedia DVD also includes videos which can be played on any standard DVD player. Additional DVD operational information is located on the back of the DVD sleeve.

For complete owner information, refer to your Owner's Manual on the DVD in the owner's kit provided at the time of new vehicle purchase. For your convenience, the information contained on the DVD may also be printed and saved for future reference.

We are committed to protecting our environment and natural resources. By converting from paper to electronic delivery for the majority of the user information for your vehicle, together we greatly reduce the demand for tree-based products and lessen the stress on our environment.

INTRODUCTION/WELCOME

VEHICLES SOLD IN CANADA

With respect to any vehicles sold in Canada, the name Chrysler Group LLC shall be deemed to be deleted and the name Chrysler Canada Inc. used in substitution.

WARNING!

- Pedals that cannot move freely can cause loss of vehicle control and increase the risk of serious personal injury.
- Always make sure that objects cannot fall into the driver foot well while the vehicle is moving. Objects can become trapped under the brake pedal and accelerator pedal causing a loss of vehicle control.
- Failure to properly follow floor mat installation or mounting can cause interference with the brake pedal and accelerator pedal operation causing loss of control of the vehicle.
- Never use the 'PARK' position as a substitute for the parking brake. Always apply the parking brake fully when parked to guard against vehicle movement and possible injury or damage.
- Refer to your Owner's Manual on the DVD for further details.

Use of Aftermarket Products (Electronics)

The use of aftermarket devices including cell phones, MP3 players, GPS systems, or chargers may affect the performance of on-board wireless features. If you are experiencing difficulties with any of your wireless features, try disconnecting your aftermarket devices to see if the situation improves. If your symptoms persist, please see an authorized studio.

FIAT is a registered trademark of FIAT Group Marketing & Corporate Communication SpA, used under license by Chrysler Group LLC.

COPYRIGHT ©2013 Chrysler Group LLC




CONTROLS AT A GLANCE



DRIVER COCKPIT

1. Power Mirrors
2. Turn Signal/Lights Lever (behind steering wheel) pg. 18
3. Instrument Cluster pg. 6
4. Electronic Vehicle Information Center (EVIC) Display (behind steering wheel) pg. 7
5. Wiper/Washer Lever (behind steering wheel) pg. 19
6. Audio System pg. 30
7. Switch Panel
 - Hazard Switch
 - Electronic Vehicle Information Center (EVIC) Setup Menu pg. 58
 - Electronic Vehicle Information Center (EVIC) Control Buttons pg. 58
 - Front Fog Lights
8. Glove Compartment

CONTROLS AT A GLANCE

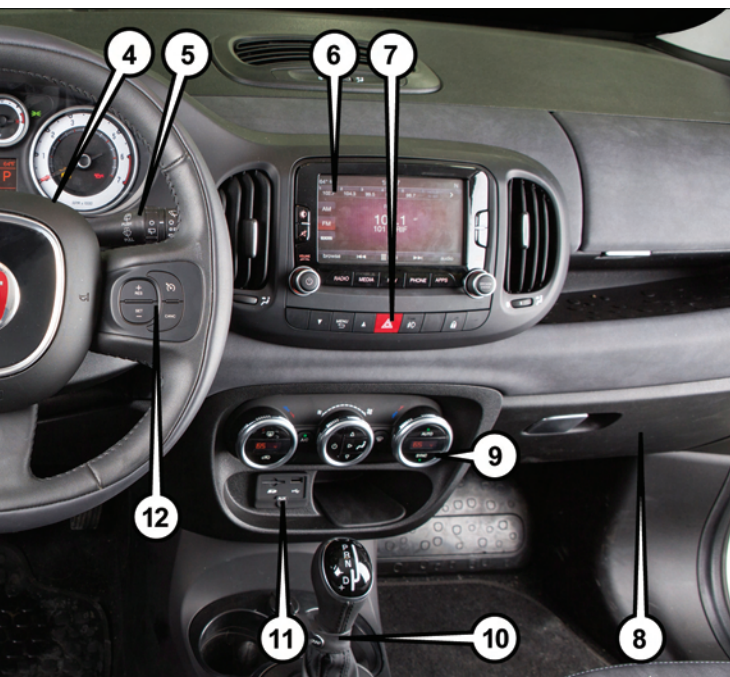

9. Manual Climate Controls pg. 22

10. Transmission Gear Selector

11. USB/Audio Jack (AUX)/Bluetooth® Operation pg. 35


12. Speed Control pg. 20

13. Uconnect® Phone (Bluetooth® Hands Free Calling) pg. 36

14. Hood Release pg. 87

15. Power Windows

CONTROLS AT A GLANCE

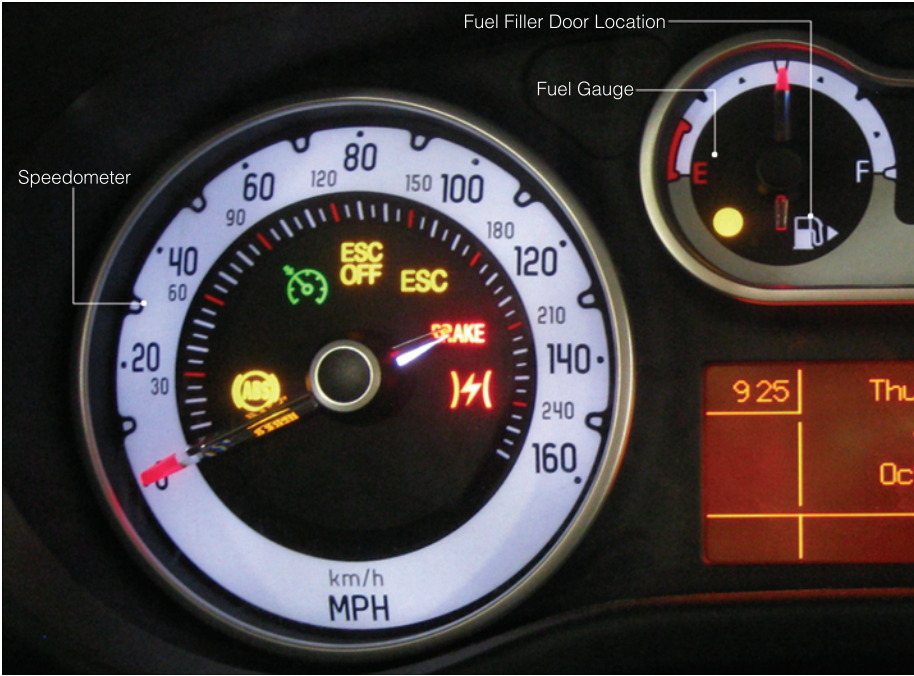


INSTRUMENT CLUSTER

Warning Lights



- Low Fuel Warning Light
- Charging System Light
- Oil Pressure Warning Light
- Anti-Lock Brake (ABS) Light
- Air Bag Warning Light
- Engine Temperature Warning Light
- Seat Belt Reminder Light
- Malfunction Indicator Light (MIL)
- Power Steering System Warning Light
- Generic Warning Light
- Brake Warning Light
- Tire Pressure Monitoring System (TPMS) Light
- Electronic Throttle Control (ETC) Light
- Automatic Gearbox Failure

CONTROLS AT A GLANCE

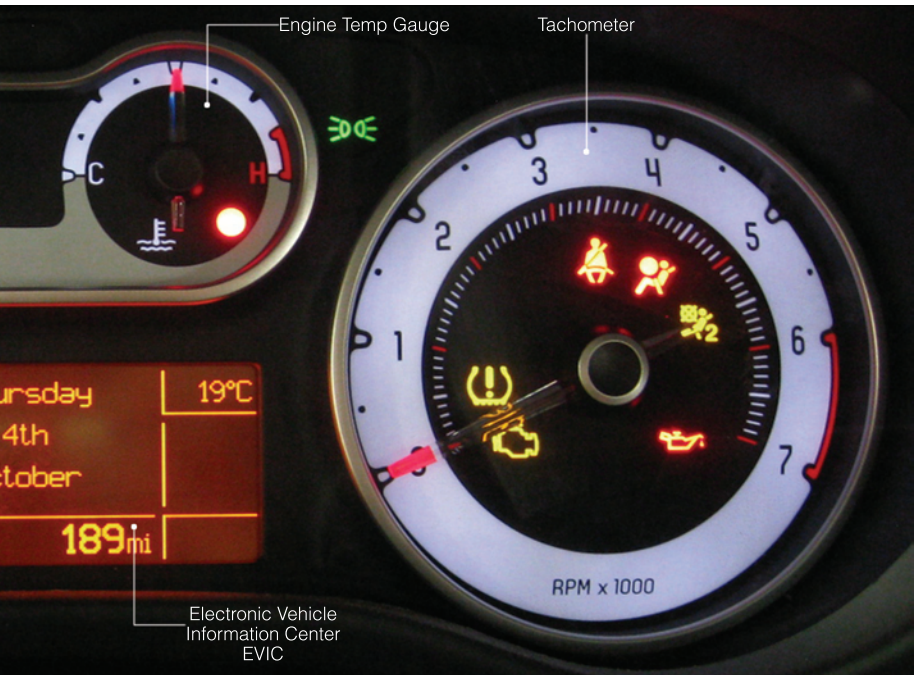

Indicators



- Turn Signal Indicators



- High Beam Indicator



- Front Fog Light Indicator — If Equipped



- Park/Headlight ON Indicator



- Electronic Stability Control (ESC) OFF Indicator



- Electronic Stability Control (ESC) Activation/Malfunction Indicator

(See page 65 for more information.)

GETTING STARTED

KEY FOB

Locking and Unlocking the Doors and Liftgate

- Press the LOCK button once to lock all the doors and the liftgate.
- Press the UNLOCK button once to unlock the driver's door only and twice within five seconds to unlock all the doors and liftgate.



- All doors can be programmed to unlock on the first press of the UNLOCK button. Refer to Programmable Features in this guide.

Opening the Liftgate

- To open the liftgate, press the liftgate release handle located on the underside of the license plate bar and pull the liftgate open with one fluid motion.

WARNING!

Never leave children alone in a vehicle, or with access to an unlocked vehicle. Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be severely injured or killed. Children should be warned not to touch the parking brake, brake pedal, or the shift lever. Do not leave the Key Fob in the vehicle, or in a location accessible to children. A child could operate power windows, other controls, or move the vehicle.

THEFT ALARM

To Arm:

- Press the Key Fob LOCK button.

To Disarm:

- Press the Key Fob UNLOCK button or turn the ignition to the ON/RUN position.

POWER DOOR LOCKS

- Press the central LOCK/UNLOCK button located on the instrument panel, in the switch bank below the radio. The button has an LED that indicates whether the doors are locked or unlocked.
- **LED ON:** doors locked. Pressing the central LOCK/UNLOCK button once will unlock all doors. The LED will switch off once the doors are unlocked.
- **LED OFF:** doors unlocked. Pressing the central LOCK/UNLOCK button once will lock all doors. The LED will switch on once the doors are locked.
- Once the doors have been locked with the RKE transmitter, it will no longer be possible to unlock them by pressing central LOCK/UNLOCK button.

NOTE:

With central locking active (LED ON), opening one of the front doors, it is possible to perform a central unlocking (LED OFF). With central locking active (LED ON), in order to open one of the rear passenger doors, it is necessary pulling the internal door handle twice. With one of the rear door open (LED OFF), the unlocking is performed only for that door, not for all the vehicle.

- To unlock the front doors, pull the inside door handle to the first detent. If the rear doors are locked, you must pull the door handle once to unlock the door and pull the door handle a second time to open the door.

WARNING!

- Do not leave children or animals inside parked vehicles in hot weather. Interior heat build-up may cause serious injury or death.
- For personal security and safety in the event of an collision, lock the vehicle doors as you drive as well as when you park and leave the vehicle.
- Before exiting a vehicle, always turn the vehicle OFF, apply the parking brake, shift the automatic transmission into PARK or the manual transmission into REVERSE, and remove the Key Fob from the ignition. When leaving the vehicle, always lock your vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle.
- Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the shift lever.
- Do not leave the Key Fob in or near the vehicle, or in a location accessible to child. A child could operate power windows, other controls, or move the vehicle.

GETTING STARTED

CAUTION!

An unlocked vehicle is an invitation to thieves. Always remove the key from the ignition and lock all of the doors when leaving the vehicle unattended.

Doors Lock With One Or More Doors Open

- It is possible locking the vehicle through the RKE, internal button or external key pawl, also if one or more doors are open. At lock command request, LED is switched ON. At closing of the last door, the vehicle maintains the central locking status if key is not inserted in Ignition Device, otherwise the vehicle will be unlocked and the LED will be switched OFF.

NOTE:

If the key is not inserted in the ignition switch, but is inside the vehicle, the system does not recognize the presence of the key and after the closing of last door, the vehicle remains locked.


SEAT BELT

- Be sure everyone in your vehicle is in a seat and using a seat belt properly.
- Position the lap belt across your thighs, below your abdomen. To remove slack in the lap portion, pull up a bit on the shoulder belt. To loosen the lap belt if it is too tight, tilt the latch plate and pull on the lap belt. A snug belt reduces the risk of sliding under the belt in a collision.
- Position the shoulder belt on your chest so that it is comfortable and not resting on your neck. The retractor will withdraw any slack in the belt.
- A shoulder belt placed behind you will not protect you from injury during a collision. You are more likely to hit your head in a collision if you do not wear your shoulder belt. The lap and shoulder belt are meant to be used together.
- A belt that is too loose will not protect you properly. In a sudden stop you could move too far forward, increasing the possibility of injury. Wear your seat belt snugly.
- A frayed or torn belt could rip apart in a collision and leave you with no protection. Inspect the belt system periodically, checking for cuts, frays, or loose parts. Damaged parts must be replaced immediately. Do not disassemble or modify the system. Seat belt assemblies must be replaced after a collision if they have been damaged (bent retractor, torn webbing, etc.).
- The seat belts for both front seating positions are equipped with pretensioning devices that are designed to remove slack from the seat belt in the event of a collision.
- A deployed pretensioner or a deployed air bag must be replaced immediately.

WARNING!

In a collision, you and your passengers can suffer much greater injuries if you are not buckled up properly. You can strike the interior of your vehicle or other passengers, or you can be thrown out of the vehicle. Always be sure you and others in your vehicle are buckled up properly.

SUPPLEMENTAL RESTRAINT SYSTEM (SRS) - AIR BAGS

- This vehicle has Advanced Front Air Bags for both the driver and right front passenger as a supplement to the seat belt restraint system. The Advanced Front Air Bags will not deploy in every type of collision.
- Advanced Front Air Bags are designed to provide additional protection by supplementing the seat belts in certain frontal collisions depending on several factors, including the severity and type of collision. Advanced Front Air Bags are not expected to reduce the risk of injury in rear, side, or rollover collisions.
- This vehicle is equipped with Supplemental Side Air Bag Inflatable Curtains to protect the driver, front and rear passengers sitting next to a window.
- This vehicle is equipped with Supplemental Seat-Mounted Side Air Bags to provide enhanced protection to help protect an occupant during a side impact.
- This vehicle is equipped with Supplemental Driver Side Knee Air Bag to provide enhanced protection and work together with the Driver Advanced Front Air Bag during a frontal impact.
- If the Air Bag Warning Light  is not on during starting, stays on, or turns on while driving, have the vehicle serviced by an authorized studio immediately.
- Refer to the Owner's Manual on the DVD for further details regarding the Supplemental Restraint System (SRS).

GETTING STARTED

WARNING!

- Relying on the air bags alone could lead to more severe injuries in a collision. The air bags work with your seat belt to restrain you properly. In some collisions, the air bags won't deploy at all. Always wear your seat belts even though you have air bags.
- Being too close to the steering wheel or instrument panel during Advanced Front Air Bag deployment could cause serious injury, including death. Air bags need room to inflate. Sit back, comfortably extending your arms to reach the steering wheel or instrument panel.
- Supplemental Side Air Bag Inflatable Curtains and Supplemental Seat-Mounted Side Air Bags need room to inflate. Do not lean against the door or window. Sit upright in the center of the seat.
- Being too close to the Supplemental Side Air Bag Inflatable Curtain and/or Seat-Mounted Side Air Bag during deployment could cause you to be severely injured or killed.
- Do not drive your vehicle after the air bags have deployed. If you are involved in another collision, the air bags will not be in place to protect you.
- After any collision, the vehicle should be taken to an authorized studio immediately.


CHILD RESTRAINTS


- Children 12 years and under should ride properly buckled up in a rear seat, if available. According to crash statistics, children are safer when properly restrained in the rear seats rather than in the front.
- Every state in the United States and all Canadian provinces require that small children ride in proper restraint systems. This is the law, and you can be prosecuted for ignoring it.

Installing The LATCH Compatible Child Restraint System

- Your vehicle's second row passenger seats are equipped with the child restraint anchorage system called LATCH, which stands for Lower Anchors and Tether for CHildren. LATCH child restraint anchorage systems are installed in both rear seating positions.


GETTING STARTED

- **NEVER** install compatible child seats so that two seats share a common lower anchorage.
- Loosen the child seat adjusters on the lower straps and tether straps so that you can attach the hook or connector to the anchors.
- Attach the lower hooks or connectors over the top of the anchorage bars, pushing aside the seat cover material. The rear seat lower anchorages are round bars, located at the rear of the seat cushion where it meets the seatback. The rear seat lower anchors can be readily identified by the symbol  located on the seatback directly above the anchorages and are just visible when you lean into the rear seat to install the child restraint.
- The tether strap should be routed under the center of the head restraint and attached to the tether anchor on the rear of the seatback.
- Tighten all three straps as you push the child restraint rearward and downward into the seat.

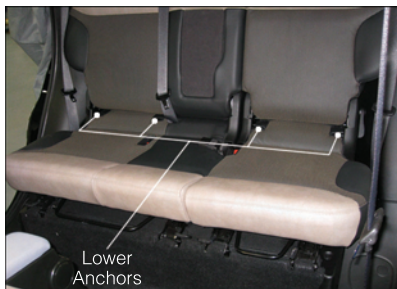

Installing the Child Restraint Using the Vehicle Seat Belts

- To install a child restraint, first pull enough of the seat belt webbing from the retractor to route it through the belt path of the child restraint, and then slide the latch plate into the buckle.
- Next, extract all the seat belt webbing out of the retractor and then allow the belt to retract into the retractor. Finally, pull on any excess webbing to tighten the lap portion around the child restraint. Any seat belt system will loosen with time, so check the belt occasionally, and pull it tight if necessary.
- Once you have completed securing the child restraint with the seat belt, secure the top tether strap. The tether strap should be routed under the center of the head restraint.

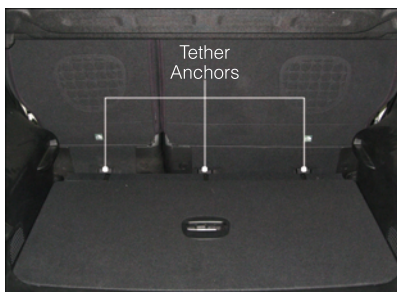

GETTING STARTED

WARNING!

- In a collision, an unrestrained child, even a tiny baby, can become a projectile inside the vehicle. The force required to hold even an infant on your lap could become so great that you could not hold the child, no matter how strong you are. The child and others could be severely injured or killed. Any child riding in your vehicle should be in a proper restraint for the child's size.
- Improper installation of a child restraint to the LATCH anchorages can lead to failure of an infant or child restraint. The child could be severely injured or killed. Follow the manufacturer's directions exactly when installing an infant or child restraint.
- An incorrectly anchored tether strap could lead to increased head motion and possible injury to the child. Use only the anchor positions directly behind the child seat to secure a child restraint top tether strap.
- Rearward-facing child seats must never be used in the front seat of a vehicle with a front passenger air bag. An air bag deployment could cause severe injury or death to infants in this position.
- This vehicle does not have a center seating position. Do not use the center lower LATCH anchorages to install a child seat in the center of the back seat.

FRONT SEATS

Manual Front Seat Adjustment

Forward/Rearward

- Lift up on the adjusting bar, located at the front of the seat near the floor, and release at the desired position. Then, using body pressure, move forward and backward on the seat to be sure that the seat adjusters have latched.




GETTING STARTED

Recliner

- To recline the seatback, lift up the recline lever, located on the outboard side of the seat, lean back until the desired position has been reached, and release the lever.

Seat Height

- The seat height can be raised or lowered by using a lever; located on the outboard side of the seat. Pump the lever upward to raise the seat height, or pump the lever downward to lower the seat height.

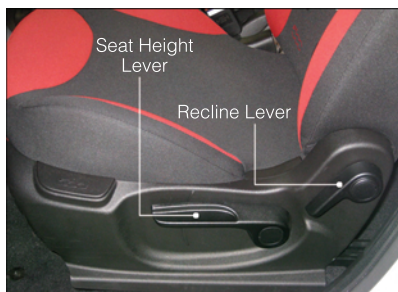

WARNING!

- Adjusting a seat while the vehicle is moving is dangerous. The sudden movement of the seat could cause you to lose control. The seat belt might not be properly adjusted, and you could be severely injured or killed. Only adjust a seat while the vehicle is parked.
- Actuating the recliner handle will allow the seatback to swing (dump) forward on manual recliner seats. Do not stand or lean in front of the seat while actuating the handle. The seatback may swing forward and hit you, causing injury. This dump feature allows access to the storage bin behind the seat. To avoid injury, place your hand on the seatback and actuate the handle, then position the seatback in the desired position.
- Do not ride with the seatback reclined so that the seat belt is no longer resting against your chest. In a collision, you could slide under the seat belt and be severely injured or killed. Use the recliner only when the vehicle is parked.

REAR SEATS

Manual Rear Seat Adjustment

Forward/Rearward

- Lift up on the adjusting handle, located at the front of the seat near the floor, and release at the desired position. Then, using body pressure, move forward and backward on the seat to be sure that the seat adjusters have latched.

Recliner

- To recline the seatback, lift up the recline lever, located on the outboard side of the seat, lean back until the desired position has been reached, and release the lever.

GETTING STARTED

Fold And Tumble Rear Seat

- Be sure that the front seats are fully upright and positioned forward. This will allow the rear seat to fold down easily.
- Lift the seatback release lever located on the upper outboard side of the seat and fold the seatback forward.
- To tumble the seat, lift upward on the recliner lever and slowly flip the entire seat forward.

WARNING!

- Adjusting a seat while the vehicle is moving is dangerous. The sudden movement of the seat could cause you to lose control. The seat belt might not be properly adjusted, and you could be severely injured or killed. Only adjust a seat while the vehicle is parked.
- Actuating the recliner handle will allow the seatback to swing (dump) forward on manual recliner seats. Do not stand or lean in front of the seat while actuating the handle. The seatback may swing forward and hit you, causing injury. This dump feature allows access to the storage bin behind the seat. To avoid injury, place your hand on the seatback and actuate the handle, then position the seatback in the desired position.
- Do not ride with the seatback reclined so that the seat belt is no longer resting against your chest. In a collision, you could slide under the seat belt and be severely injured or killed. Use the recliner only when the vehicle is parked.

HEATED SEATS

Front Heated Seats

- The controls for the front heated seats are located on the outboard side of the seat.
- Press the switch once to turn on the heated seat. Press the switch a second time to turn off the heated seat.

WARNING!

- Persons who are unable to feel pain to the skin because of advanced age, chronic illness, diabetes, spinal cord injury, medication, alcohol use, exhaustion or other physical conditions must exercise care when using the seat heater. It may cause burns even at low temperatures, especially if used for long periods of time.
- Do not place anything on the seat that insulates against heat, such as a blanket or cushion. This may cause the seat heater to overheat. Sitting in a seat that has been overheated could cause serious burns due to the increased surface temperature of the seat.

TILT/TELESCOPING STEERING COLUMN

- The tilt/telescoping control handle is located on the lower left side of the steering column.
- To unlock the steering column, push the lever downward (toward the floor).
- To tilt the steering column, move the steering wheel upward or downward as desired.
- To lengthen or shorten the steering column, pull the steering wheel outward or push it inward as desired.
- To lock the steering column in position, push the lever upward until fully engaged.



WARNING!

Do not adjust the steering wheel while driving. The tilt/telescoping adjustment must be locked while driving. Adjusting the steering wheel while driving or driving without the tilt/telescoping adjustment locked could cause the driver to lose control of the vehicle. Failure to follow this warning may result in you and others being severely injured or killed.

OPERATING YOUR VEHICLE

ENGINE BREAK-IN RECOMMENDATIONS

- A long break-in period is not required for the engine and drivetrain (transmission and axle) in your vehicle.
- Drive moderately during the first 300 miles (500 km). After the initial 60 miles (100 km), speeds up to 50 or 55 mph (80 or 90 km/h) are desirable.
- While cruising, brief full-throttle acceleration within the limits of local traffic laws contributes to a good break-in. Wide-open throttle acceleration in low gear can be detrimental and should be avoided.
- The engine oil installed in the engine at the factory is a high-quality energy conserving type lubricant. Oil changes should be consistent with anticipated climate conditions under which vehicle operations will occur. For the recommended viscosity and quality grades, refer to "Maintaining Your Vehicle".

NOTE:

A new engine may consume some oil during its first few thousand miles (kilometers) of operation. This should be considered a normal part of the break-in and not interpreted as an indication to an engine problem or malfunction.

CAUTION!

Never use Non-Detergent Oil or Straight Mineral Oil in the engine or damage may result.

TURN SIGNAL/LIGHTS/HIGH BEAM LEVER

Turn Signal/Lane Change Assist

- Tap the lever up or down once and the turn signal (right or left) will flash briefly to indicate a lane change and automatically turn off.

Headlights/Parking Lights

- The ignition switch must be in the ON/ RUN position for the headlights to operate.
- Rotate the end of the lever to the first detent for parking lights and headlight operation.

High Beams

- Pull the lever rearward to activate the high beams.
- A high beam symbol will illuminate in the cluster to indicate the high beams are on.



OPERATING YOUR VEHICLE

NOTE:

For safe driving, turn off the high beams when oncoming traffic is present to prevent headlight glare and as a courtesy to other motorists.

Flash To Pass

- Pull the lever toward you to activate the high beams. The high beams will remain on until the lever is released.

Headlight Delay (Follow Me Home)

- Within two minutes of the ignition switch being turned to the OFF/LOCK position or the ignition key being removed from the ignition, pull the turn signal lever toward the steering wheel.
- Each movement of the lever toward the steering wheel will increase the illumination period by 30 seconds, up to a maximum of 210 seconds.
- To deactivate, pull the multifunction lever toward the steering wheel and hold it for more than two seconds.

NOTE:

Activation of Follow Me Home is only enabled once per key cycle and steps must be repeated each time you want to activate it.

Fog Lights

- Push the fog light button, located on the center stack of the instrument panel just below the radio, once to turn on the fog lights.
- Push the button a second time to turn the fog lights off.

WIPER/WASHER LEVER


Front Wipers

Intermittent, Low and High Operation

- Move the lever downward to the first detent for intermittent wiper operation, the second detent for low wiper operation and to the third detent for high wiper operation.

Mist

- Move the lever upward and release when a single wipe is desired.

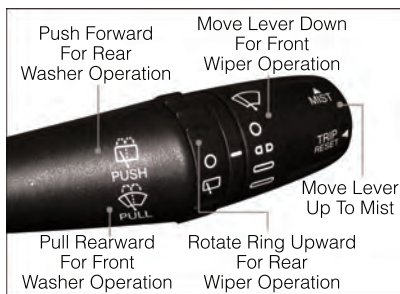

OPERATING YOUR VEHICLE

NOTE:

The mist feature does not activate the washer pump; therefore, no washer fluid will be sprayed on the windshield. The wash function must be activated in order to spray the windshield with washer fluid.

Washer Operation

- Pull the lever toward you and hold for as long as spray is desired.

Rear Wiper

Rear Wiper Operation

- Rotate the windshield wiper lever center ring upwards to activate the rear wiper.

Rear Washer Operation

- Push the lever forward and hold for as long as spray is desired.

SPEED CONTROL

- The speed control switches are located on the steering wheel.

Cruise ON/OFF

- Push the ON/OFF button to activate the Speed Control.
- CRUISE READY will appear on the instrument cluster to indicate the Speed Control is on.



- Push the ON/OFF button a second time to turn the system off.

Set

- With the Speed Control on, push and release the SET – button to set a desired speed.

Accel/Decel

- Once a speed is set, pushing the RES + button once or the SET – button once will increase or decrease the set speed approximately 1 mph (2 km/h).
- Push and hold the RES + button to accelerate in 5 mph (8 km/h) increments or push and hold the SET – button to decelerate in 5 mph (8 km/h) increments; release the button to save the new set speed.

Resume

- To resume a previously selected set speed in memory, push the RES + button and release.

OPERATING YOUR VEHICLE

Cancel

- Push the CANCEL button, or apply the brakes to cancel the set speed and maintain the set speed memory.
- Push the ON/OFF button to turn the system off and erase the set speed memory.

WARNING!

- Leaving the Electronic Speed Control system on when not in use is dangerous. You could accidentally set the system or cause it to go faster than you want. You could lose control and have a collision. Always leave the Electronic Speed Control system off when you are not using it.
- Electronic Speed Control can be dangerous where the system cannot maintain a constant speed. Your vehicle could go too fast for the conditions, and you could lose control. A collision could be the result. Do not use Electronic Speed Control in heavy traffic or on roads that are winding, icy, snow-covered or slippery.

OPERATING YOUR VEHICLE

MANUAL CLIMATE CONTROLS



Air Recirculation


- Use Recirculation for maximum A/C operation.
- For window defogging, turn the recirculation off.
- Recirculation is not allowed in defrost, floor, defrost/floor (mix) modes.

Heated Mirrors

- The mirrors are heated to melt frost or ice. This feature is activated whenever you turn on the rear window defroster.

OPERATING YOUR VEHICLE

AUTOMATIC TEMPERATURE CONTROLS (ATC)

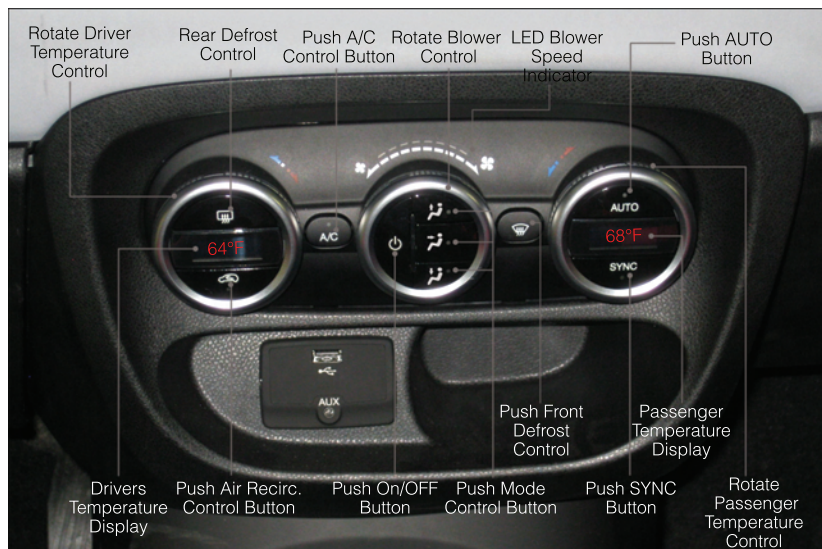

Automatic Operation

- Push the AUTO button.
- Select the desired temperature by rotating temperature control knobs.
- The system will maintain the set temperature automatically.

Air Recirculation

- Use Recirculation for maximum A/C operation.
- For window defogging, turn the recirculation off.
- Recirculation is not allowed in defrost, floor, defrost/floor (mix) modes.

Heated Mirrors

- The mirrors are heated to melt frost or ice. This feature is activated whenever you turn on the rear window defroster.

OPERATING YOUR VEHICLE

REAR PARK ASSIST

- If an object is detected behind the rear bumper while the vehicle is in REVERSE, a chime will sound. The chime rate will change depending on the distance of the object, getting faster as the object gets closer to the bumper. The chime will become continuous when the distance between the vehicle and the obstacle is less than 12 inches (30 cm).

POWER SUNROOF

- The power sunroof roof switch is located in the overhead console.

To Open

- Press and hold the power sunroof switch rearward for approximately two seconds and the sunroof will stop at the vented position. Press the switch a second time and hold for approximately one second and release, the sunroof will open fully, then stop automatically. This is called "Express Open". During Express Open operation, any movement of the sunroof switch will stop the sunroof.

To Close

- With the sunroof in the full open position, pull the power sunroof button and hold it for approximately one second, the sunroof will return to the completely close position. During Express Close operation, any movement of the sunroof switch will stop the sunroof.

Power Sun Blind

- Pull the power sun blind switch and the blind will move towards the rear part of the car, until it is fully open. With the blind fully open pull the power sun blind switch and the blind will move towards the front part of the car, until it is fully closed.

NOTE:

During the automatic opening and closing stages, if the power sun blind switch is pulled again it will stop the blind movement.

WARNING!

- Do not let children play with the sunroof, or leave children unattended in the vehicle, and do not leave the key in or near the vehicle (or in a location accessible to children). Occupants, particularly unattended children, can become entrapped by the power sunroof while operating the power sunroof switch. Such entrapment may result in serious injury or death.
- In a collision, there is a greater risk of being thrown from a vehicle with an open sunroof. You could also be seriously injured or killed. Always fasten your seat belt properly and make sure all passengers are properly secured.
- Do not allow small children to operate the sunroof. Never allow your fingers, other body parts, or any object to project through the sunroof opening. Injury may result.

OPERATING YOUR VEHICLE

SIX-SPEED AUTOMATIC TRANSMISSION

- This vehicle may be equipped with a fuel efficient Dual-Dry Clutch, Six Speed Automatic Transmission. This transmission offers a sportier driving experience with faster AutoStick® shifting.
- During low-speed driving conditions in first gear, vehicle momentum changes may feel exaggerated in response to changes in accelerator pedal position. This behavior is normal and is similar to vehicles equipped with a manual transmission.

NOTE:

- Very aggressive driving may result in some clutch odor similar to a manual transmission. An active warning message will display in the Instrument Cluster if cool down actions are needed.
- The first few shifts on a new vehicle may be somewhat abrupt. This is a normal condition, and precision shifts will develop within a few hundred miles (kilometers).
- At low speeds you may hear mechanical noises similar to a manual transmission as the transmission changes gears. These noises are normal and will not damage the transmission.
- Before and after the engine is started, you may hear a hydraulic pump for a short period of time. This noise is normal and will not damage the transmission.

Shifting The Transmission

- The transmission shift lever position (PRND) is displayed both on the shift lever and in the Electronic Vehicle Information Center (EVIC).
- To drive, depress the brake pedal, press the button on the front of the shift lever and move the shift lever from PARK or NEUTRAL to the DRIVE position.
- Manual shifts can also be made using the AutoStick® shift control.
- This transmission is programmed to prevent shifting from REVERSE to DRIVE or DRIVE to REVERSE, if vehicle speed is above 6 mph (10 km/h). This safety feature helps protect your transmission from damage.

NOTE:

- When stopped on an incline, it is recommended that you always hold the vehicle in place using the brakes. On steep inclines, Hill Start Assist (HSA) will temporarily hold the car in position when the brake pedal is released. If the accelerator pedal is not applied after a short time, the car will roll back. Either reapply the brake (to hold the vehicle) or press the accelerator to climb the hill.
- During acceleration, gear changes will feel smooth compared to a vehicle with a traditional manual transmission. This is a benefit of the dual clutch design that avoids power loss during up-shifts.

Instrument Cluster Messages

- Messages will be displayed in the instrument cluster (if equipped with an EVIC) to alert the driver when certain conditions occur. These messages are described below.

OPERATING YOUR VEHICLE

MESSAGE	DESCRIPTION
GEAR NOT AVAILABLE	In AutoStick® mode, the gear selected by the driver is not available due to a fault condition. See your authorized studio for diagnosis and service.
SHIFT NOT ALLOWED	The gear position requested by the driver is currently blocked. This occurs if NEUTRAL is requested while moving, if REVERSE is requested while moving (at 6 mph [10 km/h] or faster), if DRIVE is requested while moving backwards (at 6 mph [10 km/h] or faster), or if 3rd gear or higher is requested at a stop. Make sure the vehicle is stopped before engaging DRIVE or REVERSE.
SHIFT TO NEUTRAL THEN D or R	The transmission has shifted itself into NEUTRAL (due to a fault condition, or overheat due to excessive idling when stopped in DRIVE with the brakes released), but the shift lever remains in gear. Shift into NEUTRAL and then back into gear for continued driving. If the transmission will not reengage, see your authorized studio.
AUTOSTICK NOT AVAILABLE	AutoStick® mode is unavailable due to a shift lever fault. See your authorized studio for diagnosis and service.
AUTOMATIC MODE NOT AVAILABLE	The transmission is unable to shift itself automatically, due to a fault condition. Use the AutoStick® mode to shift the transmission manually. See your authorized studio for diagnosis and service.
REDUCE GEAR CHANGES	The transmission pump is overheating. In AutoStick® mode, try to drive in one specific gear as much as possible, avoiding frequent gear changes. In DRIVE, the transmission will automatically modify its shift schedule to reduce the number of shifts.
TRANS. GETTING HOT PRESS BRAKE	The transmission driving clutch is overheating, usually due to repeated launches in stop-and-go traffic. Pull over and allow the transmission to cool in NEUTRAL until "TRANS. COOL READY TO DRIVE" is displayed.

OPERATING YOUR VEHICLE

MESSAGE	DESCRIPTION
TRANS. HOT STOP SAFELY SHIFT TO P	The transmission driving clutch has overheated. Pull over; shift the transmission into PARK, and allow the vehicle to cool until "TRANS. COOL READY TO DRIVE" is displayed.
TRANS. COOL READY TO DRIVE	The transmission driving clutch has cooled down after being overheated and the vehicle is ready to continue driving.
SERVICE TRANSMISSION	A transmission fault has been detected. See your authorized studio for diagnosis and service.
SERVICE SHIFTER	A shift lever fault has been detected. See your authorized studio for diagnosis and service.
ENGAGE PARK BRAKE	The sensor that monitors PARK engagement is not functioning properly. Engage the parking brake to ensure that the vehicle will not roll when in PARK.

- Refer to your Owner's Manual on the DVD for further details.

OPERATING YOUR VEHICLE


ADDING FUEL

- Your vehicle is equipped with a cap-less fuel system.
- Most fuel cans will not open the flapper door so a funnel is provided to open the flapper door to allow emergency refueling with a fuel can.



Emergency Fuel Can Refueling

1. Retrieve funnel from the jack storage area in the trunk compartment.
2. Insert the funnel into the filler pipe.
3. Ensure the funnel is inserted fully to hold flapper door open.
4. Pour fuel into funnel opening.
5. Remove the funnel from filler pipe, clean off prior to putting back in the jack storage area in the trunk compartment.

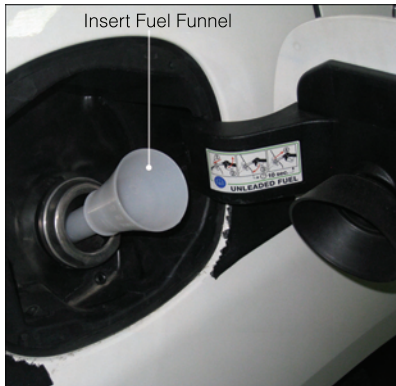

OPERATING YOUR VEHICLE

ELECTRONIC STABILITY CONTROL (ESC)

- This system enhances directional control and stability of the vehicle under various driving conditions.
- ESC uses sensors in the vehicle to determine the vehicle path intended by the driver and compares it to the actual path of the vehicle. When the actual path does not match the intended path, ESC applies the brake of the appropriate wheel to assist in counteracting the oversteer or understeer condition.

ESC Operating Modes

- The ESC system has two available operating modes.

Full On

- This is the normal operating mode for ESC. Whenever the vehicle is started the system will be in this mode. This mode should be used for most driving situations. ESC should only be turned to "Partial Off" for specific reasons as noted.

Partial Off

- The "ESC OFF" button is located in the switch bank above the climate control. To enter the "Partial Off" mode, momentarily press the "ESC OFF" button and the "ESC Activation/Malfunction Indicator Light" will illuminate. To turn the ESC on again, momentarily press the "ESC OFF" button and the "ESC Activation/Malfunction Indicator Light" will turn off. This will restore the normal "ESC On" mode of operation.



NOTE:


To improve the vehicle's traction when driving with snow chains, or when starting off in deep snow, sand, or gravel, it may be desirable to switch to the "Partial Off" mode by momentarily pressing the "ESC OFF" button. Once the situation requiring "Partial Off" mode is overcome, turn ESC back on by momentarily pressing the "ESC OFF" button. This may be done while the vehicle is in motion.

ELECTRONICS



YOUR VEHICLE'S SOUND SYSTEM

1. Uconnect® Phone Button pg. 36
2. Uconnect® Voice Command Button pg. 39
3. Steering Wheel Audio Controls (Right) pg. 57
4. Steering Wheel Audio Controls (Left) pg. 57
5. Phone Hang Up Button
6. Volume Knob / Audio Mute Button

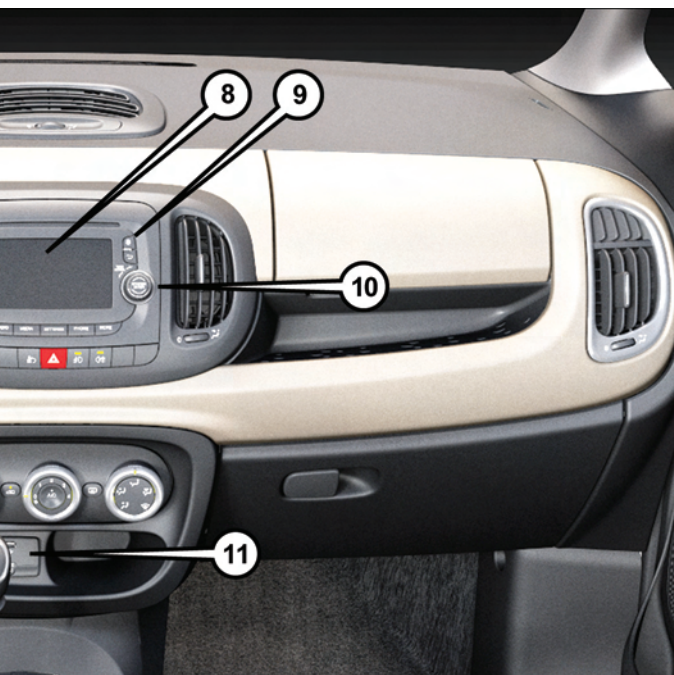

7. Disc Eject Button

8. Uconnect® 5.0 Radio pg. 33

9. Display On / Off Button

10. Tune / Scroll Knob / Browse / Enter Button

11. Media Hub: Audio Jack, USB Port, and SD Card Slot (located inside front console) pg. 35

ELECTRONICS

IDENTIFYING YOUR RADIO

Uconnect® 5.0

- 5" Touch-Screen
- Five buttons below the display
- Disc slot above the display




Uconnect® 6.5N

- 6.5" Touch-Screen
- NAV button below the display



Uconnect® 5.0

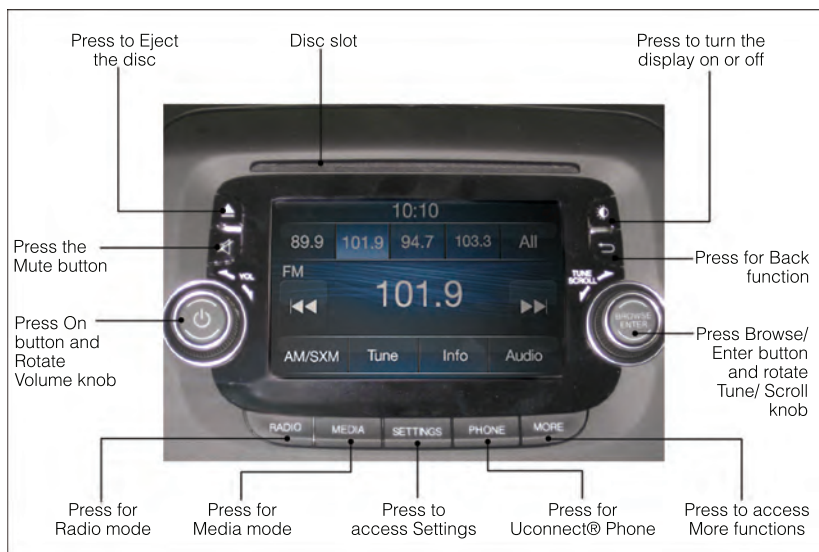

Clock Setting

- To start the clock setting procedure, perform either of the following:
 - Press the More hard-key below the display, next press the Time soft-key and then press the Set soft-key, **or**
 - Press the More hard key on the right side of the display, next press the Settings soft key, then Clock and Date soft key, and then Set Time and Date soft key. Select the up or down arrows as appropriate. Select Done when complete.
- Touch the Up or Down arrows to adjust the hours or minutes, next select the AM or PM soft-key. You can also select 12hr or 24hr format by touching the desired soft-key.
- Once the time is set press the "Done" or back arrow soft-key to exit the time screen.

Equalizer, Balance and Fade

- Press the MORE hard-key below the display then press the Setting soft-key.
- Scroll down and press the Audio soft-key to open the Audio menu.
- The Audio Menu shows the following options for you to customize your audio settings.

Equalizer

- Touch the Equalizer soft-key to adjust the Bass, Mid and Treble. Use the + or - soft-key to adjust the equalizer to your desired settings.

ELECTRONICS

Balance/Fade

- Touch the Balance/Fade soft-key to adjust the sound from the speakers. Use the arrow soft-keys to adjust the sound level from the front and rear or right and left side speakers. Touch the Center “C” soft-key to reset the balance and fade to the factory setting.

Speed Adjusted Volume

- Touch the Speed Adjusted Volume soft-key to select between OFF, 1, 2 or 3. This will decrease the radio volume relative to a decrease in vehicle speed.

Loudness

- Touch the Loudness soft-key to select the Loudness feature. When this feature is activated it improves sound quality at lower volumes.

Surround Sound

- Touch the Surround Sound soft-key, select On or Off followed by pressing the arrow back soft-key. When this feature is activated, it provides simulated surround sound mode.

Radio Operation

Seek Up/Down Buttons

- Press to seek through radio stations in AM, FM or SXM bands.
- Hold either button to bypass stations without stopping.

Store Radio Presets

- When you are receiving a station that you wish to commit into memory, press and hold the desired numbered soft-key for more than two seconds, or until you hear a confirmation beep.
- The Radio stores up to 12 presets in each of the Radio modes. Four presets are visible at the top of the radio screen.

Touching the “all” soft-key on the radio home screen will display all of the preset stations for that mode.



SiriusXM Premier Over 160 channels


- Get every channel available on your satellite radio, and enjoy all you want, all in one place. Hear commercial-free music plus sports, news, talk and entertainment. Get all the premium programming, including Howard Stern, every NFL game, Oprah Radio®, every MLB® and NHL® game, every NASCAR® race and more. And get 20+ Xtra channels, including SiriusXM Latino, a selection of channels dedicated to Spanish language programming.

- To access SiriusXM Satellite Radio, press the "RADIO" hard-key and then the SXM soft-key.
- SiriusXM services require subscriptions, sold separately after the 12-month trial included with the new vehicle purchase. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call SiriusXM at 1-866-635-2349 for U.S. residents and 1-888-539-7474 for Canadian residents to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com.** All fees and programming subject to change. Our satellite service is available only to those at least 18 and older in the 48 contiguous USA and D.C. Our Sirius satellite service is also available in PR (with coverage limitations). Our Internet radio service is available throughout our satellite service area and in AK and HI. © 2013 Sirius XM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

USB/Audio Jack (AUX)/Bluetooth® Operation

USB/iPod®

- The USB/AUX Jack is located in the center of the instrument panel, below the HVAC controls.
- USB/iPod® Mode is entered by either inserting a USB Jump Drive or an iPod® cable into the USB port or by touching the Media hard-key located below the display. Once in Media Mode, touch the source soft-key and select USB/iPod®

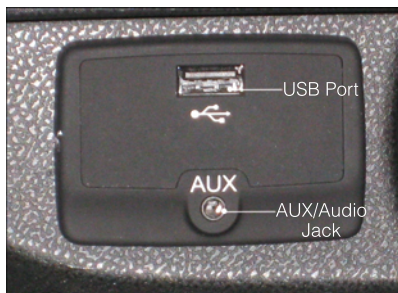

- Press the Media hard-key, touch the source soft-key then select USB/iPod® to change the mode to the USB device. If the device is connected, music from your portable device will play through the vehicle's speakers.

Audio Jack (AUX)

- The AUX jack allows a portable device, such as an MP3 player or an iPod®, to be plugged into the radio and utilize the vehicle's audio system, using a 3.5 mm audio cable, to amplify the source and play through the vehicle speakers.
- Press the Media hard-key, touch the source soft-key then select USB/iPod® to change the mode to the USB device. If the device is connected, music from your portable device will play through the vehicle's speakers.
- The functions of the portable device are controlled using the device. However, the volume may be controlled using the radio or portable device.

Bluetooth®

- If using a Bluetooth® - equipped device, you may also be able to stream music to your vehicle's sound system.

ELECTRONICS


- Press the Media hard-key, touch the source soft-key then select Bluetooth® to change the mode to Bluetooth®. If the device is paired, music from your portable device will play through the vehicle's speakers.

Uconnect® 5.0 Available Media Hubs

Uconnect® 5.0	Media Hub (USB,AUX Ports)
	S

S = Standard Equipment

Uconnect® Phone (Bluetooth® HANDS FREE CALLING)

- If the Uconnect® Phone Button  exists on your steering wheel, then you have the Uconnect® Phone features.
- The Uconnect® Phone is a voice-activated, hands-free, in-vehicle communications system with Voice Command Capability (see Voice Command section).
- The Uconnect® Phone allows you to dial a phone number with your mobile phone using simple voice commands or using screen soft-keys.
- Refer to the Understand The Features Of Your Vehicle section of your vehicle's Owner's Manual on the DVD for further details.

NOTE:

The Uconnect® Phone requires a mobile phone equipped with the Bluetooth® Hands-Free Profile, Version 1.0 or higher. For Uconnect® Customer Support: U.S. residents visit www.UconnectPhone.com or call 1-888-242-6342. Canadian Residents visit www.UconnectPhone.com or call 1-800-465-2001 (English) or 1-800-387-9983 (French).

Pairing a Phone

- To use the Uconnect® Phone feature, you must first pair your Bluetooth® phone with the Uconnect® system.

Start pairing procedure on the radio

- Press the Phone hard-key and then the Settings soft-key. Next, touch the Add Device soft-key.
- Uconnect® Phone will display an "In progress" screen while the system is connecting.

Start pairing procedure on mobile phone

- Search for available devices on your Bluetooth® enabled mobile phone. This is usually within Settings or Options under "Bluetooth". See your mobile phone's manual for details.
- When your phone finds the system, select "Uconnect" as the paired device. You may be prompted by your phone to download the phonebook. This is so you can make calls by saying the name of your contact (PBAP-Phone Book Access Profile).

Complete the pairing procedure


- When prompted on the phone, verify with radio password shown on the Uconnect® Screen.

- If your phone asks you to accept a connection request from Uconnect®, select "Yes". If available, check the box telling it not to ask again – that way your phone will automatically connect each time you start the vehicle.

Select the mobile phone's priority level

- When the pairing process has successfully completed, the system will prompt you to choose whether or not this is your favorite phone. Selecting "Yes" will make this phone the highest priority. This phone will take precedence over other paired phones within range. Only one phone can be paired at a time.
- You are now ready to make hands-free calls. Press the Uconnect® Phone button on your steering wheel to begin.


Making A Phone Call

- Press the Uconnect® Phone button .
- After the BEEP, say "dial" then the number (or "call" then the name as listed in your phone; see Phonebook).

NOTE:

You can also initiate a call by using the touch-screen on the Phone main screen.

Receiving A Call – Accept (And End)

- When an incoming call rings/is announced on Uconnect®, press the Phone button .
- To end a call, press the Hang Up or Phone button..

Mute (Or Unmute) Microphone During Call

- During a call, touch the mute soft-key on the Phone main screen to mute and unmute the call.

Transfer Ongoing Call Between Handset And Vehicle

- During an on-going call, touch the Transfer soft-key on the Phone main screen to transfer an on-going call between handset and vehicle.

Common Phone Commands (Examples)


- "Call John Smith"
- "Call John Smith mobile"
- "Dial 1 248 555 1212"
- "Call Emergency"
- "Call Towing Assistance"
- "Redial"

ELECTRONICS


Phonebook

- Uconnect® radios will automatically download your phonebook from your paired phone, if this feature is supported by your phone. Entries are updated each time that the phone is connected. If your phone book entries do not appear, check the settings on your phone. Some phones require you to enable this feature manually.
- Your phonebook can be browsed on your radio screen, but editing can only be done on your phone. To browse, touch the Phone soft-key, then the Phonebook soft-key.
- Favorite phonebook entries can be saved as Favorites for quicker access. Favorites are shown at the top of your main phone screen.




Voice Command Tips

- Using the complete name of a contact, as stored in your phonebook, (i.e; Call John Doe vs. Call John) will result in greater system accuracy.
- You can "chain" commands together for faster results. Say "Call John Doe, mobile", for example.
- If you are listening to available voice command options, you do not have to listen to the entire list. When you hear the command that you need, press the  VR button on the steering wheel, wait for the beep and say your command.

Changing The Volume

- Start a dialogue by pressing the Phone button , then say a command for example - "Help".
- Use the radio ON/OFF VOLUME rotary knob to adjust the volume to a comfortable level while the Uconnect® system is speaking. Please note the volume setting for Uconnect® is different than the audio system.

NOTE:

To access help, press the Uconnect® Phone  button on the steering wheel and say "help." Touch the display or push either  or  VR button and say "cancel" to cancel the help session.

Voice Text Reply

- Uconnect® Phone can read or send new text messages on your mobile phone.
- Your mobile phone must be MAP (Message Access Profile) compatible to support SMS via Bluetooth® to use this feature. If the Uconnect® Phone determines your phone is not compatible with SMS messaging over Bluetooth® the "Messaging" button will be greyed out and the feature will not be available for use.




NOTE:

For mobile phone compatibility and pairing instructions, please visit www.UconnectPhone.com

WARNING!

- Any voice commanded system should be used only in safe driving conditions following applicable laws regarding phone use. Your attention should be focused on safely operating the vehicle. Failure to do so may result in a collision causing you and others to be severely injured or killed.
- In an emergency, to use Uconnect® Phone, your mobile phone must be:
 - turned on,
 - paired to Uconnect® Phone,
 - and have network coverage.

VOICE COMMAND QUICK REFERENCE**Uconnect® 5.0 Voice Command Quick Reference**

- If the Uconnect Voice Command  VR button exists on your steering wheel, you have the Voice Command feature, which is optimized for the driver. The Voice Command feature lets you keep your hands on the wheel, and your eyes on the road.
- When you press the Voice Command  VR button located on the steering wheel, you will hear a beep. After the beep, give your command. If you do not know what commands to say, you can say "help" and the system will provide options to you. If you ever wish to interrupt the system while it lists options, press the Voice Command  VR button, and after the beep, say your command.

NOTE:

All phone oriented voice commands are accessible by first pressing the Phone Pick Up button, not the Voice Command button. To end a call, simply press the Phone Hang Up button. In some vehicles, the Phone Pickup button serves the dual purpose of ending calls as well.


Voice Command (VR) User TIPS

- To hear available commands, press the Uconnect® Voice Command button and say "Help". You will hear available commands for the menu displayed.
- At any time, you can say the words "Cancel" or "Help". These commands are universal and can be used from virtually any menu. All other specific commands can be used depending upon the active application.
- You can interrupt the system prompts at any time by pressing the Uconnect® Voice Command button while the system is speaking. After the beep, you can say a command.
- You can 'chain' commands together for faster results. Say "Call Joe Doe mobile", for example.
- For best performance, adjust the rearview mirror to provide at least ½ in (1 cm) gap between the overhead console (if equipped) and the mirror. This will create an unobstructed path to the microphone on the overhead console.
- Always wait for the beep before speaking.

ELECTRONICS

- Speak normally, without pausing, just as you would speak to a person sitting a few feet/ meters away from you.
- Ensure that no one other than you is speaking during a Voice Command period.

Steering Wheel Buttons

- You can control many of your radio features using your voice. Press either the VR  VR or Phone Pick Up button on your steering wheel.

Types of Voice Commands Available	Steering Wheel Buttons to Press:	Radio Mode	Media Mode	Phone Mode
	Uconnect® Voice Command (VR) Button	AM/FM & Satellite Band Control	Media Devices Control	-
		GENERAL		
	Uconnect® Phone Button	-	-	Call Initiation, Call Management, Pre-formatted Voice Text Reply

Voice Command Examples – Uconnect® 5.0

While In:	Voice Command Example:
GENERAL	
Anytime	"Cancel" "Help" (to listen to suggested commands specific to current need) "Repeat"
RADIO	
AM/FM	"Tune to AM950", "Tune to 95.5FM (preset 5)"
Satellite Band Control	"Tune to Satellite Channel 80's on 8", "Tune to Satellite Channel 32 (preset 4)"
MEDIA	
Media Devices Control (Functionality is dependent on compatibility between devices and radio)	"Browse" (show) "artist" (albums, music) "Show paired phones" (devices) "Play song – Maple Leaf Rag" (artist - Scott Joplin, genre - rock, album - Ragtime Favorites)

PHONE	
Call Initiation (Requires that phone has been Bluetooth® paired with radio)	"Dial 123-456-7890" (phone number) "Call John Smith mobile" (home, office, other) "Redial" "Show outgoing" (recent) "calls"
Call Management	"Search for John Smith" (any contact name in address book) "Show (display list) contacts"
Voice Text Reply (Radio audibly recognizes these 18 pre-formatted SMS messages as you speak)	Forward one of 18 pre-formatted SMS messages to incoming calls/text messages: "Yes." "No." "Okay." "I can't talk right now." "Call me." "I'll call you later." "I'm on my way." "Thanks." "I'll be late." "I will be <number> minutes late." "See you in <number> minutes" "Stuck in traffic." "Start without me." "Where are you?" "Are you there yet?" "I need directions." "I'm lost." "See you later."

Uconnect® 6.5N

Uconnect® 6.5N AT A GLANCE



Displaying the Time

- If the time is not currently displayed on the radio or player main page press the Settings button. In the Settings list, touch the Clock soft-key then touch On or Off for Show Time in Status Bar.

Setting the Time

- Model 6.5N synchronizes time automatically via GPS, so should not require any time adjustment. If you do need to set the time manually, follow the instructions below.
- For Model 6.5N, turn the unit on, then touch the time display at the top of the screen. Touch Yes.
- If the time is not displayed at the top of the screen, press the Settings button. In the Settings screen, touch the Clock soft-key, then check or uncheck this option.
- Touch + or – next to Set Time Hours and Set Time Minutes to adjust the time.
- If these features are not available, touch Off for Sync with GPS.
- Touch X to save your settings and exit out of the Clock Setting screen.

Audio Settings

- Touch the Audio soft-key to activate the Audio settings screen to adjust Balance\Fade, Equalizer, and Speed Adjusted Volume.
- You can return to the Radio screen by touching the X located at the top right.

Balance/Fade

- Touch the Balance/Fade soft-key to Balance audio between the front speakers or fade the audio between the rear and front speakers.
- Touching the Front, Rear, Left, or Right soft-keys or touch and drag the Speaker Icon to adjust the Balance/Fade.

Equalizer

- Touch the Equalizer soft-key to activate the Equalizer screen.
- Touch the + or - soft-keys, or touch and drag over the level bar for each of the equalizer bands. The level value, which spans between plus or minus 9, is displayed at the bottom of each of the Bands.

Speed Adjusted Volume

- Touch the Speed Adjusted Volume soft-key to activate the Speed Adjusted Volume screen. The Speed Adjusted Volume is adjusted by touching the + and - buttons or by touching and dragging over the level bar. This alters the automatic adjustment of the audio volume with variation to vehicle speed.

Surround Sound

- Touch the Surround Sound soft-key, select On or Off followed by pressing the arrow back soft-key. When this feature is activated, it provides simulated surround sound mode.

RADIO



- To access the Radio mode, touch the Radio button below the screen.

ELECTRONICS

Selecting Radio Stations

- Touch the desired radio band (AM, FM or SXM) soft-key.

Seek Up/Seek Down

- Touch the Seek arrow soft-keys for less than two seconds to seek through radio stations.
- Touch and hold either arrow soft-key for more than two seconds to bypass stations without stopping. The radio will stop at the next listenable station once the arrow soft-key is released.

Direct Tune

- Tune directly to a radio station by pressing the "Tune" button on the screen, and entering the desired station number.

Store Radio Presets

- Your radio can store 36 total preset stations, 12 presets per band (AM, FM and SXM). They are shown at the top of your radio screen. To see the 12 preset stations per band, press the arrow soft-key at the top right of the screen to toggle between the two sets of six presets.
- To set a station into memory press and hold the desired numbered soft-key for more than two seconds or until you hear a confirmation beep.

SiriusXM PREMIER OVER 160 CHANNELS

- Get every channel available on your satellite radio, and enjoy all you want, all in one place. Hear commercial-free music plus sports, news, talk and entertainment. Get all the premium programming, including Howard Stern, every NFL game, Oprah Radio®, every MLB® and NHL® game, every NASCAR® race and more. And get 20+ Xtra channels, including SiriusXM Latino, a selection of channels dedicated to Spanish language programming.
- To access SiriusXM Satellite Radio, touch the SXM soft-key on the main Radio screen.
- The following describes features that are available when in SiriusXM Satellite Radio mode.

Seek Up/Seek Down

- Touch the Seek arrow soft-keys for less than two seconds to seek through channels in SXM mode.
- Touch and hold either arrow soft-key for more than two seconds to bypass channels without stopping. The radio will stop at the next listenable channel once the arrow soft-key is released.

Direct Tune

- Tune directly to a SXM channel by pressing the Tune soft-key on the screen, and entering the desired station number.

Traffic & Weather

- Automatically tells you when Traffic & Weather for a favorite city is available, and gives you the option to switch to that channel.

Fav

- Activates the favorites menu. You can add up to 50 favorite artists or songs. Just touch Add Fav Artist or Add Fav Song while the song is playing. You will then be alerted any time one of these songs, or works by these artists, is playing on other SiriusXM channels.

SiriusXM Parental Controls

- You can skip or hide certain channels from view if you do not want access to them. Touch the Settings hard-key, touch the SiriusXM Setup soft-key, then select Channel Skip. Touch the box, check-mark, next to the channel you want skipped. They will not show up in normal usage.
- SiriusXM also offers the option to permanently block selected channels. Call (1-888-601-6297 for U.S. customers, 1-877-438-9677 for Canadian customers) and request the Family-Friendly Package.

Browse

- Lets you browse the SiriusXM channel listing or Genre listing. Favorites, Game Zone, Weather and Jump settings also provide a way to browse the SiriusXM channel list.

Browse Sub-Menu	Sub-Menu Description
All	Shows the channel listing.
Genre	Provides a list of all genres, and lets you jump to a channel within the selected genre.
Presets	Lets you scroll the list of Preset satellite channels. Touch the channel, or press Enter on the Tune knob, to go to that channel. Touch the trash can icon to delete a preset. Your presets are also shown at the top of the main Satellite Radio screen.
Favorites	Lets you manage artists and songs in the Favorites list and configure Alert Settings to let you know when favorite songs or artists are playing on other channels. Also, view a list of channels airing any of your Favorites.
Game Zone	Provides alerts when your favorite sports teams are starting a game which is being aired on other SiriusXM channels, or when their game score is announced. You can select and manage your Teams list here, and configure alerts.
Jump	Lets you select your favorite cities for Traffic & Weather information, which is used by the Jump feature on the main satellite radio screen.

ELECTRONICS

Replay

- Lets you replay up to 44 minutes of the content of the current SiriusXM channel.

Replay Option	Option Description
Play/Pause	Touch to Pause content playback.Touch Pause/Play again to resume playback.
Rewind/RW	Rewinds the channel content in steps of five seconds.Touch and hold to rewind continuously, then release to begin playing content at that point.
Fast Forward/FW	Forwards the content, and works similarly to Rewind/RW. However, Fast Forward/FW can only be used when content has been previously rewound.
Replay Time	Displays the amount of time in the upper center of the screen by which your content lags the Live channel.
Live	Resumes playback of Live content at any time while replaying rewound content.

- SiriusXM services require subscriptions, sold separately after the 12-month trial included with the new vehicle purchase. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call SiriusXM at 1-866-635-2349 for U.S. residents and 1-888-539-7474 for Canadian residents to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com.** All fees and programming subject to change. Our satellite service is available only to those at least 18 and older in the 48 contiguous USA and D.C. Our Sirius satellite service is also available in PR (with coverage limitations). Our Internet radio service is available throughout our satellite service area and in AK and HI. © 2013 Sirius XM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

MEDIA HUB – PLAYING iPod®/USB/MP3 DEVICES

- There are many ways to play music from iPod®/MP3 players or USB devices through your vehicle's sound system.

Audio Jack (AUX)

- The AUX allows a portable device, such as an MP3 player or an iPod®, to be plugged into the radio and utilize the vehicle's sound system, using a 3.5 mm audio cable, to amplify the source and play through the vehicle speakers.
- Press the Media button, touch Select Source and then choose AUX source will change the mode to auxiliary device if the audio jack is connected, allowing the music from your portable device to be heard through the vehicle's speakers. In order to activate the AUX, plug in the audio jack.
- The functions of the portable device are controlled using the device buttons. The volume may be controlled using the radio or portable device.
- To route the audio cable out of the center console, use the access cut out in the front of the console.

USB Port

- Connect your iPod® or compatible device using a USB cable into the USB Port. USB Memory sticks with audio files can also be used. Then, audio from the device can be played on the vehicle's sound system while providing metadata (artist, track title, album, etc.) information on the radio display.
- When connected, the iPod®/compatible USB device can be controlled using the radio or Steering Wheel Audio Controls to play, skip to the next or previous track, browse, and list the contents.
- The iPod® battery charges when plugged into the USB port (if supported by the specific device).
- To route the USB/iPod® cable out of the center console, use the access cut out.

NOTE:

- When connecting your iPod® device for the first time, the system may take several minutes to read your music, depending on the number of files. For example, the system will take approximately five minutes for every 1000 songs loaded on the device. Also during the reading process, the Shuffle and Browse functions will be disabled. This process is needed to ensure the full use of your iPod® features and only happens the first time it is connected. After the first time, the reading process of your iPod® will take considerably less time unless changes are made or new songs are added to the playlist.
- The USB port supports certain Mini, Classic, Nano, Touch, and iPhone® devices. The USB port also supports playing music from compatible external USB Mass Storage Class memory devices. Some iPod® software versions may not fully support the USB port features. Please visit Apple's website for iPod® software updates.

SD Card

- Play songs stored on an SD card inserted into the SD card slot.
- Song playback can be controlled using the radio or Steering Wheel Audio Controls to play, skip to the next or previous track, browse, and list the contents.

Bluetooth® Streaming Audio

- If equipped with Uconnect® Voice Command, your Bluetooth®-equipped iPod® devices, cell phones or other media players, may also be able to stream music to your vehicle's sound system. Your connected device must be Bluetooth®-compatible, and paired with your system (see Uconnect® Phone for pairing instructions). You can access the music from your connected Bluetooth® device by touching the Bluetooth® soft-key while in Media mode.


Uconnect® 6.5N	Media Hub (USB, AUX Ports)	Media Hub (SD, USB, AUX Ports)	Remote USB Port (Fully Functional)
	-	S	S

S = Standard Equipment

O = Optional Equipment

ELECTRONICS

iPod®/CD/AUX CONTROLS

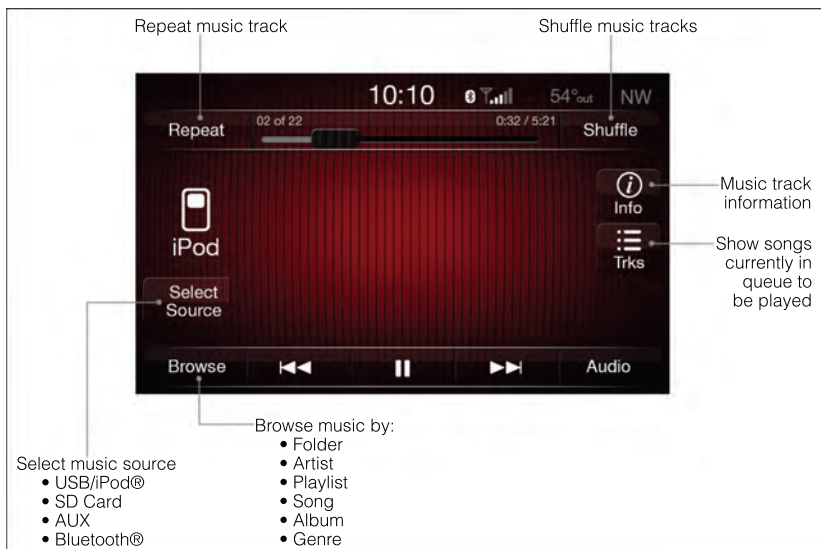

- The iPod®/CD/AUX controls are accessed by touching the desired soft-key displayed on the side of the screen and choose between AUX, iPod®, Bluetooth® or SD Card.

NOTE:

Uconnect® will usually automatically switch to the appropriate mode when something is first connected or inserted into the system.

NAVIGATION

- Press the NAV button to access the Navigation feature.

Changing the Navigation Voice Prompt Volume

1. Touch the View Map soft-key from the Nav Main Menu.
2. With the map displayed, touch the Options soft-key in the lower right area of the screen then select Settings.
3. In the Settings menu, touch the Guidance soft-key.

4. In the Guidance menu, adjust the Nav Volume by touching the + or – soft-keys.



Finding Points of Interest

- From the main Navigation menu, touch the Where To? soft-key, then touch the Points of Interest soft-key.
- Select a Category and then a subcategory, if necessary.
- Select your destination and touch the Yes soft-key.

Finding a Place by Spelling the Name

- From the Main Navigation Menu touch the Where to? soft-key, touch the Points of Interest soft-key and then touch the Spell Name soft-key.
- Enter the name of your destination.
- Touch the List soft-key.
- Select your destination and touch the Yes soft-key.

Entering a Destination Address

- From the main Navigation menu touch the Where To? soft-key, then touch the Address soft-key.
- Follow the on-screen prompts (country, state/province, city, street) to enter the address and touch the Yes soft-key.
- Destination entry is not available while your vehicle is in motion. However, you can also use Voice Command to enter an address while moving. See Voice Command Tips for more information.


ELECTRONICS

Setting Your Home Location

- Press the NAV button to access the Navigation system and the Main Navigation menu.
- Touch the Where To? soft-key, then touch the Go Home soft-key.
- You may enter your address directly, use your current location as your home address, or choose from recently found locations.
- To delete your Home location (or other saved locations) so you can save a new Home location, touch the Where To? soft-key from the Main Navigation menu, then touch the Go Home soft-key, and in the Yes screen touch the Options soft-key. In the Options menu touch Clear Home. Set a new Home location by following the previous instructions.

Go Home

- A Home location must be saved in the system. From the Main Navigation menu, touch the Where To? soft-key, then touch the Go Home soft-key.

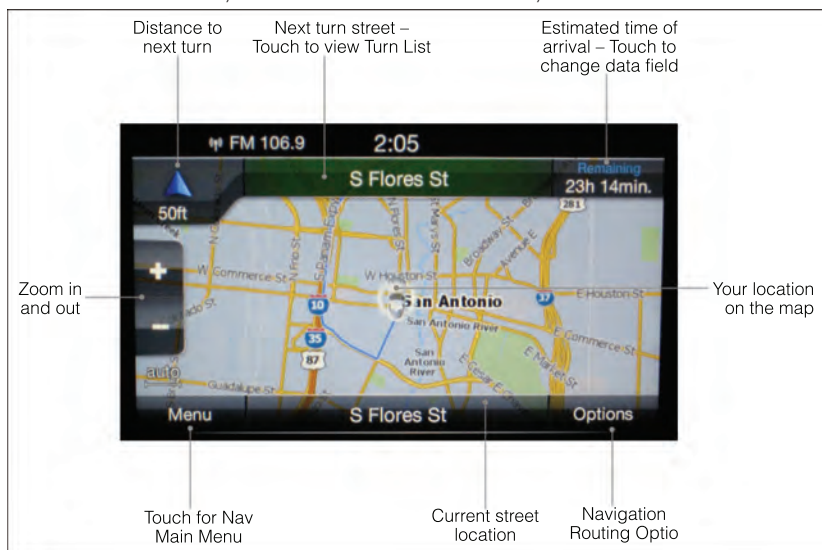

- Your route is marked with a blue line on the map. If you depart from the original route, your route is recalculated. A speed limit icon could appear as you travel on major roadways.

Adding a Stop

- To add a stop you must be navigating a route.
- Touch the Menu soft-key to return to the Main Navigation menu.
- Touch the Where To? soft-key, then search for the extra stop. When another location has been selected, you can choose to cancel your previous route, add as the first destination or add as the last destination.

- Touch the desired selection and touch the Yes soft-key.

Taking a Detour


- To take a detour you must be navigating a route.
- Touch the Detour soft-key.

NOTE:

If the route you are currently taking is the only reasonable option, the device might not calculate a detour.

- For more information, see your Uconnect® 6.5N Owner's Manual Supplement.

Uconnect® Phone (Bluetooth® HANDS FREE CALLING)

- If the Uconnect® Phone Button  exists on your steering wheel, then you have the Uconnect® Phone features.
- The Uconnect® Phone is a voice-activated, hands-free, in-vehicle communications system with Voice Command Capability (see Voice Command section).
- The Uconnect® Phone allows you to dial a phone number with your mobile phone using simple voice commands or using screen soft-keys.
- Refer to the Understand The Features Of Your Vehicle section of your vehicle's Owner's Manual on the DVD for further details.

NOTE:

The Uconnect® Phone requires a mobile phone equipped with the Bluetooth® Hands-Free Profile, Version 1.0 or higher. For Uconnect® Customer Support: U.S. residents visit www.UconnectPhone.com or call 1-888-242-6342. Canadian Residents visit www.UconnectPhone.com or call 1-800-465-2001 (English) or 1-800-387-9983 (French).

Pairing a Phone

- To use the Uconnect® Phone feature, you must first pair your Bluetooth® phone with the Uconnect® system.

Start pairing procedure on the radio

- Press the Phone button and then the Settings soft-key. Next, touch Add Device.
- Uconnect® Phone will display an "In progress" screen while the system is connecting.

Start pairing procedure on mobile phone

- Search for available devices on your Bluetooth® enabled mobile phone. This is usually within Settings or Options under "Bluetooth". See your mobile phone's manual for details.
- When your phone finds the system, select "Uconnect" as the paired device. You may be prompted by your phone to download the phonebook. This is so you can make calls by saying the name of your contact (PBAP-Phone Book Access Profile).

ELECTRONICS


Complete the pairing procedure

- When prompted on the phone, verify with radio password shown on the Uconnect® Screen.
- If your phone asks you to accept a connection request from Uconnect, select "Yes". If available, check the box telling it not to ask again – that way your phone will automatically connect each time you start the vehicle.

Select the mobile phone's priority level

- When the pairing process has successfully completed, the system will prompt you to choose whether or not this is your favorite phone. Selecting Yes will make this phone the highest priority. This phone will take precedence over other paired phones within range. Only one phone can be paired at a time.
- You are now ready to make hands-free calls. Press the Uconnect® Phone button on your steering wheel to begin.



Making A Phone Call

- Press the Uconnect® Phone button .
- After the BEEP, say "dial" then the number (or "call" then the name as listed in your phone; see Phonebook).

NOTE:

You can also initiate a call by using the touch-screen on the Phone main screen.

Receiving A Call – Accept (And End)

- When an incoming call rings/is announced on Uconnect®, press the Phone button .
- To end a call, press the Hang Up or Phone button .

Mute (Or Unmute) Microphone During Call

- During a call, touch the mute soft-key on the Phone main screen to mute and unmute the microphone.

Transfer Ongoing Call Between Handset And Vehicle

- During an on-going call, touch the Transfer soft-key on the Phone main screen to transfer an on-going call between handset and vehicle.


Common Phone Commands (Examples)

- "Call John Smith"
- "Call John Smith mobile"
- "Dial 1 248 555 1212"
- "Call Emergency"
- "Call Towing Assistance"
- "Redial"


Phonebook

- Uconnect® radios will automatically download your phonebook from your paired phone, if this feature is supported by your phone. Entries are updated each time that the phone is connected. If your phone book entries do not appear, check the settings on your phone. Some phones require you to enable this feature manually.
- Your phonebook can be browsed on your radio screen, but editing can only be done on your phone. To browse, touch the Phone soft-key, then the Phonebook soft-key.
- Favorite phonebook entries can be saved as Favorites for quicker access. Favorites are shown at the top of your main phone screen.




Voice Command Tips

- Using complete names (i.e; Call John Doe vs. Call John) will result in greater system accuracy.
- You can "chain" commands together for faster results. Say "Call John Doe, mobile", for example.
- If you are listening to available voice command options, you do not have to listen to the entire list. When you hear the command that you need, press the  VR button on the steering wheel, wait for the beep and say your command.

Changing The Volume

- Start a dialogue by pressing the Phone button , then say a command for example - "Help".
- Use the radio ON/OFF VOLUME rotary knob to adjust the volume to a comfortable level while the Uconnect® system is speaking. Please note the volume setting for Uconnect® is different than the audio system.

NOTE:

To access help, press the Uconnect® Phone  button on the steering wheel and say "help." Touch the display or push either  or  VR button and say "cancel" to cancel the help session.

Voice Text Reply

- Uconnect® Phone can read or send new text messages on your mobile phone.
- Your mobile phone must be MAP (Message Access Profile) compatible to support SMS via Bluetooth® to use this feature. If the Uconnect® Phone determines your phone is not compatible with SMS messaging over Bluetooth® the "Messaging" button will be greyed out and the feature will not be available for use.


NOTE:



For mobile phone compatibility and pairing instructions, please visit www.UconnectPhone.com

WARNING!




- Any voice commanded system should be used only in safe driving conditions following applicable laws regarding phone use. Your attention should be focused on safely operating the vehicle. Failure to do so may result in a collision causing you and others to be severely injured or killed.
- In an emergency, to use Uconnect® Phone, your mobile phone must be:
 - turned on,
 - paired to Uconnect® Phone,
 - and have network coverage.

Uconnect® 6.5N Voice Command Quick Reference

If the Uconnect® Voice Command  button exists on your steering wheel, you have the Voice Command feature, which is optimized for the driver. The Voice Command feature lets you keep your hands on the wheel, and your eyes on the road.

When you press the Voice Command  button located on the steering wheel, you will hear a beep. After the beep, give your command. If you do not know what commands to say, you can say “help” and the system will provide options to you. If you ever wish to interrupt the system while it lists options, press the Voice Command  button, after the beep, say your command.

NOTE:



All phone oriented voice commands are accessible by first pressing the Phone Pick Up  button, not the Voice Command button. To end a call, simply press the Phone Hang Up  button. In some vehicles, the Phone Pickup  button serves the dual purpose of ending calls as well.

Voice Command (VR) User TIPS

- To hear available commands, press the Uconnect® Voice Command button and say “Help”. You will hear available commands for the menu displayed.
- At any time, you can say the words “Cancel” or “Help”. These commands are universal and can be used from virtually any menu. All other specific commands can be used depending upon the active application.
- You can interrupt the system prompts at any time by pressing the Uconnect® Voice Command button while the system is speaking. After the beep, you can say a command.
- You can ‘chain’ commands together for faster results. Say “Call Joe Doe mobile”, for example.
- For best performance, adjust the rearview mirror to provide at least ½ in (1 cm) gap between the overhead console (if equipped) and the mirror. This will create an unobstructed path to the microphone on the overhead console.
- Always wait for the beep before speaking.

- Speak normally, without pausing, just as you would speak to a person sitting a few feet/meters away from you.
- Make sure that no one other than you is speaking during a Voice Command period.

Steering Wheel Buttons

You can control many of your radio features using your voice. Press either the VR  or Phone Pick Up  button on your steering wheel.

Available Radio Soft-Key Voice Commands

Types of Voice Commands Available	Steering Wheel Buttons to Press:	Radio Mode	Media Mode	Navigation	Phone Mode
	Uconnect® Voice Command (VR) Button	AM/FM & Satellite Band Control	Media Devices Control	Destination Selection and View	-
	GENERAL				
	Uconnect® Phone Pick Up Button	-	-	-	Call Initiation, Call Management, Pre-formatted Voice Text Reply

Voice Command Examples – Uconnect® 6.5N

While In:	Voice Command Example:
GENERAL	
Anytime	"Cancel" "Help" (to listen to suggested commands specific to current need) "Repeat"
RADIO	
AM/FM	"Tune to AM950", "Tune to 95.5FM (preset 5)"
Satellite Band Control	"Tune to Satellite Channel 80's on 8", "Tune to Satellite Channel 32 (preset 4)"
MEDIA	
Media Devices Control (Functionality is dependent on compatibility between devices and radio)	"Browse" (show) "artist" (albums, music) "Show paired phones" (devices) "Play song – Maple Leaf Rag" (artist - Scott Joplin, genre - rock, album - Ragtime Favorites) "Shuffle" – available with iPod, USB and SD Card

NAVIGATION	
Destination Selection & View	"Navigate to" (provide location inputs sequentially, via audible radio prompts) "Go Home" – destination previously defined by driver "Repeat guidance" – hear the last navigation prompt "Cancel Route" "View Map"
PHONE	
Call Initiation (Requires that phone has been Bluetooth® paired with radio)	"Dial 123-456-7890" (phone number) "Call John Smith mobile" (home, office, other) "Redial" "Show outgoing" (recent) "calls"
Call Management	"Search for John Smith" (any contact name in address book) "Show (display list) contacts"
Voice Text Reply (Radio audibly recognizes these 18 pre-formatted SMS messages as you speak)	Forward one of 18 pre-formatted SMS messages to incoming calls/text messages: "Yes." "No." "Okay." "I can't talk right now." "Call me." "I'll call you later." "I'm on my way." "Thanks." "I'll be late." "I will be <number> minutes late." "See you in <number> minutes" "Stuck in traffic." "Start without me." "Where are you?" "Are you there yet?" "I need directions." "I'm lost." "See you later."

STEERING WHEEL AUDIO CONTROLS

- The steering wheel audio controls are located on the rear surface of the steering wheel.

Right Switch

- Press the switch up or down to increase or decrease the volume.
- Press the button in the center to change modes AM/FM/CD/SXM/AUX or USB port.



Left Switch

- Press the switch up or down to search for the next listenable station.
- Press the button in the center to select the next preset station (radio).

ELECTRONIC VEHICLE INFORMATION CENTER (EVIC)

The Electronic Vehicle Information Center (EVIC) features a driver-interactive display that is located in the instrument cluster.

The EVIC consists of the following:

- System Status
- Vehicle Information Warning Message Displays
- Personal Settings (Customer-Programmable Features)
- Outside Temperature Display
- Trip Computer Functions

EVIC Screen

The EVIC will display the following:


- Time
- Date or trip distance display in miles or kilometers
- Outside temperature
- Gear Indicator
- Odometer (display of distance travelled in miles/kilometers)
- Car status indication (e.g. doors open, possible ice on road, etc.)

ELECTRONICS

EVIC Control Buttons



The EVIC control buttons are located on the instrument panel below the radio.

Press the **MENU** button briefly to access the menu and/or go to next screen or to confirm the required menu option. Press and hold the **MENU** button (approximately one second) to return to the main screen.

Press the UP  button to scroll upward through the displayed menu and the related options or to increase the displayed value.

Press the DOWN  button to scroll downward through the displayed menu and the related options or to decrease the value displayed.

NOTE:

UP  and DOWN  buttons activate different functions according to the following situations:

- To scroll the menu options upwards or downwards.
- To increase or decrease values during settings.

NOTE:

When opening one of the front doors, the EVIC display will turn on the clock and the miles or kilometers covered (for versions/markets, where provided) for a few seconds.

PROGRAMMABLE FEATURES

Uconnect® Customer Programmable Features - If Equipped

- The Uconnect® system allows you to access Customer Programmable feature settings such as Display, Clock, Safety/Assistance, Lights, Doors & Locks, Engine Off Operation, Compass Settings, Audio, Phone/Bluetooth, Auto-On Comfort and SiriusXM Setup through soft-keys.
- Press the More hard-key located below the display, then touch the Settings soft-key to access the Settings screen. When making a selection, scroll up or down until the preferred setting is highlighted, then press and release the preferred setting until a check-mark appears next to the setting, showing that setting has been selected. The following feature settings are available:
 - Display
 - Safety / Assistance
 - Compass
 - Phone / Bluetooth
 - Lights
 - Auto-On Comfort
 - Clock
 - Doors & Locks
 - Engine Off Options
 - Audio
 - SiriusXM Setup

UNIVERSAL GARAGE DOOR OPENER (HomeLink®)

- HomeLink® replaces up to three hand-held transmitters that operate devices such as garage door openers, motorized gates, lighting or home security systems. The HomeLink® unit is powered by your vehicle's 12Volt battery.
- The HomeLink® buttons that are located in the sunvisor designate the three different HomeLink® channels.
- The HomeLink® indicator is located above the center button.

Before You Begin Programming HomeLink®

- Ensure that your vehicle is parked outside of the garage before you begin programming.
- For efficient programming and accurate transmission of the radio-frequency signal, it is recommended that a new battery be placed in the hand-held transmitter of the device that is being programmed to the HomeLink® system.
- Erase all channels before you begin programming. To erase the channels, place the ignition switch into the ON/RUN position, then press and hold the two outside HomeLink® buttons (I and III) for up to 20 seconds or until the red indicator flashes.

NOTE:

Erasing all channels should only be performed when programming HomeLink® for the first time. Do not erase channels when programming additional buttons.

- If you have any problems, or require assistance, please call toll-free 1-800-355-3515 or, on the Internet at www.HomeLink.com for information or assistance.

Programming A Rolling Code

- For programming Garage Door Openers that were manufactured after 1995. These Garage Door Openers can be identified by the "LEARN" or "TRAIN" button located where the hanging antenna is attached to the Garage Door Opener. It is NOT the button that is normally used to open and close the door. The name and color of the button may vary by manufacturer.
- Place the ignition switch into the ON/RUN position.
- Place the hand-held transmitter 1 to 3 in (3 to 8 cm) away from the HomeLink® button you wish to program while keeping the HomeLink® indicator light in view.
- Simultaneously press and hold both the HomeLink® button you want to program and the hand-held transmitter button.
- Continue to hold both buttons and observe the indicator light. The HomeLink® indicator will flash slowly and then rapidly after HomeLink® has received the frequency signal from the hand-held transmitter. Release both buttons after the indicator light changes from slow to rapid.
- At the garage door opener motor (in the garage), locate the "LEARN" or "TRAINING" button. This can usually be found where the hanging antenna wire is attached to the garage door opener motor. Firmly press and release the "LEARN" or "TRAINING" button.

ELECTRONICS

NOTE:

You have 30 seconds in which to initiate the next step after the LEARN button has been pressed.

- Return to the vehicle and press the programmed HomeLink® button twice (holding the button for two seconds each time). If the device is plugged in and activates, programming is complete.

NOTE:

If the device does not activate, press the button a third time (for two seconds) to complete the training.

- To program the remaining two HomeLink® buttons, repeat each step for each remaining button. DO NOT erase the channels.

Programming A Non-Rolling Code

- For programming Garage Door Openers manufactured before 1995.
- Turn the ignition switch to the ON/RUN position.
- Place the hand-held transmitter 1 to 3 in (3 to 8 cm) away from the HomeLink® button you wish to program while keeping the HomeLink® indicator light in view.
- Simultaneously press and hold both the HomeLink® button you want to program and the hand-held transmitter button.
- Continue to hold both buttons and observe the indicator light. The HomeLink® indicator will flash slowly and then rapidly after HomeLink® has received the frequency signal from the hand-held transmitter. Release both buttons after the indicator light changes from slow to rapid.
- Press and hold the programmed HomeLink® button and observe the indicator light.

NOTE:

- If the indicator light stays on constantly, programming is complete and the garage door (or device) should activate when the HomeLink® button is pressed.
- To program the two remaining HomeLink® buttons, repeat each step for each remaining button. DO NOT erase the channels.

Using HomeLink®


- To operate, press and release the programmed HomeLink® button. Activation will now occur for the programmed device (i.e., garage door opener, gate operator, security system, entry door lock, home/office lighting, etc.). The hand-held transmitter of the device may also be used at any time.

WARNING!

- Your motorized door or gate will open and close while you are programming the universal transceiver. Do not program the transceiver if people or pets are in the path of the door or gate.
- Do not run your vehicle in a closed garage or confined area while programming the transceiver. Exhaust gas from your vehicle contains Carbon Monoxide (CO) which is odorless and colorless. Carbon Monoxide is poisonous when inhaled and can cause you and others to be severely injured or killed.

POWER INVERTER

- There is a 115 Volt, 150 Watt power inverter outlet located on the back of the center console. This outlet can power cellular phones, electronics and other low power devices requiring power up to 150 Watts.
- To turn on the power outlet, simply plug in the device. The outlet automatically turns off when the device is unplugged.

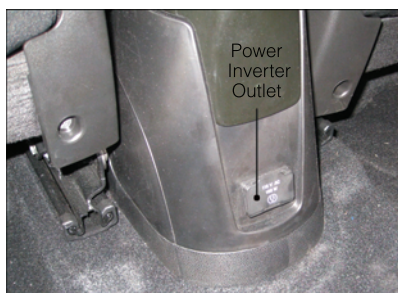

NOTE:

The power inverter is designed with built-in overload protection. If the power rating of 150 Watts is exceeded, the power inverter will automatically shut down. Once the electrical device has been removed from the outlet, the inverter should automatically reset. If the power rating exceeds approximately 170 Watts, the power inverter may have to be reset manually. To reset the inverter manually, unplug the device and plug it in again. To avoid overloading the circuit, check the power ratings on electrical devices prior to using the inverter.

WARNING!

To Avoid Serious Injury or Death: Do Not

- insert any objects into the receptacles,
- or touch with wet hands.

Close the lid when not in use. If this outlet is mishandled, it may cause an electric shock and failure.


ELECTRONICS

POWER OUTLETS


- The front power outlet is located in front of the shift lever, between the two cup-holders.
- The rear power outlet is located in the left rear cargo area.
- The power outlets are labeled with either a "key" or a "battery" symbol to indicate how the outlet is powered. Power outlets labeled with a "key" are powered when the ignition switch is in the ON/RUN or ACC position, while the outlets labeled with a "battery" are connected directly to the battery and powered at all times.

NOTE:

- Do not exceed the maximum power of 160 Watts (13 Amps) at 12 Volts. If the 160 Watt (13 Amp) power rating is exceeded, the fuse protecting the system will need to be replaced.

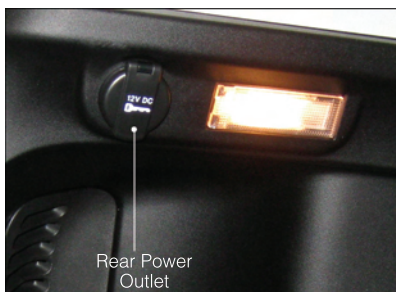

- Power outlets are designed for accessory plugs only. Do not insert any other object in the power outlet as this will damage the outlet and blow the fuse. Improper use of the power outlet can cause damage not covered by your new vehicle warranty.

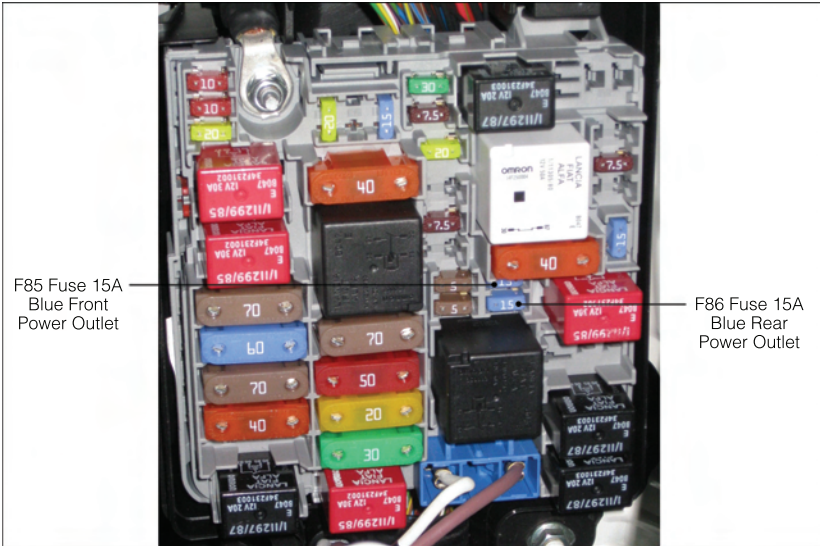

TRAILER TOWING

- Trailer towing with this vehicle is not recommended.

RECREATIONAL TOWING (BEHIND MOTORHOME, ETC.)

Towing This Vehicle Behind Another Vehicle

Towing Condition	Wheels OFF the Ground	Manual Transmission	Automatic Transmission
Flat Tow	NONE	Transmission in NEUTRAL	NOT ALLOWED
Dolly Tow	Front	OK	OK
	Rear	NOT ALLOWED	NOT ALLOWED
On Trailer	ALL	OK	OK

NOTE:

- Vehicles equipped with manual transmissions may be recreationally towed (flat towed) at any legal highway speed, for any distance, if the manual transmission is in NEUTRAL.
- This vehicle may be towed on a flatbed or vehicle trailer provided all four wheels are OFF the ground.

CAUTION!

Towing this vehicle in violation of the above requirements can cause severe transmission damage. Damage from improper towing is not covered under the New Vehicle Limited Warranty.

WHAT TO DO IN EMERGENCIES

INSTRUMENT CLUSTER WARNING LIGHTS

- Generic Warning Light

- The Generic Warning Light will illuminate if any of the following conditions occur: Oil Change Request, Engine Oil Pressure Sensor Failure, External Light Failure, Fuel Cut-Off Intervention, Fuel Cut-Off Not Available, Parking Sensor Failure DST system failure.

- Power Steering System Warning

- If the “POWER STEERING SYSTEM OVER TEMP” message and icon are displayed in the Electronic Vehicle Information Center (EVIC) display, it indicates that extreme steering maneuvers have occurred, which caused an over temperature condition in the power steering system. You will lose power steering assistance momentarily until the over temperature condition no longer exists. Once driving conditions are safe, pull over and let the vehicle idle. After approximately five minutes, the system will cool and return to normal operation.

- Automatic Gearbox Failure — If Equipped

- This light will illuminate when there is an automatic transmission fault.
- Have the vehicle serviced by an authorized studio immediately.

- Engine Temperature Warning Light

- This light warns of an overheated engine condition.
- If the light turns on or flashes continuously while driving, safely pull over and stop the vehicle. If the A/C system is on, turn it off. Also, shift the transmission into NEUTRAL and idle the vehicle. If the temperature reading does not return to normal, turn the engine off immediately.
- We recommend that you do not operate the vehicle or engine damage will occur. Have the vehicle serviced immediately.

WARNING!

A hot engine cooling system is dangerous. You or others could be badly burned by steam or boiling coolant. You may want to call an authorized studio for service if your vehicle overheats.

- Electronic Throttle Control (ETC) Indicator Light

- This light informs you of a problem with the system.
- If a problem is detected, the light will come on while the engine is running. Cycle the ignition when the vehicle has completely stopped and the shift lever is placed in the PARK position; the light should turn off.

WHAT TO DO IN EMERGENCIES

- If the light remains lit with the engine running, your vehicle will usually be drivable; however, see an authorized studio immediately. If the light is flashing when the engine is running, immediate service is required and you may experience reduced performance, an elevated/rough idle or engine stall and your vehicle may require towing.

**ESC
OFF**

- Electronic Stability Control (ESC) OFF Indicator Light

- This light indicates the ESC system has been turned off by the driver.

ESC - Electronic Stability Control (ESC) Activation / Malfunction Indicator Light

- The “ESC Activation/Malfunction Indicator Light” in the instrument cluster will come on for four seconds when the ignition switch is turned to the ON/RUN position. If the “ESC Activation/Malfunction Indicator Light” comes on continuously with the engine running, a malfunction has been detected in the ESC system. If this light remains on, see your authorized studio as soon as possible to have the problem diagnosed and corrected.

NOTE:

- The “ESC Off Indicator Light” and the “ESC Activation/Malfunction Indicator Light” come on momentarily each time the ignition switch is turned to ON/RUN.
- Each time the ignition is turned to ON/RUN, the ESC system will be ON even if it was turned off previously.
- ESC Activation/Malfunction Light can blink during a ESC or TC intervention.



- Tire Pressure Monitoring System (TPMS) Light

- Each tire, including the spare (if provided), should be checked monthly, when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.)
- As an added safety feature, your vehicle has been equipped with a Tire Pressure Monitoring System (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.
- **IF THE LIGHT STARTS FLASHING INDICATING A LOW TIRE PRESSURE, ADJUST THE AIR PRESSURE IN THE LOW TIRE TO THE AIR PRESSURE SHOWN ON THE VEHICLE PLACARD OR TIRE INFLATION PRESSURE LABEL LOCATED ON THE DRIVER'S DOOR.**

NOTE:

AFTER INFLATION, THE VEHICLE MAY NEED TO BE DRIVEN FOR 20 MINUTES BEFORE THE FLASHING LIGHT WILL TURN OFF.

WHAT TO DO IN EMERGENCIES

- Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.
- Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue each time the vehicle is restarted as long as the malfunction exists.
- When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle, to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

NOTE:

Tire pressures change by approximately 1 psi (7 kPa) per 12° F (7° C) of air temperature change. Keep this in mind when checking tire pressure inside a garage, especially in the Winter. Example: If garage temperature is 68°F (20°C) and the outside temperature is 32°F (0°C), then the cold tire inflation pressure should be increased by 3 psi (21 kPa), which equals 1 psi (7 kPa) for every 12°F (7°C) for this outside temperature condition.

CAUTION!

The TPMS has been optimized for the original equipment tires and wheels. TPMS pressures and warning have been established for the tire size equipped on your vehicle. Undesirable system operation or sensor damage may result when using replacement equipment that is not of the same size, type, and/or style. Aftermarket wheels can cause sensor damage. Do not use tire sealant from a can, or balance beads if your vehicle is equipped with a TPMS, as damage to the sensors may result.

BRAKE - Brake Warning Light

- The Brake Warning light illuminates when there is either a system malfunction or the parking brake is applied. If the light is on and the parking brake is not applied, it indicates a possible brake hydraulic malfunction, brake booster problem or an Anti-Lock Brake System problem.
- Please have your vehicle serviced immediately.

WHAT TO DO IN EMERGENCIES

WARNING!

Driving a vehicle with the red brake light on is dangerous. Part of the brake system may have failed. It will take longer to stop the vehicle. You could have a collision. Have the vehicle checked immediately.



- Malfunction Indicator Light (MIL)

- Certain conditions, such as a loose or missing gas cap, poor fuel quality, etc., may illuminate the MIL after engine start. The vehicle should be serviced if the light stays on through several typical driving cycles. In most situations, the vehicle will drive normally and not require towing.
- If the MIL flashes when the engine is running, serious conditions may exist that could lead to immediate loss of power or severe catalytic converter damage. We recommend you do not operate the vehicle. Have the vehicle serviced immediately.



- Charging System Light

- This light shows the status of the electrical charging system. If the charging system light remains on, it means that the vehicle is experiencing a problem with the charging system.
- We recommend you do not continue driving if the charging system light is on. Have the vehicle serviced immediately.



- Oil Pressure Warning Light

- This light indicates low engine oil pressure. If the light turns on while driving, stop the vehicle and shut off the engine as soon as possible. A chime will sound when this light turns on.
- We recommend you do not operate the vehicle or engine damage will occur. Have the vehicle serviced immediately.



- Anti-Lock Brake (ABS) Light

- This light monitors the Anti-Lock Brake System (ABS).
- If the light is not on during starting, stays on, or turns on while driving, we recommend you drive to the nearest authorized studio immediately and have the vehicle serviced immediately.



- Air Bag Warning Light

- If the light is not on during starting, stays on, or turns on while driving, have the vehicle serviced by an authorized studio immediately.



- Seat Belt Reminder Light

- When the ignition switch is first turned to ON/RUN, this light will turn on if the driver's seat belt is unbuckled, a chime will sound. When driving, if the driver's seat belt remains unbuckled, the Seat Belt Reminder Light will illuminate and the chime will sound.

WHAT TO DO IN EMERGENCIES

- Please have your vehicle serviced immediately.

WARNING!

Driving a vehicle with the red brake light on is dangerous. Part of the brake system may have failed. It will take longer to stop the vehicle. You could have a collision. Have the vehicle checked immediately.

Passenger Air Bag Disable (PAD) Light

The Passenger Air Bag Disable (PAD) Indicator Light tells the driver and front passenger when the front passenger air bag is turned off. The PAD Indicator light illuminates the words "PASS AIR BAG OFF" to show that the front passenger air bag will not inflate during a collision requiring air bags. When the right front passenger seat is empty or when very light objects are placed on the seat, the passenger air bag will not inflate even though the PAD indicator light is not illuminated.

IF YOUR ENGINE OVERHEATS

- In any of the following situations, you can reduce the potential for overheating by taking the appropriate action.
 - On the highways — slow down.
 - In city traffic — while stopped, shift transmission into NEUTRAL, but do not increase engine idle speed.

NOTE:

There are steps that you can take to slow down an overheat condition:

- If your air conditioner (A/C) is on, turn it off. The A/C system adds heat to the engine cooling system and turning the A/C off can help remove this heat.
- You can also turn the Temperature control to maximum heat, the Mode control to floor and the Fan control to high. This allows the heater core to act as a supplement to the radiator and aids in removing heat from the engine cooling system.
- If the temperature reading does not return to normal, turn the engine off immediately.
- We recommend that you do not operate the vehicle or engine damage will occur. Have the vehicle serviced immediately.

CAUTION!

Driving with a hot cooling system could damage your vehicle. If the temperature gauge reads hot, pull over and stop the vehicle. Idle the vehicle with the air conditioner turned off until the pointer drops back into the normal range. If the pointer remains on hot, turn the engine off immediately and call for service.

WHAT TO DO IN EMERGENCIES

WARNING!

You or others can be badly burned by hot engine coolant (antifreeze) or steam from your radiator. If you see or hear steam coming from under the hood, do not open the hood until the radiator has had time to cool. Never try to open a cooling system pressure cap when the radiator or coolant bottle is hot.

JACKING AND TIRE CHANGING

Jack Location


- Your vehicle may be equipped with a temporary spare tire. The jack and jack-handle are stowed in rear cargo area behind the rear seat.



WHAT TO DO IN EMERGENCIES

Spare Tire Removal

- The spare tire is stowed to the underbody below the cargo area.

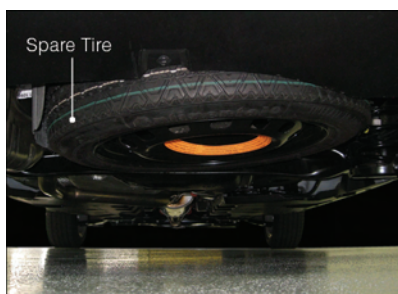

1. Fit the wrench tool over the drive nut. Use the wrench to rotate the nut counterclockwise until the spare is on the ground with enough slack in the cable to allow you to pull the tire out from under the vehicle.




2. Pull the spare tire out from under the vehicle.




WHAT TO DO IN EMERGENCIES

3. When the spare is clear, remove the knob or plastic molded nut by rotating it counter-clockwise.

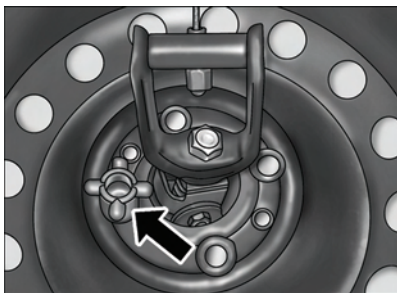

4. Tilt the retainer at the end of the cable and pull it through the center of the wheel.

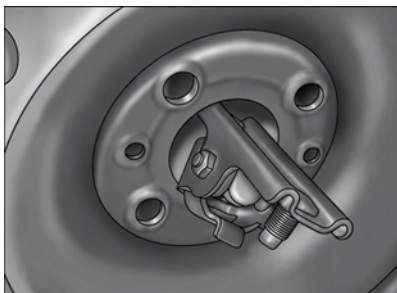


Preparations For Jacking

1. Park the vehicle on a firm level surface, avoiding ice or slippery areas.
2. Turn on the Hazard Warning flashers.
3. Set the parking brake.
4. Place the shift lever in PARK (automatic transmission) or REVERSE (manual transmission).
5. Turn Off the ignition.
6. Block both the front and rear of the wheel diagonally opposite the jacking position. For example, if changing the right front tire, block the left rear wheel.

NOTE:

Passengers should not remain in the vehicle while the vehicle is being jacked.

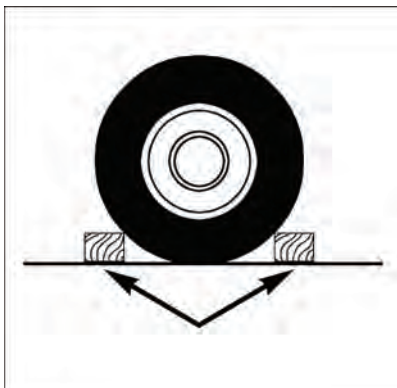

WHAT TO DO IN EMERGENCIES

Jacking Instructions

NOTE:

Refer to the "Compact Spare Tire" section of the "Tires-General Information" under "Starting And Operating" for information about the spare tire, it's use, and operation.

1. Remove the scissors jack and wheel wrench from the rear storage area.
2. Loosen, but do not remove, the wheel bolts by turning them to the left one turn while the wheel is still on the ground.



NOTE:

There are front and rear jacking locations on each side of the body (as indicated by the triangular lift point symbol on the sill molding).

Do not raise the vehicle until you are sure the jack is securely engaged.

3. Turn the jack screw to the left until the jack can be placed under the jacking location. Once the jack is positioned, turn the jack screw to the right until the jack head is properly engaged with the lift area closest to the wheel to be changed.



4. Using the swivel wrench, raise the vehicle by turning the jack screw to the right. Raise the vehicle only until the tire just clears the surface and enough clearance is obtained to install the spare tire. Minimum tire lift provides maximum stability.
5. Remove the wheel bolts and pull the wheel off the hub. For vehicles equipped with aluminum wheels, the center caps must be removed to remove the wheel bolts.

WHAT TO DO IN EMERGENCIES

NOTE:

The wheel cover is held on the wheel by the wheel bolts. When reinstalling the original wheel, properly align the wheel cover to the valve stem, place the wheel cover onto the wheel, then install the wheel bolts.

6. Install the spare wheel and wheel bolts with the cone shaped end of the bolts toward the wheel. Lightly tighten the bolts. To avoid the risk of forcing the vehicle off the jack, do not tighten the bolts fully until the vehicle has been lowered.
7. Lower the vehicle by turning the jack screw to the left.
8. Finish tightening the bolts. Push down on the wrench while tightening the wheel bolts. Alternate bolts until each bolt has been tightened twice. The correct wheel bolt torque is 63 ft lbs (85 N·m) for steel wheels and 75 ft lbs (100 N·m) for aluminum wheels. If you doubt that you have tightened the bolts correctly, have them checked with a torque wrench by your authorized studio or service station.
9. Disassemble the jack and tools and place them in the in the rear cargo area.
10. Place the deflated (flat) tire in the cargo area. Have the tire repaired or replaced as soon as possible.
11. Check the spare tire pressure as soon as possible. Correct the tire pressure as required.

Spare Tire Stowage

- Reverse instructions of the spare removal section.
- Rotate the jack wrench tool on the winch drive nut clockwise until effort becomes heavy and an audible click is heard indicating the spare is properly stowed.

CAUTION!

- The winch mechanism is designed for use with the jack extension tube only. Use of an air wrench or other power tools is not recommended and they can damage the winch.
- Do not attempt to raise the vehicle by jacking on locations other than those indicated in the Jacking Instructions for this vehicle.
- Be sure to mount the spare tire with the valve stem facing outward. The vehicle could be damaged if the spare tire is mounted incorrectly.

WHAT TO DO IN EMERGENCIES

WARNING!

- Do not attempt to change a tire on the side of the vehicle close to moving traffic. Pull far enough off the road to avoid the danger of being hit when operating the jack or changing the wheel.
- Being under a jacked-up vehicle is dangerous. The vehicle could slip off the jack and fall on you. You could be crushed. Never put any part of your body under a vehicle that is on a jack.
- Never start or run the engine while the vehicle is on a jack. If you need to get under a raised vehicle, take it to a authorized studio where it can be raised on a lift.
- The jack is designed to use as a tool for changing tires only. The jack should not be used to lift the vehicle for service purposes. The vehicle should be jacked on a firm, level surface only. Avoid ice or slippery areas.
- After using the jack and tools, always reinstall them in the original carrier and location. While driving you may experience abrupt stopping, rapid acceleration, or sharp turns. A loose jack, tools, bracket or other objects in the vehicle may move around with force, resulting in serious injury.
- Carefully follow these tire changing warnings to help prevent personal injury or damage to your vehicle:
- Always park on a firm, level surface as far from the edge of the roadway as possible before raising the vehicle.
- Turn on the Hazard Warning flasher.
- Block the wheel diagonally opposite the wheel to be raised.
- Set the parking brake firmly and set an automatic transmission in PARK; a manual transmission in REVERSE.
- Do not let anyone sit in the vehicle when it is on a jack.
- Do not get under the vehicle when it is on a jack.
- Only use the jack in the positions indicated and for lifting this vehicle during a tire change.
- If working on or near a roadway, be extremely careful of motor traffic.
- To assure that spare tires, flat or inflated, are securely stowed, spares must be stowed with the valve stem facing the ground.
- Raising the vehicle higher than necessary can make the vehicle unstable and cause a collision. It could slip off the jack and hurt someone near it. Raise the vehicle only enough to remove the tire.
- A loose tire or jack thrown forward in a collision or hard stop could injure someone in the vehicle. Always stow the jack parts and the extra tire and wheel in the places provided.

WHAT TO DO IN EMERGENCIES

TIREFIT KIT


- Your vehicle may be equipped with a TIREFIT kit. The TIREFIT kit is located in the rear storage area behind the rear passenger seat.
- Small punctures up to 1/4 in (6 mm) in the tire tread can be sealed with TIREFIT. Foreign objects (e.g., screws or nails) should not be removed from the tire. TIREFIT can be used in outside temperatures down to approximately -4°F (-20°C).
- This kit will provide a temporary tire seal, allowing you to drive your vehicle up to 100 miles (160 km) with a maximum speed of 55 mph (88 km/h).

TIREFIT Storage

- The TIREFIT kit is located in the rear storage area behind the rear passenger seat.

TIREFIT Kit Components and Operation

1. Sealant Bottle
2. Deflation Button
3. Pressure Gauge
4. Power Button
5. Mode Select Knob
6. Sealant Hose (Clear)
7. Air Pump Hose (Black)
8. Power Plug

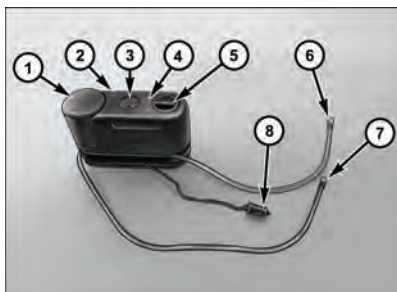

Using The Mode Select Knob and Hoses

- Your TIREFIT kit is equipped with the following symbols to indicate the air or sealant mode.

Selecting Air Mode

- Turn the Mode Select Knob (5) to this position for air pump operation only. Use the Black Air Pump Hose (7) when selecting this mode.

Selecting Sealant Mode

- Turn the Mode Select Knob (5) to this position to inject the TIREFIT Sealant and to inflate the tire. Use the Sealant Hose (clear hose) (6) when selecting this mode.

Using The Power Button

- Push and release the Power Button (4) once to turn On the TIREFIT kit. Push and release the Power Button (4) again to turn Off the TIREFIT kit.

Using The Deflation Button

- Press the Deflation Button (2) to reduce the air pressure in the tire if it becomes over-inflated.

WHAT TO DO IN EMERGENCIES

TIREFIT Usage Precautions

- Replace the TIREFIT Sealant Bottle (1) and Sealant Hose (6) prior to the expiration date (printed on the bottle label) to assure optimum operation of the system. Refer to "Sealing a Tire with TIREFIT" section (F) "Sealant Bottle and Hose Replacement".
- The Sealant Bottle (1) and Sealant Hose (6) are a one tire application use. After each use, always replace these components immediately at an authorized studio.
- When the TIREFIT sealant is in a liquid form, clean water, and a damp cloth will remove the material from the vehicle or tire and wheel components. Once the sealant dries, it can easily be peeled off and properly discarded.
- For optimum performance, make sure the valve stem on the wheel is free of debris before connecting the TIREFIT kit.
- You can use the TIREFIT air pump to inflate bicycle tires. The kit also comes with two needles, located in the Accessory Storage Compartment (on the bottom of the air pump) for inflating sport balls, rafts, or similar inflatable items. However, use only the Air Pump Hose (7) and make sure the Mode Select Knob (5) is in the Air Mode when inflating such items to avoid injecting sealant into them. The TIREFIT Sealant is only intended to seal punctures less than 1/4 in (6 mm) diameter in the tread of your vehicle.
- Do not lift or carry the TIREFIT kit by the hoses.

Sealing A Tire With TIREFIT

(A) Whenever You Stop To Use TIREFIT:

1. Pull over to a safe location and turn on the vehicle's Hazard Warning flashers.
2. Verify that the valve stem (on the wheel with the deflated tire) is in a position that is near to the ground. This will allow the TIREFIT Hoses (6) and (7) to reach the valve stem and keep the TIREFIT kit flat on the ground. This will provide the best positioning of the kit when injecting the sealant into the deflated tire and running the air pump. Move the vehicle as necessary to place the valve stem in this position before proceeding.
3. Place the transmission in PARK (auto transmission) or in Gear (manual transmission) and cycle the ignition to the OFF position.
4. Set the parking brake.

(B) Setting Up To Use TIREFIT:

1. Turn the Mode Select Knob (5) to the Sealant Mode position.
2. Uncoil the Sealant Hose (6) and then remove the cap from the fitting at the end of the hose.
3. Place the TIREFIT kit flat on the ground next to the deflated tire.
4. Remove the cap from the valve stem and then screw the fitting at the end of the Sealant Hose (6) onto the valve stem.
5. Uncoil the Power Plug (8) and insert the plug into the vehicle's 12 Volt power outlet.

WHAT TO DO IN EMERGENCIES

6. Do not remove foreign objects (e.g., screws or nails) from the tire.

(C) Injecting TIREFIT Sealant Into The Deflated Tire:

- Always start the engine before turning ON the TIREFIT kit.

NOTE:

Manual transmission vehicles must have the parking brake engaged and the shift lever in NEUTRAL.

- After pressing the Power Button (4), the sealant (white fluid) will flow from the Sealant Bottle (1) through the Sealant Hose (6) and into the tire.

NOTE:

Sealant may leak out through the puncture in the tire.

- **If the sealant (white fluid) does not flow within 0 – 10 seconds through the Sealant Hose (6):**

1. Press the Power Button (4) to turn Off the TIREFIT kit. Disconnect the Sealant Hose (6) from the valve stem. Make sure the valve stem is free of debris. Reconnect the Sealant Hose (6) to the valve stem. Check that the Mode Select Knob (5) is in the Sealant Mode position and not Air Mode. Press the Power Button (4) to turn On the TIREFIT kit.
2. Connect the Power Plug (8) to a different 12 Volt power outlet in your vehicle or another vehicle, if available. Make sure the engine is running before turning ON the TIREFIT kit.
3. The Sealant Bottle (1) may be empty due to previous use. Call for assistance.

NOTE:

If the Mode Select Knob (5) is on Air Mode and the pump is operating, air will dispense from the Air Pump Hose (7) only, not the Sealant Hose (6).

- **If the sealant (white fluid) does flow through the Sealant Hose (6):**

1. Continue to operate the pump until sealant is no longer flowing through the hose (typically takes 30 - 70 seconds). As the sealant flows through the Sealant Hose (6), the Pressure Gauge (3) can read as high as 70 psi (5 kPa). The Pressure Gauge (3) will decrease quickly from approximately 70 psi (5 kPa) to the actual tire pressure when the Sealant Bottle (1) is empty.
 2. The pump will start to inject air into the tire immediately after the Sealant Bottle (1) is empty. Continue to operate the pump and inflate the tire to the pressure indicated on the tire pressure label on the driver-side latch pillar (recommended pressure). Check the tire pressure by looking at the Pressure Gauge (3).
- **If the tire does not inflate to at least 26 psi (1.8 kPa) pressure within 15 minutes:**
 - The tire is too badly damaged. Do not attempt to drive the vehicle further. Call for assistance.

WHAT TO DO IN EMERGENCIES

NOTE:

If the tire becomes over-inflated, press the Deflation Button to reduce the tire pressure to the recommended inflation pressure before continuing.

- **If the tire inflates to the recommended pressure or is at least 26 psi (1.8 Bar) pressure within 15 minutes:**

1. Press the Power Button (4) to turn off the TIREFIT kit.
2. Remove the Speed Limit sticker from the top of the Sealant Bottle (1) and place the sticker on the instrument panel.
3. Immediately disconnect the Sealant Hose (6) from the valve stem, reinstall the cap on the fitting at the end of the hose, and place the TIREFIT kit in the vehicle storage location. Quickly proceed to (D) "Drive Vehicle".

(D) Drive Vehicle:

- Immediately after injecting sealant and inflating the tire, drive the vehicle 5 miles (8 km) or 10 minutes to ensure distribution of the TIREFIT Sealant within the tire. Do not exceed 55 mph (88 km/h).

(E) After Driving:

- Pull over to a safe location. Refer to "Whenever You Stop to Use TIREFIT" before continuing.
1. Turn the Mode Select Knob (5) to the Air Mode position.
 2. Uncoil the Air Pump Hose (7) (black in color) and screw the fitting at the end of hose (7) onto the valve stem.
 3. Uncoil the power plug and insert the plug into the vehicle's 12 Volt power outlet.
 4. Check the pressure in the tire by reading the Pressure Gauge (3).
- **If tire pressure is less than 19 psi (1.3 kPa), the tire is too badly damaged. Do not attempt to drive the vehicle further. Call for assistance.**

If the tire pressure is 19 psi (1.3 kPa) or higher:

1. Press the Power Button (4) to turn on TIREFIT and inflate the tire to the pressure indicated on the tire and loading information label on the driver-side door opening.
2. Disconnect the TIREFIT kit from the valve stem, reinstall the cap on the valve stem and unplug from 12 Volt outlet.
3. Place the TIREFIT kit in its proper storage area in the vehicle.
4. Have the tire inspected and repaired or replaced at the earliest opportunity at an authorized studio or tire service center.
5. Replace the Sealant Bottle (1) and Sealant Hose (6) assembly at your authorized studio as soon as possible. Refer to "(F) Sealant Bottle and Hose Replacement."

WHAT TO DO IN EMERGENCIES

NOTE:

- If the tire becomes over-inflated, press the Deflation Button to reduce the tire pressure to the recommended inflation pressure before continuing.
- When having the tire serviced, advise the authorized studio or service center that the tire has been sealed using the TIREFIT service kit.

(F) Sealant Bottle And Hose Replacement:

1. Uncoil the Sealant Hose (6) (clear in color).
2. Locate the round Sealant Bottle release button in the recessed area under the sealant bottle.
3. Press the Sealant Bottle release button. The Sealant Bottle (1) will pop up. Remove the bottle and dispose of it accordingly.
4. Clean any remaining sealant from the TIREFIT housing.
5. Position the new Sealant Bottle (1) in the housing so that the Sealant Hose (6) aligns with the hose slot in the front of the housing. Press the bottle into the housing. An audible click will be heard indicating the bottle is locked into place.
6. Verify that the cap is installed on the fitting at the end of the Sealant Hose (6) and return the hose to its storage area (located on the bottom of the air pump).
7. Return the TIREFIT kit to its storage location in the vehicle.

CAUTION!

- The metal end fitting from Power Plug (8) may get hot after use, so it should be handled carefully.
- Failure to reinstall the cap on the fitting at the end of the Sealant Hose (6) can result in sealant contacting your skin, clothing, and the vehicle's interior. It can also result in sealant contacting internal TIREFIT kit components which may cause permanent damage to the kit.

WHAT TO DO IN EMERGENCIES

WARNING!

- Do not attempt to seal a tire on the side of the vehicle closest to traffic. Pull far enough off the road to avoid the danger of being hit when using the TIREFIT kit.
- Do not use TIREFIT or drive the vehicle under the following circumstances:
 - If the puncture in the tire tread is approximately 1/4 in. (6 mm) or larger.
 - If the tire has any sidewall damage.
 - If the tire has any damage from driving with extremely low tire pressure.
 - If the tire has any damage from driving on a flat tire.
 - If the wheel has any damage.
 - If you are unsure of the condition of the tire or the wheel.
- Keep TIREFIT away from open flames or heat source.
- A loose TIREFIT kit thrown forward in a collision or hard stop could endanger the occupants of the vehicle. Always stow the TIREFIT kit in the place provided. Failure to follow these warnings can result in injuries that are serious or fatal to you, your passengers, and others around you.
- Take care not to allow the contents of TIREFIT to come in contact with hair, eyes, or clothing. TIREFIT is harmful if inhaled, swallowed, or absorbed through the skin. It causes skin, eye, and respiratory irritation. Flush immediately with plenty of water if there is any contact with eyes or skin. Change clothing as soon as possible, if there is any contact with clothing.
- TIREFIT Sealant solution contains latex. In case of an allergic reaction or rash, consult a physician immediately. Keep TIREFIT out of reach of children. If swallowed, rinse mouth immediately with plenty of water and drink plenty of water. Do not induce vomiting! Consult a physician immediately.
- TIREFIT is not a permanent flat tire repair. Have the tire inspected and repaired or replaced after using TIREFIT. Do not exceed 55 mph (88 km/h) until the tire is repaired or replaced. Failure to follow this warning can result in injuries that are serious or fatal to you, your passengers, and others around you.

JUMP-STARTING PROCEDURE

- If your vehicle has a discharged battery, it can be jump-started using a set of jumper cables and a battery in another vehicle or by using a portable battery booster pack. Jump-starting can be dangerous if done improperly so please follow the procedures in this section carefully.

NOTE:

When using a portable battery booster pack, follow the manufacturer's operating instructions and precautions.

WHAT TO DO IN EMERGENCIES

Preparations For Jump-Start

- The battery in your vehicle is located on the left side of the engine compartment.
1. Set the parking brake, shift the automatic transmission into PARK and turn the ignition to OFF/LOCK.
 2. Turn off the heater, radio, and all unnecessary electrical accessories.
 3. If using another vehicle to jump-start the battery, park the vehicle within the jumper cables reach, set the parking brake and make sure the ignition is OFF.



Jump-Starting Procedure

1. Connect the positive (+) end of the jumper cable to the positive (+) post of the discharged vehicle.
2. Connect the opposite end of the positive (+) jumper cable to the positive (+) post of the booster battery.
3. Connect the negative end (-) of the jumper cable to the negative (-) post of the booster battery.
4. Connect the opposite end of the negative (-) jumper cable to a good engine ground (exposed metal part of the discharged vehicles engine) away from the battery and the fuel injection system.
5. Start the engine in the vehicle that has the booster battery, let the engine idle a few minutes, and then start the engine in the vehicle with the discharged battery.

Once the engine is started, remove the jumper cables in the reverse sequence:

1. Disconnect the negative (-) jumper cable from the engine ground (-) of the vehicle with the discharged battery.
 2. Disconnect the negative end (-) of the jumper cable from the negative (-) post of the booster battery.
 3. Disconnect the opposite end of the positive (+) jumper cable from the positive (+) post of the booster battery.
 4. Disconnect the positive (+) end of the jumper cable from the positive (+) post of the discharged vehicle.
- If frequent jump-starting is required to start your vehicle, you should have the battery and charging system inspected at your authorized studio.

WHAT TO DO IN EMERGENCIES

CAUTION!

- Accessories that can be plugged into the vehicle power outlets draw power from the vehicle's battery, even when not in use (i.e., cellular phones, etc.). Eventually, if plugged in long enough, the vehicle's battery will discharge sufficiently to degrade battery life and/or prevent the engine from starting.
- Do not use a portable battery booster pack or any other booster source with a system voltage greater than 12 Volts or damage to the battery, starter motor, alternator or electrical system may occur.
- Failure to follow these procedures could result in damage to the charging system of the booster vehicle or the discharged vehicle.

WARNING!

- Do not attempt jump-starting if the battery is frozen. It could rupture or explode and cause personal injury.
- Take care to avoid the radiator cooling fan whenever the hood is raised. It can start anytime the ignition switch is on. You can be injured by moving fan blades.
- Remove any metal jewelry such as watch bands or bracelets that might make an inadvertent electrical contact. You could be seriously injured.
- Batteries contain sulfuric acid that can burn your skin or eyes and generate hydrogen gas which is flammable and explosive. Keep open flames or sparks away from the battery.
- Do not allow vehicles to touch each other as this could establish a ground connection and personal injury could result.
- Failure to follow this procedure could result in personal injury or property damage due to battery explosion.
- Do not connect the cable to the negative post (-) of the discharged battery. The resulting electrical spark could cause the battery to explode and could result in personal injury.

SHIFT LEVER OVERRIDE

- If a malfunction occurs and the shift lever cannot be moved out of the PARK position, you can use the following procedure to temporarily move the shift lever:
 - Turn the ignition switch to the OFF position.
 - Firmly set the parking brake.
 - Remove the rubber storage tray liner from the center console, then lift up the front of the shift lever bezel, carefully disengage the bezel from the shift lever housing, and slide it up to the top of the shift lever.
 - Press and maintain firm pressure on the brake pedal.

WHAT TO DO IN EMERGENCIES

- Insert a small screwdriver or similar tool down into the access slot at the front of the shift lever assembly, and push and hold the white override release lever down.
- Move the shift lever into the NEUTRAL position.
- The vehicle may then be started in NEUTRAL.
- Reinstall the shift lever bezel (use care to avoid pinching the wiring), and the rubber storage tray liner.

TOWING A DISABLED VEHICLE

With Ignition Key

Automatic Transmission

- Vehicle can be towed with the front wheels elevated.
- Vehicle can be towed on a flatbed truck (all wheels off the ground).

Manual Transmission

- Vehicle can be flat towed (all four wheels on the ground) with the transmission in NEUTRAL.
- Vehicle can be towed with the front wheels elevated.
- Vehicle can be towed on a flatbed truck (all wheels off the ground).

NOTE:

If it is necessary to use the accessories while being towed (wipers, defrosters, etc.), the key must be in the ON/RUN position. Make certain the transmission remains in NEUTRAL.

All Transmissions

- If it is necessary to use the accessories while being towed (wipers, defrosters, etc.), the key must be in the ON/RUN position. Make certain the transmission remains in NEUTRAL.

Without The Ignition Key

- Special care must be taken when the vehicle is towed with the ignition in the OFF/LOCK position. A dolly should be used under the front wheels if the rear wheels are raised. Proper towing equipment is necessary to prevent damage to the vehicle.
- Battery power is required to release the brake/transmission interlock system (automatic transmission only). There is a removable plug in the right side of the shift lever housing that allows you to insert your finger to override the system. The ignition key must be in the ON/RUN position to use the override lever.

WHAT TO DO IN EMERGENCIES

CAUTION!

- Failure to follow these towing methods can cause severe transmission damage. Such damage is not covered by the New Vehicle Limited Warranty.
- **DO NOT** flat tow any vehicle equipped with an automatic transmission. Damage to the drivetrain will result.
- If the vehicle being towed requires steering, the ignition switch must be in the ON/ RUN position.
- Do not attempt to use sling-type equipment when towing. When securing the vehicle to a flatbed truck, do not attach to front or rear suspension components. Damage to your vehicle may result from improper towing.

FREEING A STUCK VEHICLE

- If your vehicle becomes stuck in mud, sand or snow, it can often be moved by a rocking motion. Turn your steering wheel right and left to clear the area around the front wheels. Then shift back and forth between DRIVE/1st gear and REVERSE. Using minimal accelerator pedal pressure to maintain the rocking motion, without spinning the wheels, is most effective.

NOTE:

If your vehicle is equipped with Traction Control or Electronic Stability Control (ESC), turn the system OFF before attempting to “rock” the vehicle.

CAUTION!

- Racing the engine or spinning the wheels may lead to transmission overheating and failure. Allow the engine to idle with the shift lever in NEUTRAL for at least one minute after every five rocking-motion cycles. This will minimize overheating and reduce the risk of transmission failure during prolonged efforts to free a stuck vehicle.
- When “rocking” a stuck vehicle by moving between DRIVE/2nd and REVERSE, do not spin the wheels faster than 15 mph (24 km/h), or drivetrain damage may result.
- Revving the engine or spinning the wheels too fast may lead to transmission overheating and failure. It can also damage the tires. Do not spin the wheels above 30 mph (48 km/h) while in gear (no transmission shifting occurring).

WHAT TO DO IN EMERGENCIES

WARNING!

Fast spinning tires can be dangerous. Forces generated by excessive wheel speeds may cause damage, or even failure, of the axle and tires. A tire could explode and injure someone. Do not spin your vehicle's wheels faster than 30 mph (48 km/h) or for longer than 30 seconds continuously without stopping when you are stuck and do not let anyone near a spinning wheel, no matter what the speed.

CAP-LESS FUEL FILL FUNNEL

- The funnel for the Cap-Less Fuel System is located in the rear cargo area behind the rear seat. If your vehicle is out of fuel and an auxiliary fuel can is needed, insert the funnel into the filler neck and proceed to fill the vehicle.
- For more information on the Cap-Less Fuel Fill Funnel refer to "Adding Fuel" in "Operating Your Vehicle" in this manual.

MAINTAINING YOUR VEHICLE

OPENING THE HOOD

- Pull the red release lever located below the instrument panel and in front of the driver's door.
- Raise the hood and locate the safety latch in the middle of the hood opening.
- Move the safety latch while lifting the hood at the same time.
- Insert the support rod into the slot on the hood.
- To close the hood, remove the support rod and place it in the retaining clip, then lower the hood slowly.



WARNING!

Be sure the hood is fully latched before driving your vehicle. If the hood is not fully latched, it could open when the vehicle is in motion and block your vision. Failure to follow this warning could result in serious injury or death.

ENGINE COMPARTMENT

I.4L Turbo Engine



MAINTAINING YOUR VEHICLE

FLUIDS AND CAPACITIES

Component	Fluid, Lubricant, or Genuine Part	Capacities
Engine Coolant 1.4L Engine	We recommend you use MOPAR® Antifreeze/Engine Coolant 10 Year/150,000 Mile Formula OAT (Organic Additive Technology).	6.1 Quarts (5.8 Liters)
Engine Oil with Filter 1.4L Engine	We recommend you use API Certified SAE 5W-40 Full Synthetic Engine Oil.	4 Quarts (4.0 Liters)
Engine Oil Filter	We recommend you use MOPAR® Engine Oil Filters.	—
Fuel Selection 1.4L Engine	87 Octane Recommended – 91 Octane Acceptable	13.1 Gallons (50 Liters) (Approximate)
Manual Transmission	We recommend you use MOPAR® C635 DDCT/MTX Transmission Fluid.	—
Automatic Transmission	We recommend you use MOPAR® C635 DDCT/MTX Transmission Fluid.	—
Brake Master Cylinder	We recommend you use MOPAR® DOT 4.	—
Spark Plugs 1.4L Engine	We recommend you use MOPAR® Spark Plugs (Gap 0.026 in [.65 mm])	—

MAINTAINING YOUR VEHICLE

CAUTION!

- Mixing of engine coolant (antifreeze) other than specified Organic Additive Technology (OAT) engine coolant (antifreeze), may result in engine damage and may decrease corrosion protection. Organic Additive Technology (OAT) engine coolant is different and should not be mixed with Hybrid Organic Additive Technology (HOAT) engine coolant (antifreeze) or any "globally compatible" coolant (antifreeze). If a non-OAT engine coolant (antifreeze) is introduced into the cooling system in an emergency, the cooling system will need to be drained, flushed, and refilled with fresh OAT coolant (conforming to MS-12106), by an authorized studio as soon as possible.
- Do not use water alone or alcohol-based engine coolant (antifreeze) products. Do not use additional rust inhibitors or antirust products, as they may not be compatible with the radiator engine coolant and may plug the radiator.
- This vehicle has not been designed for use with propylene glycol-based engine coolant (antifreeze). Use of propylene glycol-based engine coolant (antifreeze) is not recommended.

MAINTENANCE SCHEDULE

Your vehicle is equipped with an automatic oil change indicator system. The oil change indicator system will remind you that it is time to take your vehicle in for scheduled maintenance.

Based on engine operation conditions, the oil change indicator message will illuminate. This means that service is required for your vehicle. Operating conditions such as frequent short-trips, trailer tow, extremely hot or cold ambient temperatures, and E85 fuel usage will influence when the "Change Oil" or "Oil Change Required" message is displayed. Severe Operating Conditions can cause the change oil message to illuminate as early as 3,500 miles (5,600 km) since last reset. Have your vehicle serviced as soon as possible, within the next 500 miles (805 km).

NOTE:

Under no circumstances should oil change intervals exceed 10,000 miles (16,000 km) or twelve months, whichever comes first.

Once A Month Or Before A Long Trip:

- Check engine oil level
- Check windshield washer fluid level
- Check the tire inflation pressures and look for unusual wear or damage
- Check the fluid levels of the coolant reservoir, brake master cylinder reservoir, and transmission as needed
- Check function of all interior and exterior lights

MAINTAINING YOUR VEHICLE

Required Maintenance Intervals.

Refer to the maintenance schedules on the following page for the required maintenance intervals.

At Every Oil Change Interval As Indicated By Oil Change Indicator System:
<ul style="list-style-type: none">• Change oil and filter.
<ul style="list-style-type: none">• Rotate the tires. Rotate at the first sign of irregular wear, even if it occurs before the oil indicator system turns on.
<ul style="list-style-type: none">• Inspect battery and clean and tighten terminals as required.
<ul style="list-style-type: none">• Inspect automatic transmission fluid if equipped with dipstick.
<ul style="list-style-type: none">• Inspect brake pads, shoes, rotors, drums, and hoses.
<ul style="list-style-type: none">• Inspect engine cooling system protection and hoses.
<ul style="list-style-type: none">• Check and adjust hand brake.
<ul style="list-style-type: none">• Inspect exhaust system.
<ul style="list-style-type: none">• Inspect engine air cleaner if using in dusty or off-road conditions.

Maintenance Chart

Refer to the Maintenance Schedules on the following pages for the required maintenance intervals.

Mileage or time passed (whichever comes first)	20,000	30,000	48,000	64,000	80,000	96,000	112,000	128,000	144,000	160,000	176,000	192,000	208,000	224,000	240,000
Or Years:	2	3	4	5	6	7	8	9	10	11	12	13	14	15	
Or Kilometers:	32,000	48,000	64,000	80,000	96,000	112,000	128,000	144,000	160,000	176,000	192,000	208,000	224,000	240,000	
Additional Inspections															
Inspect the CV joints.		×			×				×			×			×
Inspect front suspension, tie rod ends and boot seals, and replace if necessary.	×		×		×		×		×		×		×		
Inspect the brake linings, parking brake function.	×		×		×		×		×		×		×		
Additional Maintenance															
Replace engine air filter.	×		×		×		×		×		×		×		
Replace cabin air filter.	×		×		×		×		×		×		×		
Replace Brake Fluid every two years	×		×		×		×		×		×		×		
Clean and lube sun roof tracks.	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Replace spark plugs.**		×			×			×				×			
Flush and replace the engine coolant at 10 years or 150,000 miles (240,000 km) whichever comes first.									×						×
Inspect and replace PCV valve if necessary.									×						
Replace the timing belt.															×

** The spark plug change interval is mileage based only; yearly intervals do not apply.

WARNING!

- You can be badly injured working on or around a motor vehicle. Do only service work for which you have the knowledge and the right equipment. If you have any doubt about your ability to perform a service job, take your vehicle to a competent mechanic.
- Failure to properly inspect and maintain your vehicle could result in a component malfunction and effect vehicle handling and performance. This could cause an accident.

MAINTAINING YOUR VEHICLE

FUSES

Underhood Fuses

- A third fuse panel is located on the driver's side of the engine compartment, next to the battery. To access the fuses, press the release tabs and remove the cover.
- The ID number of the electrical component corresponding to each fuse can be found on the back of the cover.



Cavity	Maxi Fuse	Mini Fuse	Description
F01	60 Amp Blue		Body Controller
F02	60 Amp Blue		Body Controller Rear Distribution Unit
F03	20 Amp Yellow		Ignition Switch
F04	40 Amp Orange		Anti-Lock Brake Pump
F05	70 Amp Tan		Electric Power Steering
F06	30 Amp Green		Radiator Fan - Low Speed
F07	50 Amp Red		Radiator Fan - High Speed
F08	40 Amp Orange		Blower Motor
F09		7.5 Amp Brown	Transmission
F10		15 Amp Blue	Horn
F11		10 Amp Red	Powertrain
F14		20 Amp Yellow	Power Outlet 115V
F15		15 Amp Blue	Transmission
F16		7.5 Amp Brown	Transmission Powertrain
F17		10 Amp Red	Powertrain
F18		5 Amp Tan	Powertrain (Multiair – If Equipped)
F19		7.5 Amp Brown	Air Conditioning
F20		30 Amp Green	Rear Defroster
F21		15 Amp Blue	Fuel Pump
F23		20 Amp Yellow	Anti-Lock Brake Valves
F24		7.5 Amp Brown	Stability Control System

MAINTAINING YOUR VEHICLE

Cavity	Maxi Fuse	Mini Fuse	Description
F30		5 Amp Tan	After Run Pump
F81	70 Amp Tan		PTC (Secondary)
F82	40 Amp Orange		Transmission
F83	40 Amp Orange		PTC (Primary)
F84		7.5 Amp Brown	Transmission
F85		15 Amp Blue	Front Power Outlet 12V
F86		15 Amp Blue	Rear Power Outlet 12V
F88		7.5 Amp Tan	Heated Mirrors

Interior Fuses

- The interior fuse panel is part of the Body Control Module (BCM) and is located on the driver's side under the instrument panel.



Cavity	Vehicle Fuse Number	Mini Fuse	Description
1	F12	7.5 Amp Brown	Right Low Beam
2	F32	7.5 Amp Brown	Front and Rear Ceiling Lights Trunk and Door Courtesy Lights
3	F53	7.5 Amp Brown	Instrument Panel Node
4	F38	20 Amp Yellow	Central Door Locking
5	F36	15 Amp Blue	Diagnostic Socket, Car Radio, Climate Control System, TPMS, Sunroof
6	F43	20 Amp Yellow	Bi-Directional Washer
7	F48	20 Amp Yellow	Passenger Power Window
8	F13	7.5 Amp Brown	Left Low Beam, Headlamp Leveling
9	F50	7.5 Amp Brown	Airbag

MAINTAINING YOUR VEHICLE

Cavity	Vehicle Fuse Number	Mini Fuse	Description
10	F51	5 Amp Tan	Car Radio Switch, Climate Control System, Stop Light, Clutch, Reverse Gear, Sunroof, Parking Sensor, Rear Camera
11	F37	7.5 Amp Brown	Stop Light Switch, Instrument Panel Node
12	F49	5 Amp Tan	Exterior Mirror, GPS, Electric Mirror, Parking Sensor
13	F31	5 Amp Tan	Climate Control, Seat Regulation
14	F47	20 Amp Yellow	Driver Power Window

Rear Interior Fuses

- The rear interior fuse panel is located on the driver's side in the rear compartment.

Cavity	Vehicle Fuse Number	Mini Fuse	Description
1	F61	15 Amp Blue	Lumbar Regulation Seats
2	F62	15 Amp Blue	Heated Seats
3	F64	20 Amp Yellow	Hi Fi System
4	F65	20 Amp Yellow	Sun Blind
5	F66	20 Amp Yellow	Sunroof
6	F90	7.5 Amp Brown	Left High Beam
7	F91	7.5 Amp Brown	Right High Beam
8	F92	7.5 Amp Brown	Left Fog Light
9	F93	7.5 Amp Brown	Right Fog Light
10	F33	5 Amp Tan	BSM, ESP
11	F34	20 Amp Yellow	Rear Left Passenger Window
12	F49	20 Amp Yellow	Rear Right Passenger Window


MAINTAINING YOUR VEHICLE

TIRE PRESSURES

- Check the inflation pressure of each tire, at least monthly and inflate to the recommended pressure for your vehicle.
- The tire pressures recommended for your vehicle are found on the "Tire and Loading Information" label located on the driver's side door opening.

NOTE:

Refer to the Owner's Manual on the DVD for more information regarding tire warnings and instructions.

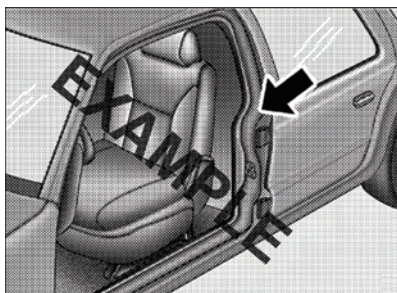

WARNING!

- Overloading of your tires is dangerous. Overloading can cause tire failure, affect vehicle handling, and increase your stopping distance. Use tires of the recommended load capacity for your vehicle. Never overload them.
- Improperly inflated tires are dangerous and can cause collisions. Under-inflation is the leading cause of tire failure and may result in severe cracking, component separation, or "blow out". Over-inflation reduces a tire's ability to cushion shock. Objects on the road and chuck holes can cause damage that results in tire failure. Unequal tire pressures can cause steering problems. You could lose control of your vehicle. Over-inflated or under-inflated tires can affect vehicle handling and can fail suddenly, resulting in loss of vehicle control.

MAINTAINING YOUR VEHICLE

WHEEL AND WHEEL TRIM CARE

- All wheels and wheel trim, especially aluminum and chrome plated wheels, should be cleaned regularly with a mild soap and water to prevent corrosion.
- To remove heavy soil and/or excessive brake dust, use a wheel cleaner or equivalent or select a non-abrasive, non-acidic cleaner.

CAUTION!

Do not use scouring pads, steel wool, a bristle brush, or metal polishes. Do not use oven cleaner. These products may damage the wheel's protective finish. Avoid automatic car washes that use acidic solutions or harsh brushes that may damage the wheel's protective finish.

EXTERIOR BULBS

LIGHT BULBS – Exterior	Bulb Number
Front Low and High Beam Headlamp	H1R2LL
Front Turn Signal Lamps	WY21W
Front Parking/Daytime Running Lamps	W21/5W
Front Side Marker Lamps	LED (See Authorized studio)
Rear Tail/Stop Lamps	P21/5W
Rear Tail Lamp	LED (See Authorized studio)
Rear Turn Signal Lamps	P21W
Rear Backup Lamps	W16W
Rear Side Marker Lamps	LED (See Authorized studio)
Center High Mounted Stop Lamp	LED (See Authorized studio)
Front Fog Lamps	H11
Rear Fog Lamps - If Equipped	W16W
License Plate Lamps	W5W

FIAT CUSTOMER CENTER

P.O. Box 21–8004

Auburn Hills, MI 48321–8004

Phone: 1-888-242-6342

ASSISTANCE FOR THE HEARING IMPAIRED

- To assist customers who have hearing difficulties, the manufacturer has installed special TDD (Telecommunication Devices for the Deaf) equipment at its customer center. Any hearing or speech impaired customer, who has access to a TDD or a conventional teletypewriter (TTY) in the United States, can communicate with the manufacturer by dialing 1–800–380–CHRY. Canadian residents with hearing difficulties that require assistance can use the special needs relay service offered by Bell Canada. For TTY teletypewriter users, dial 711 and for Voice callers, dial 1–800–855–0511 to connect with a Bell Relay Service operator.

WARNING!

Engine exhaust, some of its constituents, and certain vehicle components contain, or emit, chemicals known to the State of California to cause cancer and birth defects, or other reproductive harm. In addition, certain fluids contained in vehicles and certain products of component wear contain, or emit, chemicals known to the State of California to cause cancer and birth defects, or other reproductive harm.

PUBLICATIONS ORDERING

- **If you are the first registered retail owner of your vehicle**, you may obtain one free printed copy of the Owner's Manual, Warranty Booklet or Radio Manuals on your DVD by calling 1–888–242–6342 (U.S.) or 1–800–387–1143 (Canada) or by contacting your studio.
- Replacement English User Guide kits or DVDs may be purchased by visiting www.techauthority.com or by calling 1–800–890–4038 (U.S.) or 1–800–387–1143 (Canada). Visa, Master Card, American Express and Discover orders are accepted. If you prefer mailing your order, please call the above numbers for an order form.

NOTE:

A street address is required when ordering manuals (no P.O. Boxes).

CONSUMER ASSISTANCE

REPORTING SAFETY DEFECTS IN THE UNITED STATES

- If you believe that your vehicle has a defect that could cause a collision or cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying the manufacturer.
- If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your authorized studio and the manufacturer.
- To contact NHTSA, you may either call the Auto Safety Hotline toll free at 1-888-327-4236 (TTY: 1-800-424-9153), or go to <http://www.safercar.gov>; or write to: Administrator, NHTSA, 1200 New Jersey Avenue, SE., West Building, Washington, D.C. 20590. You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

In Canada

- If you believe that your vehicle has a safety defect, you should contact the Customer Service Department immediately. Canadian customers who wish to report a safety defect to the Canadian government should contact Transport Canada, Motor Vehicle Defect Investigations and Recalls at 1-800-333-0510 or go to <http://www.tc.gc.ca/eng/roadsafety/safedrivers-childsafety-index-53.htm>
- French Canadian customers who wish to report a safety defect to the Canadian government should contact Transport Canada, Motor Vehicle Defect Investigations and Recalls at 1-800-333-0510 or go to <http://www.tc.gc.ca/securiteroutiere/>

AUTHENTIC ACCESSORIES BY MOPAR®

- The following highlights just some of the many Authentic FIAT Accessories by Mopar® featuring a fit, finish, and functionality specifically for your FIAT 500 L.
- In choosing Authentic Accessories you gain far more than expressive style, premium protection, or extreme entertainment, you also benefit from enhancing your vehicle with accessories that have been thoroughly tested and factory-approved.
- For the full line of Authentic FIAT Accessories by Mopar®, visit your local FIAT studio or online at mopar.com.

EXTERIOR:

- Chrome Hood Spear
- Chrome Mirror Cover
- Front Air Deflector
- Roof And Body Graphics
- 17" Wheels
- Wheel Locks
- Roof Rack
- Front End Cover
- Molded Splash Guards
- Vehicle Cover

INTERIOR:

- Door Sill Guards
- Chrome Shift Knob
- Pedal Kits
- Cargo Tray
- Interior Appliques
- Key Covers
- Roadside Safety Kit
- Seat Covers
- Premium Carpet Mats
- Slush Mats
- Cargo Organizer
- Katzkin Leather Interiors

ELECTRONICS:

- GPS Tracking System(s)
- Wi-Fi
- Sound System Upgrades
- In Wireless Charging
- Interior/Ambient Lighting

CARRIERS:

- Roof Rack
- Snowboard/Ski Carrier
- Bike Carrier
- Luggage Carrier
- Hitch-mount Bike Carrier
- Roof Basket

PERFORMANCE:

- Cold Air Intake
- Performance Exhaust

INDEX

Adding Fuel28	Instrument Cluster Warning Lights.65
Arming Theft System (Security Alarm)8	Interior and Instrument Lights5, 31
Automatic Temperature Control (ATC)23	Inverter Outlet (115V)61
Belts, Seat10	Inverter, Power.61
Break-In Recommendations, New Vehicle18	Jack Operation70
Bulb Replacement98	Lane Change Assist18
Caps, Filler28	Lights	
Fuel86	Tire Pressure Monitoring (TPMS)66
Changing A Flat Tire70	Turn Signal18
Cruise Control (Speed Control).20	Maintenance Schedule90
Customer Assistance.99	Malfunction Indicator Light (Check Engine)68
Customer Programmable Features58	Mirrors	
Defects, Reporting100	Heated22, 23
Disarming, Theft System8	Navigation48
Driver Cockpit4	New Vehicle Break-In Period.18
Electronic Speed Control (Cruise Control)20	Outlet	
Electronic Stability Control (ESC)29	Power62
Electronic Vehicle Information Center (EVIC)57	Overheating, Engine69
Emergency, In Case of		Placard, Tire and Loading Information97
Brake Warning Light67, 68	Power	
Freeing Vehicle When Stuck83	Inverter61
Jacking70	Outlet (Auxiliary Electrical Outlet)62
Towing84	Programmable Electronic Features.58
Engine		Rear Seat, Folding15
Break-In Recommendations18	Reclining Front Seats.14
Compartment88	Recreational Towing64
Overheating69	Replacement Bulbs.98
Exterior Lights98	Reporting Safety Defects100
Flash-To-Pass.19	Schedule, Maintenance.90
Folding Rear Seat15	Seat Belts10
Freeing A Stuck Vehicle.85	Seats	
Front Heated Seats17	Adjustment14
Fuse94	Heated17
Fuses.94	Rear Folding15
Heated Mirrors.22, 23	Signals, Turn18
Heated Seats.17	Speed Control (Cruise Control).20
HomeLink® (Garage Door Opener)59	Steering	
Hood Release87	Tilt Column17
Information Center, Vehicle.57		

INDEX

Stuck, Freeing85	Recreational64
Theft System Arming8	Towing Vehicle Behind a Motorhome64
Theft System Disarming.8	Turn Signals18
Tilt Steering Column.17	Uconnect® 5.033
TIREFIT76	Uconnect® 6.5N42
Tires		Washer	
Air Pressure97	Rear20
Changing70	Wheel and Wheel Trim Care98
Jacking70	Windshield Wipers.19
Towing		Wiper, Rear20
Disabled Vehicle84		

FAQ (How To?)

FREQUENTLY ASKED QUESTIONS

GETTING STARTED

- How do I install my LATCH Equipped Child Seat? pg. 12
- How do I adjust my rear seat? pg. 15

ELECTRONICS

- What Sound System do I have? pg. 30
- How do I set the clock on my radio? pg. 33
- How do I set the presets on my radio? pg. 34
- How do I use my USB/Audio Jack (AUX)? pg. 35
- How do I pair my cell phone via Uconnect® Phone (Bluetooth® Hands Free Calling)? pg. 36

UTILITY

- How much can I tow with my FIAT 500L? pg. 64
- How do I tow my FIAT 500L behind another vehicle? pg. 64

WHAT TO DO IN EMERGENCIES

- What do I do if my TPMS warning light is blinking? pg. 66
- How do I Jump-Start my vehicle? pg. 81
- What should I do if my engine overheats? pg. 69
- How do I change a flat tire? pg. 70

MAINTAINING YOUR VEHICLE

- Where is my underhood fuse block located? pg. 94
- Where is my interior fuse block located? pg. 95
- What type of oil do I use? pg. 89
- How often should I change my engines oil? pg. 90
- What should my tire pressure be set at? pg. 97

This guide has been prepared to help you get quickly acquainted with your new FIAT and to provide a convenient reference source for common questions. However, it is not a substitute for your Owner's Manual.

For complete operational instructions, maintenance procedures and important safety messages, please consult your Owner's Manual, Navigation/Uconnect® Manuals and other Warning Labels in your vehicle.

Not all features shown in this guide may apply to your vehicle. For additional information on accessories to help personalize your vehicle, visit www.mopar.com (U.S.), www.mopar.ca (Canada) or your local FIAT studio.


Driving and Alcohol: Drunken driving is one of the most frequent causes of collisions. Your driving ability can be seriously impaired with blood alcohol levels far below the legal minimum. If you are drinking, don't drive. Ride with a designated non-drinking driver, call a cab, a friend, or use public transportation.

WARNING

Driving after drinking can lead to a collision. Your perceptions are less sharp, your reflexes are slower, and your judgment is impaired when you have been drinking. Never drink and then drive.



I4BF-926-AA
First Edition
User Guide

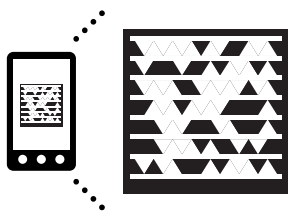

Download a free Vehicle Information App

by visiting your application store, Keyword (My FIAT), or scanning the Microsoft Tag. To put Microsoft Tags to work for you, use your mobile phone's browser or App store to download a Microsoft Tag reader, like the free one at www.gettag.mobi. Then follow the directions to scan the code.

Download a FREE electronic copy

of the Owner's Manual or Warranty Booklet by visiting the Owners tab at:

www.fiatusa.com (U.S.)