USER MANUAL

WATER LEAK XS SENSOR

7.SE42 800LR



Quick and reliable water leak alerts

- sent to your Z-Wave hub • NEW 800 series chip for faster
- communication and more battery life than ever Extra small to fit anywhere
- Z-Wave Long Range for ultra reliable no-mesh communication
- The latest S2 security and SmartStart for secure set-up
- Supports OTA firmware updates
- **SPECIFICATIONS**

Model Number: ZSE42 800LR

- Power: 1 x CR2450 battery • Operating Temperature: 32° – 104° F
- Range: Up to 130 feet line of sight (up
- to 1300 ft with Long Range) Installation and Use: Indoor or
- outdoor under eve (can't be exposed to direct rainfall or sun, a little splash
- is OK) Dimensions: 2.4" x 1.4" x 0.4" INSTALLATION

1. INSTALL THE BATTERY

Use the included round tool to

gently twist the battery cover 90° to the left to open it. Insert the battery with positive + side UP, sliding it under the holding block as shown in the image below: Close the cover with the same


round tool by twisting it 90° to the right. The LED indicator on the front of the sensor (top right corner) will start blinking for is powered. The LED indicator doesn't blink



or light up at all? Make sure the battery is

inserted correctly per the positive / negative pole marks. • Try a fresh lithium non-

- rechargeable battery. Click the Z-Wave button 3
- times as quickly as possible to force inclusion/exclusion
- mode in case you missed when it first flashed. SCAN -OR CODE FOR SMARTSTART

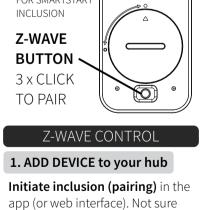

If you're using an S2 hub, it will ask you to enter the DSK PIN or scan the QR code printed on the inside

how? ask@getzooz.com

of the back cover of the sensor to complete SmartStart inclusion.

2. ACTIVATE the sensor While the hub is looking for new devices, click the Z-Wave button 3 times as quickly as possible. The LED indicator will start

flashing to confirm inclusion mode and turn off once inclusion is completed. TIP! It's best to add your sensor from the area where it will be installed

so the hub can find the best route

NEED SOME HELP? ask@getzooz.com

Choose your hub and scan the QR code with your phone's camera. Then click on the link to access the step-by-step pairing instructions.



Hubitat





Get more tutorials and helpful tips at ww.support.getzooz.com

TROUBLESHOOTING

The sensor won't add to your

system? Try this: 1. Initiate **EXCLUSION** in your hub and click the Z-Wave button 3

- times as quickly as possible. 2. Click the Z-Wave button quicker when adding it.
- 3. Bring the sensor **closer** to your hub, it may be out of range.
- 4. Double-check if the device is powered. 5. Get troubleshooting tips specific
 - to your hub at www.support.getzooz.com
 - **EXCLUSION (REMOVE DEVICE)**

1. Bring the sensor within direct range of your Z-Wave hub.

- 2. Put the Z-Wave hub into exclusion mode (not sure how to
- do that? ask@getzooz.com). 3. Click the **Z-Wave button 3 times** as quickly as possible.
- 4. Your hub will confirm exclusion and the sensor will disappear
 - from your controller's device list.

FACTORY RESET

When your network's primary controller is missing or otherwise inoperable, you may need to reset the device to factory settings manually. In order to complete the

process, make sure the sensor is powered, then click the Z-Wave button twice and hold it the third time for 10 seconds. The LED

Wave button twice more to finalize the reset. The LED indicator will flash 3 times to

confirm a successful reset.

indicator will blink continuously.

Immediately after, click the Z-

device's memory. WAKE-UP MODE

The sensor's wake-up interval is set

NOTE: All previously recorded activity and

custom settings will be erased from the

to 12 hours by default to save battery life. Use the Wake Up Command Class to adjust the interval. Click the Z-Wave button 4 times quickly to wake the sensor up manually. The LED indicator will flash once to confirm the device is awake. During wake-up, the sensor turns the Z-Wave radio on for one minute to receive communication from the hub. Long wake-up interval will not affect how often the sensor reports to your hub so we recommend leaving the default setting to conserve battery. **ASSOCIATION**

Lifeline communication and Group 2 with up to 5 devices for basic on/off control. This device will send a Basic Set command to Group 2 whenever it detects water. The value of the basic set command sent to Group 2 can be adjusted in the advanced settings to customize the sensor's behavior. Please note that not all Z-Wave systems give users access to direct association settings so if you're note sure where to find it, please get in touch with our support and

PAGE 2

we'll be happy to help.

The XS Sensor supports Group 1 for

ADVANCED SETTINGS

Parameter 1: Turn the **LED** indicator on (blinking) or off when a water leak is detected. <u>Values:</u> 0 – LED indicator won't

blink when the sensor detects a water leak; 1 - LED indicator will blink when the sensor detects a water leak (default). Size: 1 byte dec

Parameter 2: Decide how long the

sensor should report water leak detection after a leak is no longer detected on the sensor side. Values: 0 - 3600 (seconds) Default: 0 (reports "dry" to the hub immediately after a leak is no longer detected) Size: 4 byte dec

Parameter 4: Decide when the sensor should report low battery to the hub. Values: 10-50 (% battery life). Default: 20

Size: 1 byte dec Click the Z-Wave button 4 times

quickly to wake the sensor up after updating the settings. We listed the most helpful settings above. For a complete list of

parameters, please go to www.support.getzooz.com or scan the QR code for a direct link to all of the settings.

ask@getzooz.com

Not sure how to access advanced


settings on your hub? We'll help!

SENSOR PLACEMENT

INDOOR PLACEMENT 1. We recommend including your

sensor to the Z-Wave network

- from the location you want to install it. 2. Choose a spot in the area you would like to monitor for water
- leaks which will not be easily accessible to pets or children to avoid it being misplaced. 3. Simply place the sensor on a flat surface with the 4 probes
- touching the ground for best results. The sensor will detect a leak when water reaches any of the 2 probe pairs shown in the below drawing. 4. Test the sensor by simulating a leak - it should start blinking and
- send a report to the hub when water is detected.

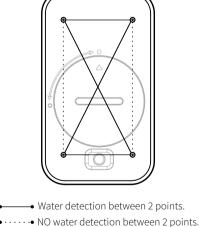

- **OUTDOOR PLACEMENT**

1. This sensor is IP66 rated which

- means it is dust-tight and protected from heavy rainfall. We recommend placing the sensor under eve to prevent long exposure to direct sunlight when using it outdoors. 2. Add the sensor to Z-Wave from
- the area where it will be installed for best connectivity results.
- Simply place the sensor on flat surface you would like to monitor for leaks so that all 4 probes under the sensor are touching ground. The sensor will report a leak to the hub anytime water is present between any of the probe pairs pictured in the drawing.



Scan to register your product for extended warranty and direct access to firmware files.

COMMAND CLASSES ZWAVEPLUS_INFO_V2

ASSOCIATION_V3 MULTI_CHANNEL_ASSOCIATION_V4 ASSOCIATION_GRP_INFO_V3 TRANSPORT_SERVICE_V2 VERSION V2 MANUFACTURER_SPECIFIC DEVICE_RESET_LOCALLY POWERLEVEL BATTERY SECURITY_2 NOTIFICATION_V8 INDICATOR V3 ENSOR_BINARY_V2 CONFIGURATION_V4 WAKE UP V2 SUPERVISION FIRMWARE_UPDATE_MD_V5



This product can be included and operated in any Z-Wave network with other Z-Wave certified devices from other manufacturers and/or other applications. All non-battery operated nodes within the network will act as repeaters regardless of vendor to increase reliability of the network. This product features the latest Security 2 (S2) framework to remove smart home network hacking risks. This device is equipped with a unique authentification code for trusted wireless communication

This product should be installed indoors or outdoors under eve

- upon completion of any building renovations. Prior to installation, the device should be stored in a dry, dust-
- and-mold-proof place. • Do not install the device in a place
- with direct sun exposure, high temperature, or humidity. · Keep away from chemicals, water,

and dust.

- Ensure the device is never close to any heat source or open flame to
- prevent fire. No part of the device may be replaced or repaired by the user
- WARRANTY This product is covered under a 12-

except for the batteries.

month limited warranty and 5-year

extended warranty once registered. To read the full warranty policy, register your product, or file a warranty claim, please go to ww.getzooz.com/warranty IN NO EVENT SHALL ZOOZ OR ITS SUBSIDIARIES AND AFFILIATES BE LIABLE FOR ANY INDIRECT, INCIDENTAL

PUNITIVE, SPECIAL, OR CONSEQUENTIAL DAMAGES, OR DAMAGES FOR LOSS OF PROFITS, REVENUE, OR USE INCURRED BY CUSTOMER OR ANY THIRD PARTY, WHETHER IN AN ACTION IN CONTRACT, OR OTHERWISE EVEN II ADVISED OF THE POSSIBILITY OF SUCH DA-MAGES. ZOOZ'S LIABILITY AND CUSTOMER'S EXCLUSIVE REMEDY FOR ANY CAUSE OF ACTION ARISING IN CON-NECTION WITH THIS AGREEMENT OR THE SALE OR USE OF THE PRODUCTS, WHETHER BASED ON NEGLIGENCE, STRICT LIABILITY BREACH OF WARRANTY, BREACH OF AGREEMENT, OR EQUITABLE PRINCIPLES, IS EXPRESSLY LIMITED TO, AT ZOOZ'S OPTION, REPLACEMENT OF, OR REPAYMENT OF ZOOZ SOFTION, REPLACEMENT OF, OR REPLAIMENT OF THE PURCHASE PRICE FOR THAT PORTION OF PRODUCTS WITH RESPECT TO WHICH DA-MAGES ARE CLAIMED, ALL CLAIMS OF ANY KIND ARISING IN CONNECTION WITH THIS AGREEMENT OR THE SALE OR USE OF PRODUCTS SHALL BE DEEMED WAIVED UNLESS MADE IN WRITING WITHIN THIRTY (30) DAYS FROM ZOOZ'S DELIVERY, OR THE DATE FIXED FOR DELIVERY IN THE EVENT OF NONDELIVERY. THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH

MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT. STORE INDOORS WHEN NOT IN USE. SUITABLE FOR DRY LOCATIONS ONLY. DO NOT IMMERSE IN WATER, NOT FOR USE WHERE DIRECTLY EXPOSED TO WATER. This device complies with Part 15 of the FCC Rules Operation is subject to the following conditions:

This device may not cause harmful interference,
This device must accept any interference received,

including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of

the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used according to instructions, may cause harmful interference to radio

communications. However, there is no guarantee that interference will not occur in any given installation. If this equipment causes harmful interference to radio or

television reception, the user may try to correct the interference by taking one or more of the following

- measures: - Reorient or relocate receiving antenna
- Increase the separation between equipment and receiver - Connect equipment into a separate outlet or circuit from
- Consult the dealer or an experienced radio/TV technician for additional assistance

PAGF 4

All brand names displayed are trademarks of their respective holders.

© Zooz 2025

receiver