MotoTec Pro 72v 5000w



OWNER'S MANUAL ELECTRIC DIRT BIKE HP117E

DANGER

Meaning: This term calls attention to a Danger. This indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. Read the text accompanying

the Danger to be aware of the specific hazard.

MARNING

Meaning: This term calls attention to a Warning. This indicates a potentially hazardous situation that, if not avoided, could result in serious injury, in addition to property damage. Read the text accompanying the warning to be aware of the specific hazard.

♠ CAUTION

Meaning: This term calls attention to a Caution. This indicates a potentially hazardous situation that, if not avoided, may result in minor injury and/or damage to equipment or inadvertent system failure. Read the text accompanying the Caution to be aware of the specific

hazard and avoid damage or system failure.

NOTE

Meaning: This term calls attention to a Note. The text accompanying a Note provides helpful or other important related information.



ADULT SUPERVISION REQUIRED

This vehicle must be used in the presence of adult supervision to ensure that safe riding practices are established and followed.



NOT SUITABLE FOR CHILDREN UNDER 16 YEARS OF AGE

This bike is not designed to be used by children under 16 years old.



READ THE USER MANUAL BEFORE USE

This manual contains IMPORTANT INFORMATION that every owner must fully understand.



WEAR A HELMET, BOOTS, GLOVES LONG SLEEVE JERSEY

The rider must wear a helmet & appropriate safety gear every time. The rider also be recommended to wear protective armor. Do not use the bike with loose clothing, long exposed hair, or laced shoes.



OFF ROAD USE ONLY!

The Electric Bikes are designed for off-road use only and must not be used on public roads or sidewalks. Please check and obey all local laws.



OPERATOR ONLY - NO PASSENGERS!

The Electric Bike is designed for one rider only, more than one rider will over-stress the bike.



DO NOT TOUCH MOVING PARTS

Risk of entrapment and entanglement if moving parts are touched.



DO NOT TOUCH HOT SURFACES

The potential hot surfaces are highlighted on page 8.

INTRODUCTION



Thank you for purchasing this product. The proper care and maintenance that your vehicle requires are outlined in this manual. Following the instructions will ensure a long trouble-free operating life of this vehicle and your satisfaction with it.

The owner's manual corresponded to the latest state of this vehicle at the time of printing. Slight deviations resulting from continuing development and design can, however, not be completely excluded. All specifications are non-binding, we reserve the right to modify or delete technical specifications, parts, design, etc. without prior notice.

SAFETY WARNINGS

This vehicle is NOT A TOY and is ONLY used in closed-off areas remote from public road traffic. Never permit children under the age of **16** to operate this vehicle.

Adult supervision is required if children are under the age of **16**.

WARNING:

Riding this vehicle can be a hazardous activity. Certain conditions may cause the equipment to fail without the fault of the manufacturer. Like other vehicles, the Mini Dirt Bike can and is intended to move, and it is therefore possible to lose control, fall off, and/or get into dangerous situations that no amount of care, instruction, or expertise can eliminate. If such things occur

you can be seriously injured or die, even when using safety equipment and other precautions. RIDE AT YOUR OWN RISK AND USE COMMON SENSE.

This manual contains many warnings and cautions concerning the consequences of failing to maintain, inspect, or properly use your mini dirt bike. Because any incident can result in serious injury or even death, we do not repeat the warning of possible serious injury or death each time such a possibility is mentioned.

APPROPRIATE RIDER USE AND PARENTAL SUPERVISION

This manual contains important safety information and useful tips to help you and your child operate and handle the mini dirt bike. Carefully read the manual in its entirety together with your child before letting your child ride it for the first time. The manual also contains important information on servicing the vehicle.

It is your responsibility to review the manual and make sure that all riders understand all warnings, cautions, instructions, and safety topics and assure that the riders can safely and responsibly use this product and protect your child from injury. We recommend that you periodically review and reinforce the information in this manual with your child and that you inspect and maintain your children's vehicle to ensure their safety. The recommended rider age of 16 years is only an estimate and can be affected by the rider's size, weight, or skills. Any rider unable to fit comfortably on this vehicle should not attempt to ride it.

It is important and necessary to conduct technical training for your child before first use. To get the train information, please contact the dealer whom you purchase the vehicle from. Before your child completes the training, do not let your child use this vehicle.

Children often underestimate or fail to recognize the dangerous situation, you should make it clear to your children that they should not, under any circumstances, operate the vehicle without supervision and that your child may only drive at speeds that are commensurate with the child's riding ability and other road condition.

A parent's decision to allow his or her child to ride this vehicle should be based on the child's maturity, skill, and ability to follow rules.

Keep this product away from small children younger than age 16 and remember that this product is intended for use only by persons who are, at a minimum, completely comfortable and competent while operating the vehicle.

Do not exceed **95kgs** total weight on this vehicle. Rider weight does not necessarily mean a person's size is appropriate to fit or maintain control of this vehicle.

Do not touch the brakes or motor on your bike when in use as they can become very hot.

ACCEPTABLE RIDING PRACTICES AND CONDITIONS

Always check and obey any local laws or regulations that may affect the locations where the vehicle may be used.

Ride defensively. Watch out for potential objects that could catch your heel or force you to swerve suddenly or lose control. Be careful to avoid pedestrians, skaters, skateboards, scooters, bikes, children, or animals who may enter your path, and respect the rights and property of others.

This vehicle is meant to be used only in controlled environments free of potential traffic hazards and not on public streets or sidewalks. Do not ride your vehicle in any areas where pedestrians or product traffic is present.

Do not activate the throttle (speed control) on the hand grip unless you are on the bike and a safe, outdoor environment suitable for riding.

The vehicle was manufactured for performance and durability but was not impervious to damage. Jumping or other aggressive ridings can over-stress and damage any product, including this vehicle. The rider assumes all risks associated with the high-stress activity. Be careful and know your limitations. The risk of injury increases as the degree of riding difficulty increases. The rider assumes all risks associated with aggressive riding activities.

Maintain a hold on the handlebars at all times.

Never carry passengers or allow more than one person at a time to ride the vehicle.

Never use nearby steps or swimming pools.

Keep your fingers and other body parts away from the drive chain, steering system, wheels, and all other moving components.

Never use headphones or a cell phone when riding.

Never hitch a ride with another vehicle.

Do not ride the vehicle in wet or icy weather and never immerse the vehicle in water. The electrical and drive components could be damaged by water or create other possibly unsafe conditions.

The vehicle is intended for use on flat, level ground without loose debris such as rocks or gravel. Wet, slick, bumpy, uneven or rough surfaces may impair traction and contribute to possible accidents. Do not ride the vehicle in mud, ice, puddles or water. Avoid excessive

speed that can be associated with downhill rides. Never risk damaging surfaces such as a carpet or flooring by use of the vehicle indoors.

Do not ride at night or when visibility is limited.

PROPER RIDING ATTIRE

Always wear proper protective equipment such as an approved safety helmet, elbow pads, and kneepads. A helmet may be legally required by local law or regulation in your area. A long-sleeved shirt, long pants, and gloves are recommended. Always wear athletic shoes, never drive barefoot or in sandals, and keep shoelaces tied and out of the way of the wheels, motor, and drive system.

USING THE CHARGER

The charger supplier with the vehicle should be regularly examined for damage to the cord, plug, enclosure, and other parts, and in the event of any damage, the bike must not be charged until the charger has been repaired or replaced.

Use only with the recommended charger.

Use caution when charging.

The charger is not a toy. The charger should be operated by an adult.

Do not operate the charger near flammable materials.

Unplug the charger and disconnect it from the bike when not in use.

Always disconnect from the charger before wiping down and cleaning the vehicle with liquid.

FAILURE TO USE COMMON SENSE AND HEED THE ABOVE WARNINGS INCREASES THE RISK OF SERIOUS INJURY. USE WITH APPROPRIATE CAUTION AND SERIOUS ATTENTION TO SAFE OPERATION.

WARNING STICKER LOCATION




Sticker A is located on the left front suspension.



Sticker B is located on the fuel tank.



Sticker C is located on the fuel tank

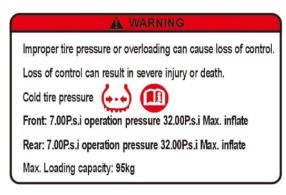

Sticker D is located in the chain cover.



Sticker E is located on the motor.



Sticker F is located near the charging port.



PIN LOCATION



The PIN is stamp marked on an aluminum plate that is riveted on the rear swing arm. The product main specification information is on this PIN plate.

PIN means the Product Identify Number which is unique for each unit.

DIRT BIKE PARTS & FUNCTION



1.	Ma	in f	ran	20
1.	ivia	II I I	ıanı	ıc

4. Handlebar

7. Front fender

10. Front wheel

13. Footrest

16. Front brake disc

19. Rear swim arm

22. Rear wheel

25. Rear brake disc

28. Plastic

2. Plastic body

5. Fake tank

8. Front forks right

11. Charger port

14. Battery/motor cover

17. Motor

20. Rear brake caliper

23. Rear sprocket

26. Chain adjustment

29. Speed adjustment room

3. Seat

6. Electric volume gauge

9. Front forks left

12. Rear brake lever

15. Rear brake caliper

18. Rear shock

21. Rear fender

24. Chain

27. Seat

30. Electric lock

BATTERY INDICATOR

Note: STOP using the bike and charge the battery once the indicator turns into the red and yellow light only.

BEFORE YOU BEGIN

Remove contents from the box. Remove the foam separators that protect the components from damage during shipping. Inspect the contents of the box for scratches in the paint, dents, or kinked cables that may occur during shipping. Because the product was 85 percent assembled and packed at the factory, there should not be any problems, even if the box has a few scars or dents.

MAKE SURE THE ON/OFF SWITCH IS TURNED "OFF" BEFORE CONDUCTING ANY PROCEDURES.

Estimated Assembly and Set-Up Time

We recommend assembly by an adult with experience in motorbike or bicycle mechanics. Allow up to 30-40 minutes for assembly.

Allow up to 4-6 hours for initial charge.


Required Tools

Some tools may be supplied; however, we recommend the use of mechanic's grade tools. Use the supplied tools only as a last resort.

Assembly illustration and instruction

ASSEMBLY HANDLEBAR

Caution: Failure to properly adjust and tighten the bolts that affix the handlebar can cause you to lose control and crash.

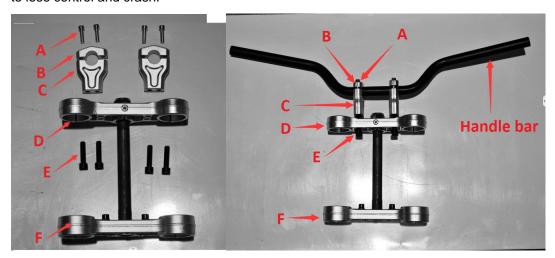



Step1: Place the handelbars in the handlebar clamps.


Step2:Align parallel to the fork and tighten the bolts. When properly tightened, the handelbars should not move forward or back.

Step3:Adjust the brake lever adjuster to the proper place and tighten it.

ASSEMBLY FRONT WHEEL

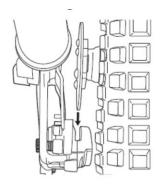

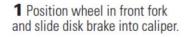


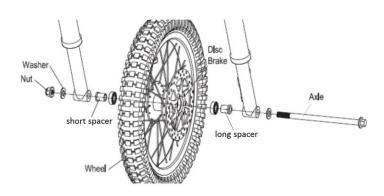

2 Slide axle through fork, spacer and wheel hub. When axle passes through the other side of the wheel hub, add the other spacer and slide though the fork. Secure with washer and nut.

Note: Front axle is installed with the spacer between the fork and wheel for all Dirt Rockets.

Note: If your model has one short spacer, it goes on the side of the hub with the disc brake.

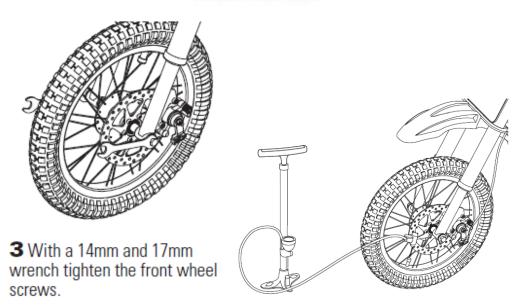

INFLATING THE TIRES

NOTE: The tires are inflated when shipped, but they invariably lose some pressure between the point of manufacturing and your purchase. Always inflate the tires to the correct PSI before first time use.

Please read the specification sheet to get the information of tire pressure.

Using a bicycle-style tire pump to inflate the tire to the PSI indicated on the sidewall of the tire.

Note: The pressurized air supplies found at gasoline stations are designed to inflate high-volume automobile tires. If you decide to use such an air supply to inflate your tires, first make sure the pressure gauge is working, then use very short bursts to inflate to the correct PSI. If you inadvertently over-inflate the tire, release the excess pressure immediately.

Important information of use guide for tire

Note: The tire is the only contact between the vehicle to the road, the safety of various driving activities depends on the small area of the tire where contact with the road. Therefore, it is very important to keep the tire in good condition at any time and use the correct size and standard tire to replace the old ones.

Guide:

Tire assembly and disassembly

It is strongly recommended that the tire assembly and disassembly should be done by an authorized technician with the necessary skills.

Tire inflating pressure

It is very important to keep the tire at the proper pressure and check the tire pressure before use. The inflating should be done while the tire is cold.

Tire maintenance

Tire tread depth should be checked regularly. (Shallower tread means less grip of the tire). You must stop using the vehicle if the tire is pierced, disassemble the tire, and check it carefully. Tire maintenance should be done by an authorized technician. The tire should be replaced immediately when it is distorted or damaged.

Tire replacement

It is important to use the correct size and standard tire as per our specifications (see details in the technical specification sheet)

Don't use the used tire if you are not sure of its previous service condition.

Tire aging

Tire aging is unavoidable even if the tire is not ever used or just used a few times. Tire aging is mainly reflected in the cracked section on the side of the tire and tire tread, sometimes the tire is distorted as well. The used and aged tire should be checked and confirmed if it is ok to use again by an authorized technician.


ASSEMBLY FRONT BRAKE



Step 1: position the front brake caliper, mount screw A&B, and tighten.


Step 2: position the front brake line and the clamp, mount screw C&D, and tighten.

ASSEMBLY FRONT FENDER

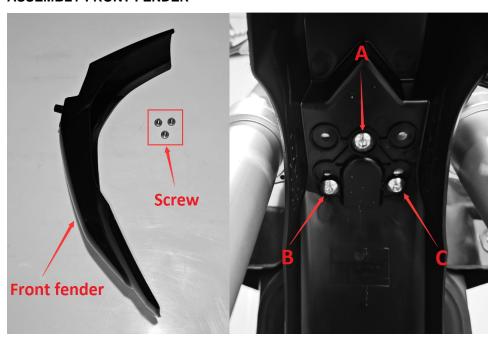


Position the front fender on underside of Down splintage, mount the screws A&B&C, and tighten.

ASSEMBLY NUMBER PLATE

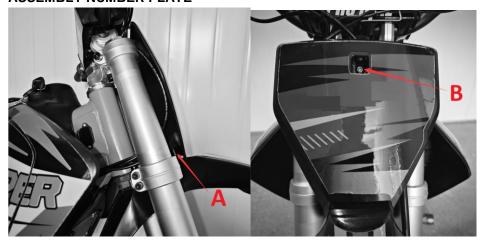

Put number plate on A position of the front fender first, then tighten the screws B on up splintage properly.

ASSEMBLY REAR FENDER

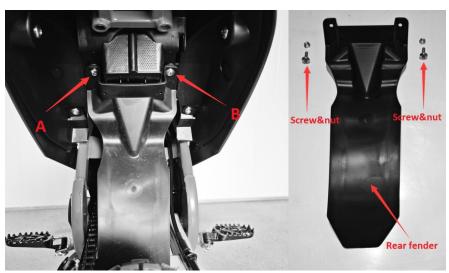

Stpe 1: take the seat down

Step 2:Position the rear fender on the tail fairing, tighten screw A&B properly.

Step 3: put the seat on.

Special Note: If you receive a bike with the front and rear shocks removed, then the following operation should be done


ASSEMBLY FRONT FORKS


If the bike is packaged in the type B plan, the front forks have been taken off the bike. So front forks need to be installed on the bike first.



- 1. Aluminum top cap of the right front fork
- 2. Front fork right cover
- 3. Right foot

- 4. Aluminum top cap of the left front fork
- 5. Front fork left cover
- 6. Left foot

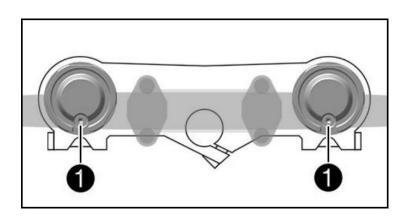


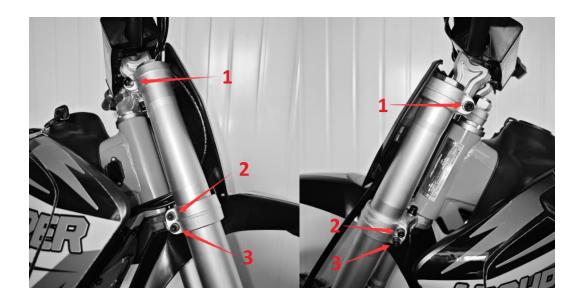

Step 1: Install the left fork, penetrate the fork into the round hole on the left side of the chain plate from bottom to top, make the bottom of the aluminum head decorative cover on the upper part of the fork flush with the upper plane of the upper chain plate, as shown in the figure below, and then tighten the fastening screws of the upper and lower chain plates in turn, and the torque is set at 20N.m

Step 2: Install the right fork, penetrate the right fork into the round hole on the left side of the chain plate from bottom to top, make the bottom of the aluminum head decorative cover on the upper part of the fork flush with the upper plane of the upper chain plate, as shown in the figure below, and then tighten the fastening screws of the upper and lower chain plates in turn, and the torque is set at 20N.m



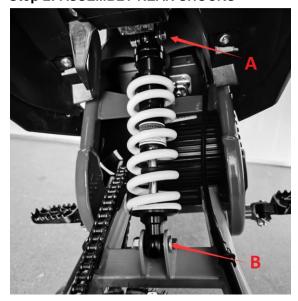


Install the rear shocks on the bike, tighten screw A on the frame properly, tighten screw B on the rear fork properly.

BEFORE RIDING

The air circuit breaker

Before using the vehicle, the air circuit breaker should be turned on to electrify the vehicle. The air circuit breaker is located under the seat.

When we do not use the vehicle for a long time, it is recommended to close the air circuit breaker, so the vehicle circuit will be cut off.

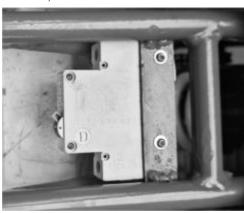

Charging the Battery

You shall use the charger which should match this bike (never use a charger from a different model). Before charging, you must turn the power switch to "OFF". Keep the charger in a dry and ventilative condition when it's working.

The charger is designed for indoor use only. Keep the charger away from water to avoid a short circuit. Don't even use it in a dampening, combustible or explosive environment. Do not remove the plug by pulling the cord, always grip the charging port by its metal body.

Firstly, connect the output plug of the charger with the socket of the battery case properly, and then insert the input plug into the AC electrical outlet. And the charger indicator will light on, which means it's on charging.

When the light turns from Red to Green, it means the battery has been fully charged. Usually, it will take about 4-6 hours to recharge the battery depending on different statuses. However, it's a good suggestion that it be charged for an additional 2 hours after the light turns to green if you have time (It is good for the service life of the battery).

Do not charge it for more than 8 hours to avoid overcharging and damaging the battery. After the light turns GREEN, the charger is in the state of trickle electric current and "fills slowly" and maintains the state. If you are going to be out for a long time, you should pull out the charger plug, especially in hot weather.

The charger will become warm during charging, so keep the charger away from any heat source. Please always keep the charger dry and clean. The electronics inside contain high voltage, so please don't disassemble the charger by yourself.

After charging, please pull the input plug out of the electrical outlet first, and then pull out the output connecting plug from the battery case. Do not let the charger be plugged into the battery or electrical outlet for a long time, which may damage the charger and cause a fire.

While charging, please keep it out of the reach of children. Do not put anything on top of the charger when used, and prevent any liquid, metal, or metal fillings from permeating into the charger.

You can also remove the battery from the bike and then charge it.

Do not touch any poles in the battery case with your hands when the battery is removed for charging. Also, the charging connector poles cannot be touched with any metal or any other material that conducts electricity, otherwise it may cause a short circuit.

If you don't ride your bike for a long time, the battery should be charged at least one time per month. This will ensure battery life. DO NOT use in a state of low battery capacity. Do not leave your battery in a fully discharged state for long periods. The battery will continue to self-discharge, resulting in damage.

Avoid any contact with water when charging your battery. If a plug or socket gets wet, dry it completely before using it.

When charging, if there is a peculiar smell or the temperature is extremely high, please stop charging immediately and send it to the local distributor or the Customer Service Center.

WARNING: rechargeable batteries are only to be charged under adult supervision. Always disconnect your electric motorbike from the charger before cleaning it with liquid.

NOTE: Chargers have built-in overcharge protection to prevent the battery from being overcharged. The charger will get warm during use. This is normal for some charges and is no cause for concern. If your charge does not get warm during use, it does not mean that it is not working.

Be sure to properly align the groove on the charger input port with the corresponding socket on the vehicle and tighten threads; otherwise, no charging action will occur.



The charger port is located on the right side of the frame.



1 Turn **OFF** power switch before charging. Plug charger into the charger port on the electric motor bike.

2 Plug the charger plug into a wall outlet. If the lights on the charger do not light up, check the power to the outlet. If necessary, try a different outlet.

Warning: Failure to recharge the battery at least once a month may result in a battery that will no longer hold a charge.

SAFETY REMINDERS

PRE-RIDE CHECKLIST Loose Parts Check and secure all fasteners before every ride. Make sure steering stem clamp bolts are locked properly in place. There should not be any unusual rattles or sounds from loose parts or broken components. If you are not sure, ask an experienced mechanic to check. Brake Check the brake for proper function. When you squeeze the lever, the brake should provide positive braking action. Frame, Fork, and Handlebars Check for cracks or broken connections. Although broken frames are rare, an aggressive driver can bash into a curb or wall and wreck and bend or break a frame. Get in the habit of inspecting yours regularly.

Periodically inspect the tires for excess wear, and regularly check the tire pressure and re-inflate as necessary. If you get a flat tire, the inner tube can be patched or a new tube can be purchased from an authorized repair shop.

□Safety wear

Always wear proper protective equipment such as an approved safety helmet, elbow pads, and kneepads. Always wear shoes (lace-up shoes with rubber soles), never drive barefooted or in sandals, and keep shoelaces tied and out of the way of the wheels, motor and drive system

ATTENTION

We recommend checking all tightened parts after the first time use. Special attention should be paid to the following parts:

- Footrest
- Shock absorber
- Engine bolts and nuts
- Rear sprocket
- Front & rear wheel bolts


REPAIR AND MAINTENANCE

Turn the power switch "OFF" before conducting any maintenance procedures.


WARNING:

To prevent shock, please follow the above instructions accordingly and do not skip or combine any steps.

Checking Spoke Tension

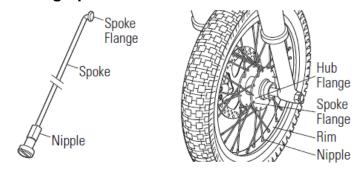

1 Verify the spoke tension by shaking each spoke with your fingers. Spoke should not be loose from hub. Look for any play between where the spoke flanges attach to the hub. Try to turn the nipple using your fingers. You should not be able to spin any nipple by hand. If one or more spokes is loose, all spokes must be checked and need to be tightened with a spoke wrench.

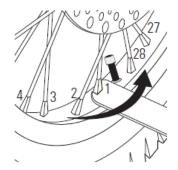

2 Start with spoke closest to the tire valve stem and tighten each nipple, in sequence, exactly 1/4 to 1/2 turn. A single 1/4 to 1/2 turn may not be enough to bring the spokes into proper tension. Continue tightening all spokes no more than 1/2 turn in sequence until all spokes are tight.

Note: More than a 1/2 turn each can cause the wheel to become distorted and wobbly thus permanently damaging the wheel.

Testing the Brakes

To use the brake, squeeze the lever to increase the pressure on the brake. The brake lever is fitted with a cable adjuster to compensate for cable stretch and/or to fine-tune the lever movement to brake engagement. If the brake is not engaging properly, follow instructions for adjusting the brakes.

Chain and sprocket

The chain will typically have a "loose spot" and "tight spot" corresponding with a particular sprocket rotational position. This is normal and common to all chain-driven products due to a run-out of tolerance of the sprockets. The chain should be adjusted to the ideal tension with the chain in the tightest spot.

Proper chain alignment must be maintained. The wheel must not be skewed, if the chain is noisy or rough running, check the lubrication, tension, and alignment of sprockets, in that order.

Warning:

To avoid a pinch or injury, keep the fingers away from moving sprockets and chains.

Battery disposal



BATTERIES MUST BE RECYCLED

Disposal: Your product uses a lithium battery which must be recycled or disposed of in an environmentally sound manner. Do not dispose in a fire. The battery may explode or leak. Do not dispose of the battery in your regular household trash.

Charger

The charger supplied with the bike should be regularly examined for damage to the cord, plug, enclosure, and other parts, and, in the event of such damage, the bike must not be charged until it has been repaired or replaced.

USE ONLY WITH THE RECOMMENDED CHARGER

TECHNICAL SPECIFICATION SHEET

Motor type	Mid-drive motor with gearbox
Power	Nominal 3000W Peak 5000W - 72V
Battery	72V 30AH lithium battery
Charger input	100-240VAC 50/6Hz 10A MAX
Charger output for 72V lithium battery	84.0V-5.0A
Transmission	Chain drive
Front suspension	Hydraulic USD forks
Rear suspension	Hydraulic rear shock absorber
Tyre	Front: 70/100-17, rear 90/100-14 with 7.00 P.s.i.
1,712	operation pressure and 32 P.s.i Max. inflate
Brake system	Front and rear hydraulic disc brake
Rated loading capacity	95 kg
Vehicle size	1750*770*1080 mm

TRANSPORTATION

This vehicle should be transported in the normal position if possible. It may also be transported in the standing position, but the standing position is not as stable as the normal position.

PREPARATION FOR STORAGE

Some measures should be taken when the vehicle is subjected to long-term storage to reduce the bad influence on its performance. Before storage, make necessary maintenance to ensure the vehicle's high performance after storage.

VEHICLE

Place the vehicle on level ground and thoroughly clean the entire vehicle. DO NOT get water into any part of the motor controller or battery.

Tighten all nuts, bolts, cap screws, and screws. Make sure the rivets holding components together are tight. Replace all loose rivets. Care must be taken that all calibrated nuts, cap screws, and bolts are tightened to specifications.

Disconnect the battery cables (negative cable first); then remove the battery, clean the battery posts and cables, and store them in a clean, dry area.

NOTE: For storage, use a battery maintainer or make sure the battery is fully charged.

TIRES

Inflate the tires to the normal specification.

EXTERNAL

Spray all vinyl and rubber parts with a rubber preservative.

Spray unpainted surfaces with rust preventative.

Coat painted surfaces with car wax.

NOTE: Void storing outside in direct sunlight and avoid using a plastic cover as moisture will collect on the bike causing rusting.

PREPARATION AFTER STORAGE

Clean the ATV thoroughly.

Check all control wires and cables for signs of wear or fraying. Replace if necessary.

Charge the battery, then install it. Connect the battery cables making sure to connect the positive cable first.

Check the entire brake system (fluid level, pads, etc.), all controls, headlights, taillight, and brake light; adjust or replace if necessary.

Check the tire pressure. Inflate to recommended pressure as necessary.

Tighten all nuts, bolts, cap screws, and screws making sure all calibrated nuts, cap screws, and bolts are tightened to specifications.

Make sure the steering moves freely and does not bind.

TROUBLESHOOTING GUIDE

Problem	Possible cause	Solution
The vehicle does not run.	Undercharged battery. (The green light of the battery indicator is off.)	Charge the battery. A new battery should have been charged for 3-6 hours before using the vehicle.
		Check all connectors. Make sure the charger connector is tightly plugged into the charging port, and that the charger is plugged into the wall.
		Make sure the electric power to the wall outlet is on.
	The charger is not working.	You may check to see if your charger is working by using a voltmeter or asking the authorized service center to test your charger for you.
The vehicle was running but suddenly stopped.	Loose wires or connectors.	Check all wires and connectors to make sure they are tight.
	Burned-out fuse.	The fuse will burn out and automatically shut off the power if the motor is overloaded.
		An excessive overload could cause the motor to overheat. Refer to replacing the fuse instructions of this manual. Correct the conditions that caused the fuse to burn out and avoid repeatedly burning out the fuse.
	Motor or electrical switch damage.	Contact the authorized service center for diagnosis and repair.
Short run time less than 15 minutes per charge	Undercharged battery	Charge the battery. A new battery should have been charged for 3-6 hours before using the vehicle.
		Check all wires and connectors. Make sure the battery connector is tightly plugged into the charger connector, and that the charger is plugged into the wall.
		Make sure the power flow to the wall outlet is on.
	The battery is old and will not accept a full charge.	Even with proper care, a rechargeable battery does not last forever. The average battery life is 1 to 2 years depending on vehicle use and conditions. Replace only with a replacement battery.
	Brakes are not adjusted properly	Adjust the brake according to the instructions.


The vehicle runs Sluggishly.	Driving conditions are too stressful.	Use only on solid, flat clean and dry surfaces such as pavement or level ground.	
	Tires are not properly Inflated.	The tires are inflated when shipped, but They invariably will lose some pressure Between the point of manufacturing and your purchase. Refer to tire instructions to properly inflate tires.	
	The vehicle is overloaded.	Make sure you do not overload the vehicle by allowing more than one rider at one time, exceeding the maximum weight limit, going up too steep a hill, or towing objects behind the vehicle. If the vehicle is overheated, the temperature circuit protector will slow the motor down and if the condition continues, will shut off power to the motor. Correct the driving conditions that caused the overheating, wait 5-10 minutes, and then resume riding. Avoid repeatedly overheating the unit.	
Sometimes the vehicle doesn't run, but other times it does.	Loose wires or connectors	Check all wires around the motors and all connectors to make sure they are tight.	
	Motor or electrical Switch damage.	Contact the authorized service center for diagnosis and repair.	
The charger gets warm During use	The normal response to Charger use	No action is required. This is normal for some Chargers and is no cause for concern. If your charger does not get warm during use, it does not mean that it is not working properly.	
The vehicle does not Stop when applying the brake.	Brakes are not adjusted properly	Refer to brake instructions to properly adjust Brakes.	
The vehicle makes loud noises or grinding sounds	The chain is too dry	Apply a lubricant to the chain.	

CONTACT INFORMATION:

For Product Support, please fill out a Support Ticket.

https://support.mototecusa.com

CIRCUIT DIAGRAM

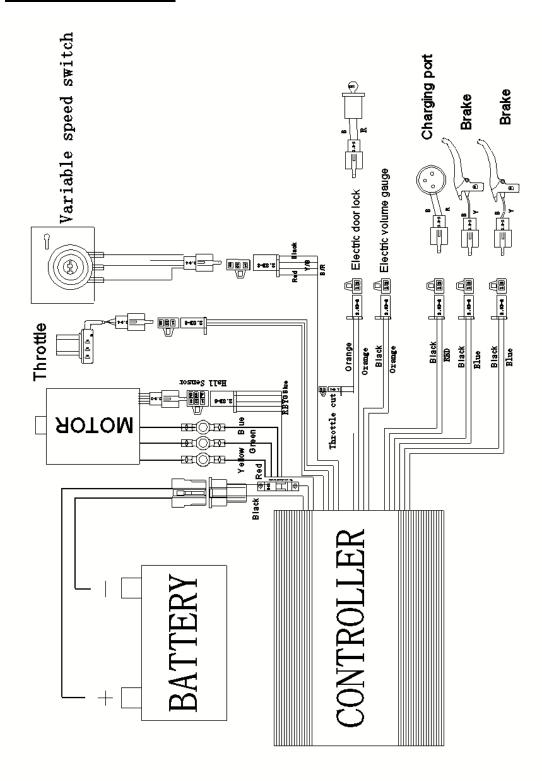



Please read the owner's manual before riding.



Never use the vehicle on public road. OFF ROAD use only.



Never ride with a passenger



Always use an approved helmet and protective gear



NEVER use with drugs or alcohol



Cold tire pressure.



Never operate this vehicle if you are under age 16