

Contents

1. Factory default settings
2. Specification & wiring
3. Mounting
4. Installation
5. Wiring diagram
6. Frost protection
7. Button / symbol description
8. Resetting the thermostat
9. Keypad lock and unlock
10. Setting the date, time and operating mode
11. Factory default program settings
12. Adjusting the program settings for 5/2d
13. Temporary override (Manual)
14. Permanent override (Hold)
15. Adjusting the switching differential
16. Replacing the batteries
17. Installer Menu



CAUTION!

Before commencing any work on the electrical connections, you must first disconnect the thermostat from the mains. None of the 230V connections must be live until the installation has been completed and the housing is closed. Only qualified electricians or authorised service staff are permitted to open the thermostat.

There are parts that may carry mains voltage behind the cover. The thermostat must not be left unsupervised when open. (Prevent non specialists and especially children from gaining access to it.)

Important:
Keep this document



Prior to setting the thermostat, it is necessary to complete all required settings described in this section.

1. Factory default settings



Contacts:	Volt Free
Temperature indicator:	°C
Switching differential:	0.4°C
In built frost protection:	5°C
High and Low temp. limitation:	Off
Clock:	24 hours
Keypad lock:	Off

2. Specifications & wiring

Power supply:	2 x AA Alkaline Battery
Power consumption:	8 VA
Temp. control range:	5 ... 35°C
Ambient temperature:	0 ... 50°C
Contact rating:	8A 230Vac
Dimensions:	84 x 84 x 30mm
Temperature sensor:	NTC 10K Ohm @ 25°C
Switching differential:	Adjustable from 0.2/0.4/0.6/0.8/1.0°C
Frost protection:	Only operational in stand by mode

3. Mounting

The mounting height should be 1.5 meters above the floor level.

The thermostat should be wall mounted in the room where the heating is to be controlled.

The place of installation should be chosen so that the sensor can measure the room temperature as accurately as possible.

Choose the mounting location to prevent direct exposure to sunlight or other heating / cooling sources when mounted.

The unit can be fitted to:

1. Recessed conduit boxes
2. Surface mounting boxes
3. Directly on walls.

4. Installation

Slacken the fastening screw on the bottom of the thermostat with a philips head screwdriver.

The thermostat is hinged and can be opened 180 degrees.


Mount the unit as described in section 3.

Wire the thermostat according to the wiring diagram.

Close the thermostat and tighten the fastening screw.

5. Wiring diagram

INTERNAL WIRING DIAGRAM CRTP2

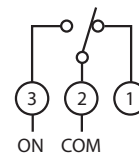

If mains voltage output is required, 230V must be connected to terminal 2.

6. Frost protection




5°C

Frost protection is built into this thermostat, it is pre fixed at 5°C and is not adjustable.

It will only be activated when the thermostat is in the stand by mode and the room temperature reaches 5°C.

7. Button / Symbol description

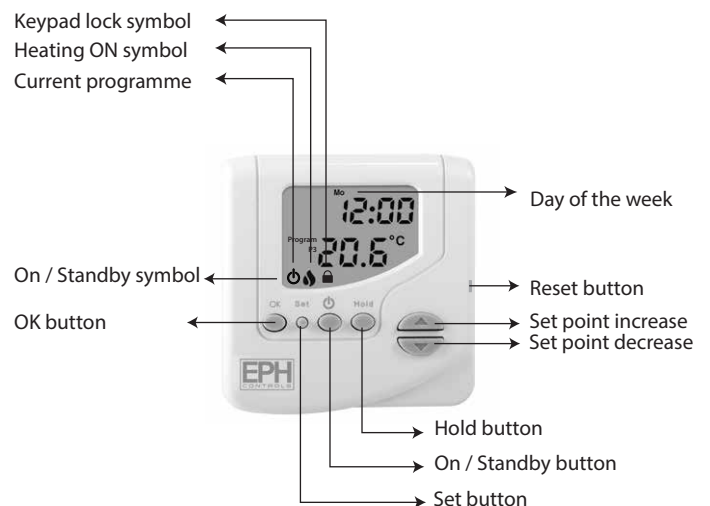

8. Resetting the thermostat

It is necessary to reset the thermostat prior to initial programming.

Press the  button on the side of the thermostat.

'NO' will appear on the screen.

Press the  button.

'YES' will appear on the screen.

Press the 'OK' button to return to normal operation.

9. Keypad lock and unlock OFF

To lock the keypad, press and hold the  and  buttons for 10 seconds.

 will appear on the screen. The keypad is now locked.

To unlock the keypad, press and hold the  and  buttons for 10 seconds.

 will disappear from the screen. The keypad is now unlocked.

10. Setting the date, time and operating mode

Press the  button once. 'Set Date Year' will appear on the screen.

Press the  or  buttons to adjust the year. Press the 'OK' button.

Press the  or  buttons to adjust the month. Press the 'OK' button.

Press the  or  buttons to adjust the day. Press the 'OK' button.

Press the  or  buttons to adjust the hour. Press the 'OK' button.

Press the  or  buttons to adjust the minute. Press the 'OK' button.

Press the  or  buttons to adjust from 5/2d to 7d or 24h mode.

Press the  button or wait 10 seconds and the thermostat will return to normal operation.

11. Factory program setting 5 / 2d

	5/2D					
	P1	P2	P3	P4	P5	P6
Mon-Fri	06:30	08:00	12:00	14:00	17:30	22:00
	21°C	18°C	21°C	18°C	21°C	16°C
Sat-Sun	08:00	10:00	12:00	14:00	17:30	23:00
	21°C	18°C	21°C	18°C	21°C	16°C

	7D					
	P1	P2	P3	P4	P5	P6
Mon-Fri	06:30	08:00	12:00	14:00	17:30	22:00
	21°C	18°C	21°C	18°C	21°C	16°C
Sat-Sun	08:00	10:00	12:00	14:00	17:30	23:00
	21°C	18°C	21°C	18°C	21°C	16°C

	24H					
	P1	P2	P3	P4	P5	P6
Everyday	06:30	08:00	12:00	14:00	17:30	22:00
	21°C	18°C	21°C	18°C	21°C	16°C

12. Adjusting the program settings for 5/2d

Press the  button twice.

Programming for Monday to Friday is now selected.

Press the  and  buttons to adjust the P1 time. Press the 'OK' button.

Press the  and  buttons to adjust the P1 temp. Press the 'OK' button.

Repeat this process to adjust P2 to P6 times and temperatures.

Press the  button.

Programming for Saturday to Sunday is now selected.

Press the  and  buttons to adjust the P1 time. Press the 'OK' button.

Press the  and  buttons to adjust the P1 temp. Press the 'OK' button.

Repeat this process to adjust P2 to P6 times and temperatures.

Press the  button to return to automatic mode.

If 7 D mode is selected, you can program each day of the week with 6 individual times and temperatures.

If 24H mode is selected, you can only program each day of the week with the same 6 times and temperatures.

13. Temporary override (Manual)

In this mode the thermostat will switch to the temperature set by the user until the next program is activated.

Press the  and  buttons to adjust the temperature setpoint.

'Manual' will appear on the screen.

Press 'OK' or after 10 seconds the thermostat will operate in this temporary override.

Press the  button to return to automatic mode.

14. Permanent override (Hold)

In this mode the thermostat will operate to the temperature set by the user.

Press the  button. 'Hold' will appear on the screen.

Press the  and  buttons to adjust the temperature setpoint.

Press 'OK' or after 10 seconds the thermostat will operate in this permanent override.

Press the  button to return to automatic mode.

15. Adjusting the switching differential 0.4°C

Press the 'OK' and 'Hold' buttons for 5 seconds.

'0.4°C' will appear on the screen.

Press the up or down buttons to adjust from 0.2, 0.4, 0.6, 0.8 or 1C.

Press the  button to return to normal operation.


16. Replacing the batteries

Slacken the fastening screw on the bottom of the thermostat with a philips head screwdriver.

The thermostat is hinged and can be opened 180 degrees.

Replace the batteries with 2 x AA Alkaline batteries.

Close the thermostat and tighten the fastening screw.

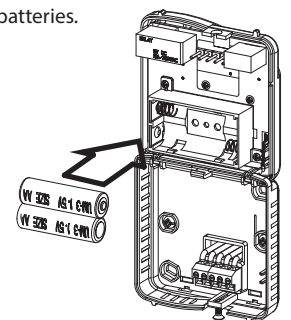

17. Installer menu

To access the installer menu, you must hold **OK** and  for 5 seconds.
When in the installer menu, press  or  and **OK** to navigate and select.

■ Normal Mode (Nor)

When the thermostat is in Normal mode, the thermostat will try to reach the target temperature after the program changes.

Example: Program 1 on the thermostat is 21°C for 06:30am and the room temperature is 18°C. The thermostat will start the heating at 06:30am and the room temperature will start to increase then.

To return to main menu, press **OK** to select **Nor**

■ Optimum Start Mode (OS) **BOILER PLUS**

When the thermostat is in Optimum Start mode, the thermostat will try to reach the target temperature by the start time of the next switching time. This is done by setting the Ti (time interval) on the thermostat in this menu to 10, 15 or 20. This will allow the thermostat 10 mins, 15 mins or 20 mins to increase the room temperature by 1°C.

Ti can be set when OS is selected in the installer menu.  20°C


To return to main menu, press **OK** to select required Ti

To achieve the target temperature when the program starts, the thermostat will read:

1. The Room Temperature (RT)
2. The Setpoint Temperature (ST)
3. The Target Temperature Difference (TTD) is the difference between the setpoint temperature and the room temperature .

The time (in minutes) that it will take to overcome (TTD) is called Optimum Start Time (OST) and its maximum value is 3 hours = 180 mins. This is subtracted from the start time.

As the temperature increases the thermostat will recalculate the OST if the temperature is increasing too quickly.

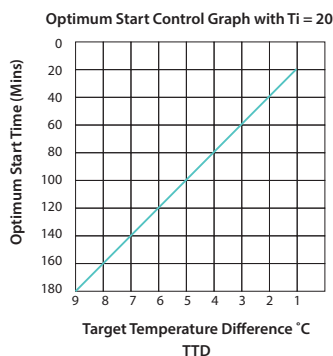

Example when Ti = 20

Program 1 on the thermostat is 21°C for 06:30am and the room temperature is 18°C. The thermostat will start the heating at 05:30am to reach 21°C for 06:30am @ Ti=20.

Example when Ti = 10

Program 1 on the thermostat is 21°C for 06:30am and the room temperature is 18°C. The thermostat will start the heating at 06:00am to reach 21°C for 06:30am @ Ti=10.

