


# Elite Acoustics Engineering

## StompMIX X4-2 PRO 4 Channels Digital Mixer Pedal with Rechargeable Battery

*Quick Guide Handbook - V1.03*

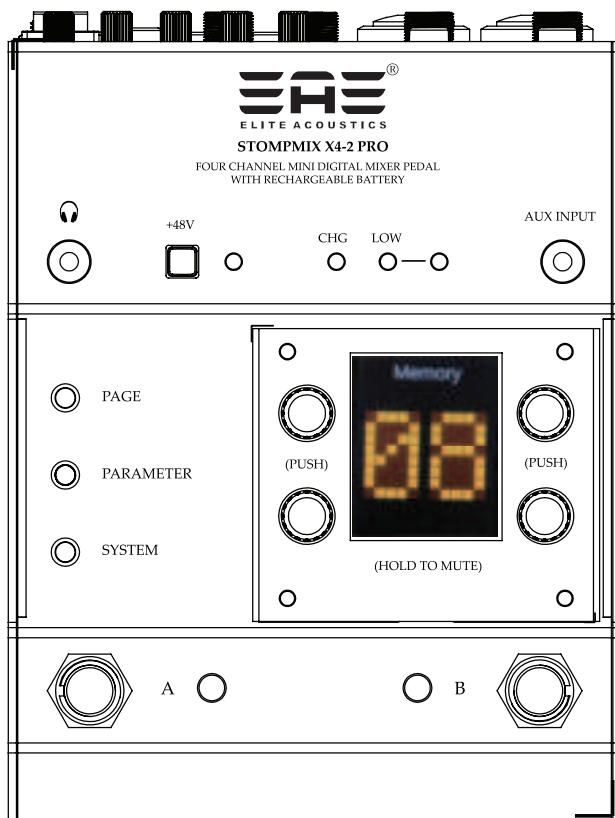


### **WHAT IS IN THE BOX**

Your StompMix X4-2 PRO package contains the following:

- (1) StompMix X4-2 PRO unit
- (1) AC to 12VDC Power Supply Adapter

NOTE: Due to continuous development and improvements of our products, features and specifications are subject to change without notice. All weights and measures are approximate.  
For more technical questions, please visit: [www.eliteacoustics.com](http://www.eliteacoustics.com)

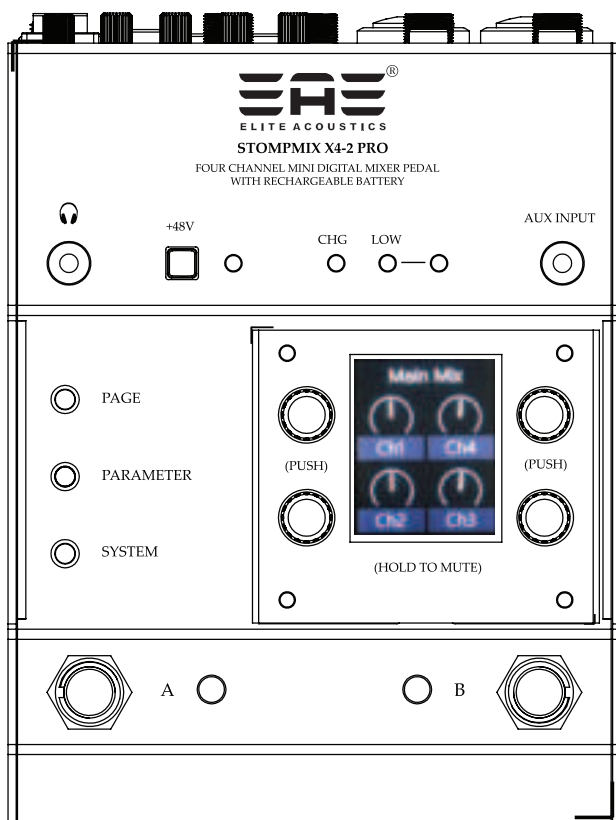

## **LCD FUNCTIONS**

### **Menu Buttons with LCD:**

Press any of the 3 menu buttons(black button located to the left theLCD) or 4 encoders(blue knobs located around LCD) to access and adjust features and settings. Most menus have several pages of options, which are adjusted by turning the corresponding encoder.




PAGE



PARAMETER



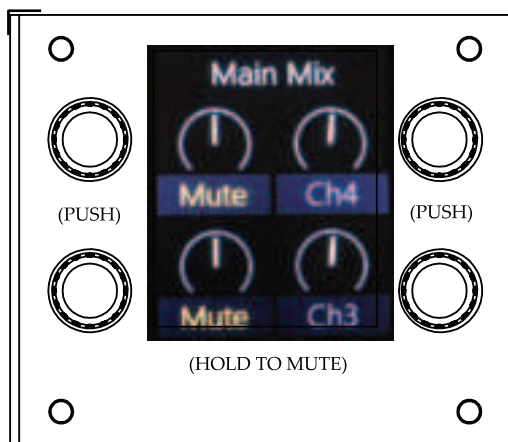


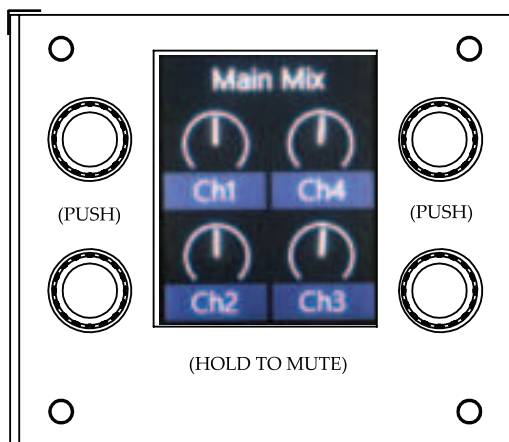
SYSTEM



## “MUTE”

**HOLD** down the  
Corresponding encoder  
to MUTE or UNMUTE each  
channel.

-  PAGE
-  PARAMETER
-  SYSTEM




## **PRESS the “page” button to access these FUNCTIONS**



**“Main Mix”**  
Adjust the level of each of the 4 channels sent to the Main MIX Outputs.



**“Aux Mix”**  
Adjust the level of each of the 4 channels sent to the Aux Mix Outputs.

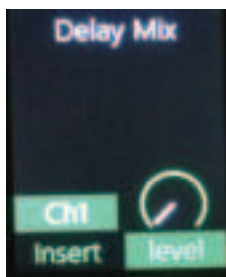

**“Delay Mix”**  
Select the Chan which delay is inserted and Delay Mix Level.




**“Reverb Send”**  
Adjust the Reverb Send level of each of the 4 channels.

○ PAGE

○ PARAMETER

○ SYSTEM

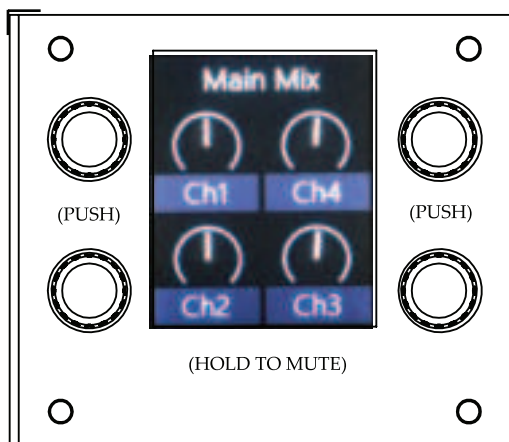

**PRESS the corresponding Encoder knob for these Functions.**  
**use the corresponding Encoder knob for these Functions.**



**“Channel EQ”**  
Adjust for each channel


Low  
Mid  
Mid Freq (80hz to 6Khz)  
High



**“Channel Util” - more details on next page.**

Polarity (=) or (-)  
Notch Filter (52hz to 500Hz)

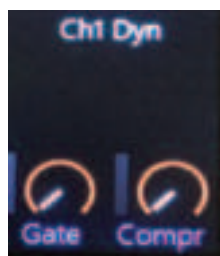


Filter - Off/Highpass/Notch  
Filter Freq. (50Hz-500Hz)




**“Channel Dyn”**


Adjust levels for

Gate (-128db - 0db)  
Compressor (one Knob 0db to -32db)

-  PAGE
-  PARAMETER
-  SYSTEM

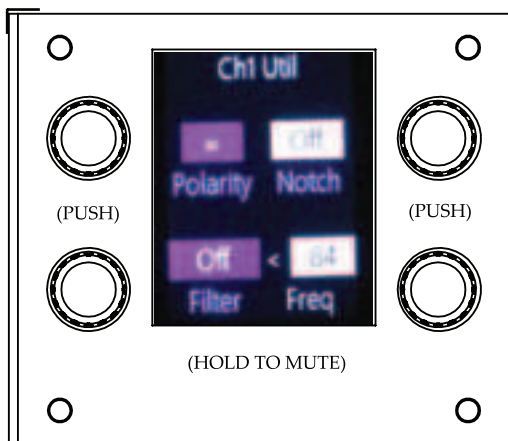

## use the corresponding Encoder knob for these Functions.

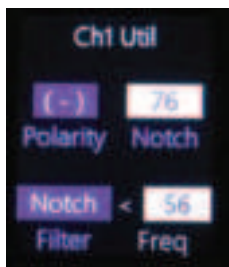

### “Channel Util”

Input Phase Polarity is (-) Reversed.

Notch - 76 Hz.

Filter - Notch 56 Hz.



### “Channel Util”

Input Phase Polarity is (=) - NOT reversed.

Notch - OFF

Filter - OFF

Filter Freq. - 84 Hz.



### “Channel Util”




Input Phase Polarity is (-) Reversed.


Notch - OFF

Filter - HiPass

Filter Freq. - 84 Hz.

## Editing “Main Mix” parameters


-  PAGE
-  PARAMETER
-  SYSTEM

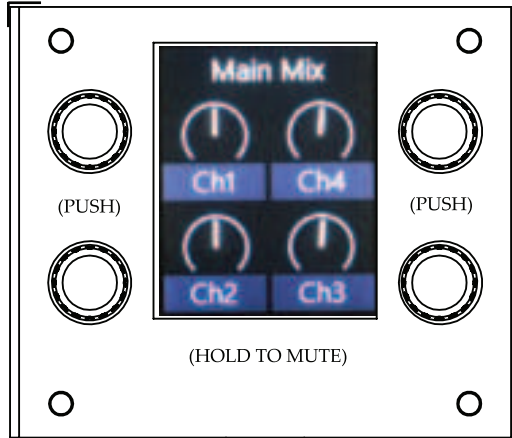

## PRESS the “parameter” button to access these FUNCTIONS



**Preset “Parameter” key**  
Adjust the Main Mix stereo panning  
for each of the 4 channels.

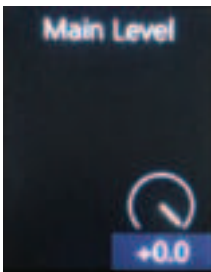

**Preset “Parameter” key**  
Adjust the Main Mix output Level.

## Editing “Aux Mix” parameters




PAGE



PARAMETER



SYSTEM

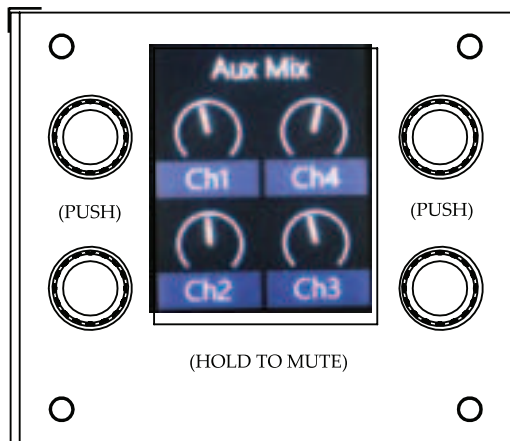


## PRESS the “parameter” button to access these FUNCTIONS



### **Preset “Parameter” key**

Adjust the AUX stereo panning for each of the 4 channels.

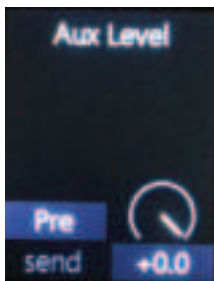

### **Preset “Parameter” key**

Adjust Aux Send connection - “Pre” or “Post”

Pre - Pre “Main Mix level”

Post - Post “Main Mix level”


““

Adjust the Aux Mix output Level.




**Editing “Delay Mix” parameters**

- ☐ PAGE
- ☐ PARAMETER
- ☐ SYSTEM

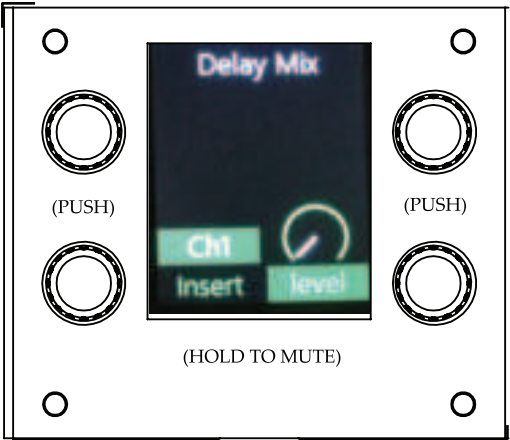

**PRESS the “parameter” button to access these FUNCTIONS**


- ☐ PAGE
- ☐ PARAMETER
- ☐ SYSTEM

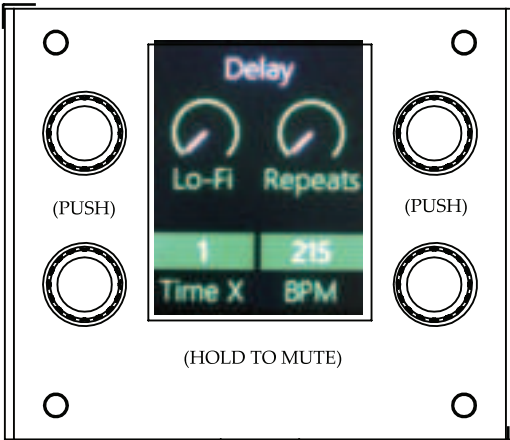


**Preset “Parameter” key**

Adjust the 4 Delay Parameter by the corresponding encoder knobs.

## Editing “Reverb Send” parameters

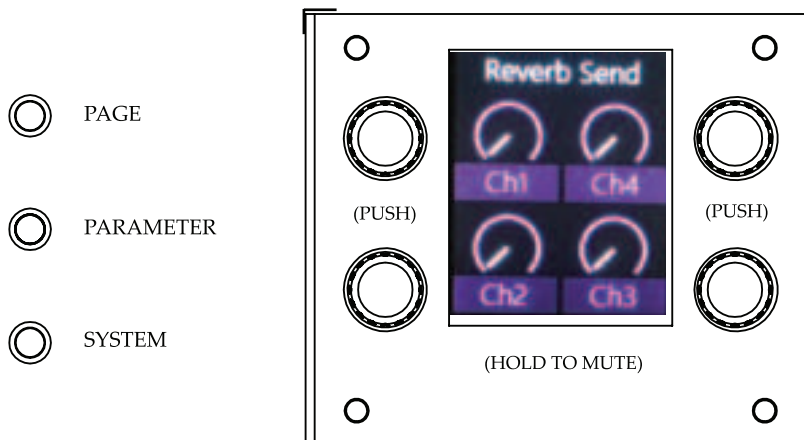

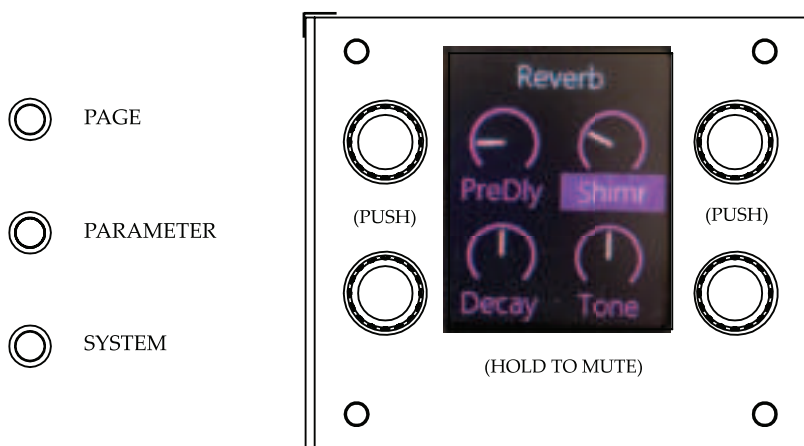


**PRESS the “parameter” button to access these FUNCTIONS**




### **Preset “Parameter” key**


Adjust the 4 Reverb Parameter by the corresponding encoder knobs.

“PreDelay” “Decay” “Tone”  
and “Shimmer”

-  PAGE
-  PARAMETER
-  SYSTEM

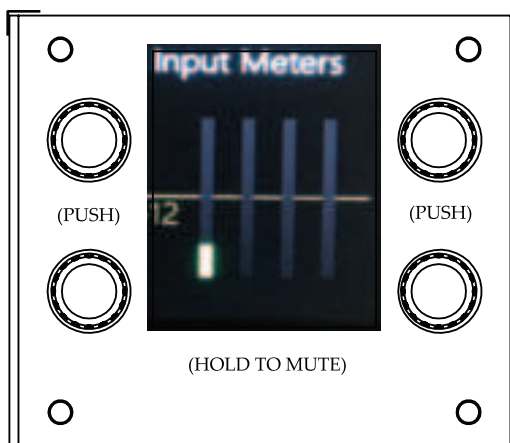


## **PRESS the “system” button to access these FUNCTIONS**

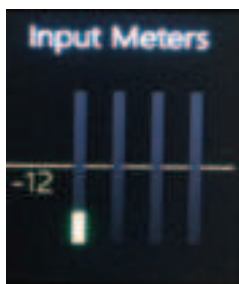

### **Input Meters**


It is critical to adjust the normal input levels to be **below -12db level to avoid Clipping** the inputs of the StompMix 4. Distortion can occur when inputs are clipping. CHAN 1 and CHAN 2 have input level knobs and PAD switches, CHAN 3 and CHAN 4 have input level controls.

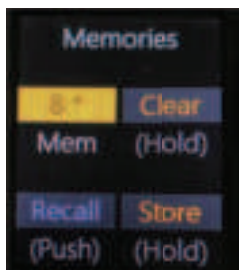

### **“Memories”**

There are 10 scenes that can be saved. Use the Corresponding encoder to make changes.  
 “Push” - push the encoder  
 “Hold” - push/hold the Encoder.

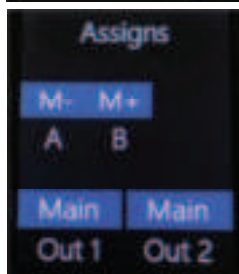


(\*) next to the “Mem” number means scenes is stored in that location.





### **“Assigns”**

“A” and “B” footswitch have assignable functions. See next page for more details.

Main Mix and Aux Mix outputs can be assigned to the 1/4” L/R jacks or the 1/8” jack.

-  PAGE
-  PARAMETER
-  SYSTEM

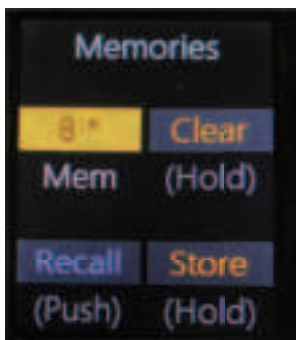
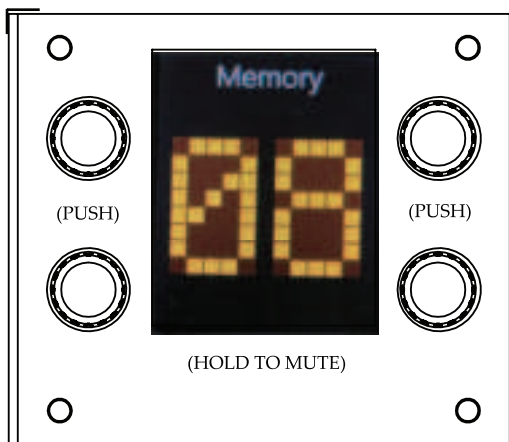


### "Memories"

Mem - indicated the Memory slot #  
 Clear - to Clean Memory slot indicated  
 Store - to Store Memory slot indicated.  
 "Press" and "Hold" - push/hold the Encoder.

Recall - to recall the memory indicated.  
 "Push" - quick press ONLY. DO NOT hold.


When the foot switches are assigned to "M- M+" if pressing a foot switch results in a memory being loaded (at least two memories are not empty), a page pops up showing the number of the recalled memory in large font.

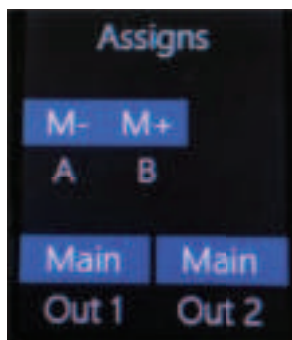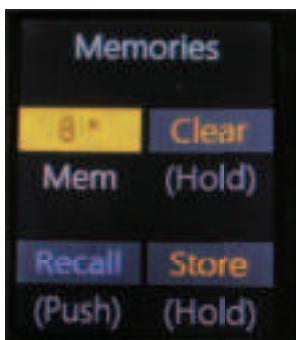

○ PAGE


○ PARAMETER

○ SYSTEM

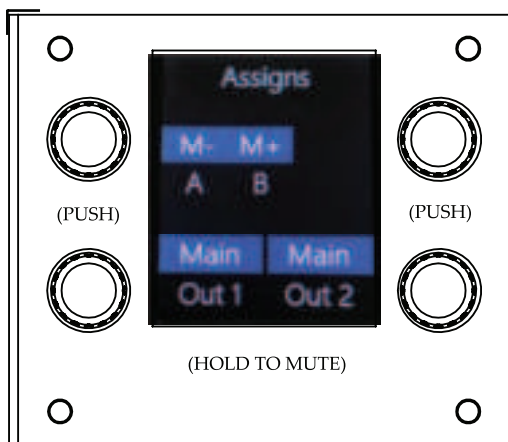

## USE the corresponding Encoder knob for these Functions.


### Assign "A" and "B" foot switches

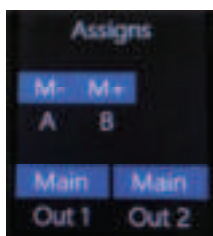

**"Assigns"**

**"A" - Memory DOWN**

**"B" - Memory UP**

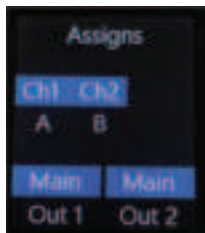

**"Assigns"**

**"A" -- CHAN 1 ON/OFF**


**"B" -- CHAN 2 ON/OFF**



**"Assigns"**

**"A" - CHAN 1/2 ON/OFF**


**"B" - CHAN 3/4 ON/OFF**

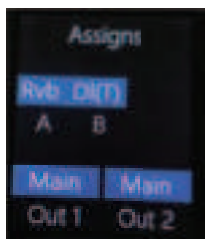

**"Assigns"**

**"A" -- Reverb ON/OFF**

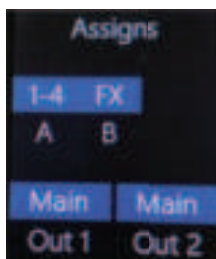


**"B" -- Delay TAP**  
**"B" LED will flash, - Delay can be turn on/off by HOLD down the "B"**




**"Assigns"**

**"A" - all CHAN ON/OFF**


**"B" - EFX ON/OFF**

-  PAGE
-  PARAMETER
-  SYSTEM

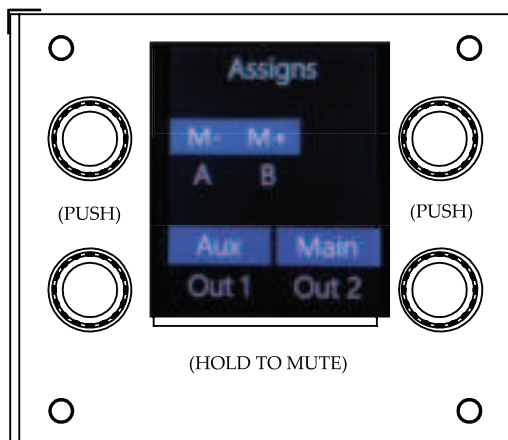

## USE the corresponding Encoder knob for these Functions.


### Assign "OUT1" and "OUT2" output routing

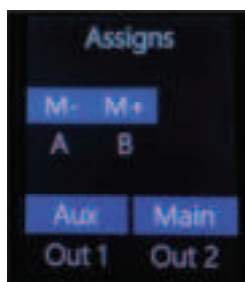

#### **"Assigns"**

"AUX" Mix  
output to OUT1

"MAIN" Mix  
output to  
OUT2

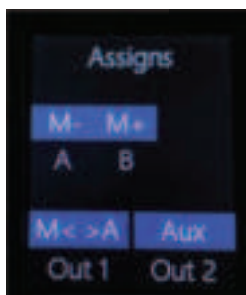

#### **"Assigns"**

"MAIN" Mix MON  
and "AUX Mix  
MONO output to  
OUT1 (L/R)

"AUX" Mix output  
OUT2

#### **"Assigns"**

OUT1 and OUT 2 routing are selectable from 3 separate  
output mix.




Main MIX



Aux Mix





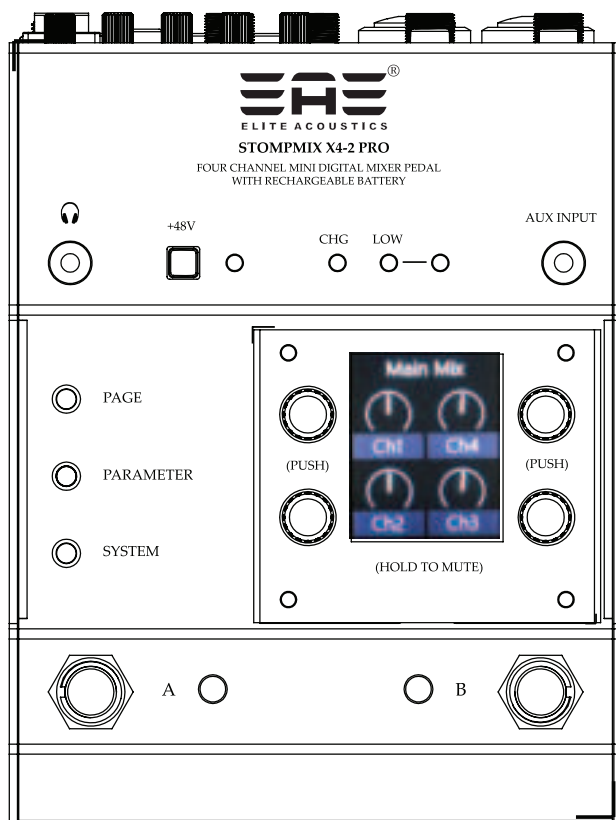


Main Mix MONO - LEFT  
Aux Mix MONO - Right





**FootSwitch: A and B.**

  
  
**Headphone  
 Output**

+48V  
   
**+48V**

CHG  LOW    
**Battery Status  
 Charging**

AUX INPUT  
  
**Aux Input**

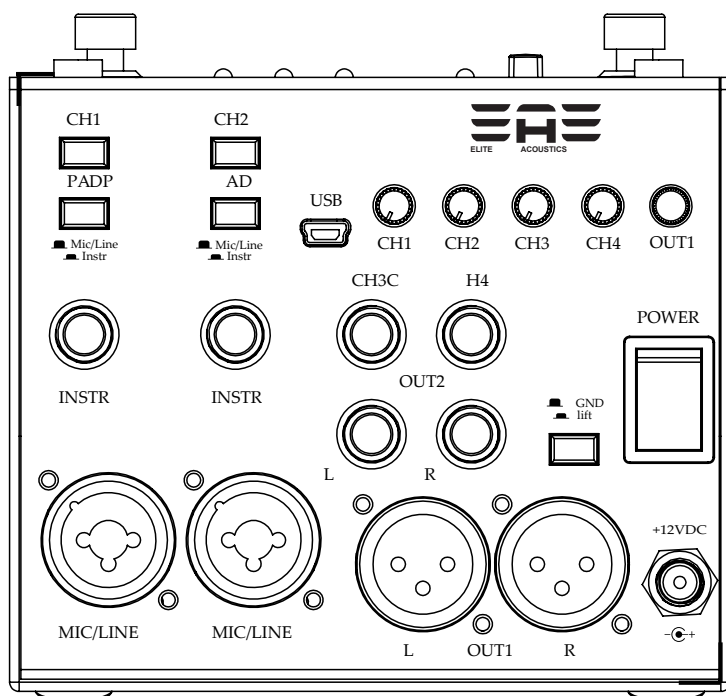


CHAN 1 LEVEL and PAD

MIC/LINE or INSTRUMENT INPUT select



INSTRUMENT INPUT (HIGH Z - 1M ohm)  
1/4" TS

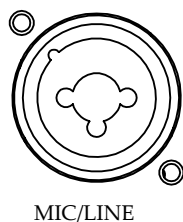

MIC/LINE combo jack.  
XLR/1/4" TRS



CH2



PAD



■ Mic/Line  
■ Instr


CHAN 2 LEVEL and PAD

MIC/LINE or INSTRUMENT INPUT select



INSTRUMENT INPUT (HIGH Z - 1M ohm)  
1/4" TS

INSTR

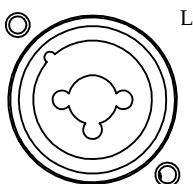

MIC/LINE

MIC/LINE combo jack.  
XLR/1/4" TRS



CH1



CH2



CH3



CH4



OUT1

OUTPUT 1 LEVEL

CHAN 1- 4 INPUT  
LEVEL TRIM

CH3C



H4



Chan 3/4 INPUT 1/4" TS

OUT2



L




R

OUTPUT 2 L/R 1/4" TRS




GND LIFT FOR XLR OUTPUT

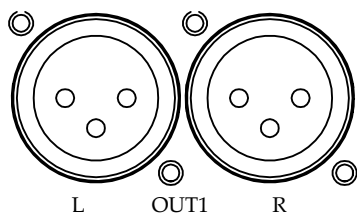

OUTPUT 1 L/R XLR

POWER

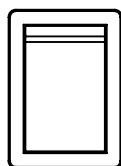

Power Switch

+12VDC



DC INPUT (12VDC, 3000mA)

USB



USB jack - Factory Use ONLY

## **SYSTEM SPECIFICATIONS**

- **System Architecture** : Ultra high-speed high-capacity DSP with lossless A/D and D/A conversion. Integrated Digital Mixer supports routing and seamless signal-level management for four fully configurable audio channels. Color Graphic LCD presents a highly intuitive GUI for settings and save & recall.
- **Digital Effects and Controls**: Channel Parametric EQ, Notch Filter, Selectable HiPass/Notch Filter, Compressor, Noise Gate, Main and Aux panning, Reverb, Delay, Real-Time Chan-Level Bar Graphs, Save & Recall Programs.
- **Footswitch Controls “A” and “B”** - Assignable functions include Memory Up/Down, Mutes, Reverb bypass and Tap Delay.
- **CHAN 1/2 INSTR: 1M ohm**
- **MIC/LINE Combo Jack Inputs: XLR balanced 1K ohm, 1/4” TRS 10K ohm**
- **CHAN 3/4 TS Inputs: 1M ohm 1/4” input jacks**
- **Phantom Power: +48V**
- **Frequency Response: 20hz - 19Khz +/- 1db**
- **Displays**: Color Graphic LCD; phantom power
- **Connectors: CH1 & 2:** Input jacks (Combo Jack - mic XLR 1/4” Line, 1/4” INSTR), **CH3/4:** (1/4” Line),  
Output 2 - 1/4” TRS jack  
Output 1 - XLR L/R outputs,  
Power supply - DC in jack
- **Power Supply:** DC 12V 2000mA or Higher
- **Built-in Rechargeable Battery:** Playtime - up to 8 hours on LFP battery
- **Accessories:** AC cord, AC adaptor.
- **Dimensions:** 4.3/4”W x 5 1/2”D x 4”H
- **Weight:** 2.8 lbs

Product specifications subject to change without notice.

For most updated details, please visit: [www.eliteacoustics.com](http://www.eliteacoustics.com) or contract us via email.



**Legal Notice: CALIFORNIA PROPOSITION 65 WARNING**  
**WARNING: Cancer and Reproductive Harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).**

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS.

1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

**WARRANTY (USA ONLY)**

Contact the Distributor in your area for service and warranty info.

Elite Acoustics Engineering Inc. warrants this product to be free of defects in material and workmanship (excluding battery) for a period of 1 year from the date of original retail purchase. Elite Acoustics Engineering Inc. warrants the Speaker's Battery for 90 days from the date of original retail purchase. This warranty is enforceable only by the original retail purchaser. To be protected by this warranty, the purchaser must complete and return the enclosed warranty card within 14 days of purchase. During the warranty period EAE shall, as its sole and absolute option, either repair or replace, free of charge, any product that proves to be defective on inspection by EAE or its authorized service representative. To obtain warranty service, contact Elite Acoustics Engineering Technical Support via email: [RMA@eliteacoustics.com](mailto:RMA@eliteacoustics.com). PRE-AUTHORIZATION MUST BE OBTAINED BEFORE SENDING ANY PRODUCT TO AN ELITE ACOUSTIC ENGINEERING SERVICE CENTER. All inquiries must be accompanied by a description of the problem. All authorized returns must be sent to the EAE repair facility postage prepaid, insured and properly packaged. EAE reserves the right to update any unit returned for repair. EAE reserves the right to change or improve the design of the product at any time without prior notice. This warranty does not cover claims for damage due to abuse, neglect, alteration, or attempted repair by unauthorized personnel and is limited to failures arising during normal use that are due to defects in material or workmanship in the product. Any implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the length of this limited warranty. Some states do not allow limitations on how long an implied warranty lasts, therefore above limitation may not apply to you. In no event will EAE be liable for incidental, consequential, or other damages resulting from the breach of any express or implied warranty, including among other things, damage to property, damage based on inconvenience or on loss of use of the product, and, to the extent permitted by law, damages for personal injury. Some states do not allow the exclusion of limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. This warranty only applies to products sold and used in the United States of America. For warranty information in all other countries please refer to your local distributor.

©Elite Acoustics Engineering Inc.