


Anycubic Kobra 3 V2 User Manual



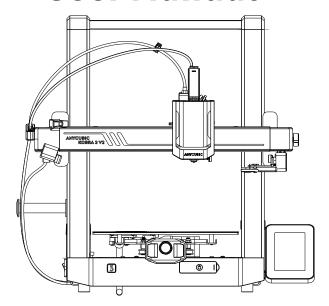

Dear Customer,

Thank you for choosing ANYCUBIC products.

Maybe you are familiar with 3D printing technology or have purchased **ANYCUBIC** printers before, but we still highly recommend that you read this manual carefully. The installation techniques and precautions in this manual can help you avoid any unnecessary damage or frustration.

Please visit https://support.anycubic.com/ to contact us if you have any question. You can also gain more information such as software, videos, models from the website.




Team ANYCUBIC

Copyrighted by "Shenzhen Anycubic Technology Co., Ltd ", all rights reserved.

Content

1	Product Overview ————	—1	3	Power-on Guide ————————————————————————————————————	—15
2	Machine Installation	— 3	4	Printer Binding ——————	— 17
	Install Frame	 3		APP —	— 17
	Connect Printhead Cable ————	5		Anycubic Slicer————————————————————————————————————	-18
	Connect Printhead ——————	 6	-		
	Install Screen———————————————————————————————————	 7	5	Print Model ————————————————————————————————————	— 21
	Connect the X-axis Motor Cable—	 8			
	Install Cable Holder——————	— 9	6	Other Function Descriptions —	— 22
	Install Purge Wiper——————	 10		,	
	Connect Filament Tube ————	— 11	7	Maintenance Recommendation –	24
	Install Spool Holder——————	 12	-		27
	Check Before Use	— 13	8	Attention	27

Product Overview

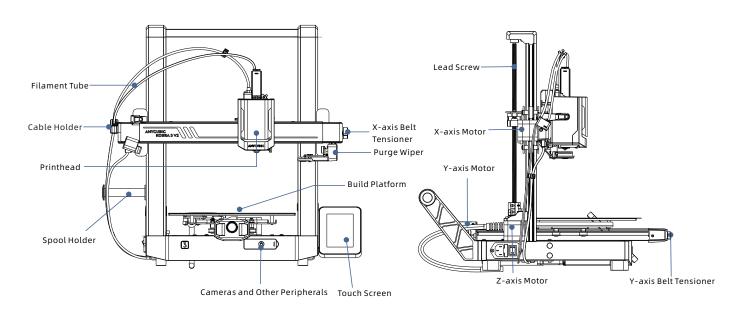



Printer Frame



Base Housing



Printhead



Touch Screen



Spool Holder



Cable Holder



Bag NO.1 M5*45 (4pcs)



Bag NO.2 M2*14 (2pcs)



Bag NO.3 M3*6 (4pcs)



Bag NO.4 M4*16(2pcs)



M3*10(1pcs) M3*8 (1pcs)



U-DISK (1pcs)



Power Cord (1pcs)



Cable Organizer (2pcs)



Purge Wiper



4.0/3.0/2.5/2.0/1.5



Filament Tube (1pcs)



Nozzle Cleaner

Wrench (1 set)



Technical Specification



Grease

Printing

Technology: FDM (Fused Deposition Modeling) Build Size: 255 mm (L) × 255 mm (W) × 260mm (H)

Layer Thickness: 0.08 - 0.28mm Hotbed Temperature: 110℃ Extruder Quantity: Single Nozzle Diameter: 0.4 mm

Supported Materials: PLA/TPU/PETG/ABS etc.

Temperature

Ambient Operating Temperature: 8 °C - 40 °C Operational Extruder Temperature: Max 300 °C Operational Hotbed Temperature: Max 110 °C

Software

Slicing Software: Anycubic Slicer/Prusa Slicer/Cura/Orca

Software Input Formats: .STL/.OBJ Software Output Formats: GCode

Connectivity: U-DISK, AC Cloud, Anycubic Slicer

Electrical

Power Input: 110 V / 220 V AC, 50 / 60 Hz Rated Power: 400 W

Physical Dimensions

Printer Dimensions: 452.9mm (L) \times 504.7mm (W) \times 483 mm (H) Printer Dimensions (including spool holder and build platform movement range):

525.8mm (L) $\times 521$ mm (W) $\times 483$ mm (H)

Net Weight: ~9.2kg

Machine Installation


For the installation instruction video,


please scan the QR code on the right.



01 Install Frame


Fix the printer base housing and frame from the bottom with NO.1 bag screws.

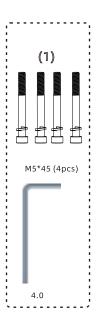

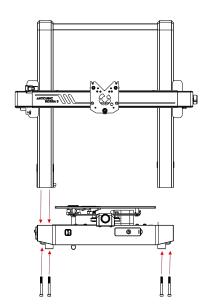


01 Install Frame

Insert the Z-axis motor wire into the hole from the back of the printer and secure it.

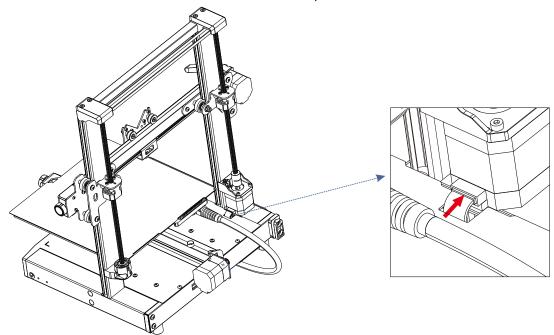

O2 Connect Printhead Cable


- 1. Press the printhead cable (Orange Type-C long cable) down and insert it into the slot above the printhead.
- 2. Secure the cable with the screws from bag No. 2.

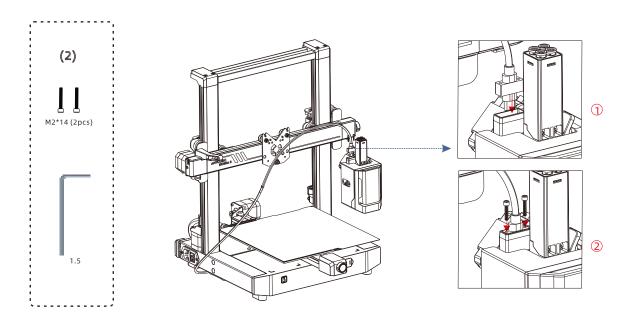

03 Install Printhead


Install the printhead from the back of the printer. Use the No. 3 bag screws to secure the printhead by turning it clockwise in the position shown in the figure.

It is recommended to first tighten the two screws at the top and then the screws at the bottom.

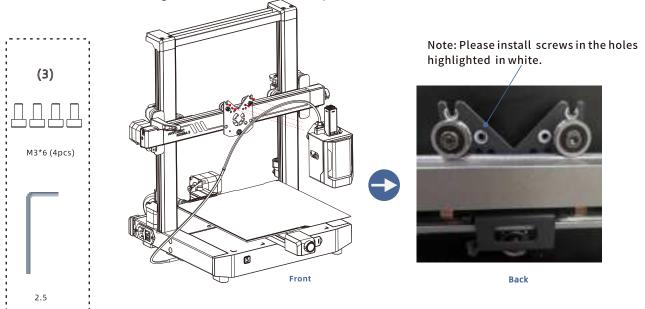


04 Install Screen

- 1. Use No. 4 bag screws to install the screen .
- 2. Plug the FPC cable into the port behind the screen by pressing the terminal.

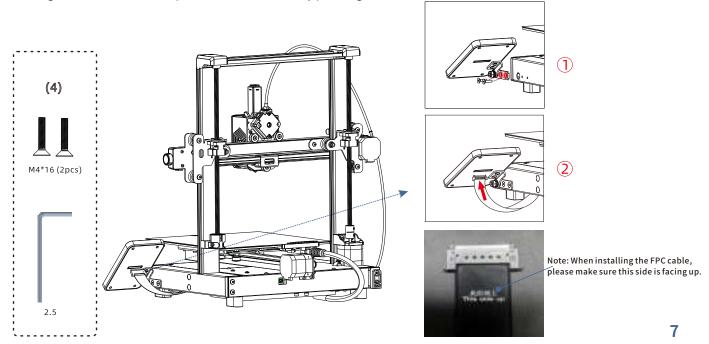


05 Connect the X-axis Motor Cable

Insert the motor cable (Orange 6 Pin short cable) upward into the bottom groove on the left side of the X-axis to tighten it. Note that the cable buckle faces forward.

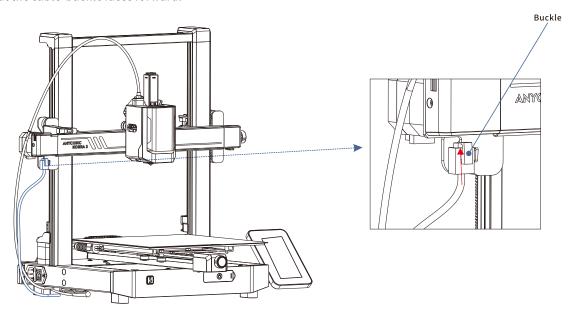


06 Install Cable Hoder

- 1. Press down the cable holder to secure it to the groove on the left side of the X-axis.
- 2.Insert the printhead cable into the cable holder.

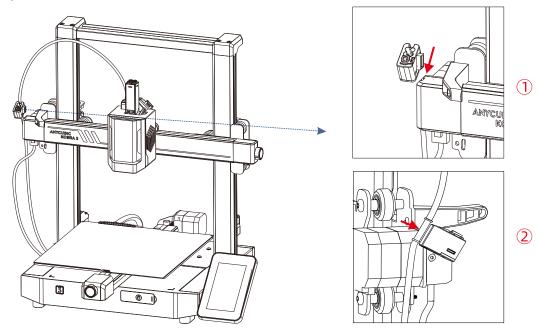

07 Install Purge Wiper

- 1. Slide the purge wiper from the back to the front into the groove on the rear side of the X-axis.
- 2. Use the No. 5 bag screw to secure the purge wiper from the back and bottom of the X-axis.

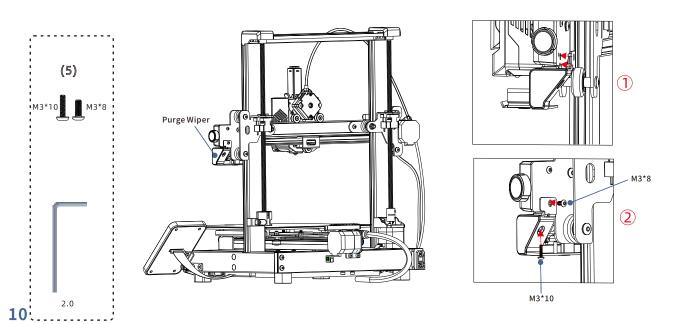

08 Install Filament Tube

- 1. Insert one end of the filament tube into the hub above the printhead and the other end into the cable holder.
- 2. Snap the filament tube and printhead cable into the cable organizer.

