


HALO

AIR + DC

BOLT™

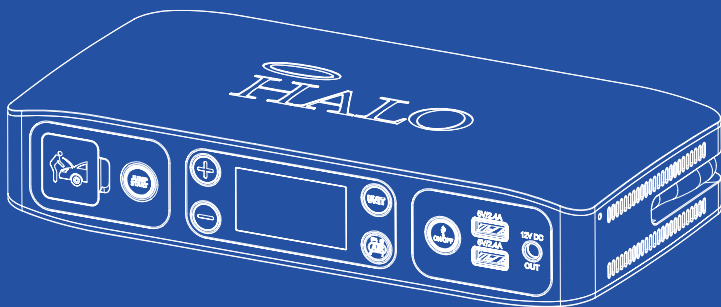

OPERATING INSTRUCTIONS
PLEASE READ BEFORE OPERATING THIS EQUIPMENT

HALO BOLT AIR+ DC

Thank you for choosing HALO!

Powerful and loaded with features including an easy to use digital display, the HALO BOLT AIR+ DC can be used to safely jump start your vehicle, inflate your tires and power your electronic devices anywhere. The HALO BOLT AIR+ DC provides portable power so you can charge your phone, tablet and other electronic devices anywhere! The HALO BOLT AIR+ DC includes an all new DC output that seamlessly integrates with 12V devices including a HALO AC inverter to power household items. The HALO BOLT AIR+ DC also includes a convenient floodlight and emergency light. Compact, versatile and simple to use, the HALO BOLT AIR+ DC and all accessories fit neatly in its carrying pouch and is perfect to store in your home or vehicle for every day use or an emergency need. Never be without a charge, a jump start, or with a flat tire again!

SAFETY PRECAUTIONS

DANGER-CAUTION Read and understand all safety information before using this product. Failure to follow these instructions may result in electrical shock, explosion, fire which may result in serious injuries, death or property damage.

- When used correctly, lithium-ion rechargeable batteries provide a safe and dependable source of portable power. However, if they are misused or abused, this may result in leakage, burns, fire or explosion, causing personal injury or damage to other devices.
- Misusing or incorrectly connecting your HALO BOLT AIR+ DC may cause electric shock to users and damage equipment.
- Do not operate in explosive atmospheres such as in the presence of flammable liquids, gases or dust.
- Remove jump start clamps from vehicle battery after jump starting vehicle.
- Keep your HALO BOLT AIR+ DC dry and away from moisture and corrosive materials. The HALO BOLT AIR+ DC should not be used near water or wet areas such as bathtubs, showers, bathrooms, sinks, swimming pools or basements.
- Do not expose your HALO BOLT AIR+ DC to moisture, water, rain, or snow.
- Keep your HALO BOLT AIR+ DC away from heat sources, including open flames, radiators, stoves, ovens, and any other devices that product heat.
- The lithium-ion rechargeable battery used in this charging device may present a risk of fire or chemical burn if mistreated. Do not expose to fire or excessive temperature. Do not expose to heat above 212°F (100°C) or incinerate.
- In the unlikely event of leakage or explosion use sand or a chemical fire extinguisher.
- Your HALO BOLT AIR+ DC may become warm under extended high power operation. Do not cover, wrap, or otherwise restrict the HALO BOLT AIR+ DC during operation.

- Do not disassemble your HALO BOLT AIR+ DC. There are no user-serviceable parts inside. Incorrect reassembly may result in shock or fire hazard.
- Do not drop or subject to strong impacts. Do not operate your HALO BOLT AIR+ DC if it has received a sharp blow, or has otherwise been damaged in any way.
- Do not puncture, crush or subject to mechanical shock.
- Only charge your HALO BOLT AIR+ DC by the specified method with the specified charging adapter provided with the unit.
- Do not use any non-HALO-branded accessories with the HALO BOLT AIR+ DC. Doing so may cause electric shock to users and damage equipment.
- The HALO BOLT AIR+ DC, along with its accessories, are not toys and should be kept away from children.
- Make sure the jumper cables are fully plugged into the jump start output before trying to jumpstart your vehicle.
- Do not touch red (positive) and black (negative) jumper clamps together at any point.
- Do not insert any foreign object into the ports or openings of your HALO BOLT AIR+ DC.
- Do not clean your HALO BOLT AIR+ DC with harsh chemicals, soaps or detergents. Just wipe the case with a soft cloth.
- Make sure the HALO BOLT AIR+ DC's charging ports do not become contaminated with lint or other debris. Use a canned-air type of product periodically to ensure that the port openings are clear.
- When using the air compressor, always check and follow the manufacturer's recommended pressure. Use caution as the air hose and connectors may get hot after extended use.
- Batteries should be recycled or disposed of as per state and local guidelines.
- Storage: 4°F - 158°F (-15°C - 70°C), Discharge: 14°F - 140°F (-10°C - 50°C), Charge: 32°F - 113°F (0°C - 45°C)


TABLE OF CONTENTS

Safety Precautions	3-4
Included Items	6-7
Operating Instructions	8-16
Troubleshooting Guide	12
Specifications	17
Warranty and Contact Information	19






INCLUDED ITEMS

- HALO BOLT AIR+ DC
- Jumper Cables
- AC Inverter
- Carrying Pouch

- Wall Charging Adapter
- Interchangeable Air Nozzle Kit
- 24 Inch Air Hose Extension
- DC to DC Cable

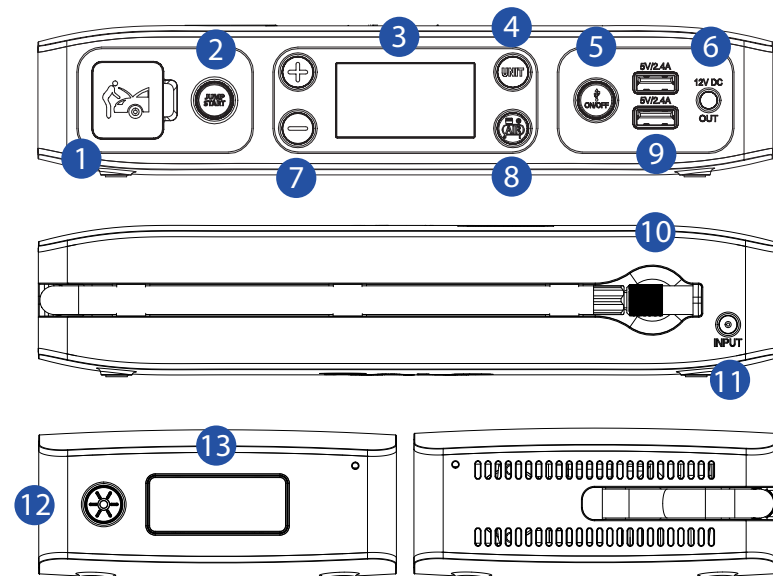


- | | |
|-----------------------------------|---------------------------------|
| 1 Jump Start Output | 12 Floodlight ON/OFF Button |
| 2 Jump Start Button | 13 Floodlight/Emergency Light |
| 3 Digital Screen | 14 24 Inch Air Hose Extension |
| 4 Pressure Unit Button | 15 Jumper Cable Clamps |
| 5 USB ON/OFF Button | 16 Wall Charging Adapter |
| 6 DC Output Port | 17 Tapered Air Nozzle |
| 7 Pressure Settings (+) and (-) | 18 Inflation needle |
| 8 Air Compressor ON/OFF Button | 19 Presta Valve Adapter |
| 9 USB Outputs | 20 AC Inverter |
| 10 Air Hose | 21 DC to DC Cable |
| 11 Charging Input | |

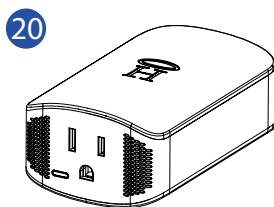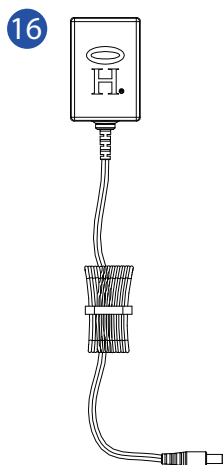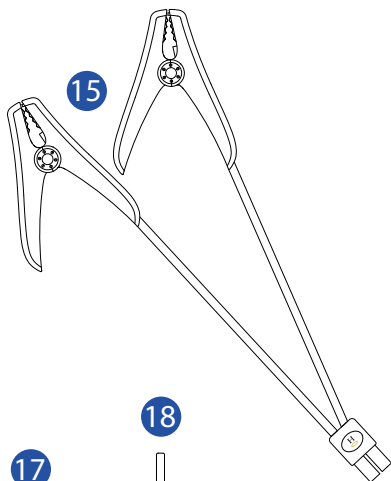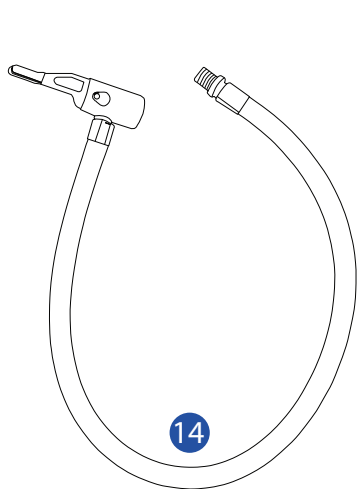

OPERATING INSTRUCTIONS

CHARGING YOUR HALO BOLT AIR+ DC

To charge your HALO BOLT AIR+ DC, use the provided Wall Charging Adapter, and plug the AC adapter plug into the charge input. Next, connect the AC adapter into a wall outlet. The HALO BOLT AIR+ DC will automatically begin charging. When the HALO BOLT AIR+ DC is fully charged, all five battery indicator lights will be solid green and the digital screen will indicate 100% charge. (This could take up to 9 hours).

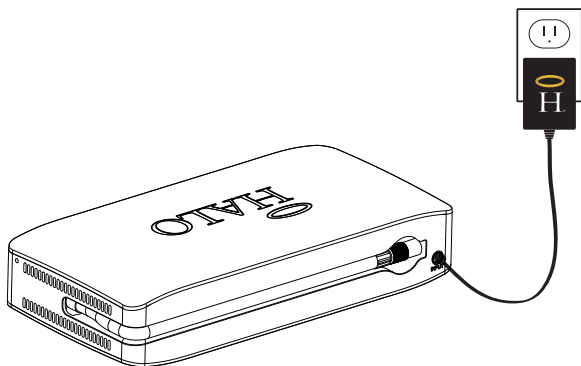


While charging, the digital screen will illustrate the charge percentage of the HALO BOLT AIR+ DC. When fully charged, disconnect the cable.




NOTE:

The HALO BOLT AIR+ DC is designed to charge between 32°F-113°F (0-45° C). A "TEMP" indicator will be illustrated on the digital display if the HALO BOLT AIR+ DC is attempted to be charged outside of this temperature range.

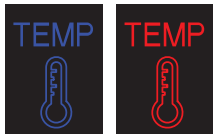

JUMP STARTING YOUR VEHICLE WITH THE HALO BOLT AIR+ DC

1. Plug the jumper cables into the jump start output on the HALO BOLT AIR+ DC.

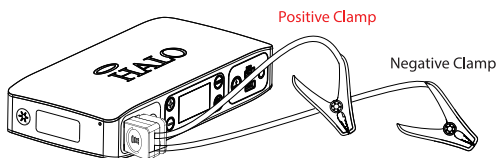


NOTE:

Make sure the jumper cables are fully plugged into the jump start output before trying to jump your vehicle.

2. Attach the jumper cable clamps to the vehicle battery.


- Red clamp on positive terminal (+)
- Black clamp on negative terminal (-)

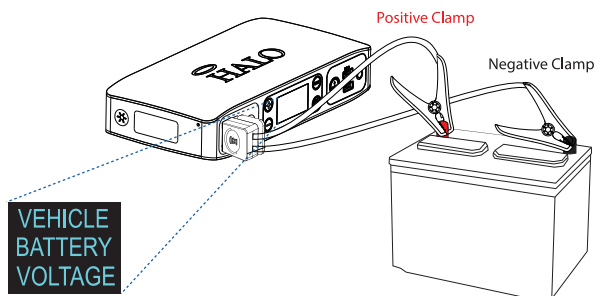

NOTE:

- Once the jumper cable clamps are attached to the vehicle battery, the LCD will display the vehicle battery voltage.
- Do not touch red (positive) and black (negative) clamps together at any point. If the jump start button flashes red, the jumper cables have been connected incorrectly. If this flashing red condition occurs, disconnect the jumper cables from vehicle battery and restart the process from Step 1.

3. Press the "Jump Start" button and wait for solid green light.

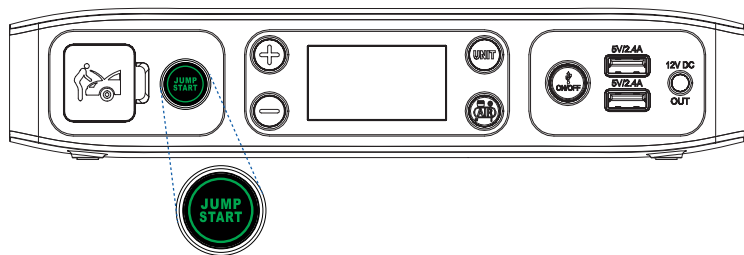

NOTE:

A flashing green light indicates safety checks are in progress.

4. Start your vehicle.

NOTE:

If your vehicle fails to start after the first attempt, wait 30 seconds and repeat step 3 and step 4.

If your vehicle does not start after three attempts, we recommend you consult a certified mechanic.

5. Disconnect the jumper cable clamps from the car battery.





NOTE:

The jump start function can not be used in conjunction with USB charging or the air compressor. Please ensure that you have not activated the USB or Air Compressor output modes when attempting to jump start your vehicle.

NOTE:

The HALO BOLT AIR+ DC is designed to allow a jump start when used within a safe temperature range. A "TEMP" indicator will be illustrated on the digital display if used outside of the temperature operating range.

JUMP START TROUBLESHOOTING TIPS

Condition	Potential Cause	Solution
HALO BOLT AIR+ DC Jump Start button has been pressed but nothing happens	The USB ON/OFF Button or the Air Compressor ON/OFF Button has been pressed.	The jump start output can not be used in conjunction with the USB output or air compressor modes. Ensure that both USB and AIR Compressor modes are off.
 HALO BOLT AIR+ DC displays a red "BATT TOO LOW" message	The HALO BOLT AIR+ DC is not sufficiently charged to jump start the vehicle.	Recharge the HALO BOLT AIR+ DC and verify at least 50% charged. Then try the jump start process again.
 HALO BOLT AIR+ DC Jump Start button flashes red and a SAFETY CHECK FAIL message is displayed	The jumper cables have not been properly connected to the vehicle battery.	Check the jumper cables and ensure that the red clamp is connected to the positive terminal (+) and the black clamp is connected to the negative terminal (-).
 HALO BOLT AIR+ DC Jump Start button flashes green continuously	The HALO BOLT AIR+DC is waiting to be connected to a battery or a SAFETY CHECK FAIL has been triggered.	Check the jumper cables and ensure they are properly connected to the battery. Check and ensure the vehicle battery voltage is greater than 2.0V. If the SAFETY CHECK FAIL indicator is triggered during the jump start process, it is recommended that you consult with a certified mechanic.
 HALO BOLT AIR+ DC displays a blue or red "TEMP" indicator	The HALO BOLT AIR+ DC has detected a low or high temperature condition.	Disconnect the HALO BOLT AIR+ DC and allow unit to acclimate to temperature operating range (14°F-122°F).
You can not successfully jump start your vehicle. The HALO BOLT AIR+ DC displays a vehicle battery voltage greater than 12.0V	The HALO BOLT AIR+ DC detects that it is connected to a vehicle battery with a normal starting voltage. This could indicate that another vehicle component is faulty.	It is recommended that you consult with a certified mechanic.
HALO BOLT AIR+ DC Jump Start and On/Off button flashes red and blue	This could occur when attempting to jump start a vehicle while other electrical components (i.e. headlights, heater, radio, etc.) are on.	Turn off your headlights and any other components that may drain your car battery and try the jump start process again.
	The vehicle battery may be faulty.	It is recommended that you consult with a certified mechanic.


NOTE:

If none of these troubleshooting tips work, please consult a certified mechanic for assistance.

HALO BOLT AIR+ DC COMPRESSOR

The HALO BOLT AIR+ DC comes equipped with a 24 Inch Air Hose Extension and Interchangeable Air Nozzles. Simply twist on the corresponding nozzle to inflate balls, pool floaties, bike tires, and more!

1. Connect the air hose to the tire or use the appropriate nozzle to connect to your inflatable device
2. Press the (+) or (-) button to set the desired pressure. The pressure measuring units can be changed by pressing the UNIT button.
3. Once the desired pressure has been set, begin inflating by pressing the Air Compressor ON/OFF button. The air compressor will shut off automatically once the pressure has been reached.

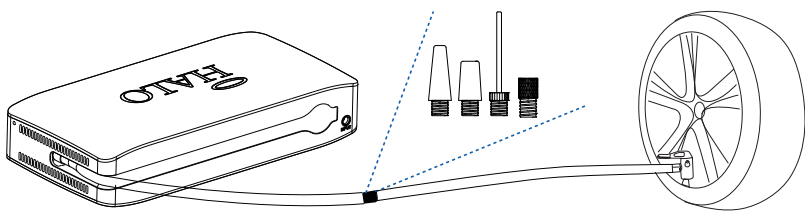

NOTE:

The air compressor can be started or stopped at any point by pressing the air compressor ON/OFF button. The (+) and (-) may be long pressed to set the desired pressure quickly.



Note: Always check and follow the manufacturer's recommended pressure. Use caution as the air hose and connectors may get hot after extended use. The HALO BOLT AIR+ DC compressor is designed to automatically stop after an extended run-time or if an over-temperature protection set point is reached.

USING THE AC INVERTER

The DC to AC inverter can be used to power any device that operates at 110VAC, this includes laptops that use a standard AC wall outlet.

Connect one end of the supplied DC cable to the DC Input on the AC Inverter and the other end to the DC Output on the HALO BOLT AIR+ DC. Connect your device's AC plug in the AC Inverter's AC port. The LED on the AC Inverter will be solid green if no safety protection is triggered and the device is charging normally.

TROUBLESHOOTING

- If the LED on the AC Inverter is solid red, then a power fault is detected.
- If the LED on the AC Inverter is flashing red, then a temperature protection is triggered.

If the LED on the AC Inverter is illuminated red, solid or flashing, unplug the device from the Inverter and disconnect the Invert from the HALO BOLT AIR+ DC. The Inverter will reset.

USING THE 12V DC OUTPUT


The 12V DC output may be used for powering numerous DC electronics and appliances. To use, simply connect the 5.5 x 2.5mm barrel jack connector from your device directly into the DC output port of the HALO BOLT AIR +DC. Turn on the DC output by pressing the ON/Off Button on the HALO BOLT AIR +DC.

NOTE:

The HALO 100W AC Inverter is designed to seamlessly connect to the DC output to provide normal household power to your electronic devices and appliances.


CHARGING AN ELECTRONIC DEVICE USING 5V/2.4A USB OUTPUT PORT

1. Use the charging cable provided with your electronic device and connect the Standard USB end into either one of the HALO BOLT AIR+ DC US 5V/2.4A Output ports.
2. Turn on the USB charging by pressing the USB Power ON/OFF Button on the HALO BOLT AIR+ DC.

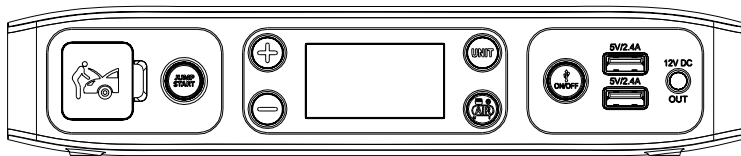

NOTE:

The HALO BOLT AIR+ DC USB charging feature will automatically power off after 30 minutes of inactivity.

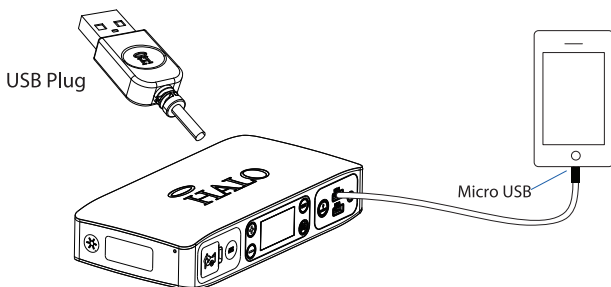

HALO SMART CHARGE TECHNOLOGY

Your HALO BOLT AIR+ DC contains the HALO SMART CHARGE TECHNOLOGY to achieve higher compatibility for charging standard 5V USB electronic devices. The HALO SMART CHARGE TECHNOLOGY will allow the HALO BOLT AIR+ DC to communicate with your electronic device and provide the fastest and safest charge for that device.

COMPATIBILITY

Standard 5V USB electronic devices including: Mobile phones, Tablets, PSP, NDS, MP3, MP4, MP5, Bluetooth, GPS, Cameras, and more.



Mobile Phones



Tablets



Digital Cameras



Mobile Gaming




USING YOUR HALO BOLT AIR+ DC FLOODLIGHT


The floodlight can be turned on and off by simply pressing and releasing the floodlight ON/OFF button. The first press will turn on the floodlight. Second press will turn on the red emergency light. Third press will turn on SOS flashing red light. The floodlight will automatically turn off after 2 hours of inactivity.

NOTE:

Do not look directly into the LED floodlight.



Floodlight ON/OFF Button

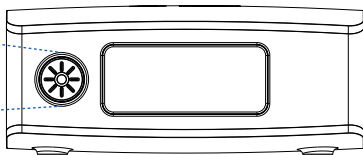

SPECIFICATIONS

Battery Cells:	3x Li-Polymer 5000mAh
Battery Pack Energy:	55500 mWh
Jump Start:	12V/600Amps
Air Compressor:	100PSI max
Input:	14V/0.85A
USB Output:	2x USB 5V/2.4A
DC Output:	12V/10A
Dimensions:	4.65 x 9.52 x 1.85 inches
Weight:	2.54 lbs
Operating Temperature:	32°F - 113°F (0°C - 45°C)

AC INVERTER

DC Input:	12VDC
AC Output:	115VAC/60Hz
Rated Power:	100W

COMPLIANCE WITH FCC REGULATION

This device complies with part 15 of the FCC Rules and RSS-Gen of IC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: To comply with the limits of the Class B digital device, pursuant to Part 15 of the FCC Rules, this device must be used with certified peripherals and shielded cables. All peripherals must be shielded and grounded. Operation with non-certified peripherals or non-shielded cables may result in interference to radio or reception.

LIMITED WARRANTY

HALO warrants its products to be free from defects in material and workmanship under normal use.

For all questions or exchange requests, please call 888-907-6274, contact us at [zagg.com/support](https://www.zagg.com/support) or visit www.zagg.com/warranty-policies.

This Limited Warranty sets forth the full scope of HALO's obligations and liabilities with respect to the product. All implied warranties, including without limitation the implied warranties of merchantability and fitness for a particular purpose, are limited to the duration of this Limited Warranty. In no event shall HALO be liable for any incidental, special, consequential or punitive damages or any damages or losses of or to electronic equipment or products that are used with any of HALO's products.



FOR TECHNICAL SUPPORT PLEASE
CONTACT US AT:

ZAGG.COM/SUPPORT
OR
CALL US AT: **888-907-6274**

HALO
910 W LEGACY CENTER WAY
STE. 500, MIDVALE, UTAH 84047

WWW.ZAGG.COM/HALO

© 2021 ZAGG Inc | www.ZAGG.com/HALO
The HALO and H trademarks are the property of ZAGG Inc.
All rights reserved. 314-00994-A.

ZAGG Inc | 910 W Legacy Center Way, Ste. 500, Midvale, Utah 84047
Made in China.

