



Master MT-DP96MFA Digital Multifunction Meter User Manual

[Home](#) » [MASTER](#) » Master MT-DP96MFA Digital Multifunction Meter User Manual 



Make a difference
DIGITAL MULTIFUNCTION METER
User Manual
MT-DP96MFA



Contents

- [1 MT-DP96MFA Digital Multifunction Meter](#)
- [2 Function introduce](#)
- [3 Technical parameter](#)
- [4 Installation and correction](#)
- [5 Display & Buttons](#)
- [6 Programme operation](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

MT-DP96MFA Digital Multifunction Meter

Thanks for choosing our product – MT-DP96MFA, Please read this manual carefully and pay attention to below caution matters.

CAUTION

- ✓ This product should be installed and maintained by professional person
- ✓ Before operating this product inside or outside, please cut off the input signal and power supply;
- ✓ Please make sure all parts of the product don't have voltage by suitable voltage detection device
- ✓ The power supply should be within the rated range

The below situation will result in device damage and abnormal working

- ✗ Auxilliary power source voltage over range
- ✗ Distribute system frequency over range
- ✗ Current, voltage input polarity incorrect
- ✗ Disconnect the communication plug under charged situation
- ✗ No according requirement to connect terminal



Please don't touch the terminals when the meter is in operation!

Function introduce

Measure function		Remark
Realtime measure	Three phase voltage (L-L, L-N)	Basic function/
	Three phase current and neutral current	
	System Frequency	
	P, Q, S, PF (per phase & total	
Electric energy	KWh import	
	KVARh import	
	KWh export, KVARh export	
Communication	RS485 Port MODBUS-RTU	
Maximum Demand/	U,I,P,Q	Expanded option/
Analog output/	0-20mA/ 4-20mA/ 0-5V/ 0-10V	
Digital input/	Dry contact type/	
Relay output/	AC250V 5A Remote/ Alarm	
Display type/		LCD


Technical parameter

		Parameter
	Connection system	3P3W/ 3P4W


Signal Input/ t/	Voltage	Measurement range	450V L-L
		Over load	Continous: 1.2 Vn; Instantaneous: 2Vn
		Power consumption	< 1VA
	Current	Measurement range	5A/ 1A
		Over load	Continous: 1.2In; Instantaneous: 2In
		Power consumption	< 1VA
	Frequence		45 – 65Hz
Auxiliary power suply		AC85-265V DC100-300V	
Communication		RS485 communication port, physical layer isolation. Accordi ng international standard MODBUS-RTU agreement. Com munication speed 1200-38400 (Default 9600) Test type N81, E81, 081 (Default N81)	
Analog output		0-20mA/ 4-20mA/ 0-5V/ 0-10V	
Relay output		Programme remote/ Alarm switching ouput Capacity 5A at 250VAC/ 30VDC	

Digital input	Remote switch input signal, dry contact input. Program relate alarm output
Measure class	Current, Voltage: 0.5S Frequency: $\pm 0.1\text{Hz}$ Active power: 0.5S Reactive power: 2S Active Energy: 0.5S; Reactive En.: 2S
IP protection	IP53 for indoor type and IP65 for outdoor type
Environment	Working temperature: $-10\div 55^{\circ}\text{C}$ Store temperature: $-20\div 75^{\circ}\text{C}$ Relative Humidity: $<80\%\text{RH}$
Safe	Isolation: Signal, auxiliary power supply, output terminal crust resistance $>5\text{MW}$ and withstand voltage pulse $>AC2\text{KV}$

Installation and correction

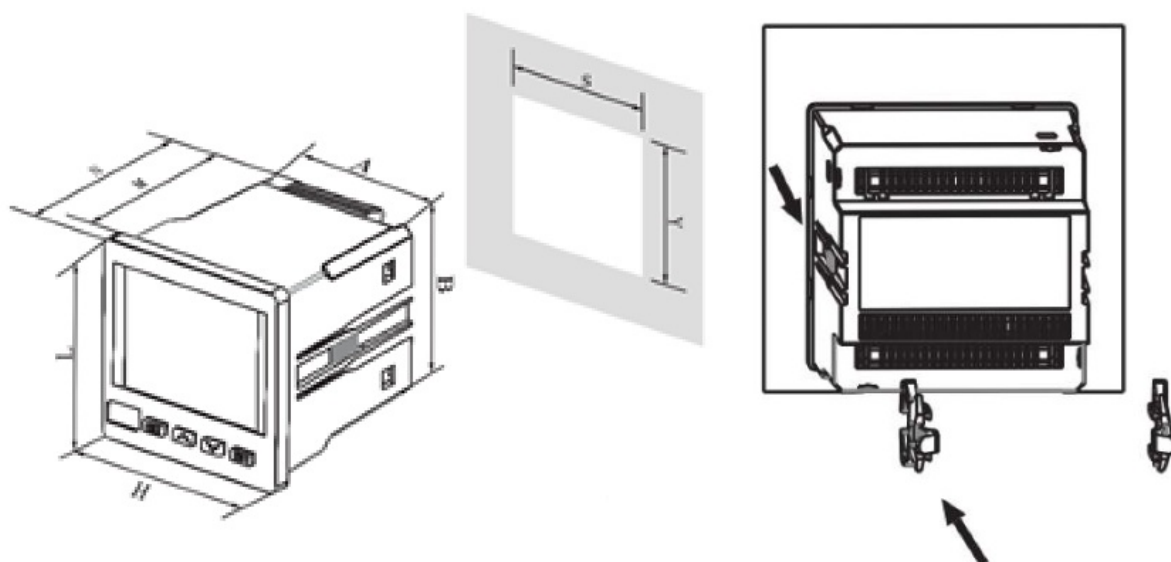


LxH (mm)	AxB (mm)	SxY (mm)	SxY (mm) IP65	N (mm)	M (mm)
96×96	90.5×90.5	91×91	91.5×91.5	94	88

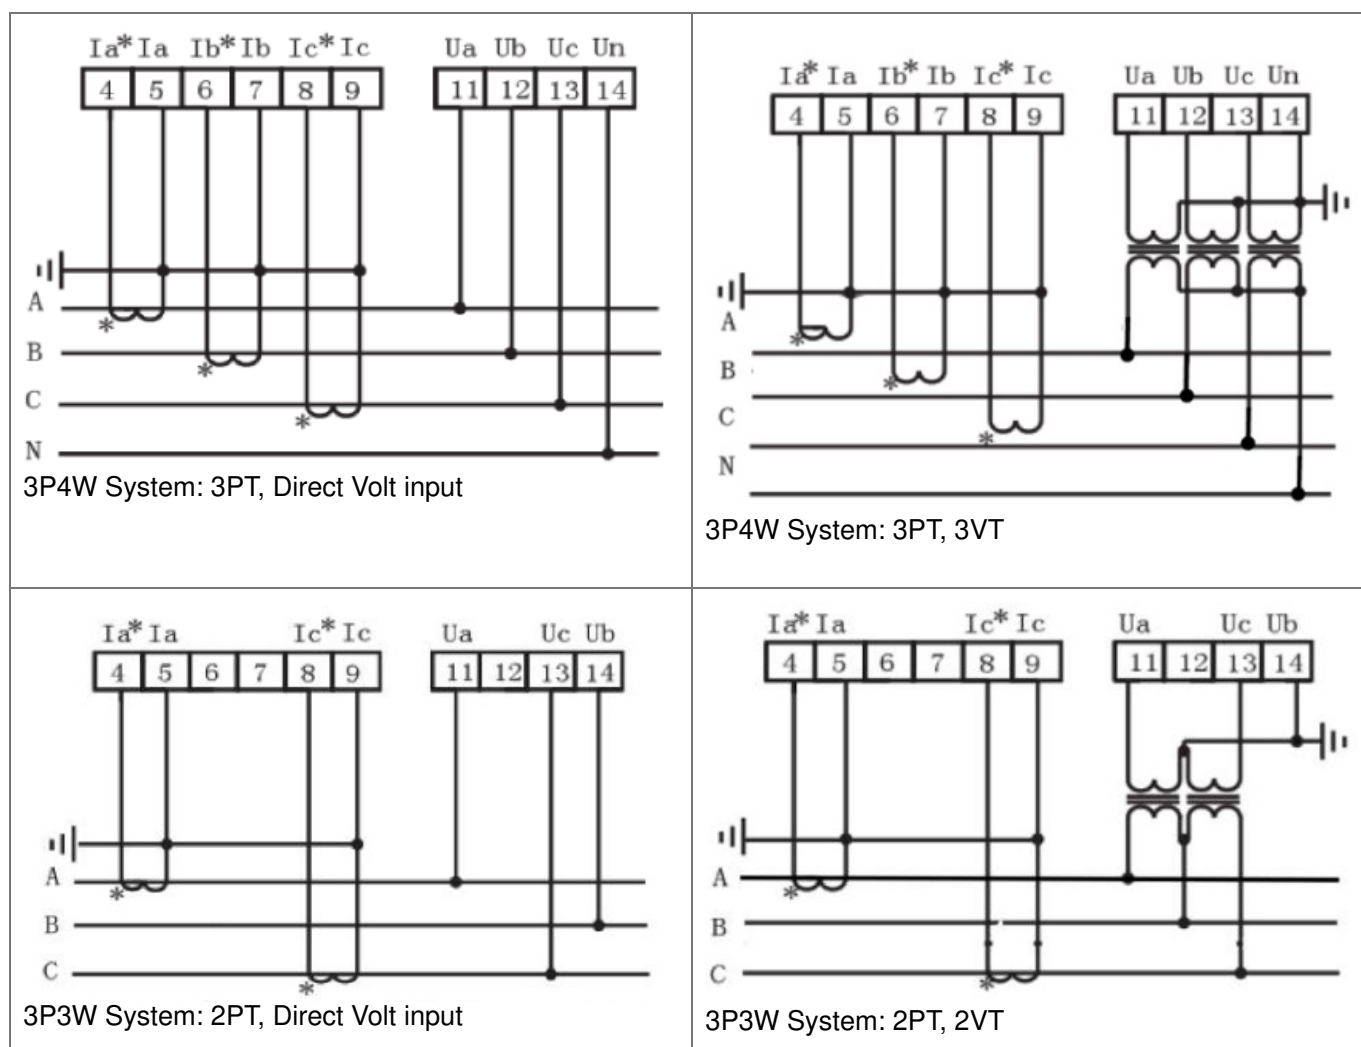


Active Pulse		Reactive Pulse			RS485			Aux. Power Suply	
Ep-	Ep+	Ep-	Ep+		B	A		N(V-)	L(V+)
48	47	50	49		59	58		2	1

Relay Output								Digital input					Analog output				
DO1		DO2		DO3		DO4		CO M	DI1	DI2	DI3	DI4	A0-	A01 +	A02 +	A03 +	A04 +
15	16	17	18	19	20	21	22	70	71	72	73	74	30	31	32	33	34

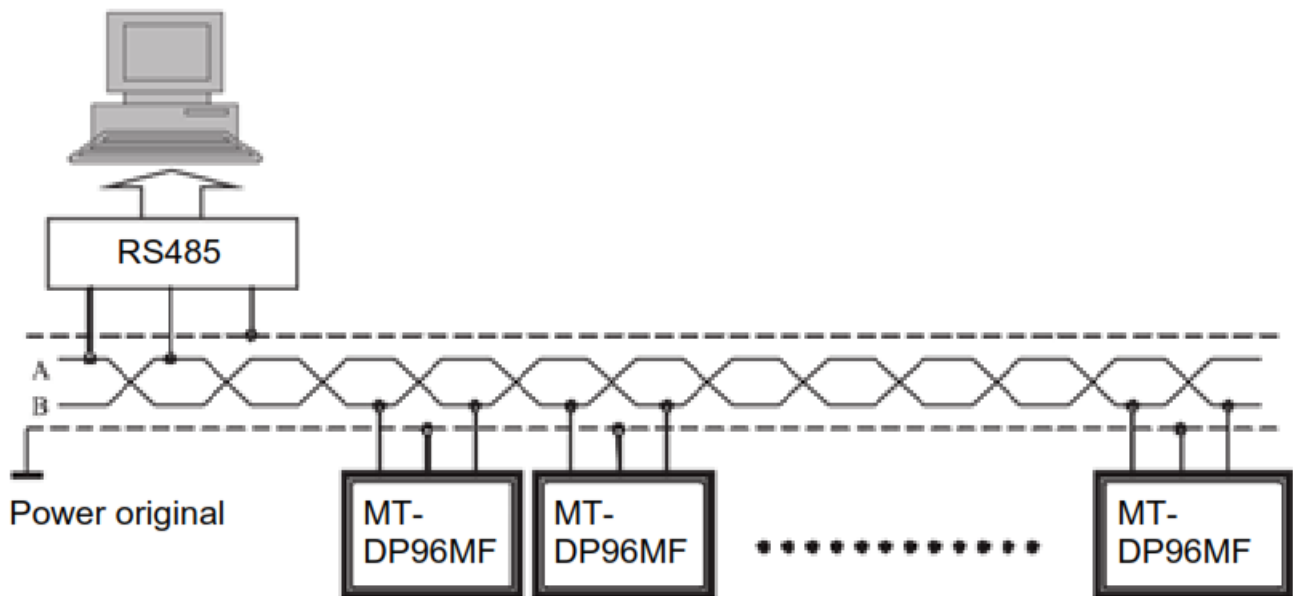

Display & Buttons

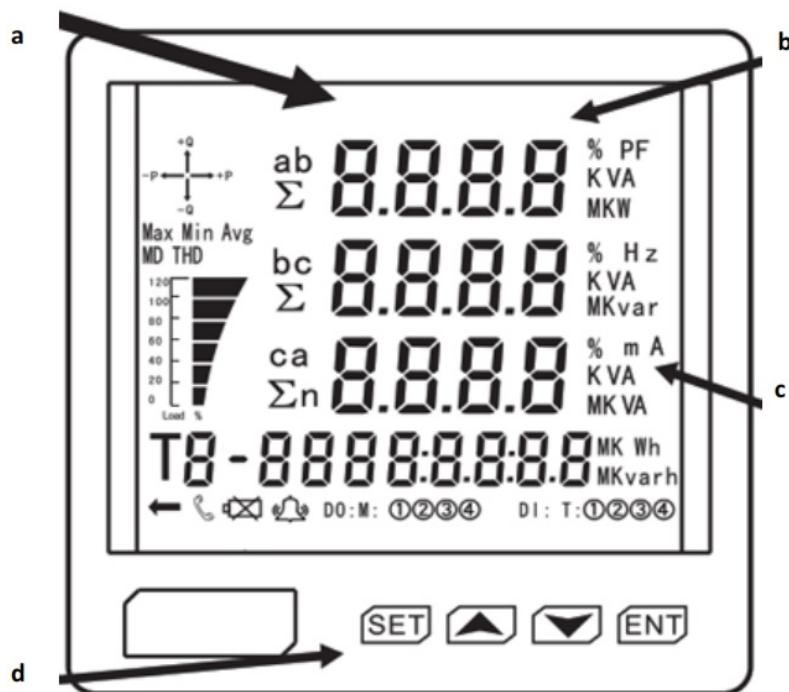

a. Four lines digital display measure information: Three phase voltage, three phase current, active power, reactive power, power factor, frequency, switch input, output, other switch input, two way active power, two way reactive power, analog input, demand



b. K is light mean practice value is display value is 1.000 times. M is light mean practice value is display value is 1.000.000 times


c. Measure item unit or characterise: three phase voltage V, three phase current A, active power W, reactive power VAR...

d. Buttons use in change or programme set:

- is change page button or value increase or decrease button
- is enter programme status
- is select confirm button

If there is no relative symbol display or the set data not working, It means the product without the relative function

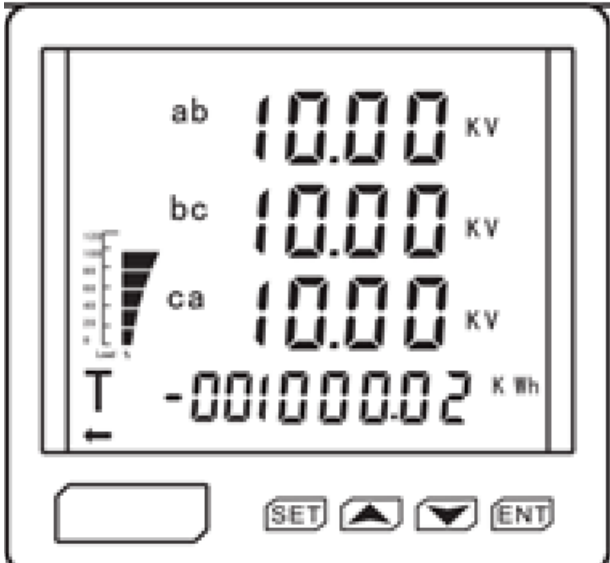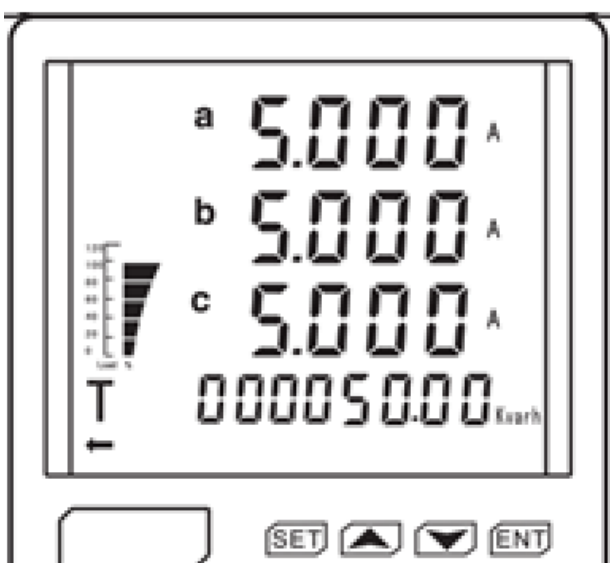Board	Content	Explain
DISP=1 -Three phase voltage -Forward active energy Kwh		Seperate display voltage U_a , U_b , U_c (in the 3P4W) In left fig. $U_a=5774V$ $U_b=5774V$ $U_c=5774V$ Forward active energy = 2908.05KWh
DISP=2 -Three phase voltage -Reverse active energy Kwh		Seperate display voltage U_{ab} , U_{bc} , U_{ca} (in the 3P4W) In left fig. $U_{ab}=10KV$ $U_{bc}=10KV$ $U_{ac}=10KV$ Reverse active energy = 1000.02Kwh
DISP=3 -Three phase current -Forward reactive energy Kvarh		Seperate display current I_a , I_b , I_c (in the 3P4W) In left fig. $I_a=5A$ $I_b=5A$ $I_c=5A$ Reverse reactive energy = 50Kvarh

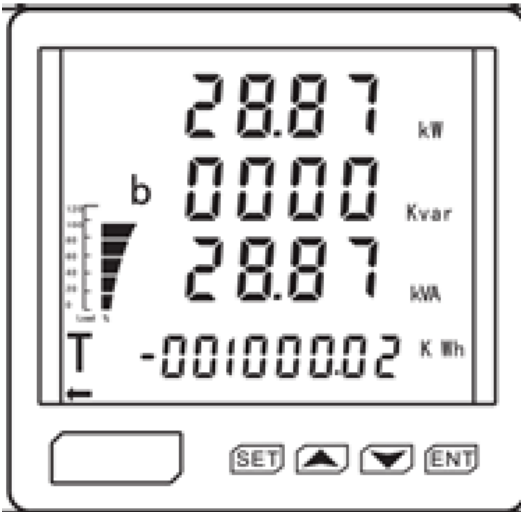DISP=4 -Total active power -Total reactive power -Total apparent power		Total active power = 86.6KW Total reactive power = 0000Kvar Total apparent power =86.6KVA Reverse reactive energy =100.08Kvarh
DISP=5 – Active power phase A -Reactive power phase A -Apparent power phase A		Active power of phase A = 28.87KW Reactive power of phase A = 0000Kvar Apparent power of phase A =28.87KVA Forward active energy =2908.05KW h
DISP=6 – Active power phase B -Reactive power phase B -Apparent power phase B		Active power of phase B = 28.87KW Reactive power of phase B = 0000Kvar Apparent power of phase B =28.87KVA Reverse active energy =1000.02KW h

DISP=7 – Active power phase C -Reactive power phase C -Apparent power phase C		Active power of phase C = 28.87K W Reactive power of phase C = 0000 Kvar Apparent power of phaseCB =28.8 7KVA Forward reactive energy =50.00KV ARh
DISP=8 – Average current -Zero sequence current		Average current = 5A Zero sequence current = 0.06A Reverse reactive energy =50.00KV ARh
DISP=9 – Three phase total power factor -Frequence -Voltage unbalance		Three phase total power factor =1. 000 Frequence = 50Hz Voltage unbalancedness = 9V Forward active energy =2908.05K Wh

DISP=10 Split phase power factor	 The display shows three lines of power factor (PF) for phases a, b, and c, all at 1.9999. The bottom line shows reverse active energy (KWh) as -001000.02. Navigation buttons (SET, up, down, ENT) are at the bottom.	Power factor of phase A =0.999 (inductive load) Power factor of phase B =0.999 (inductive load) Power factor of phase C =0.999 (inductive load) Reverse active energy =1000.02KWh
DISP=11 Residual current	 The display shows three lines of zeros (0000) and the bottom line shows residual current as 10.09 mA. Navigation buttons are at the bottom.	Residual current = 10.09mA
DISP=12 Digital input information from 1 to 12 way channel	 The display shows three lines of zeros (0000), the second line shows 1101, and the bottom line shows 0000. The label 'DI' is at the bottom right. Navigation buttons are at the bottom.	First line: 1-4 way channel Second line: 5-8 way channel Third line: 9-12 way channel In left fig.: No.5 way, No.6 way, No.8 way channel are ON, other way channel is OFF
DISP=13 Digital output information from 1 to 4 way channel	 The display shows three lines of zeros (0000), the second line shows 1011, and the bottom line shows 0000. The label 'DO' is at the bottom left. Navigation buttons are at the bottom.	First line: 1-4 way channel Second line: 5-8 way channel Third line: 9-12 way channel In left fig.: No.1 way, No.3 way, No.4 way channel are ON, No.2 way channel is OFF

Programme operation

In programme status, digital interface adopt layers structure menu type, meter supply three lines number display (se fig. 5)



Fig.5

No.1 line is first layer menu information;

No.2 line is second layer menu information;

No.3 line is third layer menu information;

Exp: The fig.5 shown: No.1 layer: INPT = Signal input; No.2 layer: CT = current transformer; No.3 layer: current value is 5, It means ratio of CT is 25/5A.

The digital display interface menu has the following organizational structure, the user can choose the appropriate setting parameters according to the actual situation.

No.1 Layer	No.2 Layer	No.3 Layer	Description
System SET	Display DISP	0000-0017	0000 mean automatic cycling display. Each board connect see table 6
	D I SL	0001-0003 or 0000-0120	0000-0120 is keeping time of LCD back light. 0000 means the backlight keeping ON
	Data clear CLEAR	1111	1111 means the data clear other value is invalid

Signal Input INPT	Wiring type Net	0000 or other value	0000 mean 3P4W system. Other value is mean 3P3W system
	Voltage trans. ratio PT	1 –9999	PT value= PT primary value/ secondary value
	Current trans. ratio CT	1 –9999	CT value= CT primary value/ secondary value


Communication Set CON i (i is 1—2)	Address SN	1~247	Meter address range 1 to 247
	Communication speed BAUD	0001~0004	0001 is 1200; 0002 is 2400; 0003 is 4800; 0004 is 9600; 00005 is 9200; 00006 is 38400
	Data format DATA	0001~0003	0000 is E,8, 1; 0001 is 0, 8,1; 00002 is N,8,1

Digital output Set Do-i (i is 1~4)	Choose alarm item or close alarm	Set alarm item's specific threshold value	Choose alarm item, and set relative threshold value (when alarm item is digital value, no need set threshold value), once meet alarm condition, switch output working
--	----------------------------------	---	--



Analog output Set AQ-i. (i is 1~4)	Choose transmitter item or close analog output (refer to 8.2 analog output)	Set the full scale value of analog item	Choose transmitter item's and relative electrical parameter (0-20mA, 4-20mA, 4-12-20mA) For example, set "AO-1" TYPE"0135" UAL"5000", which means A phase current 0-5A corresponds to the transmitter output signal of first loop 4-20mA
--	---	---	--


Note: The above menu is applied to the product with complete functions. If you find there is no such menu in the product or the menu is not working, It means the product not supporting the function.

Hold SET button in
3 seconds

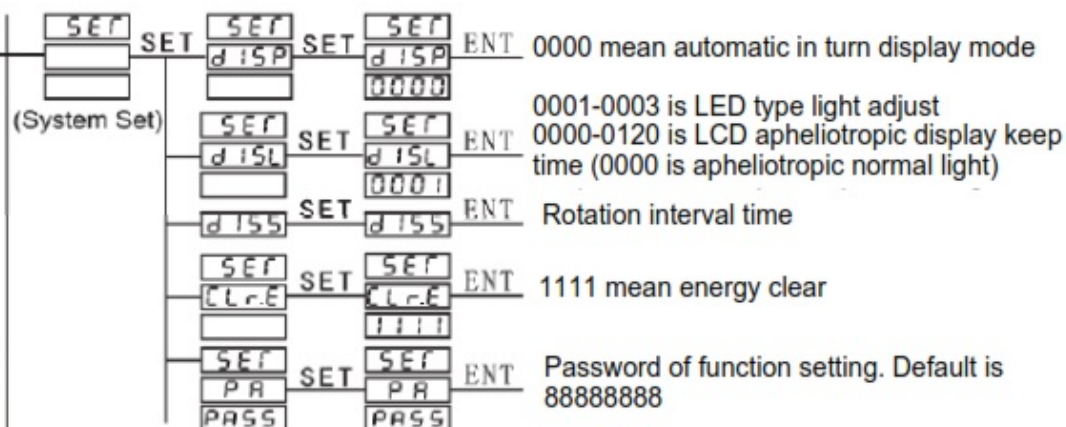

Programme menu
Structure diagram

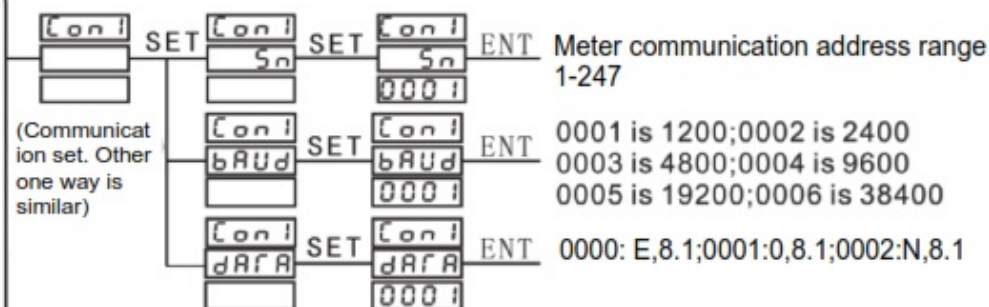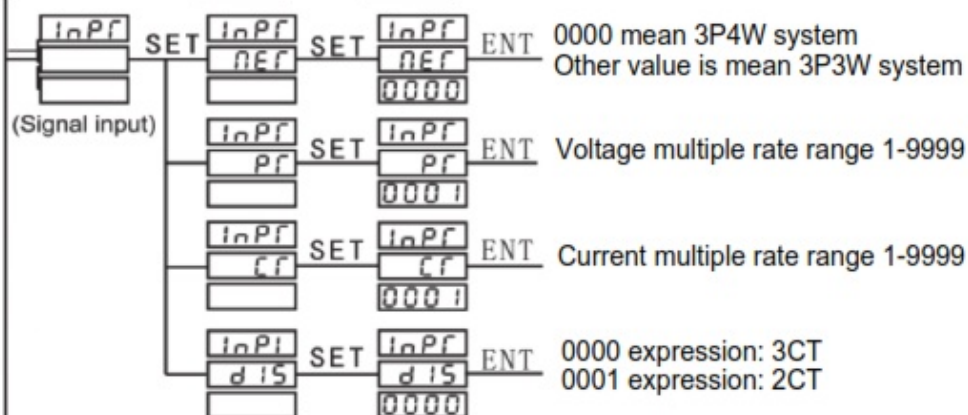

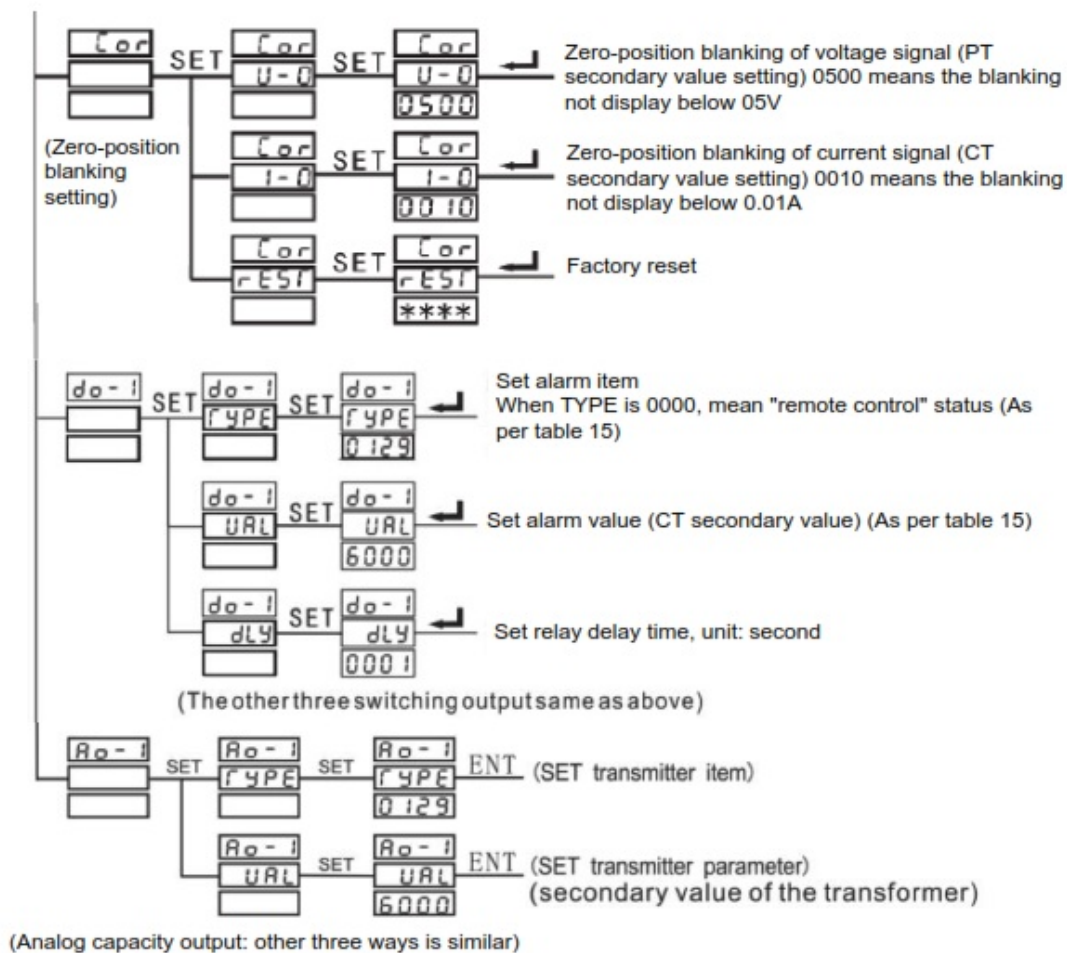

Documents / Resources

 Version 1.0 Page 1.1	Master MT-DP96MFA Digital Multifunction Meter [pdf] User Manual MT-DP96MFA Digital Multifunction Meter, MT-DP96MFA, Digital Multifunction Meter, Multifunction Meter, Meter
---	---