

# MEAN WELL RSP-1600 1600W Power Supply With Single **Output Owner's Manual**

Home » MEAN WELL » MEAN WELL RSP-1600 1600W Power Supply With Single Output Owner's Manual



#### **Contents**

- 1 MEAN WELL RSP-1600 1600W Power Supply With Single
- **Output**
- **2 Product Usage Instructions**
- 3 Dimension
- 4 Features
- **5 Applications**
- **6 Description**
- **7 SPECIFICATION**
- 8 Block Diagram
- 9 Static Characteristics
- **10 Function Manual**
- 11 Installation Manual
- 12 Documents / Resources
  - 12.1 References
- 13 Related Posts



MEAN WELL RSP-1600 1600W Power Supply With Single Output



### **Product Usage Instructions**

#### Installation

- 1. Ensure the input voltage matches the specifications of the power supply.
- 2. Connect the power supply to the appropriate power source.
- 3. Make sure to provide adequate ventilation for cooling.

#### **Programming**

To program the output voltage and current levels:

- 1. Refer to the user manual for specific programming instructions.
- 2. Use the remote ON-OFF control for convenient operation.

#### **Maintenance**

- 1. Regularly check for any signs of damage or wear.
- 2. Clean the power supply unit periodically to prevent dust build-up.

#### **FAQs**


• Q: What should I do if the power supply overheats?

A: If the power supply overheats, immediately turn it off and allow it to cool down before resuming operation. Ensure proper ventilation around the unit.

• Q: Can I use the power supply for laser-related machines?

A: Yes, the power supply is suitable for use with laser-related machines as mentioned in the applications section of the user manual.

#### **Dimension**



# Front





# Back

















#### **Features**

- Universal AC input / Full range (Withstand 300VAC surge input for 5 seconds)
- Built-in active PFC function
- High efficiency up to 93%
- Forced air cooling by built-in DC fan
- Output voltage and constant current level programmable
- Active current sharing up to 9600W (5+1) Built-in remote ON-OFF control / remote sense / auxiliary power / DC 0K signal / OTP alarm signal
- Protections: Short circuit / Overload / Over voltage / Over temperature
- Optional PMBus or CANBus protocol
- 5 years warranty











## **Applications**

- Factory control or automation apparatus
- Test and measurement instrument
- · Laser related machine
- · Aging facility
- · Digital broadcasting
- · Constant current source
- · Redundant system


#### **GTIN CODE**

MW Search: https://www.meanwell.com/serviceGTIN.aspx

# **Description**

RSP-1600 is a 1.6KW single output enclosed type AC/DC power supply with a IU low profile and a high power density up to 25W/inch3. This series operates for 90-264VAC input voltage and offers the models with the DC output mostly demanded from the industry. Each model is cooled by the thermostatically controlled fan. Moreover, RSP-1600 provides vast design flexibility by equipping various built-in functions such as the output programming, active current sharing, remote ON-OFF control, auxiliary power, etc.

## **Model Encoding / Order Information**

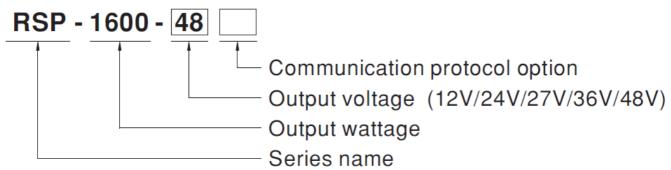

Туре	Communication Protocol	Note
Blank	None	In Stock
PM	PMBus protocol	By request
CAN	CAN Bus protocol	By request

#### **SPECIFICATION**

MODI	EL	RSP-1600- 12	RSP-1600-24	RSP-1600- 27	RSP-1600-36	RSP-1600- 48
	DC VOLTAGE	12V	24V	27V	36V	48V
	RATED CURRENT	125A	67A	59A	44.5A	33.5A
	CURRENT R ANGE	0 ~ 125A	0 ~ 67A	0 ~ 59A	0 ~ 44.5A	0 ~ 33.5A
	RATED POW ER	1500W	1608W	1593W	1602W	1608W

RIPPLE & NO ISE (max.) No te.2	150mVp-p	200mVp-p	200mVp-p	250mVp-p	300mVp-p		
					300111 Ф-р		
VOLTAGE AD J. RANGE		23.5 ~ 30V	26.5 ~ 33. 5V	35.5 ~ 45V	47.5 ~ 58.8V		
VOLTAGE TO LERANCE No te.4	±1.0%	±1.0%	±1.0%	±1.0%	±1.0%		
LINE REGUL ATION	±0.5%	±0.5%	±0.5%	±0.5%	±0.5%		
LOAD REGUL ATION	±0.5%	±0.5%	±0.5%	±0.5%	±0.5%		
SETUP, RISE TIME	1500ms, 60r	ms/230VAC at full load			'		
HOLD UP TI ME (Typ.)	16ms / 230V	'AC at 75% load	0ms / 230VA0	C at full load			
VOLTAGE RA NGE Note.5	90 ~ 264VA0	0 ~ 264VAC 250 ~ 370VDC					
FREQUENCY RANGE	47 ~ 63Hz						
POWER FAC TOR (Typ.)	0.97/230VAC	C at full load					
EFFICIENCY (Typ.)	89%	91.5%	92%	92%	93%		
AC CURRENT (T yp.) Not e.5	14A/115VA C 8A/230 VAC						
INRUSH CUR RENT (Typ.)	COLD STAP	T 35A/230VAC					
LEAKAGE CU RRENT	<2mA / 230\	/AC					
	105 ~ 115% rated current						
OVERLOAD		-	iting, shut dow	vn O/P voltage after t	sec. After O/P		
OVER VOLTA	15.75 ~ 18. 75V	31.5 ~ 37.5V	35.2 ~ 41. 9V	47.2 ~ 56.3V	63 ~ 75V		
GL	Protection ty	pe : Shut down o/p volta	ge, re-power o	on to recover	'		
OVER TEMP	Drotaction to	roo : Shut down o/n volta	ne recovers a	utomatically after ten	nnerature goes		
	J. RANGE  VOLTAGE TO LERANCE Note.4  LINE REGULATION  LOAD REGULATION  SETUP, RISE TIME  HOLD UP TIME (Typ.)  VOLTAGE RANGE Note.5  FREQUENCY RANGE  POWER FAC TOR (Typ.)  EFFICIENCY (Typ.)  AC CURRENT (Typ.)  AC CURRENT (Typ.)  INRUSH CUR RENT (Typ.)  LEAKAGE CURRENT  OVERLOAD	J. RANGE       11.5 ~ 15V         VOLTAGE TO LERANCE No te.4       ±1.0%         LINE REGUL ATION       ±0.5%         LOAD REGUL ATION       ±0.5%         SETUP, RISE TIME       1500ms, 60m         HOLD UP TI ME (Typ.)       16ms / 230V         VOLTAGE RA NGE Note.5       90 ~ 264VAC         FREQUENCY RANGE       47 ~ 63Hz         POWER FAC TOR (Typ.)       0.97/230VAC         EFFICIENCY (Typ.)       89%         AC CURRENT (Typ.) Not e.5       14A/115VA C 8A/230 VAC         INRUSH CUR RENT (Typ.) Not e.5       COLD STAR         LEAKAGE CU RENT       <2mA / 230V	J. RANGE       11.5 ~ 15V       23.5 ~ 30V         VOLTAGE TO LERANCE No te.4       ±1.0%       ±1.0%         LINE REGUL ATION       ±0.5%       ±0.5%         LOAD REGUL ATION       ±0.5%       ±0.5%         SETUP, RISE TIME       1500ms, 60ms/230VAC at full load         HOLD UP TI ME (Typ.)       16ms / 230VAC at 75% load       1         VOLTAGE RA NGE Note.5       90 ~ 264VAC       250 ~ 370VDC         FREQUENCY RANGE       47 ~ 63Hz         POWER FAC TOR (Typ.)       0.97/230VAC at full load         EFFICIENCY (Typ.)       89%       91.5%         AC CURRENT (Typ.) Not e.5       14A/115VAC 8A/230 VAC       8         INRUSH CUR RENT (Typ.)       COLD START 35A/230VAC       8         LEAKAGE CU RENT (Typ.)       <2mA / 230VAC	J. RANGE	J. RANGE  VOLTAGE TO LERANCE No te.4  LINE REGUL ATION  LOAD ATION  LOAD REGUL ATION  LOAD ATION  LOAD REGUL ATION  LOAD		

	OUTPUT VOL TAGE PROG RAMMABLE( PV) Note 6	'	rage is allowable to 40 ~ 125% of no efer to the Function Manual.	minal output voltage (60 ~			
F	OUTPUT CU RRENT PRO GRAMMABLE (PC) Note 6	Adjustment of constant current level is allowable to 20 ~ 100% of rated current. Please r efer to the Function Manual.					
UNC TIO	AUXILIARY P OWER	5V @ 0.3A, 12V @ 0.8A					
N	REMOTE ON- OFF CONTR OL	By electrical signal or dry e Function Manual	contact Power ON:short Power O	FF:open. Please refer to th			
	REMOTE SE NSE	Compensate voltage drop on the load wiring up to 0.5V. Please refer to the Function Ma nual					
	ALARM SIGN AL	Isolated signal output for					
	WORKING T EMP.	-30 ~ +70°C (Refer to "Derating Curve")					
E	WORKING H UMIDITY	20 ~ 90% RH non-condensing					
NVI RO NM ENT	STORAGE TE MP., HUMIDIT Y	-40 ~ +85°C, 10 ~ 95% RH non-condensing					
	TEMP. COEF FICIENT	±0.03%/°C (0 ~ 50°C)					
	VIBRATION	10 ~ 500Hz, 2G 10min./1cycle, 60min. each along X, Y, Z axes					
	SAFETY STA NDARDS	UL62368-1, CAN/CSA C22.2 No. 62368-1, TUV BS EN/EN62368-1, BSMI CNS14336-1, AS/NZS62368.1, EAC TP TC 004 approved					
	WITHSTAND VOLTAGE	I/P-O/P:3KVAC I/P-FG:2KVAC O/P-FG:1.5KVAC					
	ISOLATION R ESISTANCE	I/P-O/P, I/P-FG, O/P-FG:	100M Ohms / 500VDC / 25°C/ 70%	RH			
		Parameter	Standard	Test Level / Note			
		Conducted	BS EN/EN55032 (CISPR32)	Class B			
	EMC EMIS SION	Radiated	BS EN/EN55032 (CISPR32)	Class A			
		Harmonic Current	BS EN/EN61000-3-2	Class A			
S		Voltage Flicker	BS EN/EN61000-3-3	_			
AFE TY		BS EN/EN55035, BS EN	/EN61000-6-2, BSMI CNS13438				
& E MC(		Parameter	Standard	Test Level / Note			
Note 8)		ESD	BS EN/EN61000-4-2	Level 3, 8KV air ; Level 2, 4KV contact			


		Radiated	BS EN/EN61000-4-3	Level 3
	EMC IMM UNITY	EFT / Burst	BS EN/EN61000-4-4	Level 3
		Surge	BS EN/EN61000-4-5	Level 4, 2KV/Line-Line 4KV/Line-Earth
		Conducted	BS EN/EN61000-4-6	Level 3
		Magnetic Field	BS EN/EN61000-4-8	Level 4
		Voltage Dips and Interr uptions	BS EN/EN61000-4-11	>95% dip 0.5 periods, 30% dip 25 periods,>9 5% interruptions 250 p eriods
ОТ	MTBF	478.8K hrs min. Telco (25°C)	ordia SR-332 (Bellcore) ; 42.1K hrs mi	n. MIL-HDBK-217F
HER S	DIMENSION	300*85*41mm (L*W*H)		
	PACKING	2.1Kg;6pcs/13.6Kg/1.25C	UFT	

- 1. All parameters NOT specially mentioned are measured at 230VAC input, rated load and 25°C of ambi ent temperature.
- 2. Ripple & noise are measured at 20MHz of bandwidth by using a 12" twisted pair-wire terminated with a 0.1uf & 47uf parallel capacitor.
- 3. Under parallel operation ripple of the output voltage may be higher than the SPEC at light load conditi on. It will go back to normal ripple level once the output load is more than 5%.
- 4. Tolerance : includes set up tolerance, line regulation and load regulation.
- 5. Derating may be needed under low input voltages. Please check the derating curve for more details.
- 6. PV/PC functions when users are not operating on PMBus/CANBus. SVR functions when users are nei ther operating on PMBus/CANBus nor using PV/PC.
- 7. Output will shut down after O/P voltage is below < 80% of Vset for 5 sec, re-power on to recover.
- 8. The power supply is considered a component which will be installed into a final equipment. All the EM C tests are been executed by mounting the unit on a 720mm\*360mm metal plate with 1mm of thickness. The final equipment must be re-confirmed that it still meets EMC directives. For guidance on how to perform these EMC tests, please refer to "EMI testing of component power supplies." (as available <a href="https://www.meanwell.com//Upload/PDF/EMI\_statement\_en.pdf">https://www.meanwell.com//Upload/PDF/EMI\_statement\_en.pdf</a>)
- The ambient temperature derating of 3.5°C/1000m with fanless models and of 5°C/1000m with fan m odels for operating altitude higher than 2000m(6500ft).\* Product Liability Disclaimer For detailed infor mation, please refer to <a href="https://www.meanwell.com/serviceDisclaimer.aspx">https://www.meanwell.com/serviceDisclaimer.aspx</a>


# **Block Diagram**

# NO TE

PFC fosc: 90KHz PWM fosc: 70KHz

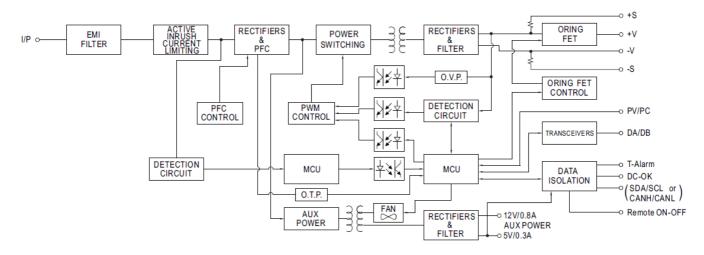


# **Static Characteristics**

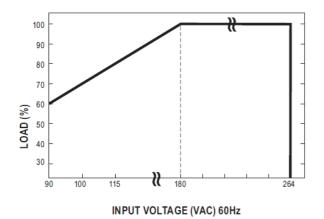


INPUT MODEL	12V	24V	27V	36V	48V
180~264VAC	1500W	1608W	1593W	1602W	1608W
100~204VAC	125A	67A	59A	44.5A	33.5A
115VAC	1200W	1286.4W	1274.4W	1281.6W	1286.4W
TISVAC	100A	53.6A	47.2A	35.6A	26.8A
400)/40	1050W	1125.6W	1115.1W	1121.4W	1125.6W
100VAC	87.5A	46.9A	41.3A	31.15A	23.45A
001/40	900W	964.8W	955.8W	961.2W	964.8W
90VAC	75A	40.2A	35.4A	26.7A	20.1A

**Derating Curve** 

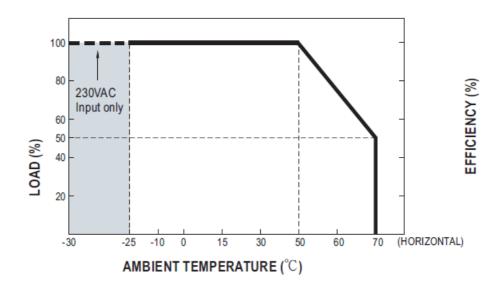

## Efficiency vs Load (48V Model)

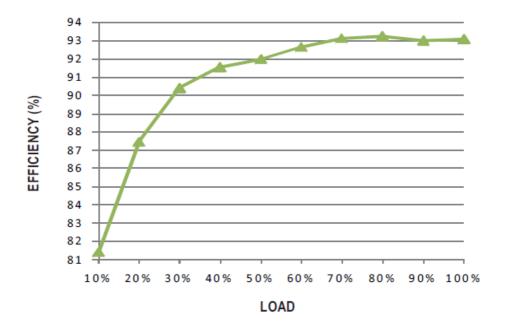


The curve above is measured at 230VAC.

#### **Function Manual**

## **Voltage Drop Compensation**

#### **Remote Sense**


The Remote Sense compensates voltage drop on the load wiring up to 0.5V

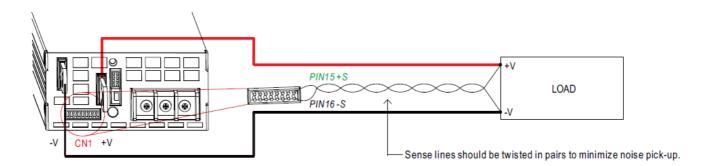

The +S signal should be connected to the positive terminal of the load whereas -S signal to the negative terminal.


#### **Local Sense**


1. The +S,-S have to be connected to the +V(signal), -V(signal), respectively, as the following diagram, in order to get the correct output voltage if Remote Sense is not used.

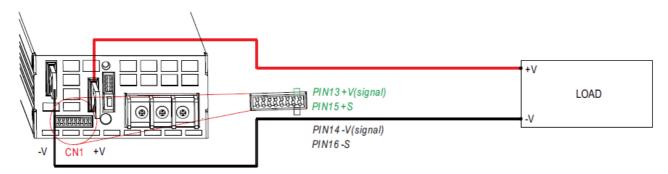


2. Output Voltage Programming (or, PV / remote voltage programming / remote adjust / margin programming / dynamic voltage trim)

In addition to the adjustment via the built-in potentiometer, the output voltage can be trimmed by applying EXTERNAL VOLTAGE.

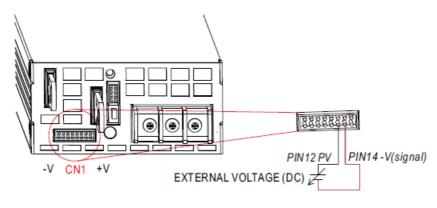

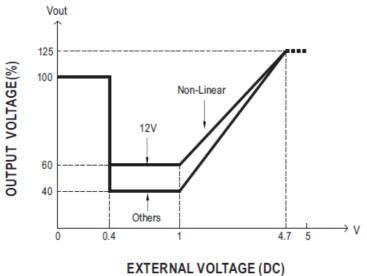

## **OUTPUT VOLTAGE (%)**

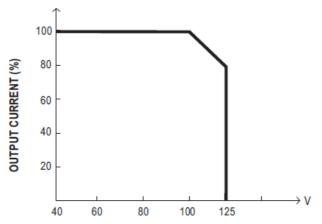

• The rated current should change with the Output Voltage Programming accordingly.

- `For Remote Sense / Local Sense, please refer to "Voltage Drop Compensation" section.
- 3. Constant Current Level Programming (or, PC / remote current programming / dynamic current trim)


  The constant current level can be trimmed to 20~100% of the rated current by applying EXTERNAL VOLTAGE.

For Remote Sense / Local Sense, please refer to "Voltage Drop Compensation" section.

• Output will shut down after O/P voltage is below < 80% of Vset for 5 sec, re-power on to recover.

#### 4. Remote ON-OFF Control


The power supply can be turned ON/OFF individually or along with other units by using the "Remote ON-OFF" function.

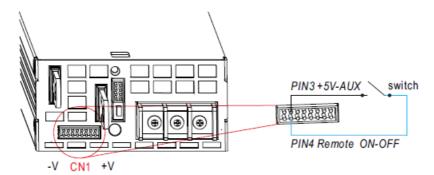

Between Remote ON-OFF and +5V-AUX	Power Supply Status
Switch Short	ON
Switch Open	OFF

#### 5. Alarm Signal Output

There are 2 alarm signals, DC OK and T-ALARM, in TTL signal form, on CN1. These signals are isolated from output. The maximum sink current is 10mA.

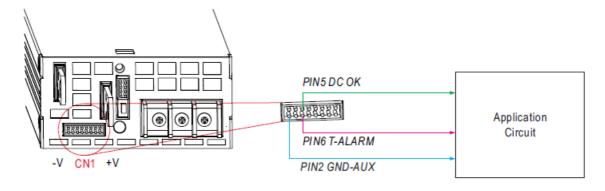

...


#### 6. Current Sharing with Remote Sense

- RSP-1600 has the built-in active current sharing function and can be connected in parallel, up to 6 units, to provide higher output power as exhibited below:
- The power supplies should be paralleled using short and large diameter wiring and then connected to the load.
- Difference of output voltages among parallel units should be less than 0.2V.
- The total output current must not exceed the value determined by the following equation:

  Maximum output current at parallel operation=(Rated current per unit) (Number of unit)××0.9
- When the total output current is less than 5% of the total rated current, or say (5% of Rated current per unit)×(Number of unit) the current shared among units may not be balanced.
- Under parallel operation ripple of the output voltage may be higher than the SPEC at light load condition. It will go back to normal ripple level once the output load is more than 5%.
- CN500/SW1 Function pin connection


	PSU1		PSU2		PSU3		PSU4		PSU5		PSU6	
Parall el	CN50 0	SW1										
1 unit	X	ON	I					I		I	I	
2 unit	V	ON	V	ON		I	I	I		I		
3 unit	V	ON	V	OFF	V	ON	I	I		I	I	
4 unit	V	ON	V	OFF	V	OFF	V	ON		I	I	
5 unit	V	ON	V	OFF	V	OFF	V	OFF	V	ON	I	I
6 unit	V	ON	V	OFF	V	OFF	V	OFF	V	OFF	V	ON


CN500 connected; X: CN500 not connected.)

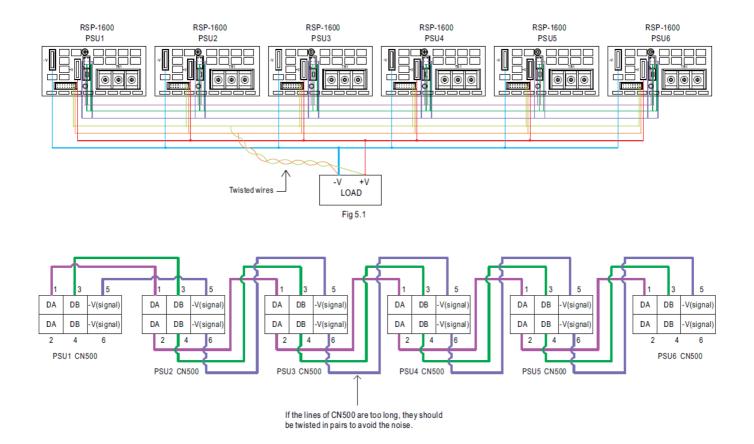

- DA,DB and -V(signal) are connected mutually in parallel.
- For Remote Sense / Local Sense, please refer to "Voltage Drop Compensation" section.


# Mechanical Specification (Unit: mm , tolerance ±0.5mm)

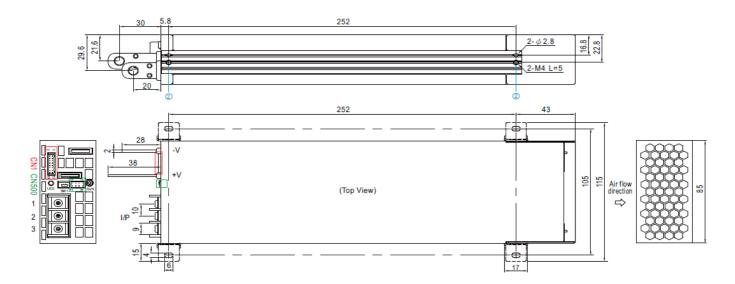

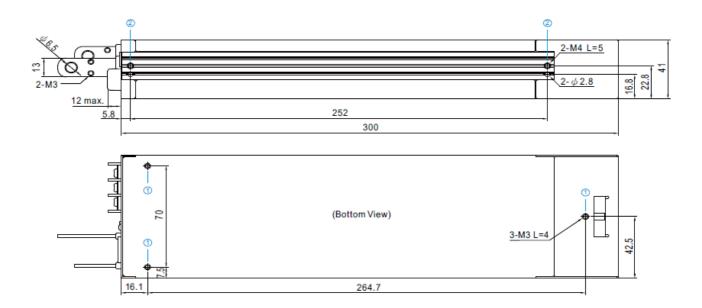


# **Mounting Instruction**

Hole No	Recommended Screw Si ze	MAX. Penetration Depth <b>L</b>	Recommended mounting torque
1	M3	4mm	6~8Kgf-cm
2	M4	5mm	7~10Kgf-cm

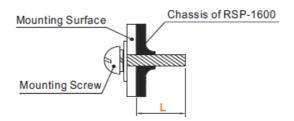

Control Pin No. Assignment(CN1): HRS DF11-16DP-2DS or equivalent



Mating Housing	HRS DF11-16DS or equivalent
Terminal	HRS DF11-**SC or equivalent

Pin No	Functio n	Description
1	+12V-A UX	Auxiliary voltage output, 10.6~13.2V, referenced to GND-AUX (pin2). The maximum load curr ent is 0.8A. This output has the built-in "Oring diodes" and is not controlled by "Remote ON-OFF".
2	GND-A UX	Auxiliary voltage output GND. The signal return is isolated from the output terminals (+V $\&$ -V ).
3	+5V-AU X	Auxiliary voltage output, 4.5~5.5V, referenced to GND-AUX (pin2). The maximum load current is 0.3A. This output has the built-in "Oring diodes" and is not controlled by "Remote ON-OFF
4	Remote ON-OF F	The unit can turn the output ON/OFF by electrical signal or dry contact between $Remote\ ON\ /OFF\ and\ _+5V-AUX$ . (Note.2) Short (4.5 $\sim$ 5.5V) : Power ON ; Open (-0.5 $\sim$ 0.5V) : Power OF F ; The maximum input voltage is 5.5V.
5	DC-OK	High (3.5 ~ 5.5V): When the Vout ≦77%±5%. Low (-0.5 ~ 0.5V): When Vout ≧80%±5%.Th e maximum sourcing current is 10mA and only for output. (Note.2)
6	T- ALARM	High $(3.5 \sim 5.5 \text{V})$ : When the internal temperature exceeds the limit of temperature alarm, or when Fan fails. Low $(-0.5 \sim 0.5 \text{V})$ : When the internal temperature is normal, and when Fan normally works. The maximum sourcing current is 10mA and only for output (Note.2)
	NC	For standard model: Retain for future use.
7,8,9	A0,A1, A2	For PMBus / CANBus model: PMBus / CANBus interface address lines. (Note.1)
10	NC	Retain for future use.
11	PC	Connection for constant current level programming. (Note.1)
12	PV	Connection for output voltage programming. (Note.1)
13	+V (Sig nal)	Positive output voltage signal.It is for local sense; it cannot be connected directly to the load.
14	-V (Sig nal)	Negative output voltage signal.It is for local sense and certain function reference; it cannot be connected directly to the load.
15	+S	Positive sensing for remote sense.
16	-S	Negative sensing for remote sense.

- 1. Note.1: Non-isolated signal, referenced to [-V(signal)].
- 2. Note.2: Isolated signal, referenced to GND-AUX.

# **LED Status Indicators**

LED	Description
Green	The power supply functions normally.
Red	Abnormal status (Over temperature protection, Overload protection, Fan fail.)

Pin No.	Assignment	Diagram	Maximum mounting torque	
1	FG ±			
2	AC/N		8Kgf-cm	
3	AC/L			

Control Pin No. Assignment(CN500): HRS DF11-8DP-2DS or equivalent

Mating Housing	HRS DF11-8DS or equivalent
Terminal	HRS DF11-**SC or equivalent



Pin No	Functi on	Description
1,2	DA	Differential digital signal for parallel control.
3,4	DB	Differential digital signal for parallel control.
5,6	-V (Sig nal)	Negative output voltage signal.  It is for certain function reference; it cannot be connected directly to the load.
	NC	For standard model: None.
7	SDA	For PMBus model: Serial Data used in the PMBus interface. (Note)
	CANH	For CANBus model: Data line used in CANBus interface. (Note)
	NC	For standard model: None.
8	SCL	For PMBus model: Serial Clock used in the PMBus interface. (Note)
	CANL	For CANBus model: Data line used in CAN Bus interface. (Note)

Note: Isolated signal, referenced to GND-AUX.

# Control Pin No. Assignment(SW1)

Pin No	Functi on	Description
1,2	Termin al resist ance	SW1 is the selector of terminal resistor that is designed for DA/DB signals and parallel contr ol function.

## **Installation Manual**

Please refer to : <a href="http://www.meanwell.com/manual.html">http://www.meanwell.com/manual.html</a>

Downloaded from **Arrow.com**.

#### **Documents / Resources**



MEAN WELL RSP-1600 1600W Power Supply With Single Output [pdf] Owner's Manual RSP-1600 1600W Power Supply With Single Output, RSP-1600, 1600W Power Supply With Single Output, Power Supply With Single Output, Output

#### References

- △ TÜV Rheinland Home | US | TÜV Rheinland
- User Manual

#### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.