

MiBOXER E3-RF 3 In 1 RGBWW Wireless LED Controller **Instruction Manual**

Home » MIBOXER » MIBOXER E3-RF 3 In 1 RGBWW Wireless LED Controller Instruction Manual



MiBOXER E3-RF 3 In 1 RGBWW Wireless LED Controller Instruction Manual



3 in 1 LED Controller (2.4G) Instruction Manual

Contents

- 1 Product features
 - 1.1 Set up output mode
- 2 Compatible with these 2.4G RF remote controls (Purchased separately)
- 3 2.4G RF Remote control instruction
 - 3.1 1). Linking Code Instructions
 - 3.2 2). Unlinking Code Instructions
 - 3.3 3). Auto transmitting & Synchronization (only for remote control)
 - 3.4 4). Dynamic mode table silicon (only for remote control)
 - 3.5 5). PWM high frequency / low frequency switching (only for remote control)
 - 3.6 6). "Do Not Disturb" mode is activated and shut down (default activated)
- 4 DMX512 LED Transmitter Control (Purchased separately)
- **5 Attention**
- 6 Documents / Resources
 - **6.1 References**

Product features

Made by new 2.4GHz wireless trashing technology with low power consumption, strong ability to build network atomically and an-interference. with MI Boxer 2.4GHz gateway to get wireless dimming color, remote control, Ming control, group control, music rhythm fanon. Support 2.4G RF remote control.



16 Millions of colors to choose



Color temperature adjustable



Dim brightness / Saturation



2.4G RF wireless transmission technology



Remote control distance 30m



Auto-transmitting & Synchronization



Support Smartphone app control (2.4GHz gateway is needed)



Support third party voice control (2.4GHz gateway is needed)



DMX512 controllable (Only for RGB+CCT output mode DMX512 LED transmitter is needed)


Set up output mode

Set up correct output mode based on the feature of lights Seng method: Press "SET" button canorously to switch output mode (anon: it will log out without operon within 3 seconds)

Output mode sheet (confirm output mode based on color of indicator)

Indicator color	Red Light	Green Light	Blue Light
Output	RGB	RGBW	RGB+CCT

Compatible with these 2.4G RF remote controls (Purchased separately)

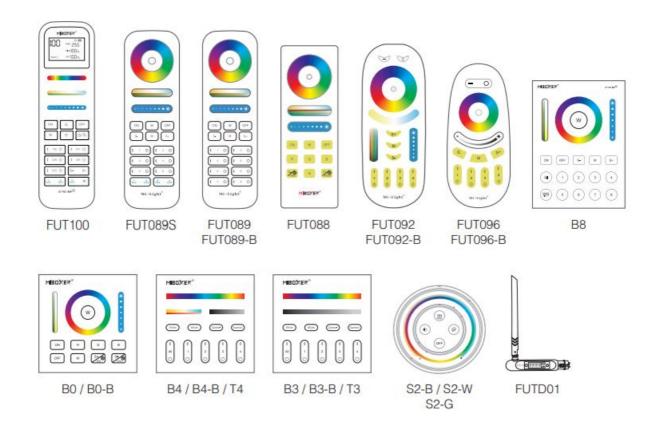


2.4G RF Remote control instruction

1). Linking Code Instructions



 \triangle Linking failed if light is not blinking slowly, Please follow above steps again. (Note: Light that have linked can't link again)


2). Unlinking Code Instructions

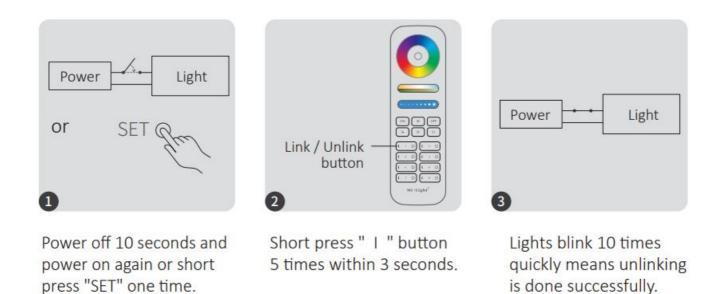

△ Unlinking failed if light is not blinking quickly, Please follow above steps again. (Note: Light haven't linked that don't need to unlink)

3). Auto transmitting & Synchronization (only for remote control)

Remote signal auto transman One light can transmit the signals from the remote control to another light within 30m, as long as there is a light within 30m, the remote control distance can be limitless. Dynamic modes auto synchronizing Mul lights can synchronize if they are in same dynamic mode and linked with same remote (distance between each light is within 30m)

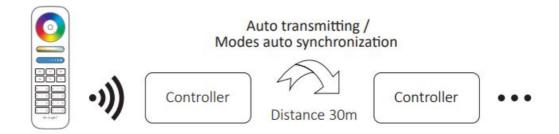

4). Dynamic mode table silicon (only for remote control)

Select dynamic mode table 1: While the light is in stack mode, short press "S+" boon 5 mess quickly unl blue light flashes 3 mes slowly, stac mode is caveated successfully. Select dynamic mode table 2: While the light is in stac mode, short press "S-" button 5 mes quickly unl yellow light flashes 3 mes slowly, stac mode is caveated successfully.

Dynamic mode table 1 (default)

Number	Dynamic Mode	Brightness / Saturation / Speed	
1	Mardi Gras		
2	Automatic color change	Adjustable	
3	Sam		
4	Gemstone		
5	Twilight		
6	American		
7	Fat Tuesday		
8	Party		
9	Slow Color Splash		

Dynamic mode table 2 (need to switch manually)

Number	Dynamic Mode	Brightness / Saturation / Speed	
1	Seven colors gradual change		
2	White light Gradual change		
3	RGB gradual change	Adjustable	
4	Seven colors jump to change		
5	Jump to change randomly		
6	Red light gradual change +Flash 3 times		
7	Green light gradual change +Flash 3 times		
8	Blue light gradual change +Flash 3 times		
9	White light gradual change +Flash 3 times		

5). PWM high frequency / low frequency switching (only for remote control)

Switch to high frequency (16KHz): Press "OFF" button 1 me within three seconds and press "ON" button 5 times, Activated successfully once led light flashes 2 times quickly.

Switch to low frequency (250Hz): Press "ON" button 1 me within three seconds and press "OFF" button 5 times, Activated successfully once led light flashes 2 times slowly.

6). "Do Not Disturb" mode is activated and shut down (default activated)

Turn on "Do Not Disturb" mode (wide using in the area which have power failure frequently to save energy) 2.4G RF Remote turn on and turn off instruction

Turn on "Do Not Disturb" mode: Press "OFF" button three times within three seconds and press "ON" button three times, Activated successfully once led light flashes four times quickly. Attention: Do not disturb mode is activated


- When the light is OFF status (For example: Use app or remote to turn off light)
 The light is OFF status once you turn off power and turn on again. (User must turn off and turn on power twice times to activate light or use APP / remote to cavate light)
- 2. When the light is ON status The light is ON status once you turn off and turn on power one me.

Turn off "Do Not Disturb" mode: Press "ON" button three times within three seconds and press "OFF" button three times, closed successfully once led light flashes four times slowly.

Attention: The light will be always "ON" status if you turn on and turn off power once user closed "Do Not Disturb" mode.


DMX512 LED Transmitter Control (Purchased separately)

Only for RGB+CCT output mode

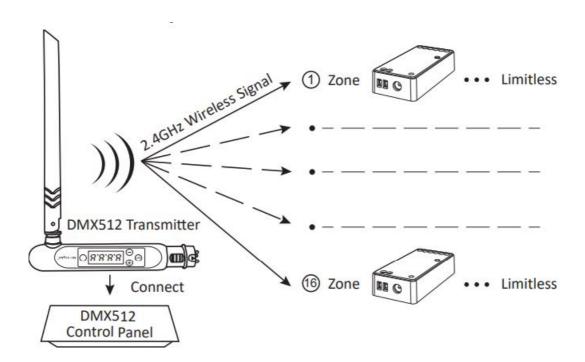

DMX512 LED Transmitter Link/Unlink

(1) Follow instruction of DMX512 transmitter (FUTD01), Choose the zone for the light by pressing " + " or " – " (e.g. "CH12" means zone 12)

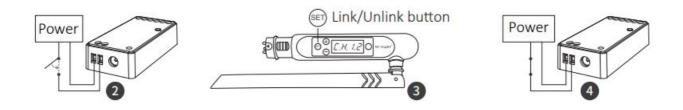

Link

The controller is powered off for 10 seconds and then powered on, or press "SET" button 1 me.

Short press "SET" 3 times within 3 seconds while the indicator of controller is ON

Link is done once indicator of controller flashes 3 times slowly

Unlink

The controller is powered off for 10 seconds and then powered on, or press "SET" button 1 me.

Short press "SET" 5 times within 3 seconds while the indicator of controller is ON

Unlink is done once indicator of controller flashes 10 times quickly

 \triangle If the link or unlink failed, please follow the above steps again.

Attention

- 1. Please turn off power supply before installation.
- 2. Please ensure input voltage to be same as requirements from device.
- 3. Don't disassemble device if you are not expert, otherwise it will damage it.
- 4. Please do not use the light in the place with widely range metal area or strong electromagnet wave nearby, otherwise, the remote distance will be seriously affected.



https://miboxer.com/light/video/1pc remote.html

Scan QR code to watch 2.4GHz series video instrucon Or enter into following link directly https://miboxer.com/light/video/1pc_remote.html



Made in China

Documents / Resources



MiBOXER E3-RF 3 In 1 RGBWW Wireless LED Controller [pdf] Instruction Manual E3-RF 3 In 1 RGBWW Wireless LED Controller, E3-RF, 3 In 1 RGBWW Wireless LED Controller, RGBWW Wireless LED Controller, Wireless LED Controller, LED Controller, Controller

References

- Remote Series Video MiBoxer
- Remote Series Video MiBoxer
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.