



# MICROCHIP RNWF02PC Module Owner's Manual


[Home](#) » [MICROCHIP](#) » MICROCHIP RNWF02PC Module Owner's Manual 

## Contents

- 1 MICROCHIP RNWF02PC Module
- 2 Introduction
- 3 Features
- 4 Quick References
- 5 Kit Overview
- 6 Hardware
- 7 Out of Box Demo
- 8 Appendix A: Reference Circuit
  - 8.1 RNWF02 Add On Board Schematics
- 9 Appendix B: Regulatory Approval
- 10 FCC STATEMENT
- 11 Document Revision History
- 12 Microchip Information
- 13 Worldwide Sales and Service
- 14 Frequently Asked Questions
- 15 Documents / Resources
  - 15.1 References



**MICROCHIP RNWF02PC Module**

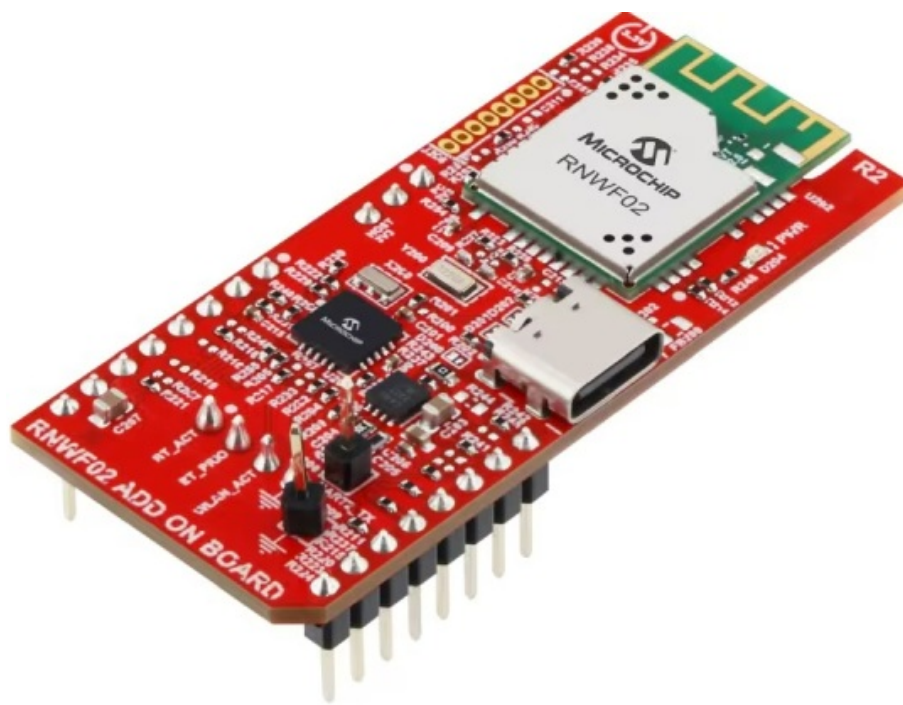

## Introduction

The RNWF02 Add On Board is an efficient, low-cost development platform to evaluate and demonstrate the features and functionalities of Microchip's low-power Wi-Fi® RNWF02PC module. It can be used with a Host PC via USB Type-C® without the need of an additional hardware accessory. This is compliant to the mikroBUS™ Standard. The add-on board can be plugged easily on the host board and can be controlled by the host Microcontroller Unit (MCU) with AT commands through UART.

## The RNWF02 Add On Board offers

- An easy-to-use platform to speed up design concepts to revenue with the low-power Wi-Fi RNWF02PC module:
- Host PC via USB Type-C interface
- Host board supporting mikroBUS socket
- RNWF02PC module, which includes a crypto device for a secure and authenticated cloud connection
- RNWF02PC module mounted on the RNWF02 Add On Board as a pre-programmed device

## Features

- RNWF02PC Low-Power 2.4 GHz IEEE® 802.11b/g/n-compliant Wi-Fi® Module
- Powered at 3.3V Supply Either by USB Type-C® (Derived Default 3.3V Supply from Host PC) or by Host Board Using mikroBUS Interface
- Easy and Fast Evaluation with On-Board USB-to-UART Serial Converter in PC Companion Mode
- Host Companion Mode Using mikroBUS Socket
- Exposes Microchip Trust&Go CryptoAuthentication™ IC Through mikroBUS Interface for Secure Applications
- LED for Power Status Indication
- Hardware Support for 3-Wire PTA Interface to Support Bluetooth® Co-Existence

## Quick References

## Reference Documentation

- MCP1727 1.5A, Low Voltage, Low Quiescent Current LDO Regulator Data Sheet ( [DS21999](#))
- mikroBUS Specification ( [www.mikroe.com/mikrobus](http://www.mikroe.com/mikrobus))
- MCP2200 USB 2.0 to UART Protocol Converter with GPIO ( [DS20002228](#))
- RNFW02 Wi-Fi Module Data Sheet ( [DS70005544](#))

## Hardware Prerequisites

1. RNWF02 Add On Board(2) (EV72E72A)
2. USB Type-C® compliant cable(1,2)
3. SQI™ SUPERFLASH® KIT 1(2a) ( [AC243009](#))
4. For 8-bit host MCU
  - AVR128DB48 Curiosity Nano(2) ( [EV35L43A](#))
  - Curiosity Nano Base for click boards™(2) ( [AC164162](#))
5. For 32-bit host MCU
  - SAM E54 Xplained Pro Evaluation Kit(2) ( [ATSAME54-XPRO](#))
  - mikroBUS™ Xplained Pro(2) ( [ATMBUSADAPTER-XPRO](#))

## Notes

1. For PC Companion mode
2. For host Companion mode
  - OTA demo

## Software Prerequisites

- MPLAB® Integrated Development Environment ( [MPLAB X IDE](#)) tool(2)
- MPLAB XC Compilers ( [MPLAB XC Compilers](#))(2)
- Python ( [Python 3.x](#))(1))

## Notes

1. For PC Companion mode Out-of-Box (OOB) demo
2. For host Companion mode development

## Acronyms and Abbreviations

Table 1-1. Acronyms and Abbreviations


Acronyms and Abbreviations	Description
BOM	Bill of Material
DFU	Device Firmware Update
DPS	Device Provisioning Service
GPIO	General Purpose Input Output
I2C	Inter-Integrated Circuit
IRQ	Interrupt Request
LDO	Low-Dropout
LED	Light Emitting Diode
MCU	Microcontroller Unit
NC	Not Connected

.....continued	
Acronyms and Abbreviations	Description
OOB	Out of the Box
OSC	Oscillator
PTA	Packet Traffic Arbitration
PWM	Pulse Width Modulation
RTCC	Real Time Clock and Calendar
RX	Receiver
SCL	Serial Clock
SDA	Serial Data
SMD	Surface Mount
SPI	Serial Peripheral Interface
TX	Transmitter
UART	Universal Asynchronous Receiver-Transmitter
USB	Universal Serial Bus


## Kit Overview

The RNWF02 Add On Board is a plug-in board containing the low-power RNWF02PC module. The signals required for control interface are connected to the on-board connectors of the Add On Board for flexibility and rapid prototyping.

**Figure 2-1. RNWF02 Add On Board (EV72E72A) – Top View**

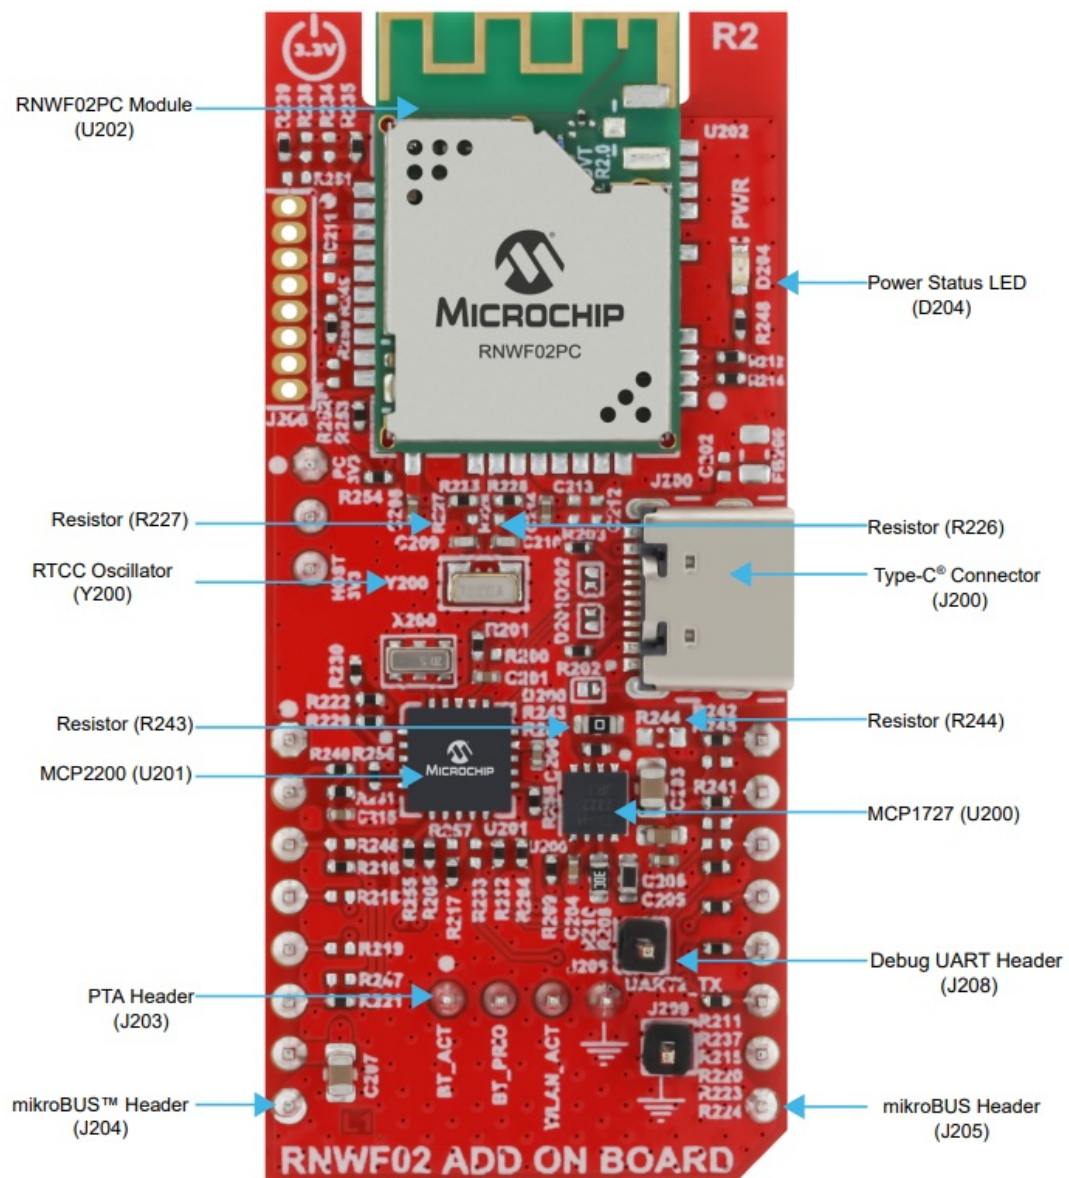



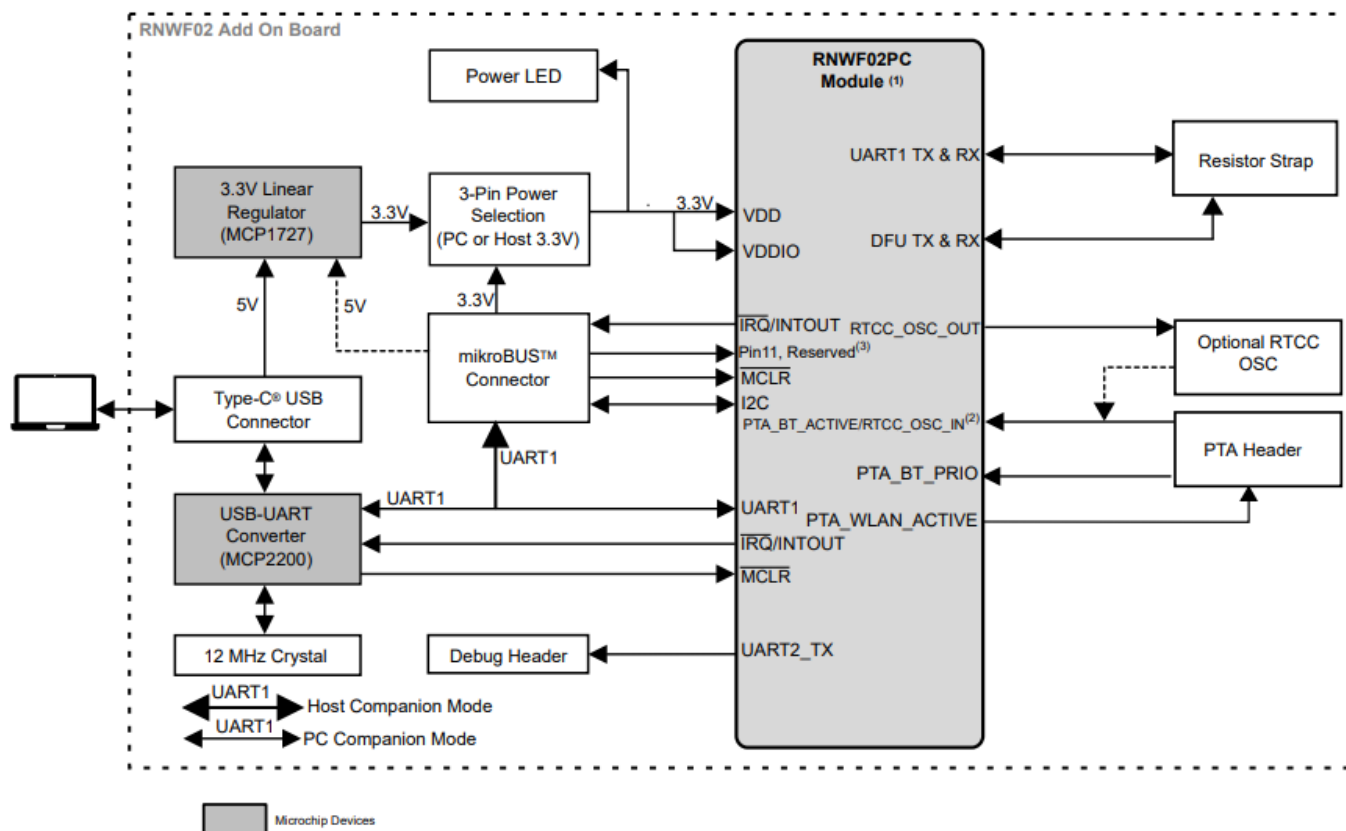

## Notes

1. Using Microchip's total system solution, which includes complementary devices, software drivers, and reference designs, is highly recommended to ensure the proven performance of the RNWF02 Add On Board. For more details, go to [support.microchip.com](https://support.microchip.com) or contact your local Microchip Sales office.
2. PTA functionality is not supported while using the RTCC Oscillator.
3. It is recommended to connect this pin with the Tri-State pin on the host board.

Table 3-1. Microchip Components Used in the RNWF02 Add-On Board

S.N o.	Designator	Manufacturer Part Number	Description
1	U200	MCP1727T-ADJE/MF	MCHP Analog LDO 0.8V-5V MCP1727T-ADJE/MF DFN-8
2	U201	MCP2200-I/MQ	MCHP Interface USB UART MCP2200-I/MQ QFN-20
3	U202	RNWF02PC-I	MCHP RF Wi-Fi® 802.11 b/g/n RNWF02PC-I

## Power Supply

The RNWF02 Add On Board can be powered using any of the following sources, depending on the use case scenario, but the default supply is from the host PC using a USB Type-C® cable:

1. USB Type-C supply – Jumper (JP200) is connected between J201-1 and J201-2. – The USB supplies 5V to Low-Dropout (LDO) MCP1727 (U200) to generate 3.3V supply for the VDD supply pin of RNWF02PC module.
2. Host board 3.3V supply – Jumper (JP200) is connected between J201-3 and J201-2.
  - The host board supplies 3.3V power through the mikroBUS header to the VDD supply pin of the



RNWF02PC module.


3. (Optional) Host board 5V supply – There is a provision to supply 5V from the host board with rework (populate R244 and depopulate R243). Do not mount the jumper (JP200) on J201 when the host board 5V supply is used.
  - The host board provides 5V supply through the mikroBUS header to the LDO regulator (MCP1727) (U200) to generate 3.3V supply for VDD supply pin of the RNWF02PC module.

**Note:** The VDDIO is shorted with the VDD supply of the RNWF02PC module. Table 3-2. Jumper JP200 Position on J201 Header for the Power Supply Selection

3.3V Generated from USB Power Supply (Default)	3.3V from mikroBUS Interface
JP200 on <a href="#">J201-1</a> and <a href="#">J201-2</a>	JP200 on <a href="#">J201-3</a> and <a href="#">J201-2</a>

The following figure illustrates the power supply sources used to power the RNWF02 Add On Board.

**Figure 3-2. Power Supply Block Diagram**

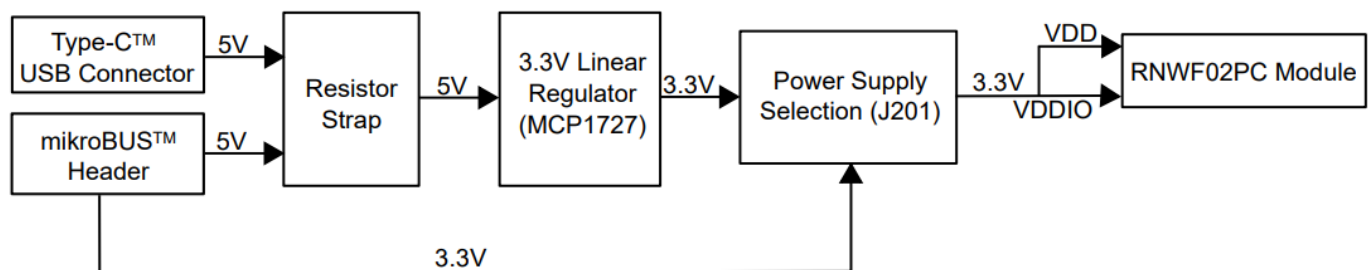

## Notes

- Remove the supply selection jumper (JP200) present on the supply selection header (J201), then connect an ammeter between J201-2 and J201-3 for external supply current measurement.
- Remove the supply selection jumper (JP200) present on the supply selection header (J201), then connect an ammeter between J201-2 and J201-1 for USB Type-C supply current measurement.

## Voltage Regulators (U200)

An onboard voltage regulator (MCP1727) generates 3.3V. This is used only when the Host board or the USB supplies 5V to the RNWF02 Add On Board.

- U200 – Generates 3.3V that powers the RNWF02PC module along with the associated circuits For more details on MCP1727 voltage regulators, refer to the MCP1727 1.5A, Low Voltage, Low Quiescent Current LDO Regulator Data Sheet ([DS21999](#)).

## Firmware Update

The RNWF02PC module comes with pre-programmed firmware. Microchip periodically releases firmware to fix reported issues or to implement the latest feature support. There are two ways to perform regular firmware updates:

- Serial DFU command-based update over UART
- Host-assisted Over-the-Air (OTA) update



**Note:** For serial DFU and OTA programming guidance, refer to the [RNWF02 Application Developer's Guide](#).

## Mode of Operation

The RNWF02 Add On Board supports two modes of operation:

- PC Companion mode – Using a host PC with on-board MCP2200 USB-to-UART converter
- Host Companion mode – Using a host MCU board with mikroBUS socket via mikroBUS interface

### Host PC with On-Board MCP2200 USB-to-UART Converter (PC Companion Mode)

The simplest method for using the RNWF02 Add On Board is to connect it to a host PC that supports USB CDC virtual COM (serial) ports using the on-board MCP2200 USB-to-UART converter. The user can send ASCII commands to the RNWF02PC module using a terminal emulator application. In this case, the PC acts as the host device. The MCP2200 is configured in the Reset condition until the USB supply is plugged in.

### Use the following serial terminal settings

- Baud rate: 230400
- No flow control
- Data: 8 bits
- No parity
- Stop: 1 bit

**Note:** Press the ENTER button in the terminal for command execution.

Table 3-3. RNWF02PC Module Connection to MCP2200 USB-to-UART Converter

Pin on MCP2200	Pin on RNWF02PC Module	Description
TX	Pin19, UART1_RX	RNWF02PC module UART1 receive
RX	Pin14, UART1_TX	RNWF02PC module UART1 transmit
RTS	Pin16, UART1_CTS	RNWF02PC module UART1 Clear-to-Send (active-low)
CTS	Pin15, UART1_RTS	RNWF02PC module UART1 Request-to-Send (active-low)
GP0	—	—
GP1	—	—
GP2	Pin4, MCLR	RNWF02PC module Reset (active-low)
GP3	Pin11, Reserved	Reserved
GP4	Pin13, IRQ/INTOUT	Interrupt request (active-low) from the RNWF02PC module
GP5	—	—
GP6	—	—
GP7	—	—

### Host MCU Board with mikroBUS™ Socket via mikroBUS Interface (Host Companion Mode)

The RNWF02 Add On Board can also be used with the host MCU boards using mikroBUS sockets with the control interface. The following table shows how the pinout on the RNWF02 Add On Board mikroBUS interface corresponds to the pinout on the RNWF02PC module.

**Note:** Disconnect the USB Type-C® cable in the host Companion mode.

**Table 3-4. mikroBUS Socket Pinout Details (J204)**

Pin Number J2 04	Pin on mikroBUS™ Header	Pin Description of mikroBUS Header	Pin on RNWF02PC Module(1)
Pin1	AN	Analog input	—
Pin2	RST	Reset	Pin4, MCLR
Pin3	CS	SPI Chip Select	Pin16, UART1_CTS

.....continued

Pin Number J2 04	Pin on mikroBUS™ Header	Pin Description of mikroBUS Header	Pin on RNWF02PC Module(1)
Pin4	SCK	SPI Clock	—
Pin5	MISO	SPI host input client output	—
Pin6	MOSI	SPI host output client input	Pin15, UART1_RTS
Pin7	+3.3V	3.3V power	+3.3V from host MCU socket
Pin8	GND	Ground	GND

**Table 3-5. mikroBUS Socket Pinout Details (J205)**

Pin Number J2 05	Pin on mikroBUS™ Header	Pin Description of mikroBUS Header	Pin on RNWF02PC Module(1)
Pin1(3)	PWM	PWM output	Pin11, Reserved
Pin2	INT	Hardware interrupt	Pin13, IRQ/INTOUT
Pin3	TX	UART transmit	Pin14, UART1_TX
Pin4	RX	UART receive	Pin19, UART1_RX
Pin5	SCL	I2C Clock	Pin2, I2C_SCL
Pin6	SDA	I2C Data	Pin3, I2C_SDA
Pin7	+5V	5V power	NC
Pin8	GND	Ground	GND

**Notes:**

1. For more details on the RNWF02PC module pins, refer to the RNWF02 Wi-Fi® Module Data Sheet ([DS70005544](#)).
2. The RNWF02 Add On Board does not support the SPI interface, which is available on the mikroBUS interface.
3. It is recommended to connect this pin with the Tri-State pin on the host board.

### Debug UART (J208)

Use the debug UART2\_Tx (J208) to monitor the debug logs from the RNWF02PC module. The user can use a USB-to-UART converter cable to print the debug logs.

### Use the following serial terminal settings

- Baud rate: 460800
- No flow control
- Data: 8 bits
- No parity
- Stop: 1 bit

**Note:** UART2\_Rx is not available.

### PTA Interface (J203)

The PTA interface supports a shared antenna between Bluetooth® and Wi-Fi®. It has the hardware-based 802.15.2-compliant 3-wire PTA interface (J203) to address the Wi-Fi/Bluetooth co-existence.

**Note:** Refer to the software release notes for additional information.

**Table 3-6. PTA Pin Configuration**

Header Pin	Pin on RNWF02PC Module	Pin Type	Description
Pin1	Pin21, PTA_BT_ACTIVE/RTCC_OSC_IN	Input	Bluetooth® active
Pin2	Pin6, PTA_BT_PRIORITY	Input	Bluetooth priority
Pin3	Pin5, PTA_WLAN_ACTIVE	Output	WLAN active

.....continued			
Header Pin	Pin on RNWF02PC Module	Pin Type	Description
Pin4	GND	Power	Ground

### LED

The RNWF02 Add On Board has one red (D204) Power-on status LED.

### RTCC Oscillator (Optional)

The optional RTCC Oscillator (Y200) 32.768 kHz crystal is connected to the Pin22, RTCC\_OSC\_OUT and Pin21, RTCC\_OSC\_IN/PTA\_BT\_ACTIVE pins of the RNWF02PC module for the Real Time Clock and Calendar (RTCC) application. The RTCC Oscillator is populated; however, the corresponding resistor jumpers (R227) and (R226) are not populated.

**Note:** The PTA functionality is not supported while using the RTCC Oscillator. Refer to the software release notes

for additional information.

## Out of Box Demo

The RNWF02 Add On Board Out of Box (OOB) demo is based on a Python script that demonstrates MQTT cloud connectivity. The OOB demo uses the AT command interface, through the USB Type- C®, as per the PC Companion mode setup. The OOB demo connects to the MQTT server, and publishes and subscribes to predefined topics. For more details on MQTT cloud connectivity, go to [test.mosquitto.org/](https://test.mosquitto.org/). The demo supports the following connections:


- Port 1883 – unencrypted and unauthenticated
- Port 1884 – unencrypted and authenticated

The user can be connected to the MQTT server in seconds by providing Wi-Fi® credentials, username and password, depending on the connection type. For more information on the PC Companion mode OOB demo, go to [GitHub – MicrochipTech/ RNWFxx\\_Python\\_OOB](#).


## Appendix A: Reference Circuit

### RNWF02 Add On Board Schematics


Figure 5-1. Supply Selection Header

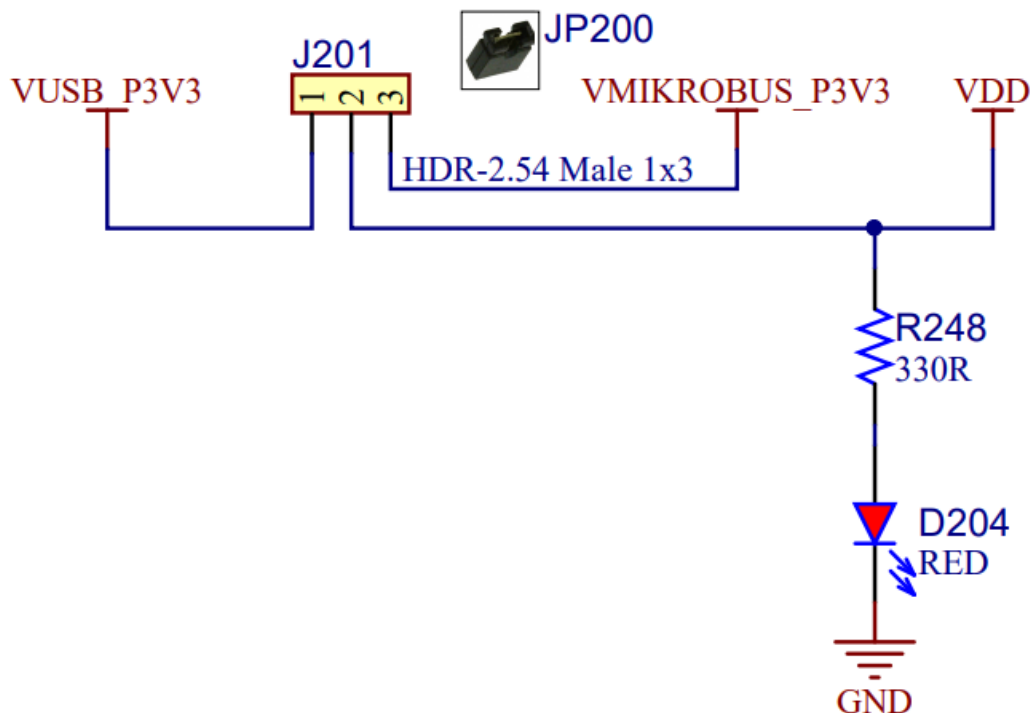


- Figure 5-2. Voltage Regulator

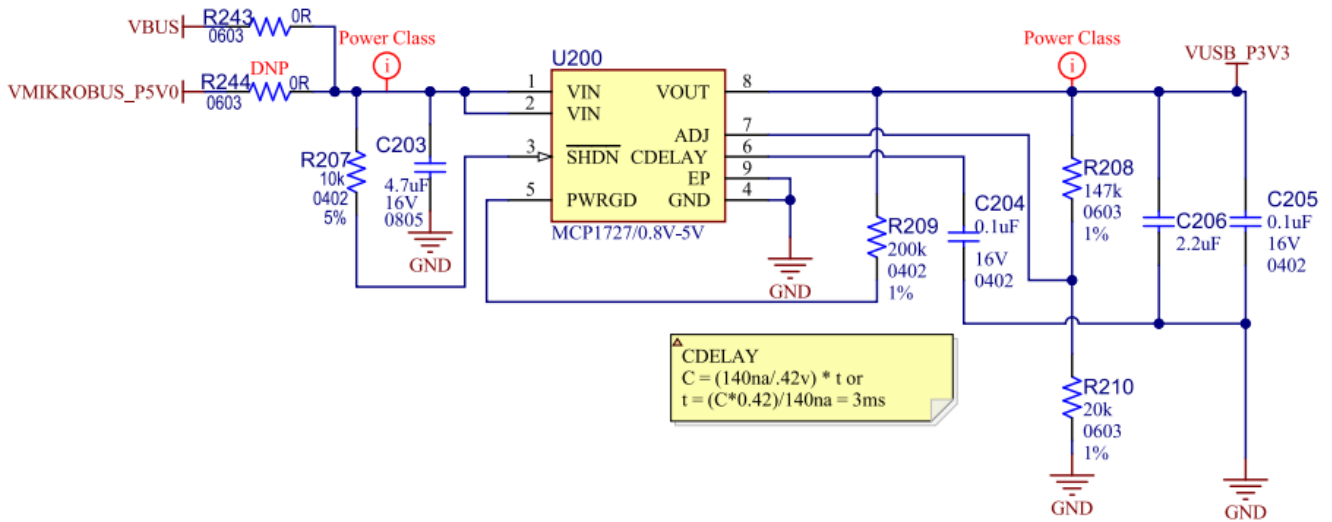


• Figure 5-3. MCP2200 USB-to-UART Converter and Type-C USB Connector Section

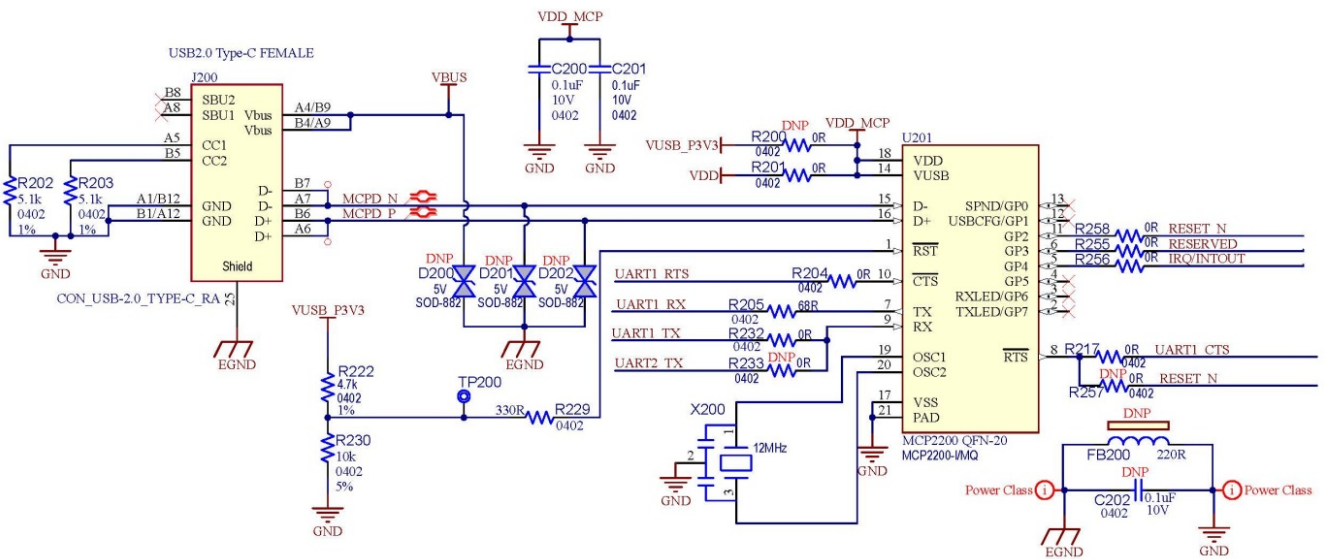

• Figure 5-4. mikroBUS Header Section and PTA Header Section

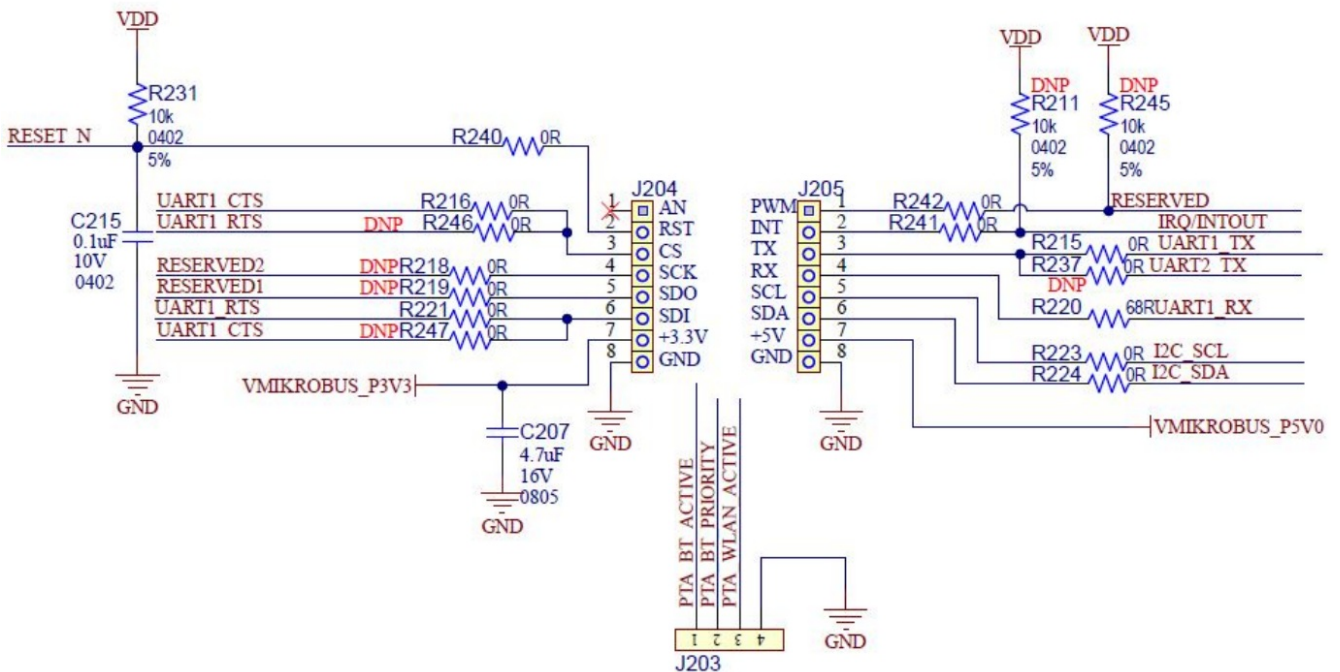

• Figure 5-5. RNWF02PC Module Section

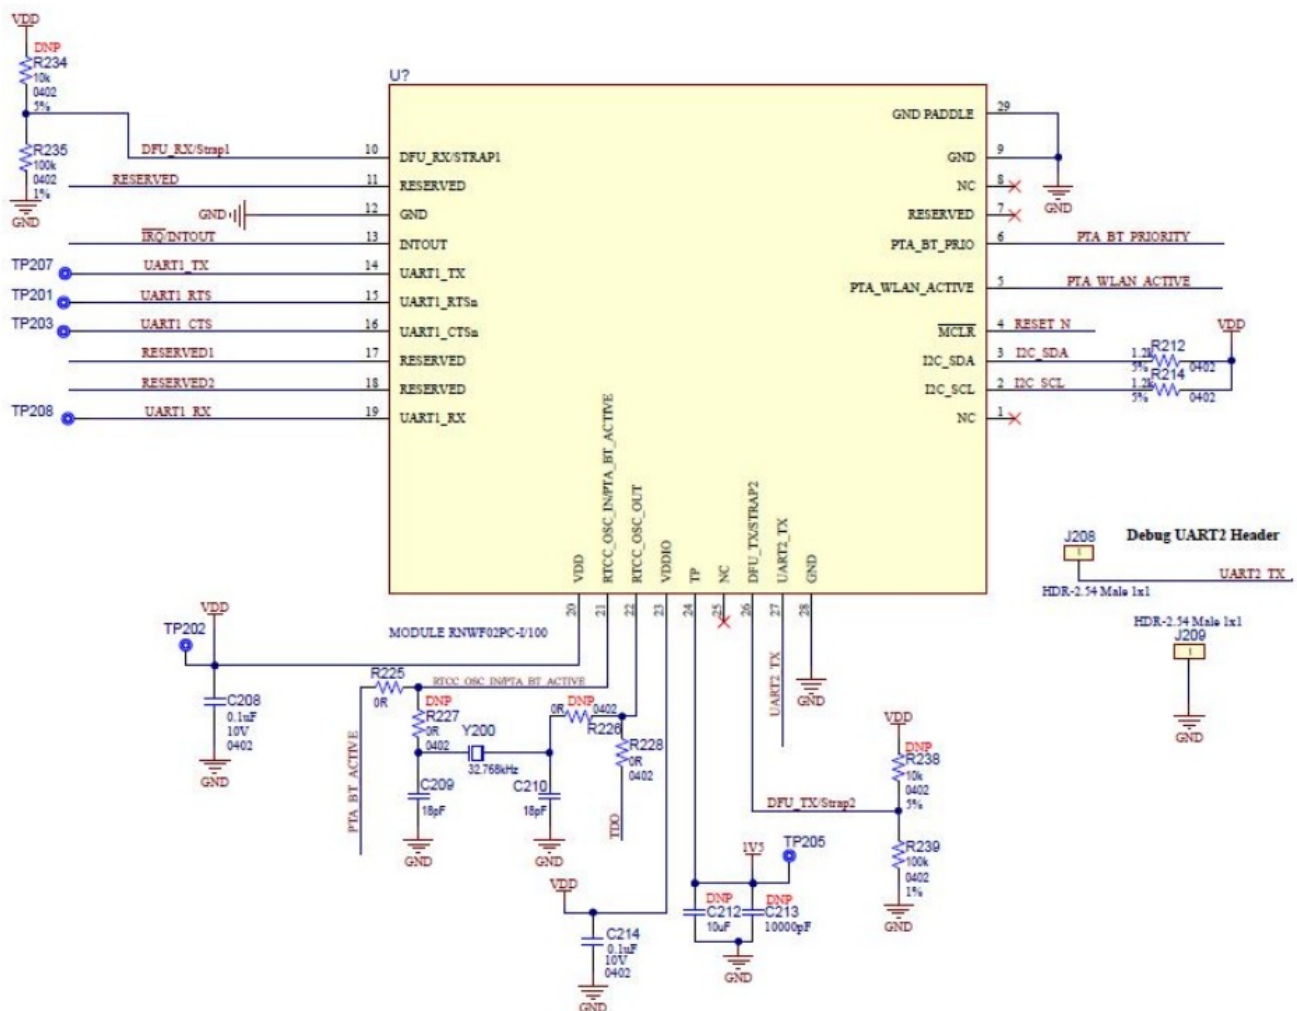

## Appendix B: Regulatory Approval

This equipment (RNWF02 Add On Board/EV72E72A) is an evaluation kit and not a finished product. It is intended for laboratory evaluation purposes only. It is not directly marketed or sold to the general public through retail; it is only sold through authorized distributors or through Microchip. Using this requires significant engineering expertise to understand of the tools and relevant technology, which can be expected only from a person who is professionally trained in the technology. Regulatory compliance settings have to follow the RNWF02PC module certifications. The following regulatory notices are to cover the requirements under the regulatory approval.

### United States

The RNWF02 Add On Board (EV72E72A) contains the RNWF02PC module, which has received Federal Communications Commission (FCC) CFR47 Telecommunications, Part 15 Subpart C "Intentional Radiators" single-modular approval in accordance with Part 15.212 Modular Transmitter approval.

### Contains FCC ID: 2ADHKWIXCS02

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Important: FCC Radiation Exposure Statement This equipment complies with FCC radiation exposure limits set forth for uncontrolled environments. The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 8 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. This transmitter is restricted for use with the specific antenna(s) tested in this application for certification.

### RNWF02 Add On Board Bill of Materials

For the Bill of Materials (BOM) of the RNWF02 Add On Board, go to [EV72E72A](#) product web page.



**Caution**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**FCC STATEMENT**

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Canada**

The RNWF02 Add On Board (EV72E72A) contains the RNWF02PC module, which has been certified for use in Canada under Innovation, Science and Economic Development Canada (ISED, formerly Industry Canada) Radio Standards Procedure (RSP) RSP-100, Radio Standards Specification (RSS) RSS-Gen and RSS-247.

**Contains IC: 20266-WIXCS02**

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference;
2. This device must accept any interference, including interference that may cause undesired operation of the device.

**WARNING**

This equipment complies with radio frequency exposure limits set forth by Innovation, Science and Economic Development Canada for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the device and the user or bystanders.

**Europe**

This equipment (EV72E72A) has been assessed under the Radio Equipment Directive (RED) for use in European Union countries. The product does not exceed the specified power ratings, antenna specifications and/or installation requirements as specified in the user manual. A Declaration of Conformity is issued for each of these standards and kept on file as described in the Radio Equipment Directive (RED).

**Simplified EU Declaration of Conformity**

Hereby, Microchip Technology Inc. declares that the radio equipment type [EV72E72A] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at EV72E72A (See Conformity Documents)

**Document Revision History**

The document revision history describes the changes that were implemented in the document. The changes are listed by revision, starting with the most current publication.

**Table 7-1. Document Revision History**

Revision	Date	Section	Description
C	09/2024	<a href="#">Hardware</a>	<ul style="list-style-type: none"> <li>Updated “WAKE” to “Reserved” in the block diagram</li> <li>Added note for Reserved</li> </ul>
		<a href="#">Host PC with On-Board MCP2200 USB- to-UART Converter (PC Companion Mode)</a>	For GP3 Pin, replaced “INT0/WAKE” by “Reserved”
		<a href="#">Host MCU Board with mikroBUS Socket via mikroBUS Interface (Host Companion Mode)</a>	For “mikroBUS Socket Pinout Details (J205)” Pin 1, replaced “INT0/WAKE” by “Reserved” and added note
		<a href="#">RNWF02 Add On Board Schematics</a>	Updated the schematic diagrams
B	07/2024	<a href="#">Features</a>	Added power supply value as 3.3V
		<a href="#">Hardware Prerequisites</a>	Added: <ul style="list-style-type: none"> <li>SQI™ SUPERFLASH® KIT 1</li> <li>AVR128DB48 Curiosity Nano</li> <li>Curiosity Nano Base for Click boards</li> <li>SAM E54 Xplained Pro Evaluation Kit</li> <li>Mikrobus Xplained Pro</li> </ul>
		<a href="#">Kit Overview</a>	Updated Add On Board top view and bottom view diagram
		<a href="#">Kit Contents</a>	Removed “RNWF02PC Module”
		<a href="#">Hardware</a>	Updated part number and description for “U202”
		<a href="#">Power Supply</a>	<ul style="list-style-type: none"> <li>Removed “VDD supply derives VDDIO supply to the RNWF02PC Module”.</li> <li>Added note</li> <li>Updated the “Power Supply Block Diagram”</li> </ul>
		<a href="#">Host PC with On-Board MCP2200 USB- to-UART Converter (PC Companion Mode)</a>	Added “Serial Terminal settings”
		<a href="#">PTA Interface (J203)</a>	Updated the description and notes
		<a href="#">RTCC Oscillator (Optional)</a>	Updated the notes
		<a href="#">Out of Box Demo</a>	Updated the description
		<a href="#">RNWF02 Add On Board Schematics</a>	Updated all the schematics diagram for this section

		<a href="#"><u>RNWF02 Add On Board Bill of Materials</u></a>	Added new section along with official web page link
		<a href="#"><u>Appendix B: Regulatory Approval</u></a>	Added new section with regulatory approval details
A	11/2023	Document	Initial revision

## Microchip Information

### The Microchip Website

Microchip provides online support via our website at [www.microchip.com/](http://www.microchip.com/). This website is used to make files and information easily available to customers. Some of the content available includes:

- Product Support – Datasheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- General Technical Support – Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip design partner program member listing
- Business of Microchip – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

### Product Change Notification Service

Microchip's product change notification service helps keep customers current on Microchip products. Subscribers will receive email notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest. To register, go to [www.microchip.com/pcn](http://www.microchip.com/pcn) and follow the registration instructions.

### Customer Support

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Embedded Solutions Engineer (ESE)
- Technical Support

Customers should contact their distributor, representative, or ESE for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in this document. Technical support is available through the website at: [www.microchip.com/support](http://www.microchip.com/support)

### Microchip Devices Code Protection Feature

Note the following details of the code protection feature on Microchip products:

- Microchip products meet the specifications contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is secure when used in the intended manner, within operating specifications, and under normal conditions.
- Microchip values and aggressively protects its intellectual property rights. Attempts to breach the code

protection features of Microchip products is strictly prohibited and may violate the Digital Millennium Copyright Act.

- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of its code. Code protection does not mean that we are guaranteeing the product is “unbreakable”. Code protection is constantly evolving. Microchip is committed to continuously improving the code protection features of our products.

## Legal Notice

This publication and the information herein may be used only with Microchip products, including to design, test, and integrate Microchip products with your application. Use of this information in any other manner violates these terms. Information regarding device applications is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets your specifications. Contact your local Microchip sales office for additional support or, obtain additional support at [www.microchip.com/en-us/support/design-help/client-support-services](http://www.microchip.com/en-us/support/design-help/client-support-services).

THIS INFORMATION IS PROVIDED BY MICROCHIP “AS IS”. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE, OR WARRANTIES RELATED TO ITS CONDITION, QUALITY, OR PERFORMANCE. IN NO EVENT WILL MICROCHIP BE LIABLE FOR ANY INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL, OR CONSEQUENTIAL LOSS, DAMAGE, COST, OR EXPENSE OF ANY KIND WHATSOEVER RELATED TO THE INFORMATION OR ITS USE, HOWEVER CAUSED, EVEN IF MICROCHIP HAS BEEN ADVISED OF THE POSSIBILITY OR THE DAMAGES ARE FORESEEABLE. TO THE FULLEST EXTENT ALLOWED BY LAW, MICROCHIP’S TOTAL LIABILITY ON ALL CLAIMS IN ANY WAY RELATED TO THE INFORMATION OR ITS USE WILL NOT EXCEED THE AMOUNT OF FEES, IF ANY, THAT YOU HAVE PAID DIRECTLY TO MICROCHIP FOR THE INFORMATION.

Use of Microchip devices in life support and/or safety applications is entirely at the buyer’s risk, and the buyer agrees to defend, indemnify, and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

## Trademarks

The Microchip name and logo, the Microchip logo, Adaptec, AVR, AVR logo, AVR Freaks, BesTime, BitCloud, CryptoMemory, CryptoRF, dsPIC, flexPWR, HELDO, IGLOO, JukeBlox, KeeLoq, Kleer, LANCheck, LinkMD, maXStylus, maXTouch, MediaLB, megaAVR, Microsemi, Microsemi logo, MOST, MOST logo, MPLAB, OptoLyzer, PIC, picoPower, PICSTART, PIC32 logo, PolarFire, Prochip Designer, QTouch, SAM-BA, SenGenuity, SpyNIC, SST, SST Logo, SuperFlash, Symmetricom, SyncServer, Tachyon, TimeSource, tinyAVR, UNI/O, Vectron, and XMEGA are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries. AgileSwitch, ClockWorks, The Embedded Control Solutions Company, EtherSynch, Flashtec, Hyper Speed Control, HyperLight Load, Libero, motorBench, mTouch, Powermite 3, Precision Edge, ProASIC, ProASIC Plus, ProASIC Plus logo, Quiet-Wire, SmartFusion, SyncWorld, TimeCesium, TimeHub, TimePictra, TimeProvider, and ZL are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Adjacent Key Suppression, AKS, Analog-for-the-Digital Age, Any Capacitor, AnyIn, AnyOut, Augmented Switching, BlueSky, BodyCom, Clockstudio, CodeGuard, CryptoAuthentication, CryptoAutomotive, CryptoCompanion, CryptoController, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, Espresso T1S, EtherGREEN, EyeOpen, GridTime, IdealBridge, IGaT, In-Circuit Serial Programming, ICSP, INICnet, Intelligent Paralleling, IntelliMOS, Inter-Chip Connectivity, JitterBlocker, Knob-on-Display, MarginLink, maxCrypto, maxView, memBrain, Mindi, MiWi, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, mSiC, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, Power MOS IV, Power MOS 7, PowerSmart, PureSilicon, QMatrix, REAL ICE, Ripple Blocker, RTAX, RTG4, SAM-ICE, Serial Quad I/O, simpleMAP, SimpliPHY, SmartBuffer, SmartHLS, SMART-I.S., storClad, SQL, SuperSwitcher, SuperSwitcher II, Switchtec, SynchroPHY, Total Endurance, Trusted Time, TSHARC, Turing, USBCheck, VariSense, VectorBlox, VeriPHY, ViewSpan, WiperLock, XpressConnect, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries. SQTP is a service mark of Microchip Technology Incorporated in the U.S.A. The Adaptec logo,

Frequency on Demand, Silicon Storage Technology, and Symmcom are registered trademarks of Microchip Technology Inc. in other countries. GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies. © 2023-2024, Microchip Technology Incorporated and its subsidiaries. All Rights Reserved. ISBN: 978-1-6683-0136-4

## Quality Management System

For information regarding Microchip's Quality Management Systems, please visit [www.microchip.com/quality](http://www.microchip.com/quality).

## Worldwide Sales and Service

AMERICAS	ASIA/PACIFIC	ASIA/PACIFIC	EUROPE
<b>Corporate Office</b>  2355 West Chandler Blvd. Chandler, AZ 85224-6199  Tel: <a href="tel:480-792-7200">480-792-7200</a>  Fax: <a href="tel:480-792-7277">480-792-7277</a>  Technical Support: <a href="http://www.microchip.com/support">www.microchip.com/support</a>  Web Address: <a href="http://www.microchip.com">www.microchip.com</a>	<b>Australia – Sydney</b>  Tel: 61-2-9868-6733  <b>China – Beijing</b>  Tel: 86-10-8569-7000  <b>China – Chengdu</b>  Tel: 86-28-8665-5511  <b>China – Chongqing</b>  Tel: 86-23-8980-9588  <b>China – Dongguan</b>  Tel: 86-769-8702-9880  <b>China – Guangzhou</b>  Tel: 86-20-8755-8029  <b>China – Hangzhou</b>  Tel: 86-571-8792-8115  <b>China – Hong Kong SAR</b>  Tel: 852-2943-5100  <b>China – Nanjing</b>  Tel: 86-25-8473-2460	<b>India – Bangalore</b>  Tel: 91-80-3090-4444  <b>India – New Delhi</b>  Tel: 91-11-4160-8631  <b>India – Pune</b>  Tel: 91-20-4121-0141  <b>Japan – Osaka</b>  Tel: 81-6-6152-7160  <b>Japan – Tokyo</b>  Tel: 81-3-6880-3770  <b>Korea – Daegu</b>  Tel: 82-53-744-4301  <b>Korea – Seoul</b>  Tel: 82-2-554-7200  <b>Malaysia – Kuala Lumpur</b>  Tel: 60-3-7651-7906	<b>Austria – Wels</b>  Tel: 43-7242-2244-39  Fax: 43-7242-2244-393  <b>Denmark – Copenhagen</b>  Tel: 45-4485-5910  Fax: 45-4485-2829  <b>Finland – Espoo</b>  Tel: 358-9-4520-820  <b>France – Paris</b>  Tel: 33-1-69-53-63-20  Fax: 33-1-69-30-90-79  <b>Germany – Garching</b>  Tel: 49-8931-9700  <b>Germany – Haan</b>  Tel: 49-2129-3766400  <b>Germany – Heilbronn</b>  Tel: 49-7131-72400  <b>Germany – Karlsruhe</b>  Tel: 49-721-625370  <b>Germany – Munich</b>  Tel: 49-89-627-144-0  Fax: 49-89-627-144-44  <b>Germany – Rosenheim</b>  Tel: 49-8031-354-560  <b>Israel – Hod Hasharon</b>

<p>Fax: <a href="tel:972-818-2924">972-818-2924</a></p> <p><b>Detroit</b></p> <p>Novi, MI</p> <p>Tel: <a href="tel:248-848-4000">248-848-4000</a></p> <p><b>Houston, TX</b></p> <p>Tel: <a href="tel:281-894-5983">281-894-5983</a></p> <p><b>Indianapolis</b></p> <p>Noblesville, IN Tel: <a href="tel:317-773-8323">317-773-8323</a></p> <p>Fax: <a href="tel:317-773-5453">317-773-5453</a></p> <p>Tel: <a href="tel:317-536-2380">317-536-2380</a></p> <p><b>Los Angeles</b></p> <p>Mission Viejo, CA Tel: <a href="tel:949-462-9523">949-462-9523</a></p> <p>Fax: <a href="tel:949-462-9608">949-462-9608</a></p> <p>Tel: <a href="tel:951-273-7800">951-273-7800</a></p> <p><b>Raleigh, NC</b></p> <p>Tel: <a href="tel:919-844-7510">919-844-7510</a></p> <p><b>New York, NY</b></p> <p>Tel: <a href="tel:631-435-6000">631-435-6000</a></p> <p><b>San Jose, CA</b></p> <p>Tel: <a href="tel:408-735-9110">408-735-9110</a></p> <p>Tel: <a href="tel:408-436-4270">408-436-4270</a></p> <p><b>Canada – Toronto</b></p> <p>Tel: <a href="tel:905-695-1980">905-695-1980</a></p> <p>Fax: <a href="tel:905-695-2078">905-695-2078</a></p>	<p><b>China – Qingdao</b></p> <p>Tel: 86-532-8502-7355</p> <p><b>China – Shanghai</b></p> <p>Tel: 86-21-3326-8000</p> <p><b>China – Shenyang</b></p> <p>Tel: 86-24-2334-2829</p> <p><b>China – Shenzhen</b></p> <p>Tel: 86-755-8864-2200</p> <p><b>China – Suzhou</b></p> <p>Tel: 86-186-6233-1526</p> <p><b>China – Wuhan</b></p> <p>Tel: 86-27-5980-5300</p> <p><b>China – Xian</b></p> <p>Tel: 86-29-8833-7252</p> <p><b>China – Xiamen</b></p> <p>Tel: 86-592-2388138</p> <p><b>China – Zhuhai</b></p> <p>Tel: 86-756-3210040</p>	<p><b>Malaysia – Penang</b></p> <p>Tel: 60-4-227-8870</p> <p><b>Philippines – Manila</b></p> <p>Tel: 63-2-634-9065</p> <p><b>Singapore</b></p> <p>Tel: 65-6334-8870</p> <p><b>Taiwan – Hsin Chu</b></p> <p>Tel: 886-3-577-8366</p> <p><b>Taiwan – Kaohsiung</b></p> <p>Tel: 886-7-213-7830</p> <p><b>Taiwan – Taipei</b></p> <p>Tel: 886-2-2508-8600</p> <p><b>Thailand – Bangkok</b></p> <p>Tel: 66-2-694-1351</p> <p><b>Vietnam – Ho Chi Minh</b></p> <p>Tel: 84-28-5448-2100</p>	<p>Tel: 972-9-775-5100</p> <p><b>Italy – Milan</b></p> <p>Tel: 39-0331-742611</p> <p>Fax: 39-0331-466781</p> <p><b>Italy – Padova</b></p> <p>Tel: 39-049-7625286</p> <p><b>Netherlands – Drunen</b></p> <p>Tel: 31-416-690399</p> <p>Fax: 31-416-690340</p> <p><b>Norway – Trondheim</b></p> <p>Tel: 47-72884388</p> <p><b>Poland – Warsaw</b></p> <p>Tel: 48-22-3325737</p> <p><b>Romania – Bucharest</b></p> <p>Tel: 40-21-407-87-50</p> <p><b>Spain – Madrid</b></p> <p>Tel: 34-91-708-08-90</p> <p>Fax: 34-91-708-08-91</p> <p><b>Sweden – Gothenburg</b></p> <p>Tel: 46-31-704-60-40</p> <p><b>Sweden – Stockholm</b></p> <p>Tel: 46-8-5090-4654</p> <p><b>UK – Wokingham</b></p> <p>Tel: 44-118-921-5800</p> <p>Fax: 44-118-921-5820</p>
---	---	---	--


2023-2024 Microchip Technology Inc. and its subsidiaries

## Frequently Asked Questions







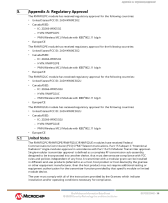

### Q: Where can I find more information on labeling and user information requirements?

A: Additional information can be found in KDB Publication 784748 available at the FCC Office of Engineering and Technology (OET) Laboratory Division Knowledge Database (KDB) [apps.fcc.gov/oetcf/kdb/index.cfm](https://apps.fcc.gov/oetcf/kdb/index.cfm).

## Documents / Resources

	<p><b>MICROCHIP RNWF02PC Module</b> [pdf] Owner's Manual  RNWF02PE, RNWF02UC, RNWF02UE, RNWF02PC Module, RNWF02PC, Module</p>
---	---

## References

-  [CeptNew](#)
-  [ETSI - Welcome to the World of Standards!](#)
-  [ETSI - Welcome to the World of Standards!](#)
-  [www.etsi.org - /deliver/etsi\\_eg/](#)
-  [Empowering Innovation | Microchip Technology](#)
-  [REDCA Home](#)
-  [OET Knowledge Database \(KDB\)](#)
-  [CeptNew](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.