



Midea MAD20S1QWT MAD Cube Dehumidifier User Manual

[Home](#) » [Midea](#) » Midea MAD20S1QWT MAD Cube Dehumidifier User Manual 

Midea MAD20S1QWT MAD Cube Dehumidifier User Manual



Contents

1	SAFETY PRECAUTIONS
2	UNIT SPECIFICATIONS AND FEATURES
3	SET UP INSTRUCTIONS
4	INSTALLATION INSTRUCTIONS
5	OPERATING INSTRUCTIONS
6	CARE AND CLEANING
7	NESTING AND STORING INSTRUCTIONS
8	TROUBLESHOOTING TIPS
9	APP INSTRUCTIONS
10	Declaration of conformity
11	Documents / Resources
11.1	References

SAFETY PRECAUTIONS

To prevent injury to the user or personal and property damage, these instructions must be followed. Incorrect operation due to ignoring of instructions may cause harm or damage. The level of risk is shown by the following indications.

WARNING This symbol indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION This symbol indicates a hazardous situation, which, if not avoided, could result in minor or moderate injury.

NOTICE This symbol addresses practices not related to physical injury



WARNING

- Do not modify power cord length or share the outlet with other appliances. It may cause electric shock or fire due to overheating.
- Do not operate or stop the unit by inserting or pulling out the power plug. It may cause electric shock.
- Do not allow water to enter into electric parts. It may cause failure or electric shock.
- Do not use the power outlet if it is loose or damaged. It may cause fire and electric shock.
- Do not use or keep the power cord close to heating appliances or heat sources such as fireplaces. It may cause fire and electric shock.
- Do not disassemble or modify unit. It may cause failure and electric shock.
- Do not damage or use an unspecified power cord. It may cause fire and electric shock.
- Do not use the unit near flammable gas or combustibles, such as gasoline, benzene, thinner, etc. It may cause fire.
- Do not operate with wet hands. It may cause electric shock.
- Do not open the unit during operation. It may cause electric shock.
- Do not drink the water from the bucket.
- Do not use the unit in small spaces or place in a sink or shower. Lack of ventilation can cause overheating and fire.
- Do not attempt to repair the unit yourself.
- Avoid fire hazard or electric shock. Do not use an extension cord or an adaptor plug. Do not remove any prongs

from the power cord.

- Plug in power plug properly. Otherwise, it may cause electric shock or fire due to excess heat generation.



WARNING

- Always ensure effective grounding. Incorrect grounding may cause electric shock.
- Unplug the unit if strange sounds, smells, or smoke come from it. A damaged product may cause fire and electric shock.
- Ventilate room before operating the unit if there is a gas leak from other appliances.
- If the power cord is damaged, it must be replaced by the manufacturer or an authorized service center in order to avoid electrical risk.
- Before cleaning, turn off the power and unplug the unit.
- Be sure the dehumidifier has been securely and correctly installed according to the installation instructions in this manual. Save this manual for possible future use in removing or installing this unit.
- Be sure the dehumidifier is properly grounded. To minimize shock and fire hazards, proper grounding is important. The power cord is equipped with a three-prong grounding plug for protection against shock hazards.
- Your dehumidifier must be used in a properly grounded wall receptacle. If the wall receptacle you intend to use is not adequately grounded or protected by a time delay fuse or circuit breaker, have a qualified electrician install the proper receptacle. Ensure the receptacle is accessible after the unit installation.
- Be sure the electrical service is adequate for the model you have chosen. This information can be found on the serial plate, which is located on the side of the cabinet and behind the grille.
- Make sure the bucket is empty of water before nesting unit. It could cause electric shock and/or damage the unit.
- Unplug the unit before nesting it in the bucket. It could cause electric shock and/or damage the unit.
- When unplugging the unit, be sure to grab the plug, not the cord.



CAUTION

- Do not use in places where water may splash onto the unit. Water may enter the unit and degrade the insulation. It may cause an electric shock or fire.
- Place the unit on a level, sturdy section of the floor. If the unit falls over, it may cause water to spill and damage belongings, or cause electrical shock or fire.
- Never insert your finger or other foreign objects into grills or openings. Take special care to warn children of these dangers. It may cause failure or electric shock.
- Do not climb up on or sit on the unit. You may be injured if you fall or if the unit falls over.
- Always insert the filters securely, and take caution to avoid injuries to hand and fingers. Clean filter once every two weeks.
- If water enters the unit, turn the unit off and disconnect the power, contact the Service Center at 1-866-646-4332.
- If the unit is knocked over during use, turn off the unit and unplug it from the main power supply immediately. Visually inspect the unit to ensure there is no damage. If you suspect the unit has been damaged, contact customer service.



CAUTION

- In a thunderstorm, the power should be disconnected to the unit due to lightning.
- Do not run power cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- Do not place anything on top of the unit. This would restrict airflow, possibly damage the unit and decrease performance.
- Always lift unit with 2 hands using proper lifting technique.
- Before turning the unit on, make sure it is seated correctly on the bucket.
- Before lifting ensure the handle is properly attached.
- Only use the bucket that came with the unit. Do not use any other bucket.
- Clean the bucket regularly.

EXPLANATION OF SYMBOLS DISPLAYED ON THE UNIT



WARNING This symbol shows that this appliance used a flammable refrigerant. If the refrigerant is leaked and exposed to an external ignition source, there is a risk of fire.



CAUTION This symbol shows that the operation manual should be read carefully.



CAUTION This symbol shows that a service personnel should be handling this equipment with reference to the installation manual.



CAUTION This symbol shows that information is available such as the operating manual or installation manual.



WARNING

- Do not try to accelerate the defrosting process or methods of cleaning that are not recommended by the manufacturer.
- The appliance shall be stored in a room without a continuously operating ignition source (for example, open flames or an operating gas appliance) or an ignition source (for example, an operating electric heater) close to the appliance. The appliance shall also be stored in a room without ignition sources.
- Do not pierce or burn.
- Be aware that the refrigerants may not contain an odor.
- Keep ventilation openings clear of obstruction.
- Unit is only to be serviced by a Midea authorized servicer, please call Customer Service at 1-866-646-4332 for support.
- Flammable refrigerant R32 is used within air conditioner. Please follow the instructions carefully to handle, install, clean, and service the air conditioner to avoid damage or hazard. Do not dispose of air conditioner in regular trash. Contact qualified agency for proper disposal.
- No open fire or devices that generate spark/arcing shall be around the air conditioner to avoid causing ignition of the flammable refrigerant used. Please follow the instructions carefully to store or maintain the air

conditioner to prevent mechanical damage from occurring.

UNIT SPECIFICATIONS AND FEATURES

Product overview

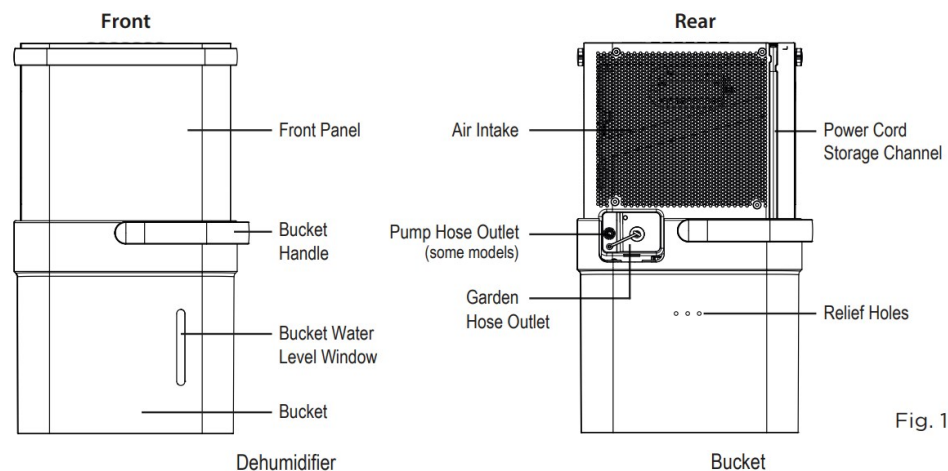


Fig. 1

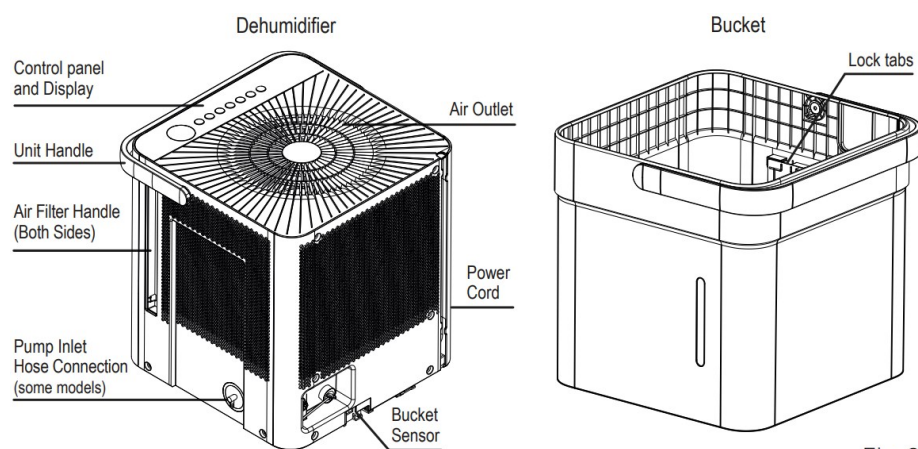


Fig. 2


Accessories

- Pump drain hose (only for units with the drain pump feature)
- Pump inlet hose (only for units with the drain pump feature)
- Normal drain hose
- Casters

SET UP INSTRUCTIONS

Step 1:

Separate dehumidifier & bucket from the nested shipping/storage position. Remove all packaging materials from the unit.

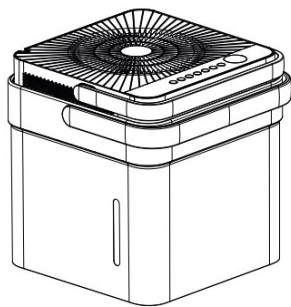

Nested Shipping & Storage Position

Fig. 3a

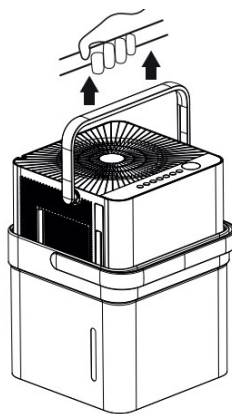


Fig. 3b

Step 2:

Rotate dehumidifier 90° and align the arrows on the two labels (one on the bucket and one on the dehumidifier) and carefully sit the dehumidifier down onto the bucket. The water level window in the bucket and the user interface buttons on the dehumidifier should be on the same side when properly stacked. Check to ensure the arrows on the unit and bucket are aligned as in Fig. 4c for proper operation.

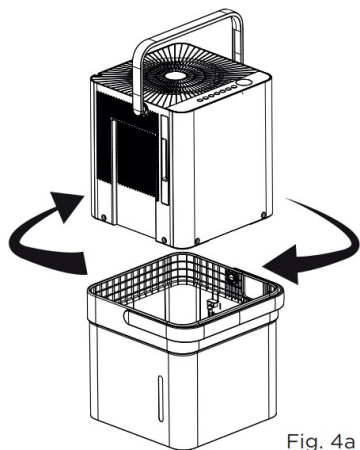


Fig. 4a

Rotate dehumidifier 90°

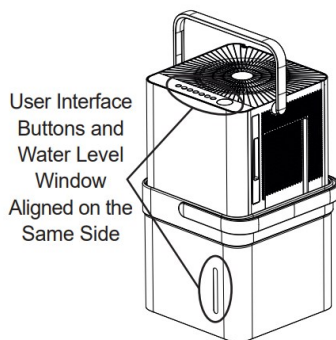


Fig. 4b

User Interface
Buttons and
Water Level
Window
Aligned on the
Same Side

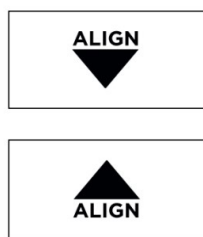


Fig. 4c

Step 3:


Plug the unit in and press the power button and the unit is ready to run in normal (bucket) mode.

INSTALLATION INSTRUCTIONS

Positioning the Unit

The dehumidifier should be placed in the area where dehumidification is desired most. Adjacent rooms in which dehumidification is also desired should allow adequate airflow in and out of the space containing the dehumidifier.

- Do not use outdoors.
- This dehumidifier is intended for indoor residential applications only. This dehumidifier should not be used for commercial or industrial applications.
- Place the dehumidifier on a smooth, level floor strong enough to support the unit with a full bucket of water.
- Allow at least 8" of air space on all sides of the unit for air circulation (at least 16" for air outlet).
- Place the unit in an area where the temperature will not fall below 41°F (5°C). The coils can become covered with frost at lower temperatures, which may reduce performance.
- Place the unit away from any clothes dryer, heater or radiator.
- Close all doors, windows, and other openings to the outdoors in the room.

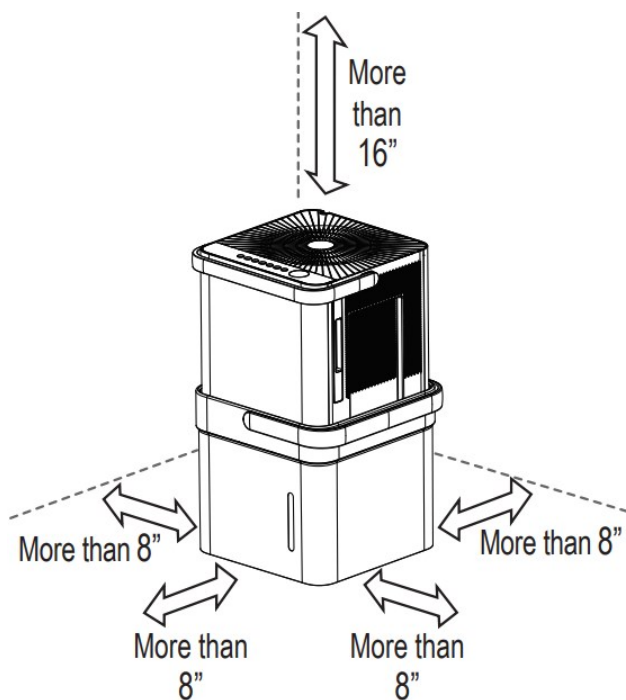

Optional Caster Installation

To install the casters:

1. Remove the Dehumidifier from the bucket.
2. Slide each caster into the slot on the bucket's bottom corner as shown below.
3. Place the retaining block into the slot to hold the caster in place.
4. Repeat this for each corner of the bucket until all 4 casters are installed.


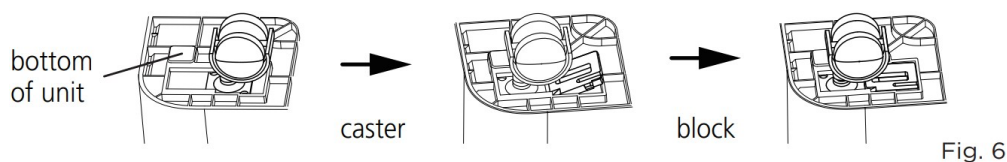


Fig. 6

To remove the casters:

1. Use a flathead screwdriver to actuate the tab on the retaining block.
2. Remove the retaining block and slide the casters out of the slot on the bucket.

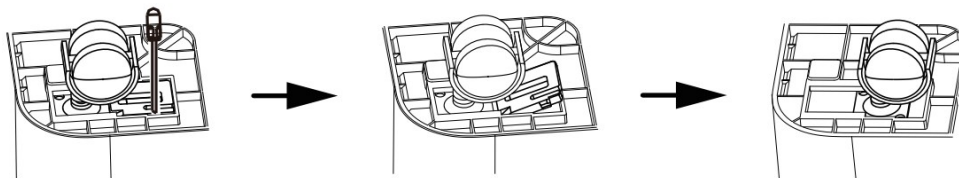

NOTICE

With the casters attached, do not move the unit and bucket assembly while there is water in the bucket. Before rolling the bucket, remove the unit.


Additional Setup and Usage Information

Scan this QR code with your mobile device to see a playlist of helpful videos about your new Cube Dehumidifier.



OPERATING INSTRUCTIONS

Key Pad Features

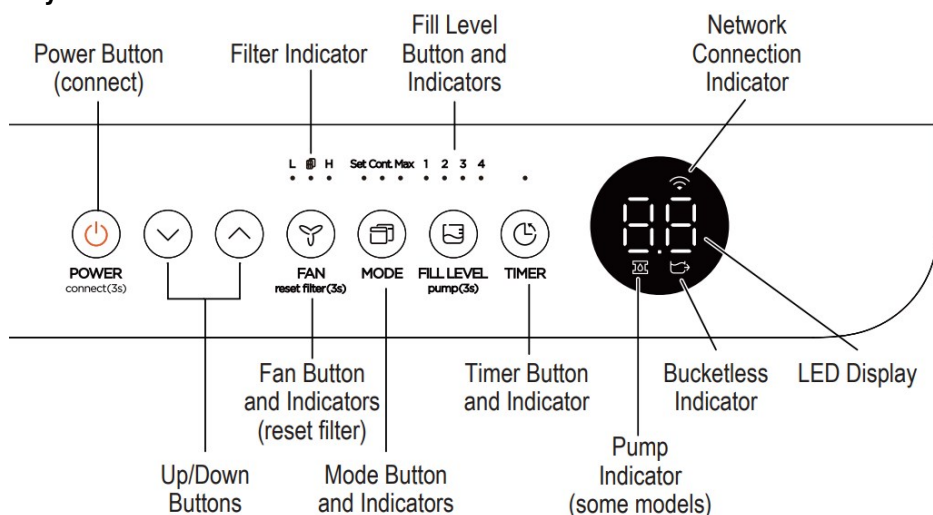

NOTICE

The appearance of the control panel on your unit may vary slightly. Functions will be similar.

Operating Instructions

When you push the button to change operation modes, the unit will make a beep sound to indicate that it is changing modes.

Power Button:

Press this button to turn the unit On/Off.

Connect:

Holding the power button for 3 seconds will place the unit in network connection mode to setup wireless control.

Up/Down Buttons:

Press these buttons to adjust the setpoint or to set the time feature.

Pump:

Press and hold on the Fill level pump 3 seconds to initiate PUMP feature. Press and hold on the Fill level pump 3 seconds again to stop PUMP feature. Turn on the PUMP feature, the bucket capacity cannot be selected and the bucket capacity is at 4 step.

Fan Button:

Press this button to change the fan speed between High and Low.

Filter Reset:

To reset the change filter indicator, hold the fan button for 3 seconds.

Note: It will enter the filter cleaning reminder when the unit runs for 250 hours.

Mode Button:

Press this button to change the mode of the dehumidifier between Set mode, Max mode, and Continuous run mode.

Set – The dehumidifier runs until the humidity setpoint has been reached. The dehumidifier will begin running once the humidity rises above the setpoint again.

Max – The dehumidifier will run continuously on High Fan.

Continuous – The dehumidifier will run continuously and the fan speed can be changed in this operating mode.

NOTICE

While operating on continuous and Max modes, the humidity setpoint cannot be adjusted manually.

Fill Level Button:

Press this button to change the required water level before the bucket full switch activates. The options will fill approximately to the amounts shown in the table below:

Fill level	Models MAD20S1QWT	Models MAD35S1QWT MAD50S1QWT MAD50PS1QWT MAD50PS1QGR
1	1.5 gallons (17 lb)	2.25 gallons (24 lb)
2	2 gallons (21 lb)	3 gallons (30 lb)
3	2.75 gallons (27.5 lb)	3.75 gallons (36.5 lb)
4	3 gallons (29.5 lb)	4.23 gallons (40.5 lb)

Choose the option which is most comfortable for you when emptying the bucket. When the bucket is full, the Display will show P2. The weights above are approximate weights of the bucket when filled with the corresponding volume of water.

NOTICE

For accurate fill levels, ensure the bucket is empty before beginning operation.

Bucketless mode:

Bucketless mode allows you to run the unit without the bucket in place. The included drain hose or a garden hose must be attached and sloped towards the drain for proper bucketless mode operation. Figure 8 shows a proper slope while figure 9 shows an improper slope. The drain must be located below the dehumidifier. For best drain performance, we recommend the end of the drain hose be 4 inches below the hose connection. To activate bucketless mode, the following steps must be completed within three minutes of plugging the dehumidifier in.

1. Press and hold the up and fill level buttons for 3 seconds until the bucketless icon appears on the display.
2. Ensure the dehumidifier is on a flat level surface (free of debris).
3. Make sure the hose for Bucketless mode is sloped down to the drain (see fig. 8) and does not rise above the connection point (see fig. 9).


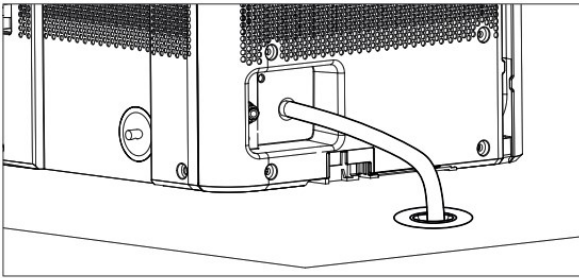


Fig. 8

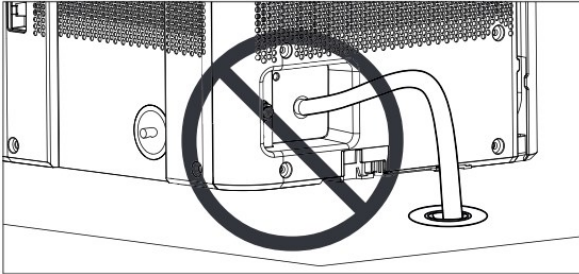

To remove the unit from bucketless mode, place the unit back on the bucket.

Timer Button:

Press this button to activate the Timer function. The Timer LED will illuminate indicating timer mode is being set. 0.0 will also appear on the display indicating the number of hours from now until the timer function will initiate. When the timer function initiates, the unit will change its power state. For more information see Timer function under other features on the next page.

Error Codes:

EH60

Room temperature sensor error—Unplug the unit and plug it back in. If error repeats, call for service;

EH61 –

Tube Temperature sensor of the evaporator error—Unplug the unit and plug it back in. If error repeats, call for service;

EH0b-

Display board and master control board communication error. Unplug the unit and plug it back in. If error repeats, call for service;

Protection Code:

P2 – Bucket is full — Empty the bucket and replace it in the right position.

Eb Bucket malfunction—Replace the bucket in the right position, the malfunction clear.

Note:

When one of the above and check for any obstructions. Restart the unit, if the malfunction is the power cord. Contact the manufacturer or its service agents or a similar qualified person for service.

Other Features

Auto Defrost

When frost builds up on the evaporator coils, the compressor will cycle off and Auto Defrost function will run automatically.

3 minute compressor operation delay protection

After the unit has stopped, it can not be restarted in the first 3 minutes to protect compressor operation. The unit will restart automatically after 3 minutes.

Auto-Restart

If the unit stops unexpectedly due to power being cut, it will restart with the previous function setting (except bucketless mode) automatically when the power resumes.

Timer Function

- When activating the Timer function, you are setting the time until the unit changes its power state. This means, if the unit is on, activating the timer function will set the time until the unit will turn off. If the unit is off, activating the timer function will set the time until the unit will turn on.
- The time can be set after pressing the timer button then using the up or down buttons. These buttons will change the time in 0.5 hour increments up to 10 hours. After 10 hours, the time will change in 1 hour increments up to 24.
- If an error code appears during this time, the timer function will be cancelled.

NOTICE

- When first using the dehumidifier, operate the unit continuously 24 hours. Make sure the plastic cover on the continuous drain hose outlet is installed properly so there are no leaks.
- This unit is designed to operate in a working environment between 5°C/41°F and 35°C/95°F.
- Make sure the water bucket is positioned correctly so that the unit can operate properly. When the water in the bucket reaches a certain level, please be careful while moving the unit to avoid spilling.

Removing Collected Water

There are three ways to remove collected water:

Emptying the bucket

- When the bucket reaches the set Fill Level, the unit's display will show P2 regardless of power status.
- Using proper lifting techniques, remove the unit from the bucket. Be aware, some residual water may spill from the bottom of the unit while not on the bucket.
- Using two hands, grab the bucket handle and carry it to the desired drainage point. Pouring from a front corner of the bucket (the bucket window is on the front side), empty the bucket. If pouring from the back of the bucket, some water may spill from the relief holes.
- Return the bucket to the desired operating location and place the unit back on the bucket. Be sure the unit is aligned properly.


NOTICE

- When you remove the unit from the bucket do not set the unit on any electrical components as the bottom may be wet.
- Do not set the unit on an uneven surface after removing it from the bucket.
- Ensure the unit is seated properly after returning it to the bucket.
- If the unit is removed from the bucket during operation, the display will show the error code Eb and cease operation until returned to the bucket or changed to bucketless mode.


Continuous draining

- Water can be automatically emptied from the unit into a sink, or other type of drain using the included hose.
- To install the hose, remove the drain cap from the rear of the unit and set aside. Insert the included drainhose, or attach a garden hose to the drain outlet. Place the other end of the hose on or near the drain so that water will drain properly.


1. Lift the unit off the bucket and place it on a level surface.

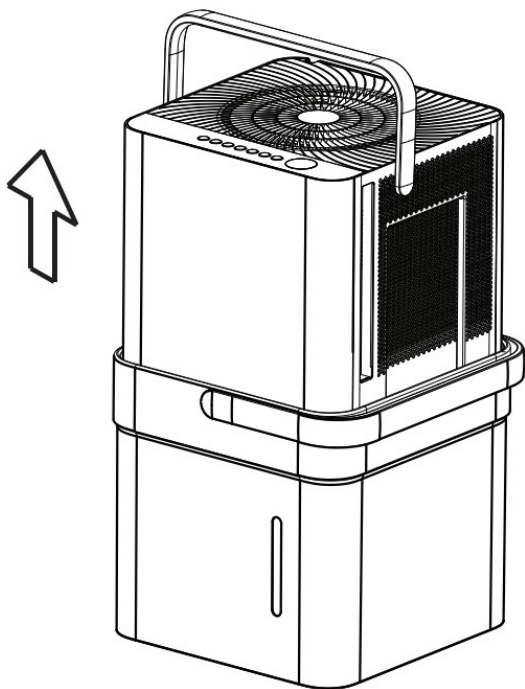


2. Lift the bucket using 2 hands and carry to drainage point.

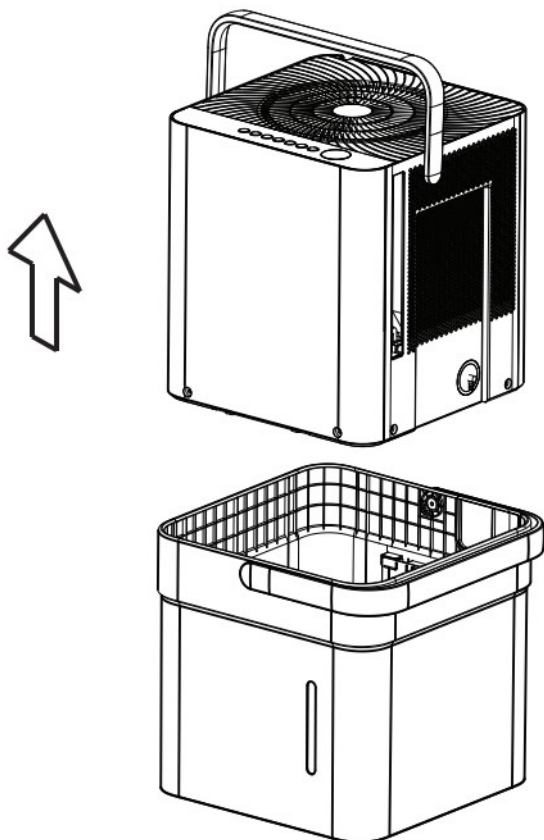

3. Pour out all of the water.

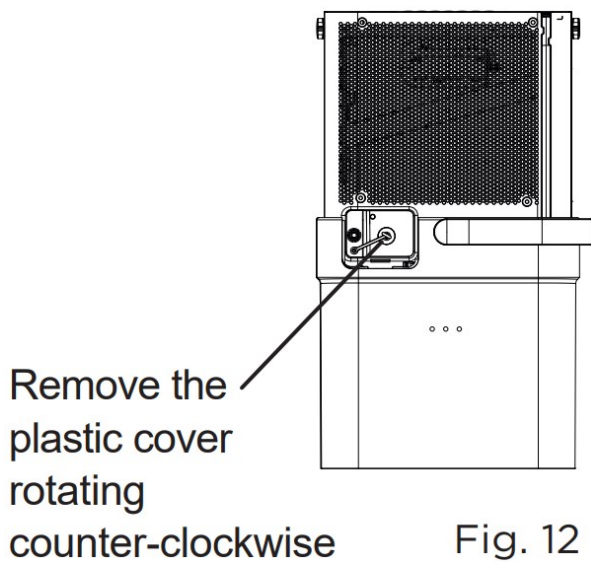

- When removing the drain hose, some water may remain in the hose or the drain outlet. Be sure this water will not spill by drying the wet area before moving the unit.

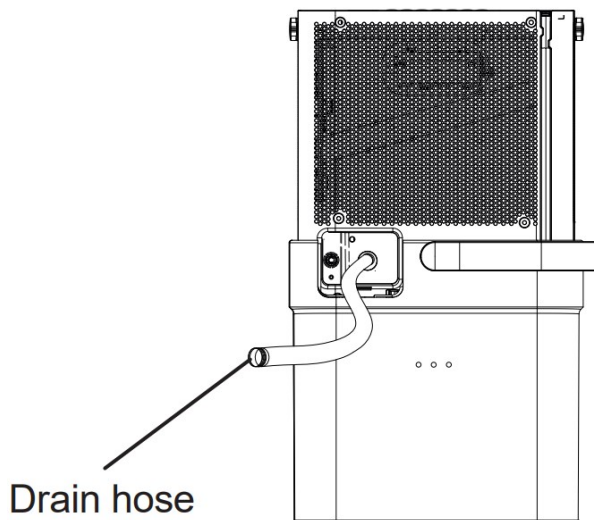

NOTICE


When using the continuous draining feature, ensure the unit is placed above the sink or drain being used. This will ensure proper draining.

Pump draining (some models)

- Water can be pumped from the unit into a sink or other type of drain by putting the unit in pump mode and attaching the included pump hose. Be sure to install both the inlet and outlet pump hoses as shown in the figures on the right.
- To install the pump hose, remove the plug from the pump drain hole and firmly attach the the included pump hose as shown in Fig. 14.

Reinstall the plastic cover

Max pump height: 14 ft.
Make sure the hose is properly seated.
To remove the pump hose, push in on the collar around the hose and pull the hose out.

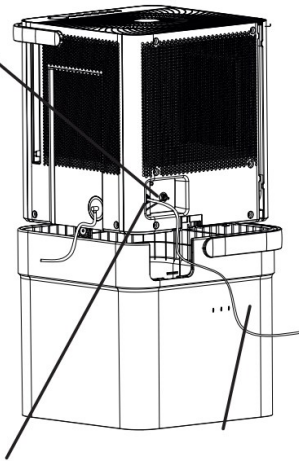

Pump drain hose outlet Pump drain hose

- Initiate pump mode by holding both the up and down arrows for three seconds.
- The pump inlet hose must be placed in the bucket in order to pump the water out of the bucket.

NOTICE

The pump may generate a loud noise for the first 3~5 minutes of operation.

Pump drain hose outlet connection

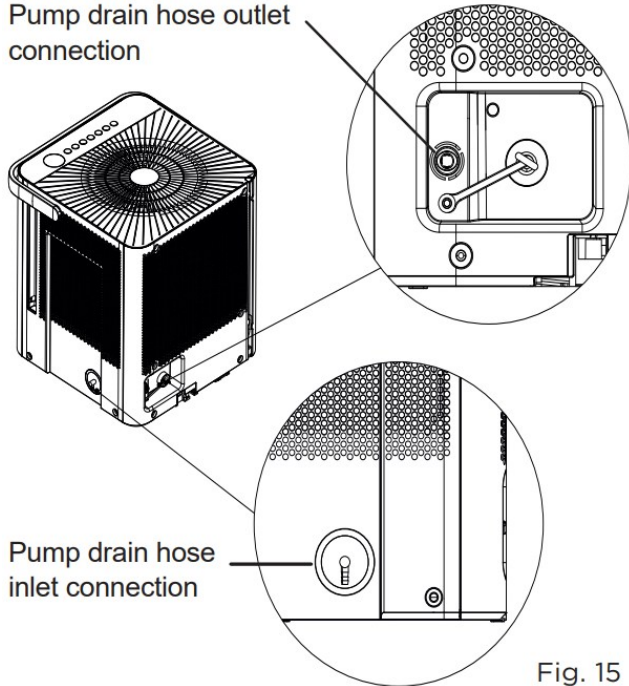


Fig. 15

- Make sure the hose is secure so there are no leaks.
- Direct the hose toward the drain, making sure that there are no kinks that will stop the water flowing.
- Place the end of the hose into the drain.
- Select the desired humidity setting and fan speed on the unit for pump draining to start.
- When operating in Bucketless mode the pump cannot be used.

NOTICE

The pump operation light blinks when a failure occurs. Please turn off the unit and disconnect the power cord. Check the following items:

- Cleaning the pump filter:
- Clean the pump filter following the instructions below.

- Check if the drain hose is clean and free of debris.
- Empty the water from the bucket.
- Check the hose connection and the bucket for proper fitment. If the error persists, contact Customer Service.

NOTICE


If routing the drain hose outdoors, do not operate when the outdoor temperature is at or below 32°F (0°C) as the water will freeze, blocking the hose and causing the unit to stop. Make sure to empty the bucket at least once a week when using the pump draining feature. When the pump draining feature is not being used, remove the pump drain hose from the outlet.

CARE AND CLEANING

Turn the dehumidifier off and disconnect the plug from the power source before cleaning. Cleaning Care and

Clean the Grill and Case

- Use water and a mild detergent. Do not use bleach or abrasives.
- Do not splash water directly onto the unit. Doing so may cause an electrical shock, cause the insulation to deteriorate, or cause the unit to rust.
- The air intake and outlet may get dirty during operation, use a vacuum cleaner or brush to clean.

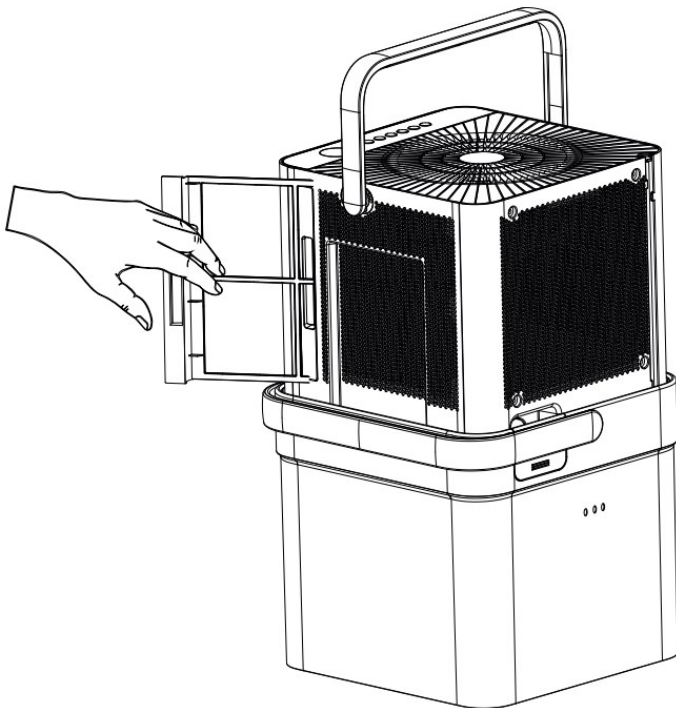

Clean the bucket

- Every few weeks, clean the bucket thoroughly. Partially fill the bucket with clean water and mild detergent. Swish it around in the bucket, empty and rinse.

NOTICE

Do not use a dishwasher to clean the bucket.

Clean the air filters

- To remove the filters, pull each filter outwards.
- Wash the filters with clean water then dry.
- Re-install each filter.
- Reset the filter indicator light following operating instructions on page 10.

CAUTION

To avoid loss of performance or damage to the unit, do not operate the dehumidifier without the filters.

When not using the unit for long time periods

- Before storing the unit and bucket, let it rest for one full day so that the system can dry out naturally.
- Clean the unit, water bucket and air filters.
- Ensure the power cord is in the power cord storage channel.
- Nest the unit inside the bucket.
- Cover the unit with a plastic bag.
- Store the unit upright in a dry, well-ventilated area.


NESTING AND STORING INSTRUCTIONS

Step 1:

Power off and unplug the unit. Then lift the dehumidifier off the bucket.

Step 2:

Empty all water from bucket.

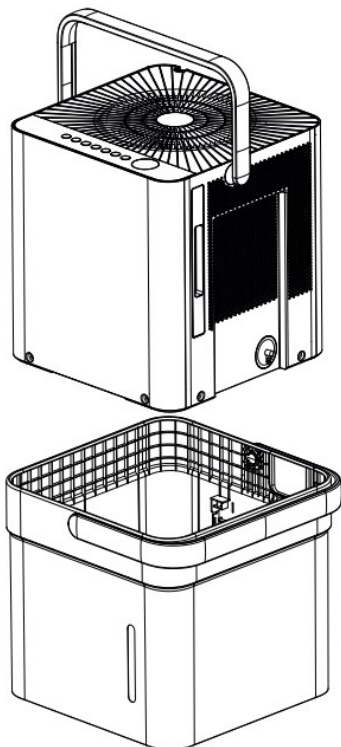


WARNING

Make sure the bucket is empty before nesting the dehumidifier to avoid risk of electrical shock

Step 3:

Make sure to press the tabs on the inside bucket feature in so that the unit can nest correctly. See Fig. 18.

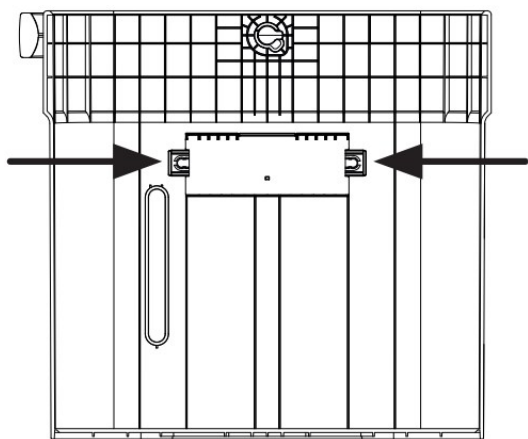

Step 4:

Rotate dehumidifier 90° in either direction and insert into bucket to nest.

NOTICE

Make sure the power cord is properly tucked into the power cord storage channel on the back of the dehumidifier to prevent damage.



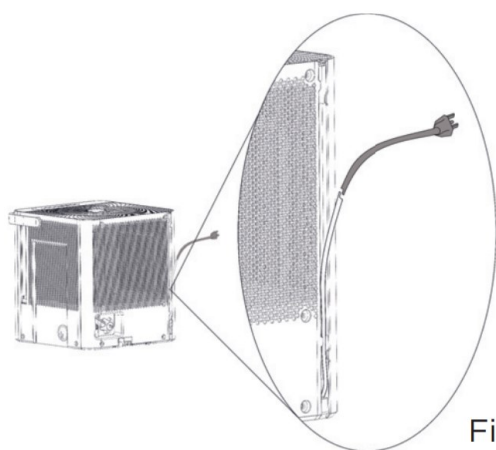


Fig. 19b

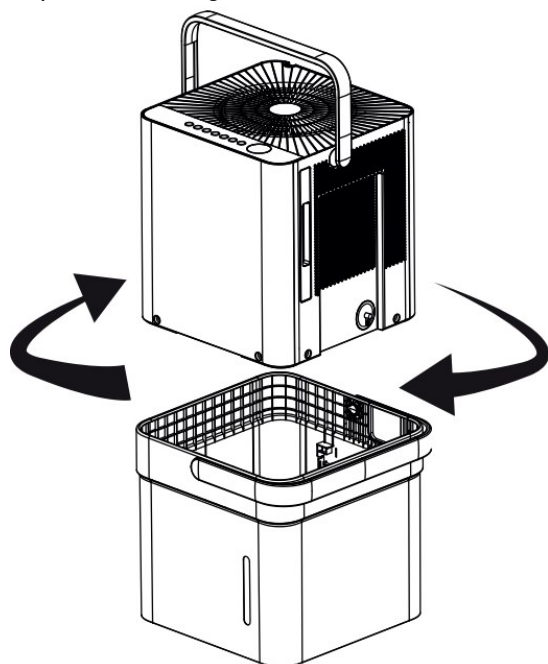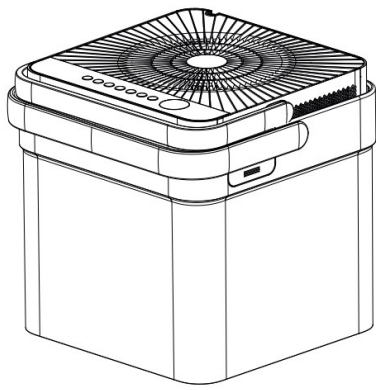

Step 5:

The dehumidifier is nested and ready to store

CAUTION

When carrying the nested unit, be sure and use the bucket handle to ensure both the dehumidifier and bucket are safely carried.

TROUBLESHOOTING TIPS

Before calling for service, review this list. It may save you time and money. This list includes common occurrences that are not the result of defective workmanship or materials in this appliance.

Problem	What to check
Unit does not start	Make sure the dehumidifiers plug is connected firmly into the wall outlet. Check the house fuse/circuit breaker box. Dehumidifier has reached its preset level or bucket is full. Water bucket is not in the proper position.
Dehumidifier does not dry the air as it should	Not enough time to remove the moisture. Make sure there are no curtains, blinds or furniture blocking the front or back of the dehumidifier. The humidity control may not be set low enough. Check that all doors, windows and other openings are securely closed. Room temperature is too low, below 5°C (41°F). There is a water vapor source in the room.
The unit makes a loud noise when operating	Air filter may be dirty. Clean filter. Refer to Care and Cleaning section. The unit is tilted instead of upright as it should be. The floor surface is not level.
Frost appears on the coils	This is normal. The dehumidifier has Auto defrost feature.
Water on floor	Hose to connector or hose connection may be loose. Intended to use the bucket to collect water, but the back drain plug is removed.
EH60, EH61, P2, EC, Eb and EH0b appear in the display	These are error codes and protection code. Check Operating Instructions.
The pump operation on light blinks at 1Hz	Clean the pump filter. Check the pump hose is not blocked or leaking. Empty the water bucket.
When operating in bucketless mode, water collects around the bottom of the unit.	Check to ensure the unit is level, and there is no debris on the surface. Check the drain hose connection and ensure it is properly seated in the outlet.

APP INSTRUCTIONS

DECLARATION OF CONFORMITY

We hereby declare that this Dehumidifier is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

SPECIFICATION OF WIRELESS MODULE

Unit model: MAD50PS1QWT

WIFI Module Model: US-SK105

Standard: IEEE 802. 11b/g/n

Antenna Type: Printed PCB Antenna

Frequency Band: 2400-2483.5MHz

Operation Temperature: 0 C~45 C/32 F~113 F

Operation Humidity: 10%~85%

Power Input: DC 5V/300mA
Maximum TX Power: <20dBm

PRECAUTIONS

1. Supports operating systems: iOS 10+ or Android 5+.
2. In the event of a OS update, there may be a delay between the update of the OS and a related software update during which your OS may or may not be supported until a new version is released. Your specific mobile phone or problems in your network may prevent the system from working and Midea will not be responsible for any problems that could be caused by incompatibility or network issues.
3. This Smart Dehumidifier only supports WPA-PSK/WPA2-PSK (recommended) encryption.
4. To ensure proper scanning of the QR code, your smartphone must have at least a 5-megapixel camera.
5. Due to unstable network connectivity, requests may time out. If this happens, rerun the network configuration.
6. Due to unstable network connectivity, commands may time out. If this happens, the smartphone app and the actual product may display conflicting information. The information displayed on the actual product is always the most accurate available. Refresh the app to re-sync.

SYSTEM OVERVIEW

Devices required to use the Smart Dehumidifier:

1. Smart Phone with compatible iOS or Android system.
2. Wireless Router
3. Smart Dehumidifier

DOWNLOAD AND INSTALL THE APP

Scan to download app.

- You can also go to the Google Play or App Store and search for MSmart Home.


NOTICE

All the images in this manual are for reference only, your product and app may look slightly different. The actual product and app instructions have to be considered.


CREATE YOUR ACCOUNT

- Make sure your smartphone is connected to your wireless router and your wireless router has a working 2.4 GHz internet connection.
- It is recommended to activate your account immediately to be able to recover your password by email


1. Press Login.

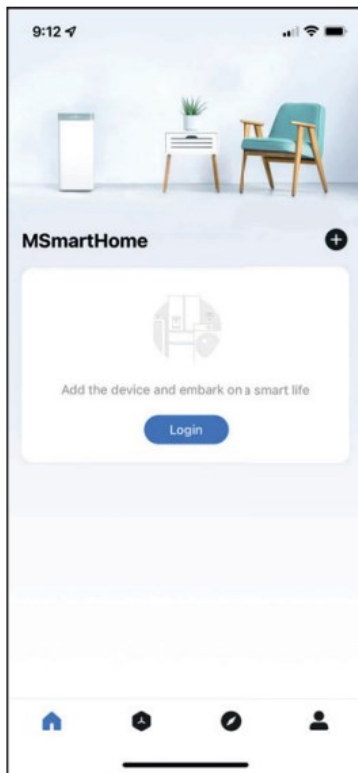


2. Select Sign Up.

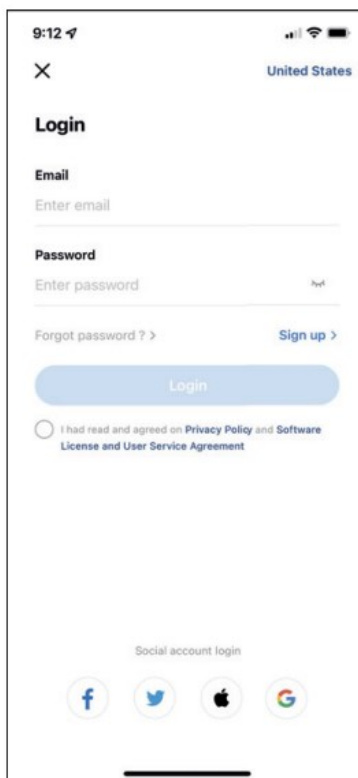

3. Enter your email address.

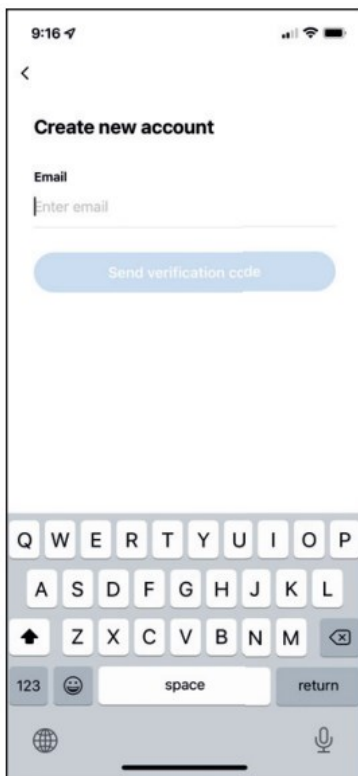

4. Enter the verification code that was sent to your email address.

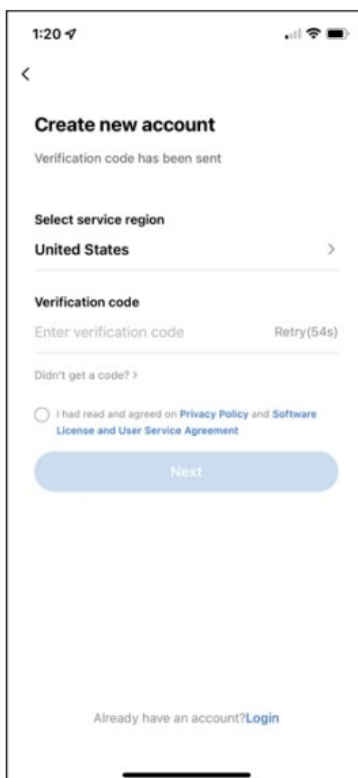

NOTICE

- Make sure your smartphone is able to connect to the wireless network which will be used.
- Make sure also that the device is not connecting to other networks in range.

ADDITIONAL APP AND SMART HOME FUNCTIONS

For additional instructions regarding the features of the app and Smart Home skill capabilities, scan the QR code below.

Declaration of conformity

FCC ID:2ADQOMDNA21

IC:12575A-MDNA21

This device complies with Part 15 of the FCC Rules and it contains licenceexempt transmitter(s)/receiver(s) that comply with Innovation, Science andEconomic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:


1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Only operate the device in accordance with the instructions supplied. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the radio frequency exposure limits, human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Documents / Resources

	<p>Midea MAD20S1QWT MAD Cube Dehumidifier [pdf] User Manual MAD20S1QWT, MAD35S1QWT, MAD50S1QWT, MAD50PS1QWT, MAD50PS1QGR, MAD20S1QWT MAD Cube Dehumidifier, MAD Cube Dehumidifier, Cube Dehumidifier, Dehumidifier</p>
---	--

References

- [Midea - Make yourself at Home - World's Number 1 Appliance Producer](#)