



Milesight EM300 Series Environment Monitoring Sensor User Guide

[Home](#) » [Milesight](#) » Milesight EM300 Series Environment Monitoring Sensor User Guide 



EM300 Series Environment Monitoring Sensor User Guide

Applicability

This guide is applicable to EM300 series sensors shown as follows, except where otherwise indicated.

| Model | Description |
|-----------|---------------------------------|
| EM300-TH | Temperature and Humidity Sensor |
| EM300-MCS | Magnet Switch Sensor |
| EM300-SLD | Spot Leak Detection Sensor |
| EM300-ZLD | Zone Leak Detection Sensor |

Safety Precautions

Milesight will not shoulder responsibility for any loss or damage resulting from not following the instructions of this operating guide.

- The device must not be disassembled or remodeled in any way.
- The device is not intended to be used as a reference sensor, and Milesight will not should responsible for any damage which may result from inaccurate readings.
- Do not place the device close to objects with naked flames.
- Do not place the device where the temperature is below/above the operating range.
- Make sure electronic components do not drop out of the enclosure while opening.
- When installing the battery, please install it accurately, and do not install the reverse or wrong model.
- Make sure both batteries are the newest when install, or battery life will be reduced.

- The device must never be subjected to shocks or impacts.

Declaration of Conformity EM300 series is in conformity with the essential requirements and other relevant provisions of the CE, FCC, and RoHS.



FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is
- Consult the dealer or an experienced radio/TV technician for help.

Note 2:

1. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. The minimum separation generally be used is at least 20 cm.

Copyright © 2011-2021 Milesight. All rights reserved.

All information in this guide is protected by copyright law. Whereby, no organization or individual shall copy or reproduce the whole or part of this user guide by any means without written authorization from Xiamen Milesight IoT Co., Ltd.



For assistance, please contact Milesight technical support:

Email: iot.support@milesight.com

Tel: 86-592-5085280

Fax: 86-592-5023065

Address: 4/F, No.63-2 Wanghai Road,
2nd Software Park, Xiamen, China

Revision History

| Date | Doc Version | Description |
|---------------|-------------|--|
| Oct. 14, 2020 | V 1.0 | Initial version |
| Oct. 21, 2020 | V 1.1 | Model name change and pictures replace |
| Nov. 19, 2020 | V 2.0 | Layout replace |
| Mar. 4, 2021 | V 2.1 | Layout update |
| July 5, 2021 | V 2.2 | Delete USB Type-C description |

OPERATING FREQUENCY:

863.1MHz – 869.9MHz for LORA

13.56MHz for NFC

EIRP (MAX.): 12.96dBm for LORA(Maximum) -35.55dBuA/m at 10m, or 41.45dBuV/m at 3m (Maximum)

Contents

- [1 Product Introduction](#)
- [2 Hardware Introduction](#)
- [3 Hardware Overview](#)
- [4 Operation Guide](#)
- [5 Maintenance](#)
- [6 Installation](#)
- [7 Milesight IoT Cloud Management](#)
- [8 Device Payload](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

Product Introduction

Overview

EM300 series is a sensor mainly used for outdoor environments through a wireless LoRa network. EM300 device is battery powered and designed for multiple mounting ways. It is equipped with NFC (Near Field Communication) and can easily be configured by a smartphone.

Sensor data are transmitted in real-time using the standard LoRaWAN F protocol. LoRaWAN enables encrypted radio transmissions over long distances while consuming very little power. The user can obtain sensor data and view the trend of data change through Milesight IoT Cloud or through the user's own Network Server.

Features

- Up to 11 km communication range
- Easy configuration via NFC
- Standard LoRaWAN support

- Milesight IoT Cloud compliant
- Low power consumption with 4000mAh replaceable battery


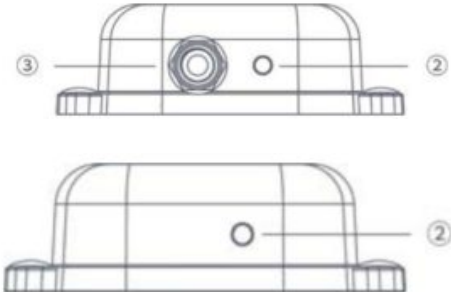
Hardware Introduction

Packing List




 If any of the above items are missing or damaged, please contact your sales representative.

Hardware Overview

| | |
|---|---|
|  |  |
| Front View: 1 NFC Area | Bottom View: 2 Vent 3 Waterproof Connectors (For water leakage and magnet switch sensor) |

Dimension (mm)

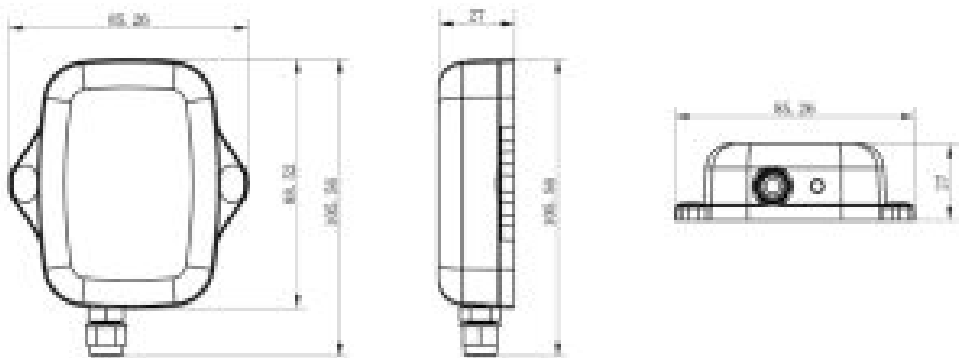

Power Button

Note: The LED indicator and power button are inside the device. Switch on/off and reset can **also be configured via NFC**.

| Function | Action | LED Indication |
|---------------------|---|--|
| Turn On | Press and hold the button for more than 3 seconds. | Off -> On |
| Turn Off | Press and hold the button for more than 3 seconds. | On -> Off |
| Reset | Press and hold the button for more than 10 seconds. | Blink 3 times. |
| Check On/Off Status | Quickly press the power button. | Light On: Device is on. Light Off: Device is off. |

Operation Guide

NFC Configuration

EM300 series can be configured via NFC.

1. Download and install the “Milesight ToolBox” App from Google Play or Apple Store.
2. Enable NFC on the smartphone and open the “The mile sight ToolBox” App.
3. Attach the smartphone with NFC area to the device to read basic information.



4. Basic information and settings of devices will be shown on ToolBox if it's recognized successfully. You can turn on/off the device by tapping the button on the Device Status. In order to protect the security of devices, password validation is required when configuring via unused phones. The default password is 123456.

| Status | Setting | Reset |
|------------------|------------------|--------------------------|
| SN | 6136A39116331007 | |
| Model | EM300-TH-915M | |
| Device EUI | 24e124136a391163 | |
| Firmware Version | V1.15 | |
| Hardware Version | V2.1 | |
| Device Status | Off | <input type="checkbox"/> |

5. Tap the “Read” button to check the current status and sensor data of the device.
6. Tap the “Write” button to write all your settings to the device.

Note:

1. Ensure the location of the smartphone NFC area and it's recommended to take off the phone case.
2. If the smartphone fails to read/write configurations via NFC, keep the phone away and back to try again.
3. EM300 series can also be configured by a dedicated NFC reader provided by Milesight IoT or you can configure it via TTL interface inside the device.

**LoRaWAN Settings**

LoRaWAN settings is used for configuring the transmission parameters in LoRaWAN network.

Basic LoRaWAN Settings:

Go to **Device->Setting->LoRaWAN Settings** of ToolBox App to configure join type, App EUI, App Key, and other information. You can also keep all settings by default.

| | |
|--------------------------------|-------------------------------------|
| Device EUI | 24E124127A270222 |
| App EUI | 24E124C0002A0001 |
| Application Port | 85 |
| Join Type | OTAA |
| LoRaWAN Version | V1.1.0 |
| Application Key | ***** |
| Spread Factor | SF10-DR2 |
| Confirmed Mode | <input type="checkbox"/> |
| Rejoin Mode | <input checked="" type="checkbox"/> |
| Set the number of packets sent | 32 packets |
| ADR Mode | <input checked="" type="checkbox"/> |

| Parameters | Description |
|------------------|---|
| Device EUI | Unique ID of the device can also be found on the label. |
| App EUI | Default App EUI is 24E124C0002A0001. |
| Application Port | The port used for sending and receiving data, the default port is 85. |
| Join Type | OTAA and ABP modes are available. |

| | |
|-------------------------|---|
| LoRaWAN Version | V1.0.2, V1.0.3, V1.1 are available. |
| Application Key | Appkey for OTAA mode, default is 5572404C696E6B4C6F52613230313823. |
| Device Address | Devendra for ABP mode, default is the 5th to 12th digits of SN. |
| Network Session Key | Nwkskey for ABP mode, default is 5572404C696E6B4C6F52613230313823. |
| Application Session Key | Appskey for ABP mode, default is 5572404C696E6B4C6F52613230313823. |
| Spread Factor | If ADR is disabled, the device will send data via this spread factor. |
| Confirmed Mode | If the device does not receive an ACK packet from a network server, it will resend data 3 times at most. |
| Rejoin Mode | Reporting interval 5 30 mins: the device will send specific mounts of LoRaMAC packets to check connection status every 30 mins; If no reply after specific packets, the device will re-join. Reporting interval > 30 mins: the device will send specific mounts of LoRaMAC packets every to check connection status every reporting interval; If no reply after specific packets, the device will re-join. |
| ADR Mode | Allow the network server to adjust the data rate of the device. |
| Tx Power | Transmit power of the device. |

Note:

1) Please contact sales for device EUI list if there are many units. 2) Please contact sales if you need random App keys before purchase. 3) Select OTAA mode if you use Milesight IoT cloud to manage devices. 4) Only OTAA mode supports rejoin mode.

LoRaWAN Frequency Settings:

Go to Setting->LoRaWAN Settings of ToolBox App to select the supported frequency and select channels to send uplinks. Make sure the channels match the LoRaWAN gateway.

Support Frequency: **EU868**

| <input type="checkbox"/> | Index | Frequency/MHz | Min. Data rate | Max. Data rate |
|-------------------------------------|-------|---------------|----------------|----------------|
| <input checked="" type="checkbox"/> | 0 | 868.1 | 1.57 Mbps | 1.57 Mbps |
| <input checked="" type="checkbox"/> | 1 | 868.2 | 1.57 Mbps | 1.57 Mbps |
| <input checked="" type="checkbox"/> | 2 | 868.3 | 1.57 Mbps | 1.57 Mbps |
| <input type="checkbox"/> | 3 | 8 | 1.57 Mbps | 1.57 Mbps |
| <input type="checkbox"/> | 4 | 8 | 1.57 Mbps | 1.57 Mbps |
| <input type="checkbox"/> | 5 | 8 | 1.57 Mbps | 1.57 Mbps |
| <input type="checkbox"/> | 6 | 8 | 1.57 Mbps | 1.57 Mbps |
| <input type="checkbox"/> | 7 | 8 | 1.57 Mbps | 1.57 Mbps |

If the frequency is one of CN470/AU915/US915, you can enter the index of the channel that you want to enable in the input box, making them separated by commas.

Examples:

1, 40: Enabling Channel 1 and Channel 40

1-40: Enabling Channel 1 to Channel 40

1-40, 60: Enabling Channel 1 to Channel 40 and Channel 60

All: Enabling all channels Null: Indicates that all channels are disabled

Support Frequency: **AU915**

Enabled Channel Index: **0-71**

| Channel Index | Frequency/MHz | Channel Spacing/MHz | BW/MHz |
|---------------|---------------|---------------------|--------|
| 0 - 15 | 915.2 - 915.2 | 0.2 | 125 |
| 16 - 31 | 915.4 - 915.4 | 0.2 | 125 |
| 32 - 47 | 915.6 - 915.6 | 0.2 | 125 |
| 48 - 63 | 915.8 - 915.8 | 0.2 | 125 |
| 64 - 71 | 915.9 - 915.9 | 1.6 | 500 |

Note:

For the -868M model, the default frequency is EU868;

For the -915M model, the default frequency is AU915.

Basic Settings

Go to "Device->Setting->General Settings of ToolBox App to change the reporting interval, etc.

Reporting Interval: **1** min

Temperature Unit: **°C**

Change Password: ☐

| Parameters | Description |
|--------------------|--|
| Reporting Interval | Reporting interval of transmitting data to a network server.Default: 600s |
| Temperature Unit | Change the temperature unit displayed on the ToolBox Note 1) The temperature unit in the reporting package is fixed as °C. 2) Please modify the threshold settings if the unit is changed. |
| Change Password | Change the password for ToolBox App or software to read/write this device. |

Advanced Settings

Calibration Settings

The toolBox supports numerical calibration for all items. Go to Device->Setting->Calibration Settings of ToolBox App to type the calibration value and save, the device will add the calibration value to the raw value.

Temperature Calibration ☒

Current Raw Value 0 °C

Calibration Value -1 °C

Final Value -1 °C

Humidity Calibration ☐

Threshold Settings

EM300 series will upload the current data once instantly after the threshold is triggered.

Go to **Device->Setting->Threshold Settings** of ToolBox App to enable the threshold settings and input the threshold.

Temperature ☒

Over 0 °C

Below 0 °C

Data Collecting Interval 1 min

Maintenance

Upgrade

1. Download firmware from the Milesight website to your smartphone.
2. Open Toolbox App and click "Browse" to import firmware and upgrade the device.

Note:

1. Operation on ToolBox is not supported during an upgrade.
2. Only the Android version ToolBox supports the upgrade feature.

| Status | Setting | Maintenance |
|-------------------|------------------|-------------|
| SN | 6136B26167392109 | |
| Model | EM300-ZLD-915M | |
| Firmware Version | V1.1-a1 | |
| Hardware Version | V3.0 | |
| Manual Upgrade | | |
| <div>Browse</div> | | |

Backup

EM300 devices support configuration backup for easy and quick device configuration in bulk. Backup is allowed only for devices with the same model and LoRa frequency band.

1. Go to the “Template” page on the App and save current settings as a template. You can also edit the template file.
2. Select one template file saved in the smartphone and click “Write”, then attach to another device to write configuration.

Template

EM500-UDL-868M_20201124
Last Modified Time: 2020-11-24 17:08:26

EM300-TH-915M_20210112
Last Modified Time: 2021-01-12 14:55:12


New Template

Please enter template name

Temp & Hum Sensor

CancelOK

Note: Slide the template item left to edit or delete the template. Click the template to edit the configurations.

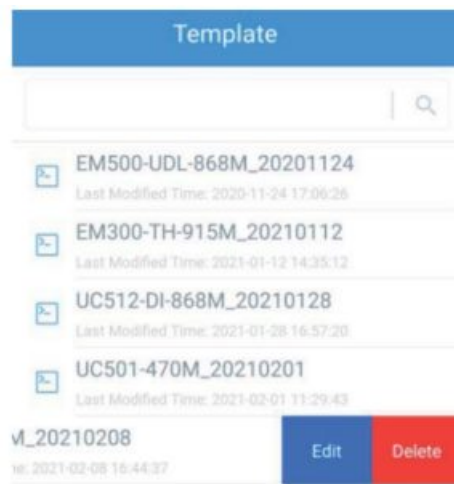


Reset to Factory Default

Please select one of the following methods to reset the device:


Via Hardware: Hold on to the power button (internal) for more than 10s.

Via Toolbox App: Go to “Device->Maintenance” to click “Reset”, then attach smartphone with NFC area to the device to complete the reset.

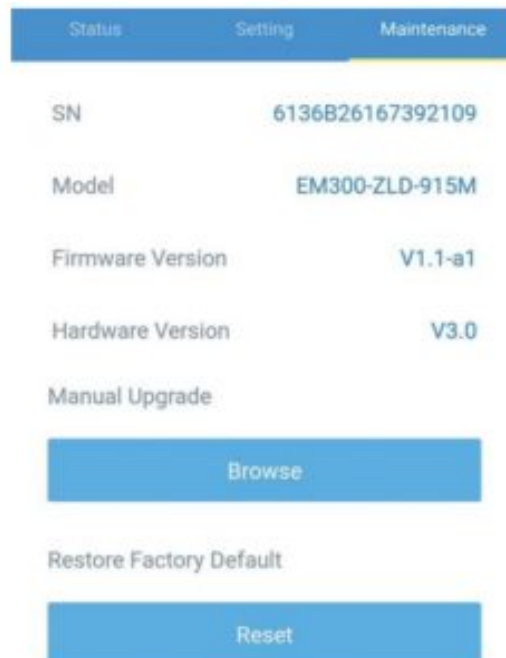


Installation

1. Attach EM300 to the wall and mark the two holes on the wall. The connecting line of two holes must be a horizontal line.
2. Drill the holes according to the marks and screw the wall plugs into the wall.
3. Mount the EM300 to the wall via mounting screws.
4. Cover the mounting screws with screw caps.

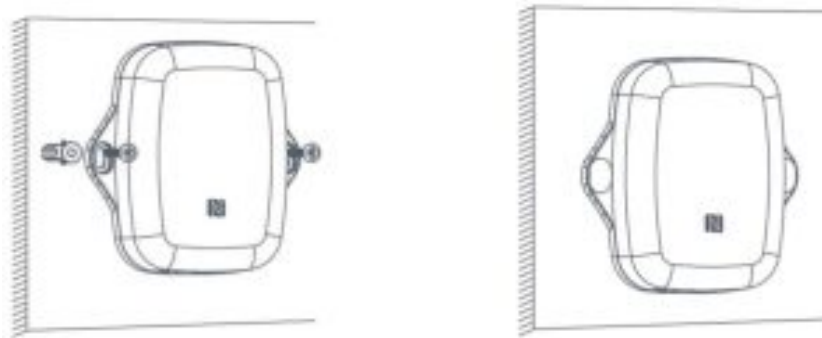

5. For leak detection sensor, install the probe/cable to the place where liquid may leak. For the magnet switch sensor, install the magnet beside the door/window. Note: For the SLD sensor, please ensure the metal pins of the probe are flat on the floor; for the ZLD sensor, the cable can't be twined or accumulated together. The probe or cable of the water leakage sensor should be placed in an area of concern where water from a leak would likely accumulate.

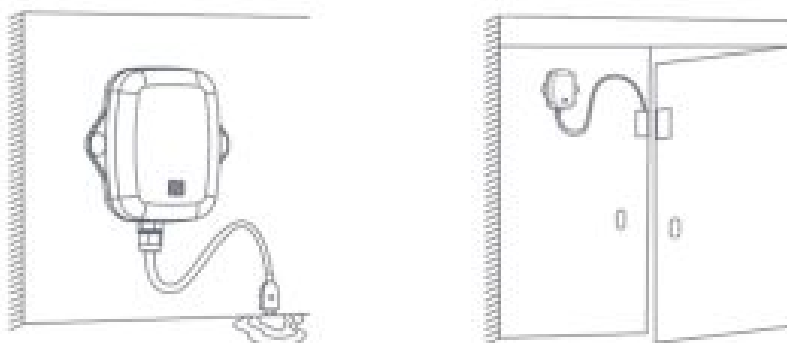


Milesight IoT Cloud Management

EM300 series can be managed by the Milesight IoT Cloud platform. Milesight IoT cloud is a comprehensive platform that provides multiple services including device remote management and data visualization with the easiest operation procedures. Please register a Milesight IoT Cloud account before operating the following steps.

Add a Milesight Gateway


Step 1: Enable gateway embedded network server and "Milesight IoT Cloud" mode in gateway web GUI.

Note: Ensure gateway has accessed the Internet.

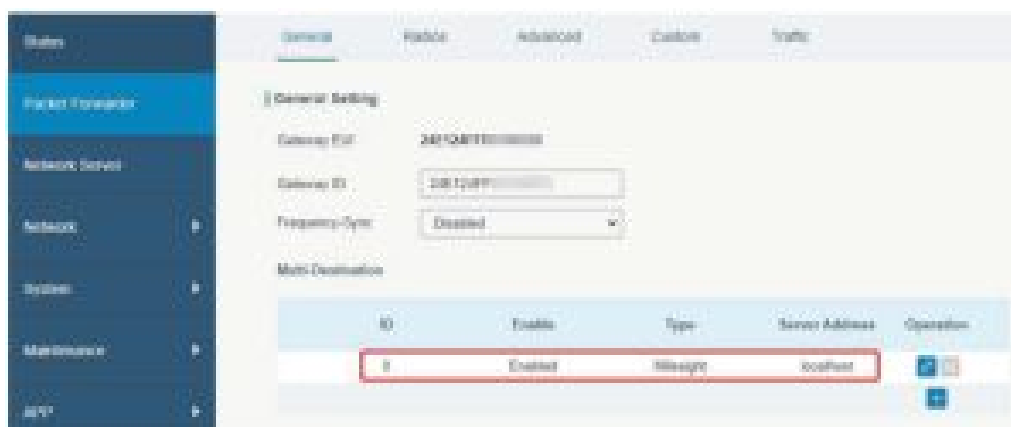



Step 2: Go to “My Devices” page and click “+New Devices” to add a gateway to Milesight IoT Cloud via SN. Gateway will be added under “Gateways” menu.

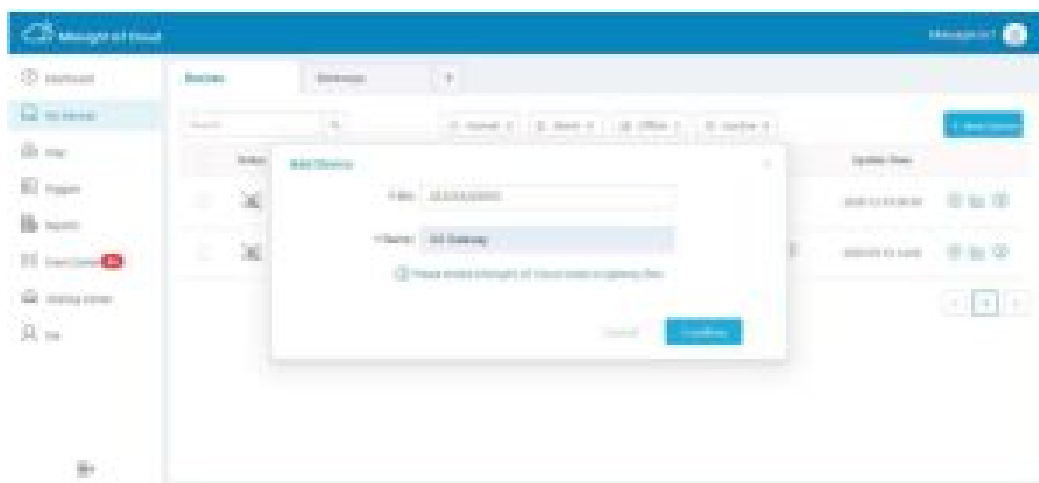

Step 3: Check if gateway is online in Milesight IoT Cloud.



Add EM300 to Milesight IoT Cloud

Step 1: Go to the “My Devices” page and click “+New Devices”. Fill in the SN of the device and select the associated gateway.

Add Device

* SN: 6135A39116331007

* Name: EM300


* Associated Gateway: UG Gateway

* Device EUI: 2A6124130A3B1163

* Application Key: 5572404c096e6b4c6f52613230313823

Cancel Confirm

Step 2: After the device is online in Milesight IoT Cloud, you can check the data via webpage or mobile App and create a dashboard for it.

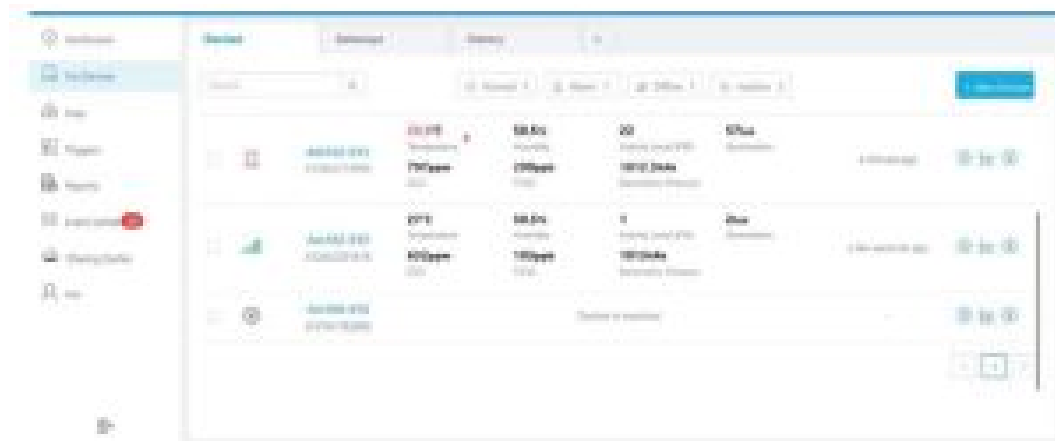

Device Payload

All data are based on the following format(HEX):

| Channel1 | Type 1 | Data 1 | Channel2 | Type2 | Data2 | Channel 3 | |
|----------|--------|---------|----------|--------|---------|-----------|--|
| 1 Byte | 1 Byte | N Bytes | 1 Byte | 1 Byte | M Bytes | 1 Byte | |

For decoder examples please find files on <https://github.com/Milesight-IoT/SensorDecoders>.

Basic Information

EM300 series sensors report basic information of sensors every time joining the network.

| Channel | Type | | Data Example | | | Description |
|---------|-----------------------|----|--------------|--------|----|------------------------------|
| ff | 01(Protocol Version) | | 1 | | | V1 |
| | 08 (Device SN) | 61 | 27 a2 17 | 4 1 | 32 | Device SN is 6127a2174132 |
| | 09 (Hardware Version) | | 140 | | | V1.4 |
| | 0a(Software Version) | | 114 | | | V1.14 |
| | Of(Device Type) | | 0 | | | Class A |

Example:

| ff0901 00 ff 0a 01 02ffOf 00 | | | | | |
|------------------------------|-----------------------------|-----------------|---------|--------------------------|----------------|
| Channel | Type | Value | Channel | Type | Value |
| ff | 09 (Hardware version) | 0100 (V1.0) | ff | 0a (Software version) | 0102 (V1.2) |
| Channel | Type | Value | | | |
| ff | Of (Device Type) | 00 (Class A) | | | |

Sensor Data

EM300 series sensors report sensor data according to reporting intervals (10min by default). Battery level is reported every 6 hours.

| Channel | Type | Description |
|---------|--------------------------|--|
| 1 | 75(Battery Level) | UINT8, Unit: % |
| 3 | 67 (Temperature) | INT16, Unit: °C |
| 4 | 68(Humidity) | INT8, Unit: % |
| 5 | 00(Water Leakage Status) | 00=>Not water leakage 01=>Water leakage |
| 6 | 00(Magnet Status) | 00=>Magnet switch closed 01=>Magnet switch open |

Example:

| 01 75 64 03 67 10 01 04 68 71 05 00 01 | | | | | |
|--|------------------|----------------------------------|---------|---------------------|---|
| Channel | Type | Value | Channel | Type | Value |
| 1 | 75 (Battery) | 64 => 100% | 3 | 67 (Temperature) | 10 01 => 01 10 = 272 Temp=272*0.1=27.2°C |
| Channel | Type | Value | Channel | Type | Value |
| 4 | 68 (Humidity) | 71=>113 Hum=113* 0.5=56.5% | 5 | 0 | 01=>Water leakage |



Downlink Commands

EM300 series sensors support downlink commands to configure the device. Application port is 85 by default.

| Channel | Type | Data Example | Description |
|---------|----------------------------|--------------|------------------------|
| ff | 03(Set Reporting Interval) | b0 04 | b0 04 => 04 b0 = 1200s |

-END-

Documents / Resources

| | |
|---|---|
|  | Milesight EM300 Series Environment Monitoring Sensor [pdf] User Guide EM300, 2AYHY-EM300, 2AYHYEM300, EM300 Series Environment Monitoring Sensor, Environment Monitoring Sensor, Monitoring Sensor, Sensor |
|  | Milesight EM300 Series Environment Monitoring Sensor [pdf] User Guide EM300 Series Environment Monitoring Sensor, EM300 Series, Environment Monitoring Sensor, Monitoring Sensor, Sensor |

References

- [GitHub - Milesight-IoT/SensorDecoders](#)