



# MOXA MGate MB3660 Series Modbus TCP Gateways Installation Guide

[Home](#) » [MOXA](#) » MOXA MGate MB3660 Series Modbus TCP Gateways Installation Guide 



## MGate MB3660 Series Quick Installation Guide

### Contents

- [1 Overview](#)
- [2 Package Checklist](#)
- [3 Optional Accessories](#)
- [4 Hardware Introduction](#)
- [5 AC-DB9 Models](#)
- [6 DC-DB9 Models](#)
- [7 AC-DB9-I Models](#)
- [8 AC-RJ45 Models](#)
- [9 LED Indicators](#)
- [10 Hardware Installation Procedure](#)
  - [10.1 Wall or Cabinet Mounting](#)
- [11 Software Installation Information](#)
- [12 Pin Assignments](#)
  - [12.1 DB9 Male \(Serial Ports\)](#)
- [13 RJ45 \(Serial Ports\)](#)
- [14 Relay Output](#)
- [15 Specifications](#)
- [16 Documents / Resources](#)
  - [16.1 References](#)
- [17 Related Posts](#)

## Overview

The MGate MB3660 (MB3660-8 and MB3660-16) series gateways are 8 and 16-port redundant Modbus gateways that convert between the Modbus TCP and Modbus RTU/ASCII protocols. The gateways come with built-in dual AC or DC power inputs for power redundancy and have dual Ethernet ports (with different IPs) for network redundancy.

The MGate MB3660 series gateways provide not only serial-to-Ethernet communication, but also serial (Master)-to serial (Slave) communication, and can be accessed by up to 256 TCP master/client devices, or connected to 128 TCP slave/server devices.

Each serial port can be configured individually for Modbus RTU or Modbus ASCII operation and for different baud rates, allowing both types of networks to be integrated with Modbus TCP through one Modbus gateway.

## Package Checklist

Before installing the MGate MB3660 series gateway, verify that the package contains the following items:

- 1 MGate MB3660-8 or MB3660-16 gateway
- 1 RJ45-to-DB9 female serial cable for console setting
- 2 L-shaped brackets for wall mounting
- 2 AC power cords (for AC models)
- Quick installation guide
- Warranty card


## Optional Accessories

- Mini DB9F-to-TB: DB9 female to terminal block connector
- CBL-RJ45M9-150: RJ45 to DB9 male serial cable, 150 cm
- CBL-RJ45F9-150: RJ45 to DB9 female serial cable, 150 cm
- CBL-F9M9-20: RJ45 to DB9 female serial cable, 150 cm
- CBL-RJ45SF9-150: RJ45 to DB9 female serial shielded cable, 150 cm
- WK-45-01: Wall-mounting kit, 2 L-shaped plates, 6 screws, 45 x 57 x 2.5 mm
- PWC-C13AU-3B-183: Power cord with Australian (AU) plug, 183 cm
- PWC-C13CN-3B-183: Power cord with three-prong China (CN) plug, 183 cm
- PWC-C13EU-3B-183: Power cord with Continental Europe (EU) plug, 183 cm
- PWC-C13JP-3B-183: Power cord with Japan (JP) plug, 7 A/125 V, 183 cm
- PWC-C13UK-3B-183: Power cord with United Kingdom (UK) plug, 183 cm
- PWC-C13US-3B-183: Power cord with the United States (US) plug, 183 cm
- CBL-PJTB-10: Non-locking barrel plug to the bare-wire cable


Notify your sales representative if any of the above items are missing or damaged.

## Hardware Introduction


As shown in the following figures, the MGate MB3660-8 has 8 DB9/RJ45 ports for transmitting serial data, and the MGate MB3660-16 has 16 DB9/RJ45 ports for transmitting serial data. The MGate MB3660I series gateways provide 2 kV serial port isolation protection.

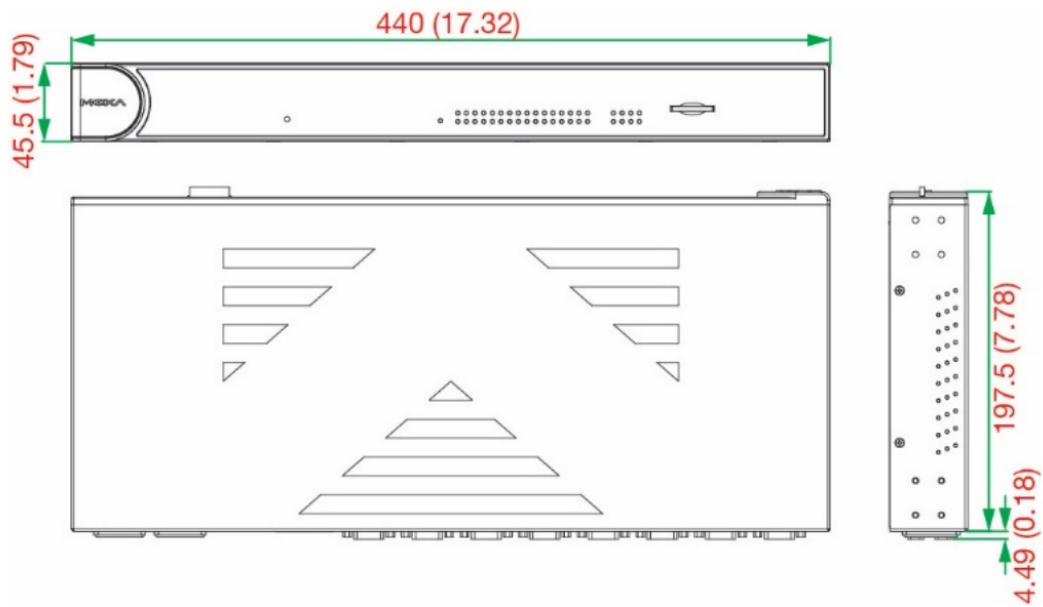

## AC-DB9 Models

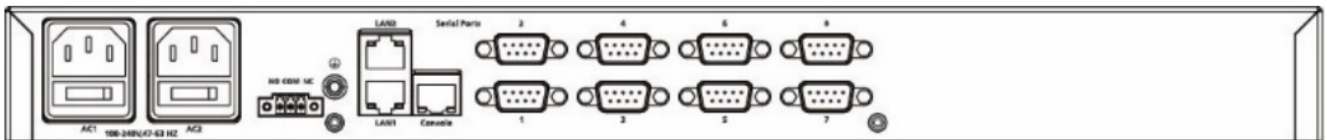


MGate MB3660-8-2AC

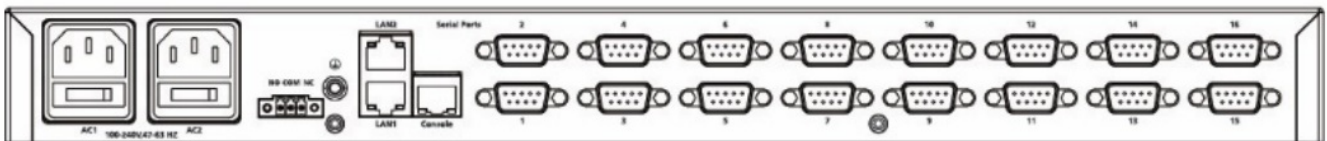


MGate MB3660-16-2AC

## DC-DB9 Models

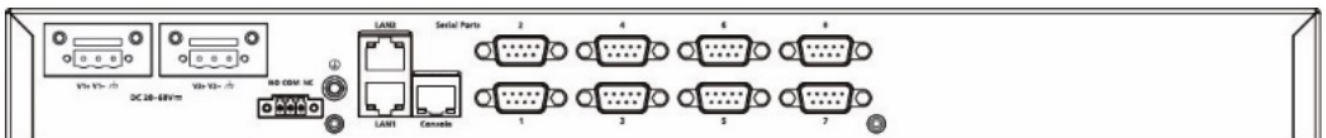


MGate MB3660-8-2DC

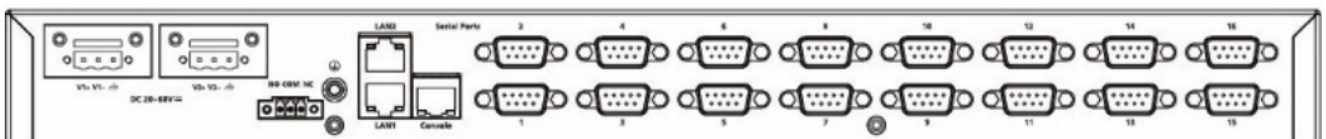


MGate MB3660-16-2DC

## AC-DB9-I Models

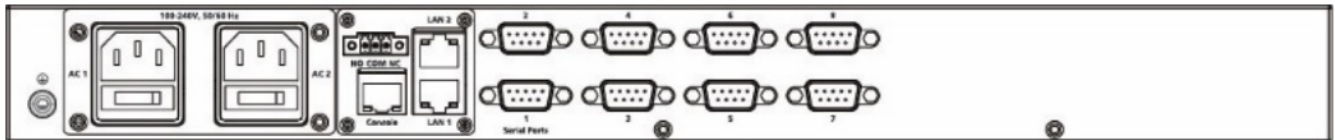

MGate MB3660I-8-2AC

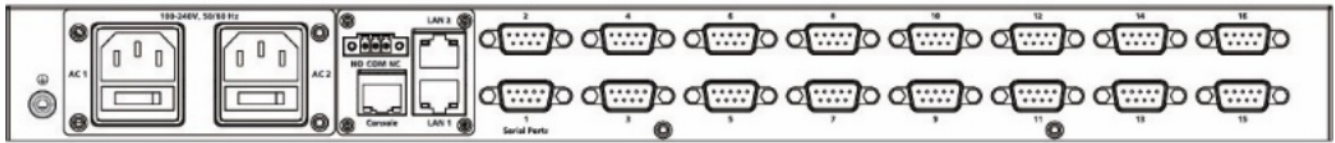

MGate MB3660I-16-2AC

## AC-RJ45 Models

**Reset Button**— Press the Reset button continuously for 5 sec to load factory defaults

The reset button is used to load factory defaults. Hold the reset button down for five seconds using a pointed object such as a straightened paper clip. Release the reset button when the Ready LED stops blinking.

## LED Indicators

Name	Color	Function
PWR 1, PWR 2	Red	Power is being supplied to the power input
	Off	The power cable is not connected
Ready	Red	Steady on: Power is on and the unit is booting up
		Blinking: IP conflict, DHCP, or BOOTP server did not respond properly, or a relay output occurred
	Green	Steady on: Power is on and the unit is functioning normally
		Blinking: The unit is responding to the locate function
	Off	Power is off, or power error condition exists
Tx	Green	The serial port is transmitting data
Rx	Amber	The serial port is receiving data
LAN 1, LAN 2	Green	Indicates 100 Mbps Ethernet connection
	Amber	Indicates 10 Mbps Ethernet connection
	Off	Ethernet cable is disconnected

## Hardware Installation Procedure


**STEP 1:** After unpacking the unit, use an Ethernet cable to connect the unit to the network.

**STEP 2:** Connect your device to the desired port on the unit.

**STEP 3:** Place or mount the unit. The unit may be placed on a horizontal surface such as a desktop or mounted on the wall.

**STEP 4:** Connect the power supply to the unit.

## Wall or Cabinet Mounting

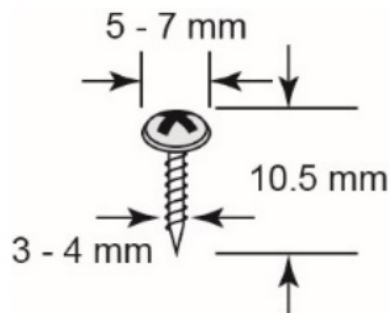

Two metal plates are provided for mounting the unit on a wall or inside a cabinet. Attach the plates to the unit's rear panel with screws. With the plates attached, use screws to mount the unit on a wall. The heads of the screws should be 5.0 to 7.0 mm in diameter, the shafts should be 3 to 4 mm in diameter, and the length of the screws should be more than 10.5 mm.

## Termination Resistor and Adjustable Pull High/Low Resistors

In some critical environments, you may need to add termination resistors to prevent the reflection of serial signals. When using termination resistors, it is important to set the pull high/low resistors correctly so that the electrical signal is not corrupted. The MGate MB3660 uses DIP switches to set the pull high/low resistor values for each serial port. To expose the DIP switches located on the back of the PCB, first, remove the screws holding the DIP switch cover in place, and then remove the cover. The sequence from right to left is port 1 to port 16.

**To add a 120  $\Omega$  termination resistor, set switch 3 on the port's assigned DIP switch to ON; set switch 3 to OFF (the default setting) to disable the termination resistor.**

**To set the pull high/low resistors to 150 K $\Omega$ , set switches 1 and 2 on the port's assigned DIP switch to OFF.** This is the default setting. To set the pull high/low resistors to 1 K $\Omega$ , set switches 1 and 2 on the port's assigned DIP switch to ON.

### Pull High/low Resistors for the RS-485 port

#### Default

SW	1	2	3
	Pull High	Pull Low	Terminator
ON	1 K $\Omega$	1 K $\Omega$ )	1200
OFF	150 K $\Omega$	150 K $\Omega$	—

## Software Installation Information

To configure your MGate MB3660, connect the gateway's Ethernet port directly to your computer's Ethernet port and then log in from a web browser. The default IP addresses of LAN1 and LAN2 are 192.168.127.254 and 192.168.126.254, respectively.

You can download the User's Manual and Device Search Utility (DSU) from Moxa's website: [www.moxa.com](http://www.moxa.com). Please refer to the User's Manual for additional details on using the DSU.

The MGate MB3660 also supports login via a web browser.


**Default IP address:** 192.168.127.254/192.168.126.254

**Default account:** admin

**Default password:** moxa


## Pin Assignments

### RJ45 (LAN, Console)

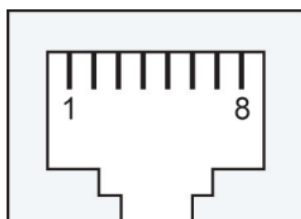


Pin	LAN	Console (RS-232)
1	Tx+	DSR
2	Tx-	RTS
3	Rx+	GND
4	–	TxD
5	–	RxD
6	Rx-	DCD
7	–	CTS
8	–	DTR

#### DB9 Male (Serial Ports)

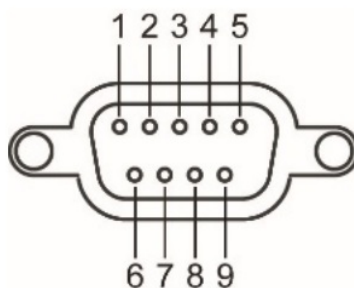



Pin	RS-232	RS-422/ RS-485-4W	RS-485-2W
1	DCD	TxD-(A)	–
2	RxD	TxD+(B)	–
3	TxD	RxD+(B)	Data+(B)
4	DTR	RxD-(A)	Data-(A)
5	GND	GND	GND
6	DSR	–	–
7	RTS	–	–
8	CTS	–	–
9	–	–	–

RJ45 (Serial Ports)

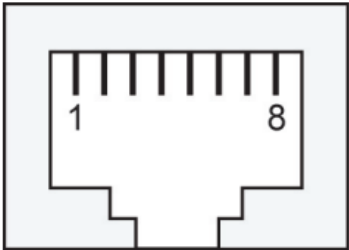

Pin	RS-23	RS-422/ RS-485-4W	RS-485-2W
1	DSR	–	–
2	RTS	TxD+(B)	–
3	GND	GND	GND
4	TxD	TxD-(A)	–
5	RxD	RxD+(B)	Data+(B)
6	DCD	RxD-(A)	Data-(A)
7	CTS	–	–
8	DTR	–	–

Relay Output

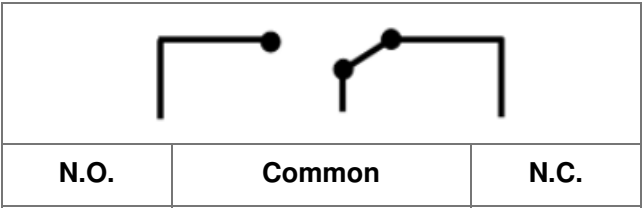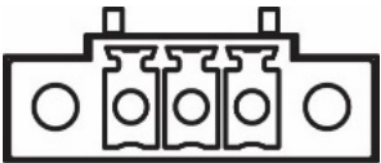

Specifications

Power Input	Dual 20 to 60 VDC (for DC models); or dual 100 to 240 VAC, 47 to 63 Hz (for AC models)
Power Consumption MGate MB3660-8-2AC MGate MB3660-8-2DC MGate MB3660-16-2AC MGate MB3660-16-2DC MGate MB3660-8-J-2AC MGate MB3660-16-J-2AC MGate MB3660I-8-2AC MGate MB3660I-16-2AC	144 mA/110 V, 101 mA/220 V 312 mA/24 V, 156 mA/48 V 178 mA/110 V, 120 mA/220 V 390 mA/24 V, 195 mA/48 V 111 mA/110 V, 81 mA/220 V 133 mA/110 V, 92 mA/220 V 100-240 VAC, 50/60 Hz, 310 mA (max.) 100-240 VAC, 50/60 Hz, 310 mA (max.)
Operating Temperature	0 to 60°C (32 to 140°F)
Storage Temperature	-40 to 85°C (-40 to 185°F)
Operating Humidity	5 to 95% RH
Dimensions (W x D x H)	440 x 197.5 x 45.5 mm (17.32 x 7.78 x 1.79 in)
Fault Relay Circuit	3-pin circuit with a current-carrying capacity of 2 A @ 30 VDC

**Version 2.2, January 2021**  
**Technical Support Contact Information**  
[www.moxa.com/support](http://www.moxa.com/support)



**P/N: 1802036600013**

## Documents / Resources

	<p><b><a href="#">MOXA MGate MB3660 Series Modbus TCP Gateways</a></b> [pdf] Installation Guide</p> <p>MGate MB3660 Series Modbus TCP Gateways</p>
--	--

## References

- [Moxa - Your Trusted Partner in Automation](#)
- [Moxa - Support](#)