



MOXA UC-3400A Series Arm Based Computers Installation Guide

[Home](#) » [MOXA](#) » MOXA UC-3400A Series Arm Based Computers Installation Guide 

MOXA UC-3400A Series Arm Based Computers Installation Guide

UC-3400A Series

Quick Installation Guide

Version 1.1, February 2025

Technical Support Contact Information
www.moxa.com/support



© 2025 Moxa Inc. All rights reserved.

P/N: 1802034000002



www.moxa.com/support

Contents

- 1 Overview
- 2 Package Checklist
- 3 Panel Layouts
- 4 Dimensions
- 5 LED Indicators
- 6 Installing the UC-3400A
- 7 Connector Descriptions
- 8 Accessing the UC-3400A Using a PC
- 9 Certification Information
- 10 Documents / Resources
 - 10.1 References

Overview

Moxa's UC-3400A Series computers can be used as edge gateways in the field for data pre-processing and

transmission, as well as for other embedded data-acquisition applications. The series includes a diverse set of models, each supporting different wireless options and protocols.

The UC-3400A's advanced heat-dissipation design makes it suitable for use in temperatures ranging from -40 to 70°C. In fact, the Wi-Fi and LTE connections can be used simultaneously in both cold and hot environments, allowing you to maximize data pre-processing and transmission capabilities of your applications in harsh operating environments. The UC-3400A comes equipped with Moxa Industrial Linux, a high-performance industrial-grade Linux distribution with long-term support that is developed by Moxa.

Package Checklist

Before installing the UC-3400A, verify that the package contains the following items:

- 1 x UC-3400A Arm-based computer
- 1 x Quick installation guide (printed)
- 1 x Warranty card


NOTE

Notify your sales representative if any of the above items are missing or damaged.


Panel Layouts

The following figures show the panel layouts of the UC-3400A models:


UC-3420A-T-LTE

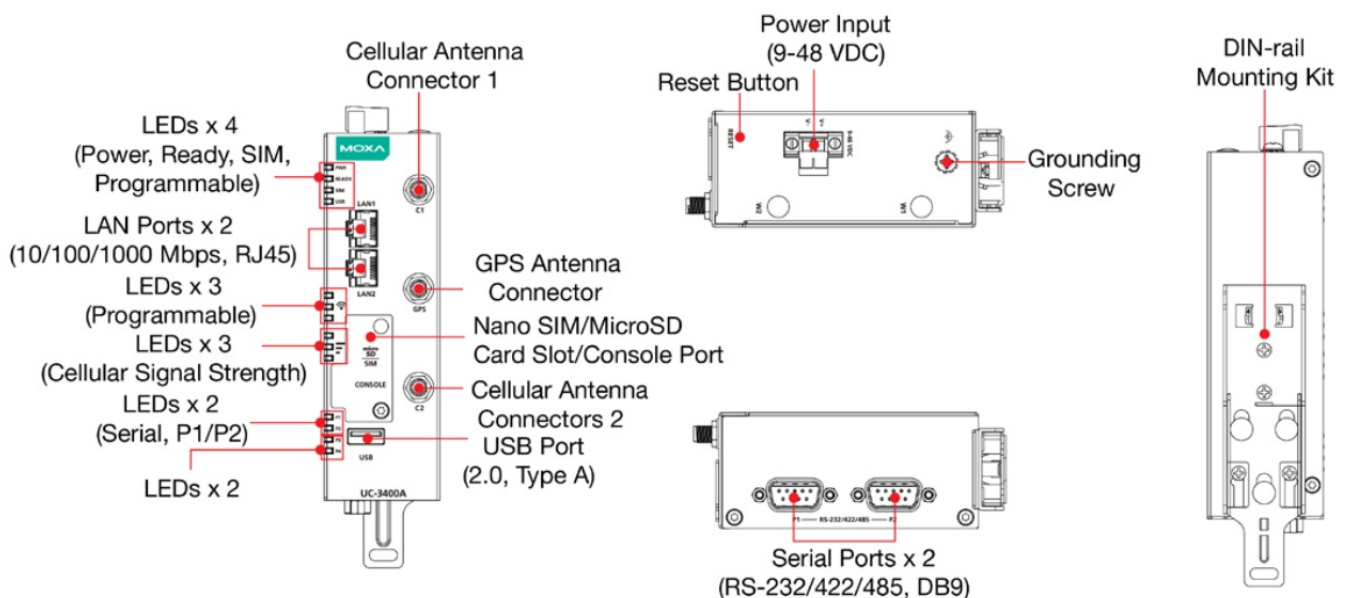


UC-3424A-T-LTE

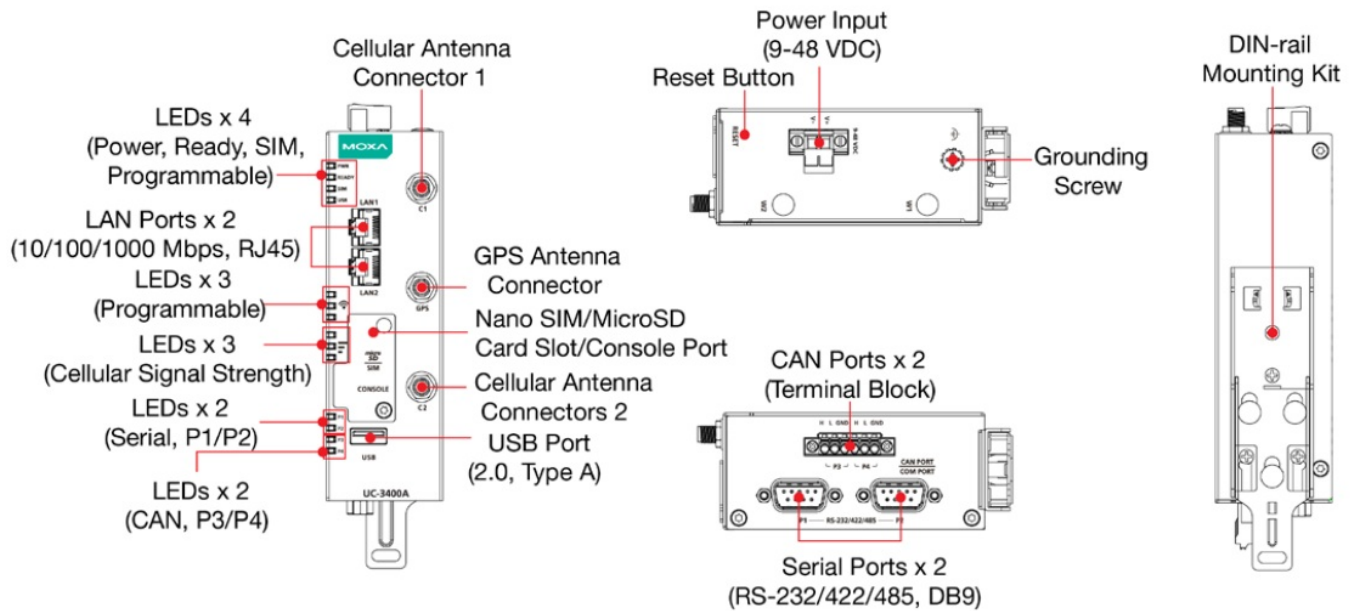

UC-3430A-T-LTE-WiFi

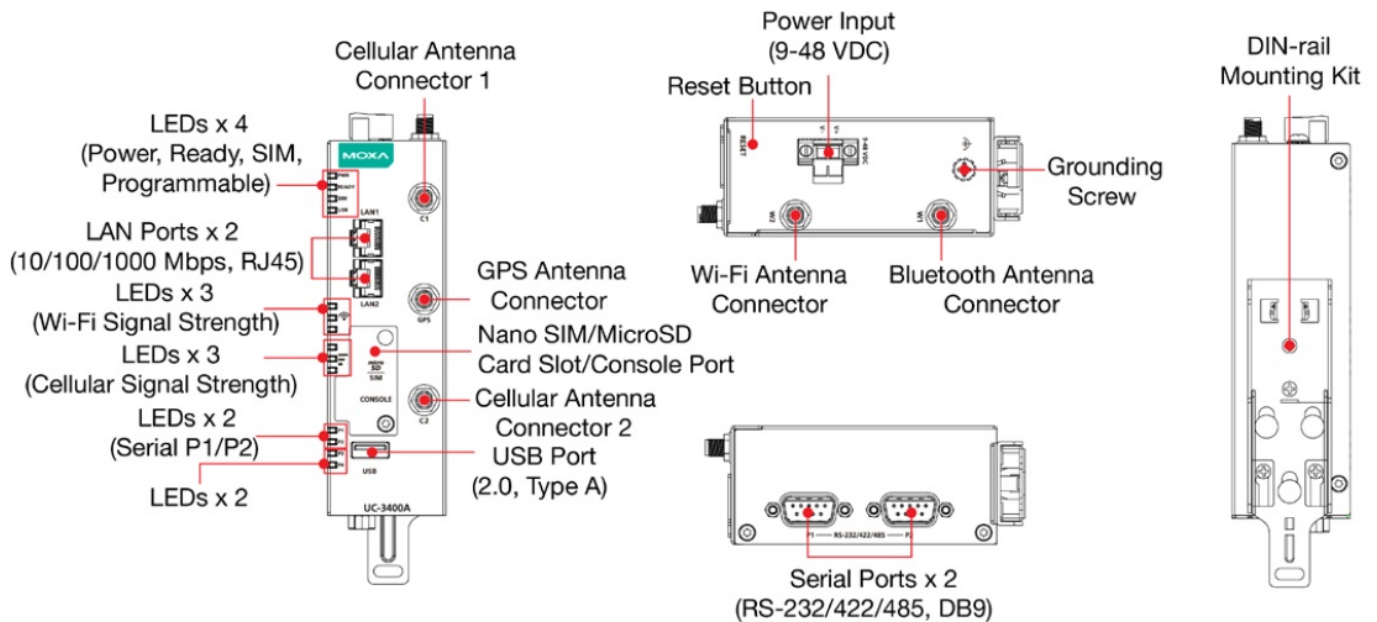


UC-3434A-T-LTE-WiFi

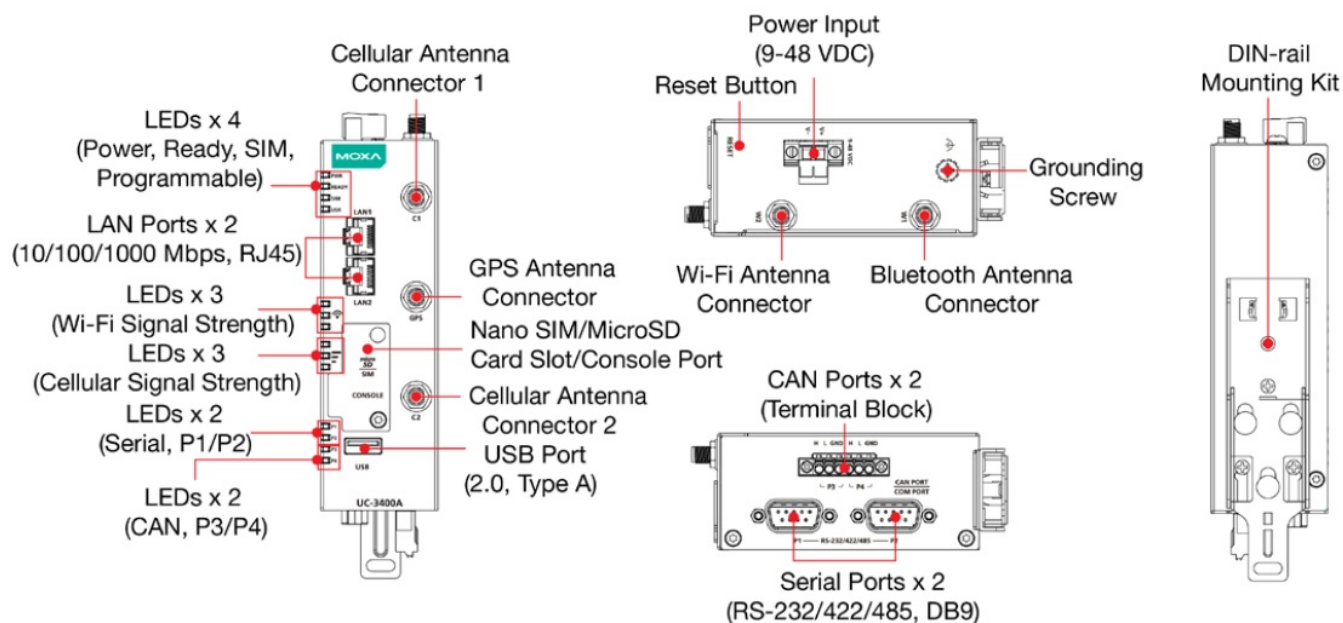



Dimensions

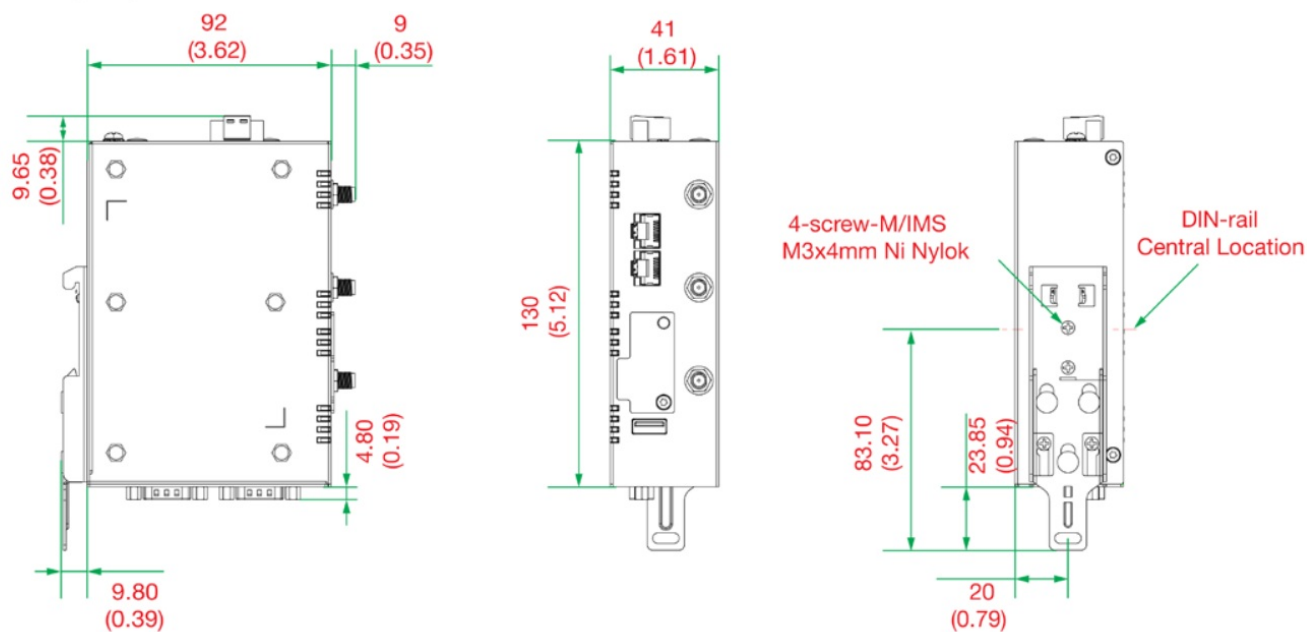Unit: mm (inch)



LED Indicators

LED Name	Color	Status	Function
PWR	Green	Steady on	Power is on
	Off		Power is off
READY	Green	Steady on	System is ready for use
		Blinking	System is booting up
	Red	Steady on	System initialization failed
	Off		System is still in the bootloader stage, kernel not up yet
SIM	Green	Steady on	SIM card inserted AND SIM2 is the active slot
	Yellow	Steady on	SIM card inserted AND SIM1 is the active slot
	Off		SIM card not detected
USR	Green/ Yellow	Steady on/blinking /off	User programmable
LAN1/ LAN2	Green	Steady	10/100 Mbps link established
		Blinking	Receiving or transmitting data
	Yellow	Steady	1000 Mbps link established
		Blinking	Receiving or transmitting data
	Off		Ethernet port is not active
 (Wi-Fi Signal Strength)	Green	3 LEDs Steady on	Signal strength at 61% to 100%
		2 LEDs Steady on	Signal strength at 41% to 60%
		1 LED Steady on	Signal strength at 21% to 40%
		1 LED Blinking	Signal strength at 0% to 20%
	Off		No signal
	*For UC-3420 and UC-3424 models, the WI-FI signal strength LEDs are user programmable.		
 (Cellular Signal Strength)	Green	3 LEDs Steady on	Signal is good
		2 LEDs Steady on	Signal is moderate/ok
		1 LED Steady on	Signal is poor
		Off	No signal
P1/P2 (Serial Port)	Green	Blinking	Serial port is transmitting data
	Yellow	Blinking	Serial port is receiving data
	Off		Serial port is not active
P3/P4 (CAN Port)	Light Yellow	Blinking	CAN port is transmitting data
	Yellow	Blinking	CAN port is receiving data
	Off		CAN port is not active


Installing the UC-3400A

The UC-3400A can be mounted on to a DIN rail or on to a wall. The DIN-rail mounting kit is attached by default. To order a wall-mounting kit, contact a Moxa sales representative.

DIN-rail Mounting

To mount the UC-3400A on to a DIN rail, do the following:


1. Pull down the slider of the DIN-rail bracket located at the back of the unit.
2. Insert the top of the DIN rail into the slot just below the upper hook of the DIN-rail bracket.
3. Latch the unit firmly on to the DIN rail as shown in the illustrations below.
4. Once the computer is mounted properly, you will hear a click and the slider will rebound back into place automatically.

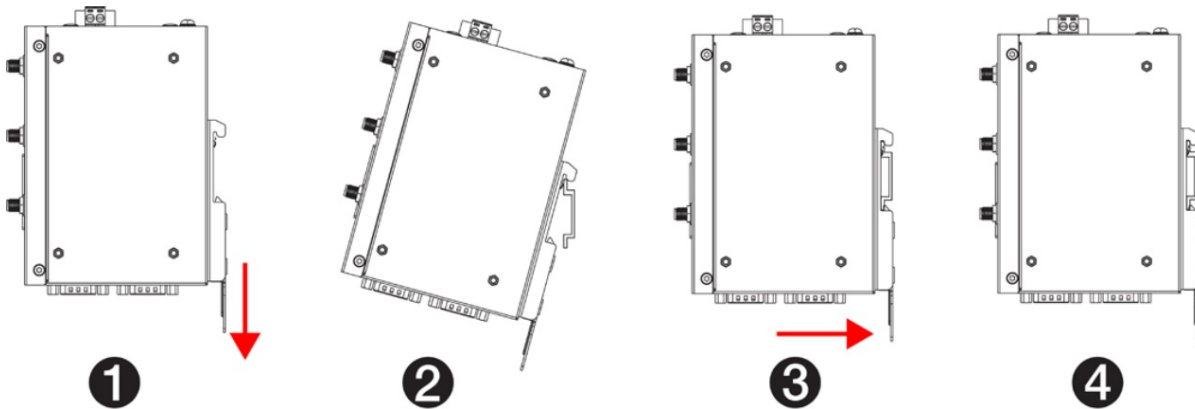

Wall Mounting (optional)

The UC-3400A can also be wall mounted. The wall-mounting kit needs to be purchased separately. Refer to the product datasheet for information on the wall-mounting kit to be purchased. For the mounting dimensions, refer to the figure below:

Unit: mm (inch)

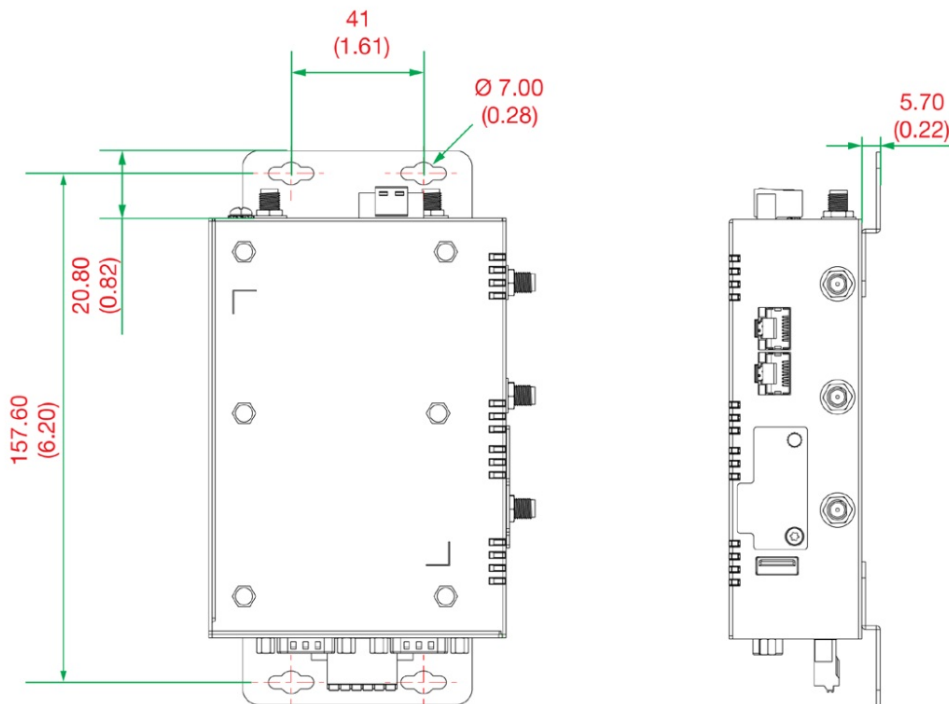


To mount the computer on to a wall, do the following:

1. Attach two wall-mounting brackets with four **M3 x 5 mm** screws on the right side panel of the computer as

indicated in the figure.

2. Use another four screws to fasten the computer on to a wall or a cabinet.

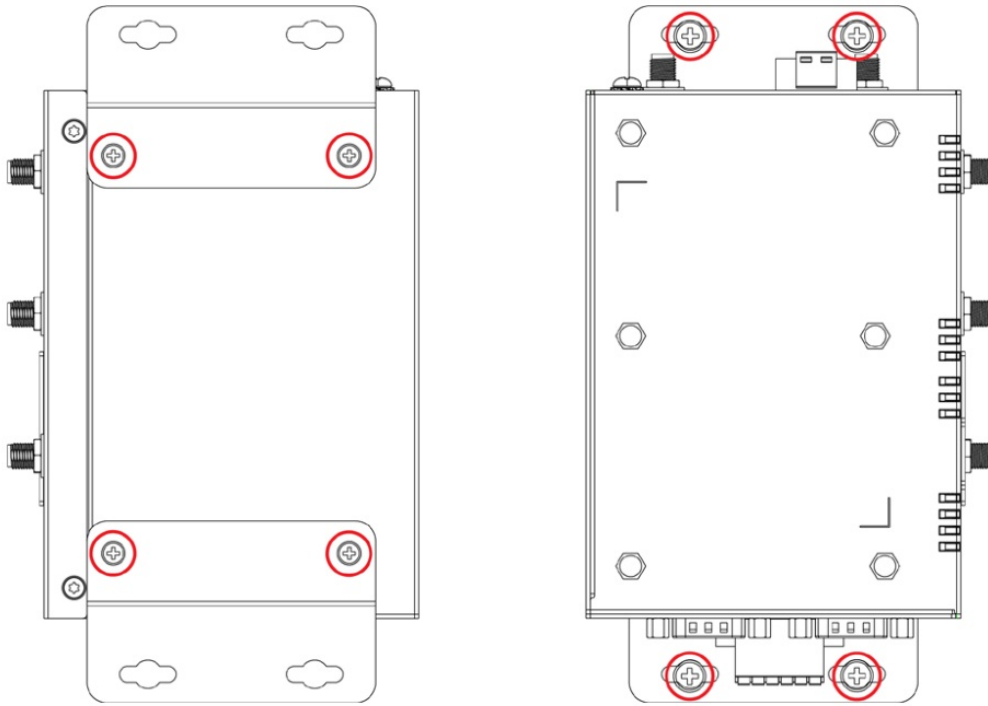

Recommended Torque: $4.5 \pm 0.5 \text{ kgf-cm}$

The additional four screws are not included in the wall-mounting kit and must be purchased separately. Refer to the following specifications for the additional screws to be purchased.

Head Type: Pan/Dome

Head Diameter:


$5.2 \text{ mm} < \text{Outer Diameter (OD)} < 7.0 \text{ mm}$

Length: $> 6 \text{ mm}$

Thread Size: M3 x 0.5P




3. Push the computer to the left to ensure the computer is securely fixed to the mounting surface.

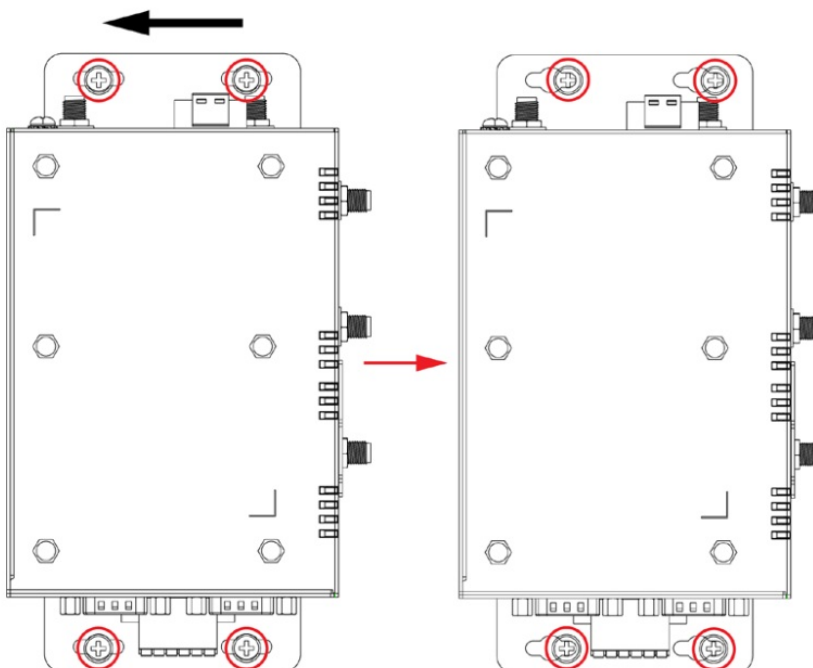

Connector Descriptions

Power Connector

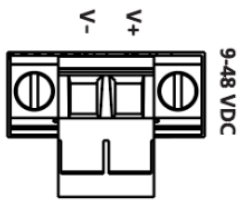

Connect the power jack to the terminal block located on the top panel, and then connect the power adapter to the power jack. Use a 12 to 24 AWG wire and secure the plug by screws with a minimum torque value of 0.5 N-m (4.4253 lb-in).

After the power is connected, it takes about 10 to 30 seconds for the system to boot up. Once the system is ready, the READY LED will light up.



ATTENTION

The wiring for the input terminal block must be done by a skilled person. The wire type should be copper (Cu).



ATTENTION

The product is intended to be supplied by a UL Listed Power Unit marked "L.P.S." (or "Limited Power Source") and rated 9 to 48 VDC, 1.2 A (min.), Tma = 70°C. If you need further assistance with purchasing the power source, contact Moxa for further information.

If you are using a Class I adapter, the power cord must be connected to a socket-outlet with an earthing connection.

Grounding the Computer

Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI).


The grounding screw or GS (M4-type screw) is located on the top panel. When you connect to the GS wire, the noise is routed directly from the metal chassis to the ground point.



NOTE The grounding wire must have a minimum diameter of 3.31 mm².

Ethernet Port


The 10/100/1000 Mbps Ethernet port uses the RJ45 connector. The pin assignment of the port is shown below:

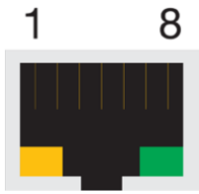

Pin	10/100 Mbps	1000 Mbps
1	ETx+	TRD(0)+
2	ETx-	TRD(0)-
3	ERx+	TRD(1)+
4	–	TRD(2)+
5	–	TRD(2)-
6	ERx-	TRD(1)-
7	–	TRD(3)+
8	–	TRD(3)-


Serial Port

The serial port uses the DB9 male connector. It can be configured by software for the RS-232, RS-422, or RS-485 mode. The pin assignment of the port is shown below:

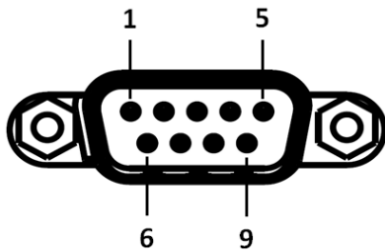

Pin	RS-232	RS-422	RS-485
1	DCD	TxD-(A)	–
2	RxD	TxD+(A)	–
3	TxD	RxD+(B)	Data+(B)
4	DTR	RxD-(A)	Data-(A)
5	GND	GND	GND
6	DSR	–	–
7	TRS	–	–
8	CTS	–	–
9	–	–	–

CAN Port

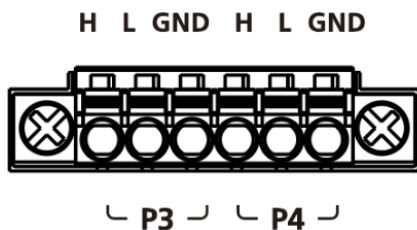

The UC-3424A and UC-3434A models come with two CAN ports which use the terminal block connector and are compatible with the CAN 2.0A/B standard.


SIM Card Slot

The UC-3400A comes with a Nano-SIM card slot, a console port, and a microSD slot on the front panel.


To install SIM cards, do the following:

1. Remove the screw on the slot cover.

The UC-3400A comes with a Nano SIM card slot.

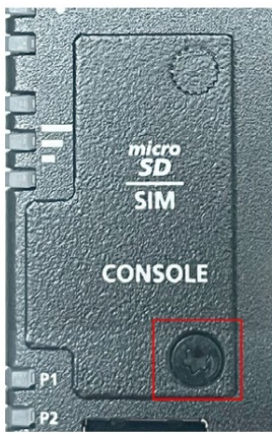

2. Push the SIM card tray in and then pull it out to remove it.

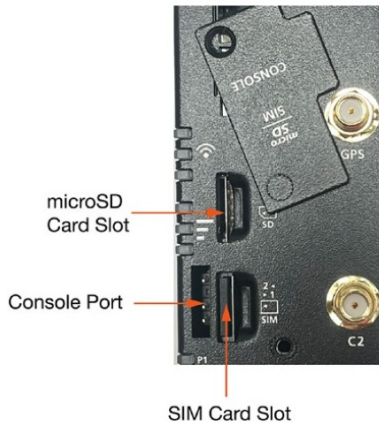

ATTENTION

When the tray slot is open, ensure that LAN2 is not connected to the network.

3. The SIM card tray can install two SIM cards one on each side of the tray.



4. Install the SIM card in SIM1 slot. Install the other SIM card in SIM2 on the other side of the tray.



5. Insert the tray into the SIM card slot and secure the cover to the slots.

To remove the SIM cards, push the tray in before releasing it.

Console Port

The console port located on the left side of the SIM card slot is a RS- 232 port that can connect to a 4-pin pin header cable. You can use this port for debugging or firmware upgrade.



Pin	Signal
1	TXD
2	RXD
3	–
4	GND

microSD Slot

There is a microSD slot located above the SIM card slot. Insert the microSD card into the slot. To remove the card, push it in first and release it.

USB Port

The USB port is a type-A USB 2.0 port, which can be used to connect to a type-A USB storage device.

NOTE

It is recommended that the peripheral devices installed should be placed at least 25 mm away from the UC-3400.

Connecting Antennas

The UC-3400A comes with various antenna connectors to the following interfaces.

Cellular



The UC-3400A models come with a built-in cellular module. Connect the antenna to the SMA connector with the cellular mark to enable the use of the cellular function.

GPS



The UC-3400A models come with a built-in GPS module. Connect the antenna to the SMA connector with the GPS mark to enable the use of the GPS function.

Wi-Fi



The UC-3430A-T-LTE-WiFi and UC-3434A-T- LTE-WiFi models come with a built-in Wi-Fi module. Connect the antenna to the RP-SMA connector marked **W2** to enable the use of the Wi-Fi function.

Bluetooth

Bluetooth



The UC-3430A-T-LTE-WiFi and UC-3434A-T- LTE-WiFi models come with a built-in Bluetooth module. Connect the antenna to the RP-SMA **W1** connector to enable the use of the Bluetooth function.

Real-time Clock

The real-time clock is powered by a lithium battery. We strongly recommend that you do not replace the lithium battery on your own. If you need to replace the battery, contact the Moxa RMA service team.



ATTENTION

- There is a risk of explosion if the battery is replaced with an incorrect type of battery.
- Dispose of used batteries according to the manufacturer's instructions.

Accessing the UC-3400A Using a PC

You can use a PC to access the UC-3400A by one of the following methods:

A. Through the serial console port with the following settings:

Baudrate = 115200 bps, **Parity** = None, Data bits = 8, **Stop bits** = 1, **Flow Control** = None



ATTENTION

Remember to choose the “VT100” terminal type. Use the console cable to connect a PC to the UC-3400A's serial console port.

B. Using SSH over the network. Refer to the following IP addresses and login information:

	Default IP Address	Netmask
LAN 1	192.168.3.127	255.255.255.0
LAN 2	192.168.4.127	255.255.255.0

Login: moxa

Password: moxa

Certification Information


Model Type and Model Name on the Product Labels

The UC-3400A Series models and models of other Moxa products have been organized into different model types for UL certification purposes. The following table maps the commercial names of the UC-3400A Series models to the Model Type that you will see on the product labels:

Model Type		Commercial Series	Commercial Model
Virtual Series	Virtual Model		
MXEG3400	MXEG3400-4G	UC-3400A Series	UC-3420A-T-LTE
	MXEG3400-2C4G		UC-3424A-T-LTE
	MXEG3400-4GW		UC-3430A-T-LTE-WiFi
	MXEG3400-2C4GW		UC-3434A-T-LTE-WiFi

NCC

Documents / Resources

	<p>MOXA UC-3400A Series Arm Based Computers [pdf] Installation Guide</p> <p>UC-3400A Series Arm Based Computers, UC-3400A Series, Arm Based Computers, Based Co mputers, Computers</p>
---	--

References

- [Moxa - Support](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.