


NeoRuler GO1 Remote Controller



NeoRuler GO1 Remote Controller User Guide

[Home](#) » [NeoRuler](#) » NeoRuler GO1 Remote Controller User Guide 

Contents


- [1 NeoRuler GO1 Remote Controller](#)
- [2 Basics](#)
- [3 Getting started – Ruler](#)
- [4 Scale Ruler](#)
- [5 Setting](#)
- [6 Calibration](#)
- [7 Warranty](#)
- [8 FCC](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

NeoRuler **GO**

NeoRuler GO1 Remote Controller



QUICKSTART GUIDE
Model: G01 /Ver:1.0

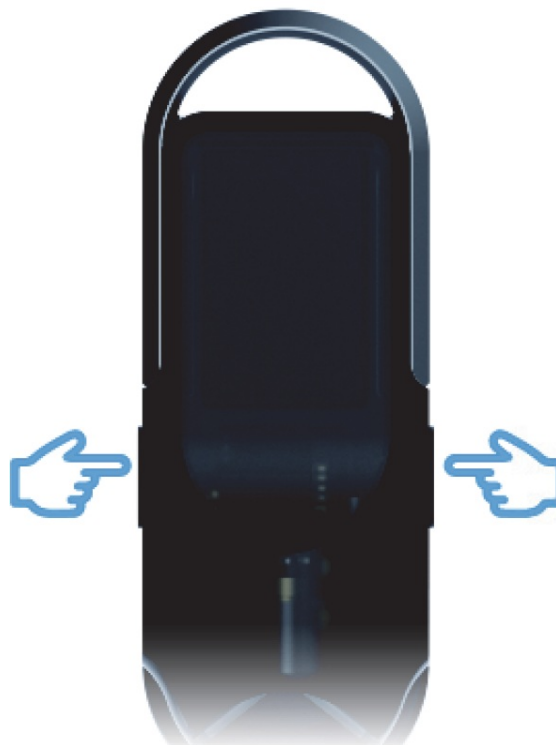


Press Both Buttons to Turn On the Device

Basics



Pull out the key ring to use the Type-C charging port.

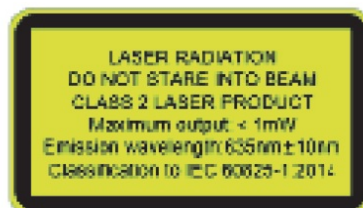


- Power input:5V-1A, Battery:300mAh
- Materials Aluminum Alloy, ABS/PC/TPU
- Accuracy #1/32in (* 1mm)* +(Dx0.5%) In Ideal Circumstance
- Range 5 digits before the decimal point
- Laser 635nm(Red Cross Laser)

- Scales 93 built-in scales in 8 modes + Customized Scales

Getting started – Ruler

Click the main button (left), after seeing the guide animation, roll the device on a flat surface to measure. The device should be perpendicular to the measuring surface. Align the rolling direction with the horizontal laser line, keeping a straight line. Use the vertical laser line to locate the start and end points.

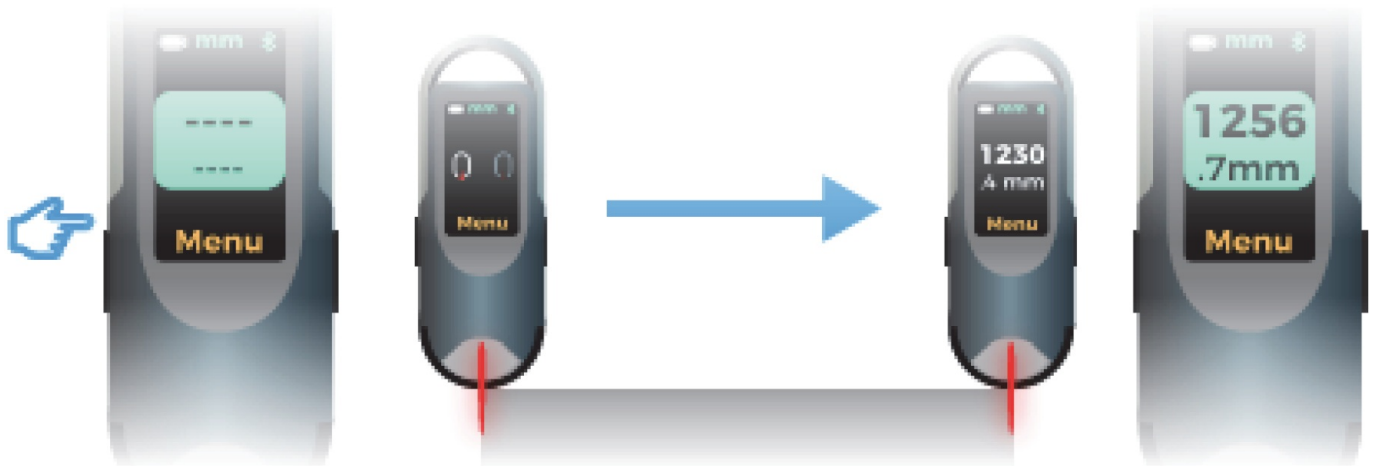

Click to Start Measuring, Stop Moving to End.
Or Press and Hold to Start, Release to End.

During the measurement process, try to keep the device perpendicular to the measuring surface. Tilting or changing the tilt angle may cause slight errors.



Change units

Before or after measurement (when the value is displayed in a blue box and the cross laser is off), control the wheel to switch to the unit option, and click the main button (left to change the measurement unit).





mm	inch
cm	ft in
meter	feet
km*	mile*

** Only available in scale mode and greater than 1:1000.*

Switch alignment mode

When the animation is played, click the switch button (right) to switch the measurement mode to Cornerto Comer mode. This mode is suitable for measuring the distance between two inner corners. At the start of the measurement, tilt the device 45 degrees, align the laser line with the edge of the inner corner, swing the device, end with the edge of the other inner corner.

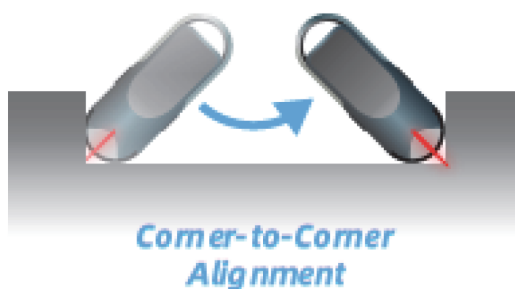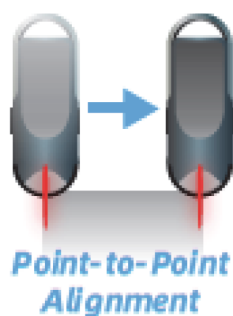

Switch Functions

After the measurement is completed, long press the switch button (right) to access function menu.



Measure Curves

When measuring curves and arcs, to ensure the most accurate measurement results, keep the device as perpendicular to the surface as possible. Use the vertical laser line to determine the start/end points. Align the edge of the wheel with the curve to be measured (the horizontal laser line should not be used as a reference in this mode).



Send Measurement to the MEAZOR APP

After connecting the product to the MEAZOR APP, click the main button to automatically send the measurement dimensions to the APP after completing the measurement. The app also allows for switching the dominant hand, adding new scales, measurement calibration, and other advanced functions. For specific functions, please download the app from your mobile application store to explore.

Tap to Send & Clear





MEAZOR APP 2.0

Free for Lifetime



Available on the
App Store



ANDROID APP ON


Google Play

Scale Ruler

Choose from 93 standard scales. Use the wheel to measure on a scaled drawing. Use the laser line for auxiliary positioning.

Change Scales


After the measurement is completed, control the wheel to switch to the scale option, and click the main button (left) to enter the scale selection interface. In the scale interface, control the wheel to select the scale, and click the main button (left) to confirm the scale.

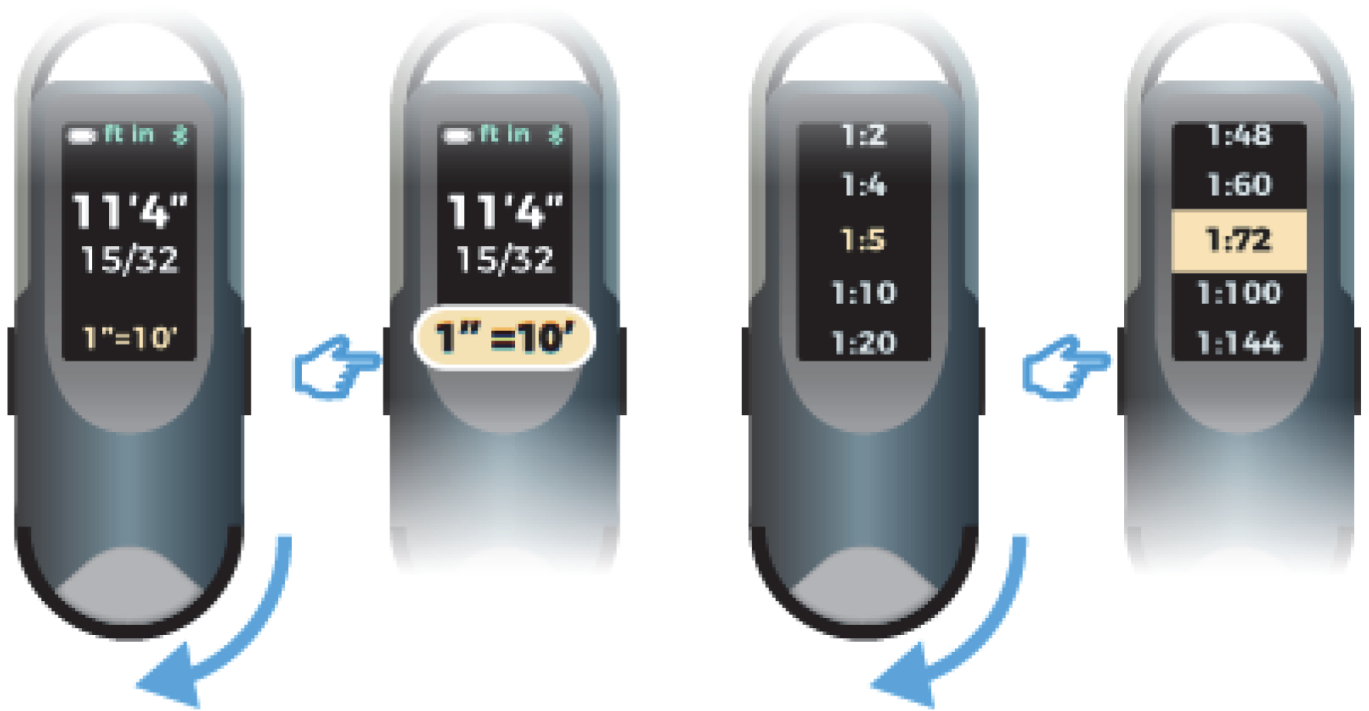


According to industry standards, we divide the 93 scales into 8 modes. You can switch between these scale modes in the settings interface.

Switch Scale Mode

After entering the settings interface, control the wheel to switch to scale selection. Click the main button (left) to enter, and control the wheel to select the scale mode. You can switch between the 8 scale modes, and see the specific scales in the table: Confirm the scale.

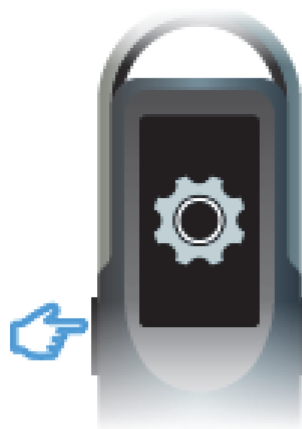

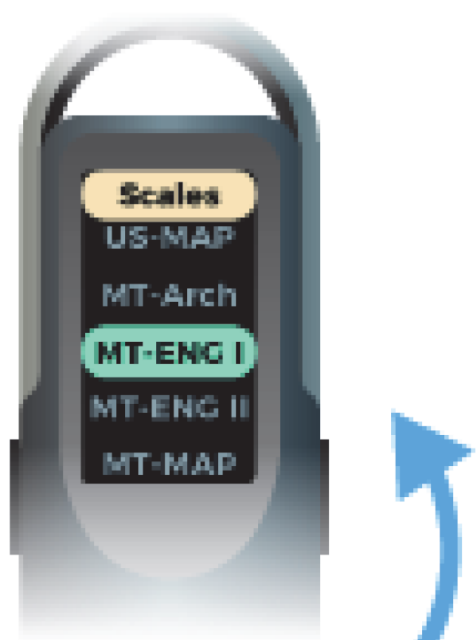


41 Built-in Metric Scales				52 Built-in US Standard Scales			
MT-Arch	MT-ENG I	MT-ENG II	MT-MAP	US-Arch	US-ENG I	US-ENG II	US-MAP
1/1				1" = 1'			
1/2	1/125	1/1000	1/100 k	6" = 1'	1" = 10'	1" = 300'	1" = 1 Mi
1/3	1/150	1/1250	1/125 k	4" = 1'	1" = 20'	1" = 333'	1" = 1.5 Mi
1/4	1/200	1/1500	1/200 k	3" = 1'	1" = 30'	1" = 416.6'	1" = 2 Mi
1/5	1/250	1/1625	1/250 k	2" = 1'	1" = 40'	1" = 500'	1" = 3 Mi
1/10	1/300	1/2000	1/500 k	1 1/2" = 1'	1" = 50'	1" = 583.3'	1" = 4 Mi
1/20	1/400	1/2500	1/1000 k	1" = 1'	1" = 60'	1" = 600'	1" = 5 Mi
1/25	1/500	1/5000	1/2000 k	3/4" = 1'	1" = 70'	1" = 625'	1" = 6 Mi
1/30		1/6000	1/2500 k	1/2" = 1'	1" = 80'	1" = 666'	1" = 10 Mi
1/40		1/10 k		3/8" = 1'	1" = 83.3'	1" = 750'	1" = 20 Mi
1/50		1/12.5 k		1/4" = 1'	1" = 90'	1" = 1000'	1" = 24 Mi
1/72		1/20 k		3/16" = 1'	1" = 100'	1" = 1200'	1" = 25 Mi
1/75		1/25 k		1/8" = 1'	1" = 166.6'	1" = 2000'	
1/100		1/50 k		3/32" = 1'	1" = 200'	1" = 3000'	
				1/16" = 1'	1" = 250'		

Customized Scale Ruler

For Drawings with Non-Standard Scales, Use this feature when drawings are off-scale or in non-standard scales.

The device will calculate the measuring scales based on inputted lengths.

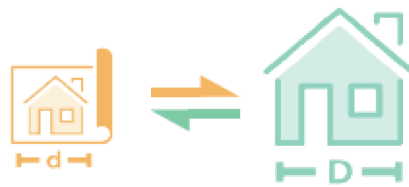

$$\text{Scale} = d \div D$$


How to Setup?

After the measurement is completed in custom scale mode, control the wheel to switch to the scale option, click the main button (left) to enter the custom scale setting. In this interface, follow the guide to first measure the drawing, and then measure the actual object to complete the custom scale setting.




Step 1: Measure Drawing Length

Measure the length on the drawing using the rolling ruler then select Next.

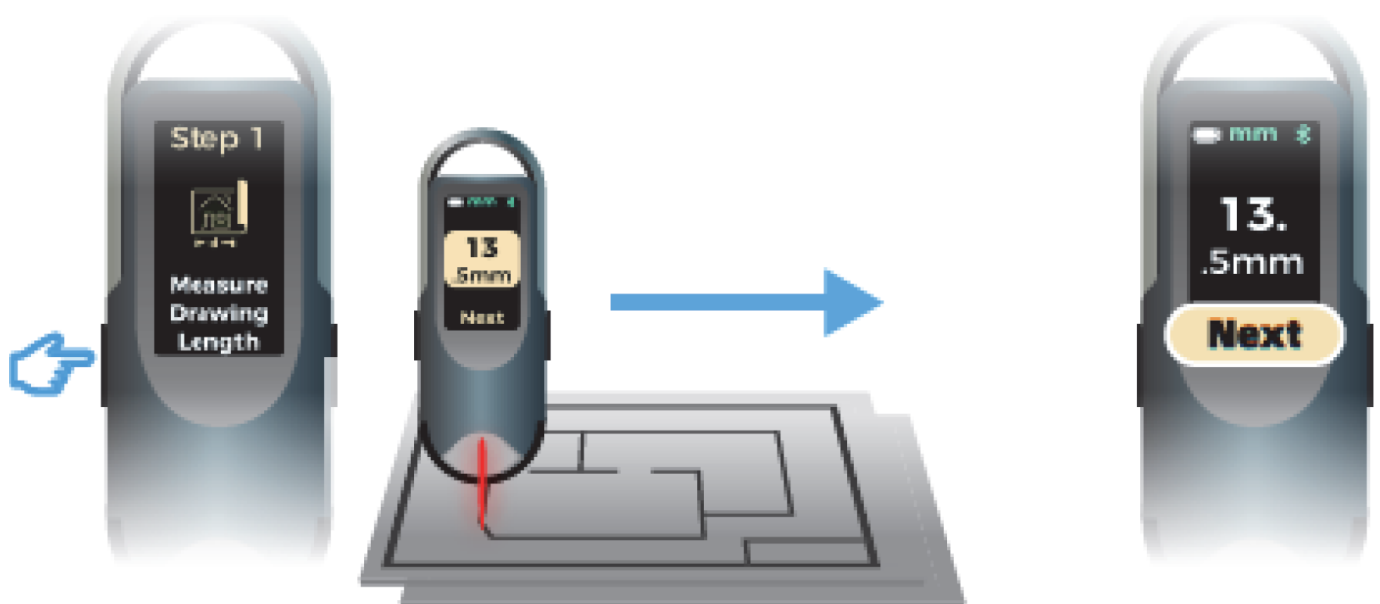

Step 2: Measure Actual Length

Measure the actual length of the object corresponding to the drawing using the rolling ruler then select Done.

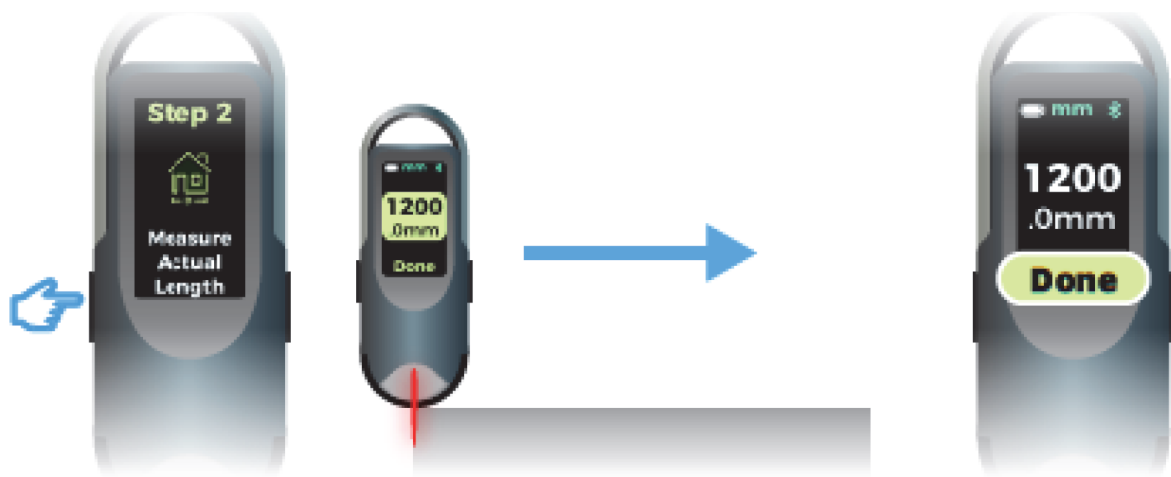

Setting

In the settings interface, use the wheel to operate the menu options. Use the main button (left) to confirm the options.



Screen Direction

You can set the screen display to horizontal/vertical according to personal habits.



Handedness

You can change the dominant hand to left hand according to person (left and in left but middle, the diversified of the main)



Scale mode

Choose one of the 8 industry-standard scale modes to use. See the table on the left for details.



Product Information

Learn about the product firmware version number, or restore factory settings.

Set using the MEAZOR APP

After connecting the device in the MEAZOR APP, there are more setting functions available in the "Control Panel", such as saving custom scales, setting sleep time, and device calibration.

Calibration

The product is precisely calibrated before shipping. If re-calibration is required after a period of normal wear, please download the MEAZOR APP and connect the device, and follow these steps to re-calibrate.

Preparation: Standard ruler (greater than 30cm/12in) Recommended to use a 24inch/60cm steel ruler. Not recommended to use a tape measure for calibration.



Step 1: Restore factory settings Enter the settings interface – product information, select Reset to restore factory settings.



Step 2: Enter the control panel of the MEAZOR APP After connecting the device with the APP, enter the device control panel, and click “Advanced Settings” at the bottom. Click to start calibration.




Step 3: Use the device to measure the length of the ruler Use the device to measure the length of the ruler (it is recommended to measure 3-4 times and take the median value) and enter it, then click next.

Step 4: Enter the actual length of the ruler Enter the actual length of the ruler, and click next, then confirm. Calibration is complete.

Warranty

Warranty period

HOZO Design. CO. – One-year Limited Consumer Warranty covers your product against manufacturing defects for one year from the date you bought your product. How to send it for repair if the product needs to be repaired, please contact the distributor and send the product accordingly, and provide a valid batch number with proof of purchase.

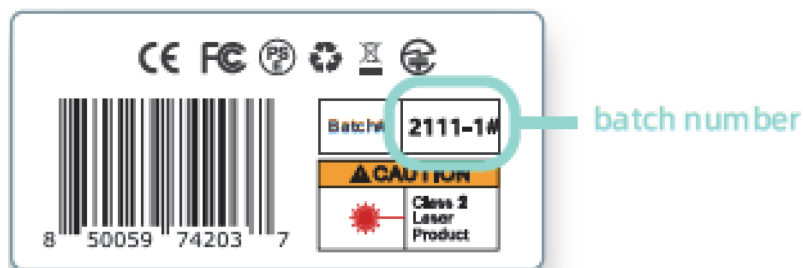

Support Email: customersupport@hozodesign.com

Online Form: hozodesign.com/pages/support-center

Special cases

The following cases are not covered by the warranty policy during the warranty period and will be repaired at extra cost.

1. Damage caused by improper use, maintenance, or storage by the user.
2. Dismantling of parts under unauthorized circumstances.
3. No proof of purchase.
4. The serial number does not correspond to the product sent for repair or has been altered
5. Damage to the body caused by force majeure
6. Normal wear and tear of the parts, which need to be replaced
7. Damage caused by abnormalities in the temperature/humidity of use or storage

8. Damage to the battery caused by not charging in accordance with the instructions
9. Any damage caused by not following the instructions.

ONLINE USER INSTRUCTIONS

Access to detailed multilingual instruction manuals, FAQ & Instruction videos in: English | Chinese | Japanese | German | Spanish | Italian | French



Copyright

The above product specifications are subject to change without notice. All rights of interpretation are reserved by HOZO DESIGN CO. All trademarks, images, technical data, and intellectual property rights are the properties of HOZO DESIGN CO., Limited and are subject to copyright infringement.




FCC

1. This device should be installed and operated with minimum distance 0cm between the radiator and your body.
2. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 1. This device may not cause harmful interference, and
 2. This device must accept any interference received, including interference that may cause undesired operation.
3. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
4. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to

radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the iuser is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Documents / Resources

	<p>NeoRuler GO1 Remote Controller [pdf] User Guide G01, 2BBKM-G01, 2BBKMG01, GO1 Remote Controller, GO1, Remote Controller</p>
-----------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.