



NF18ACV

VDSL/ADSL2+ Dual Band AC1600 Gigabit Gateway with VoIP



## NetComm FAX Configuration Installation Guide

[Home](#) » [NetComm](#) » NetComm FAX Configuration Installation Guide 

### Contents

- [1 NetComm FAX Configuration](#)
- [2 FAX configuration guide](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)



**NetCommWireless**


**NetComm FAX Configuration**



## FAX configuration guide

This section of the guide provides you with instructions to configure FAX parameters in VoIP settings.

1. Connect a computer and the modem using an Ethernet cable. (A yellow Ethernet cable is provided with your modem).
2. Open a web browser (such as Internet Explorer, Google Chrome or Firefox), type following address into the address bar and press Enter. <http://192.168.20.1>
3. Type admin in both the User Name and Password text boxes and click OK.

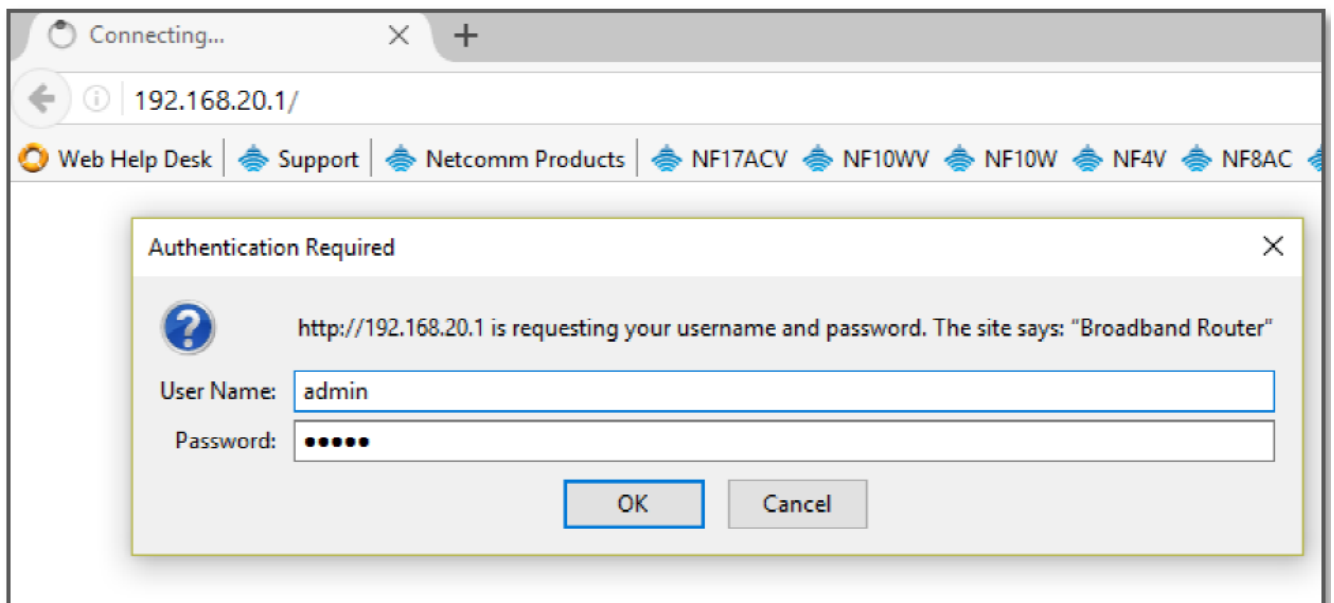

4. Configure VoIP username, password and SIP server name as in the guide below. Navigate to Voice > VoIP status, the registration status should be up. Connect telephone line from the phone port to your handset and test whether you can make a call or not.

<http://support.netcommwireless.com/sites/default/files/NF18ACV-Generic-VoIP-Setup-Guide.pdf>

- Once you can make a call, connect telephone line from the phone port to your printer/fax.
- Navigate to Voice > SIP Advanced Setting, select Fax Negotiate mode to Negotiate, tick Enable T38 support and Enable T38 redundancy support.

Device Info  
Basic Setup  
Advanced Setup  
Wireless  
**Voice**  
VoIP Status  
SIP Basic Setting  
**SIP Advanced Setting**  
SIP Extra Setting  
SIP Star Code Setting  
SIP Debug Setting  
Diagnostics  
Management  
Logout

### Voice -- SIP Advanced Setting


| Line                                   | 1                                   | 2                                   |
|----------------------------------------|-------------------------------------|-------------------------------------|
| Call waiting                           | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| Unconditionally Call forwarding number | <input type="text"/>                | <input type="text"/>                |
| Busy Call forwarding number            | <input type="text"/>                | <input type="text"/>                |
| No Answer Call forwarding number       | <input type="text"/>                | <input type="text"/>                |
| Options Time                           | <input type="text" value="0"/>      | <input type="text" value="0"/>      |
| Forward unconditionally                | <input type="checkbox"/>            | <input type="checkbox"/>            |
| Forward on "busy"                      | <input type="checkbox"/>            | <input type="checkbox"/>            |
| Forward on "no answer"                 | <input type="checkbox"/>            | <input type="checkbox"/>            |
| MWI                                    | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| Anonymous call blocking                | <input type="checkbox"/>            | <input type="checkbox"/>            |
| Anonymous calling                      | <input type="checkbox"/>            | <input type="checkbox"/>            |
| Anonymous calling mode                 | voipadvAnDisAnony ▾                 | voipadvAnDisAnony ▾                 |
| DND                                    | <input type="checkbox"/>            | <input type="checkbox"/>            |
| Enable Call Return                     | <input type="checkbox"/>            | <input type="checkbox"/>            |
| Call Transfer                          | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| Call conference                        | <input type="checkbox"/>            | <input type="checkbox"/>            |
| Warm Line                              | <input type="checkbox"/>            | <input type="checkbox"/>            |
| Warm Line URI                          | <input type="text"/>                | <input type="text"/>                |
| Warm Line Delay Timer                  | <input type="text" value="10"/>     | <input type="text" value="10"/>     |

==Fax Setting==  
Fax Negotiate Mode: **Negotiate** ▾  
☒ Enable T38 support  
☐ Enable vbd support  
☒ Enable T38 redundancy support  
☐ Enable vbd redundancy support

==Settings==  
☒ Enable VAD support      VAD mode in signal: **None** ▾

**Note:** The SIP service provide should also support fax. Contact your internet service provider to confirm if they support FAX service and collect the FAX settings.



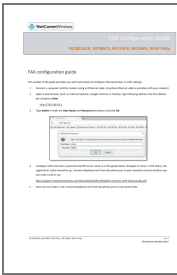

**[NetComm FAX Configuration](#) [pdf] Installation Guide**  
NetComm, FAX Configuration, NL1901ACV, NF18ACV, NF17ACV, NF10WV, NF4V