



netis N4 Wireless Dual Band Router Installation Guide

[Home](#) » [netis](#) » netis N4 Wireless Dual Band Router Installation Guide

Contents [[hide](#)]


- [1 netis N4 Wireless Dual Band Router](#)
- [2 Package Contents](#)
- [3 Hardware Connection](#)
- [4 Configure the Router via Web Management Page](#)
- [5 Troubleshooting](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)



netis N4 Wireless Dual Band Router




Package Contents

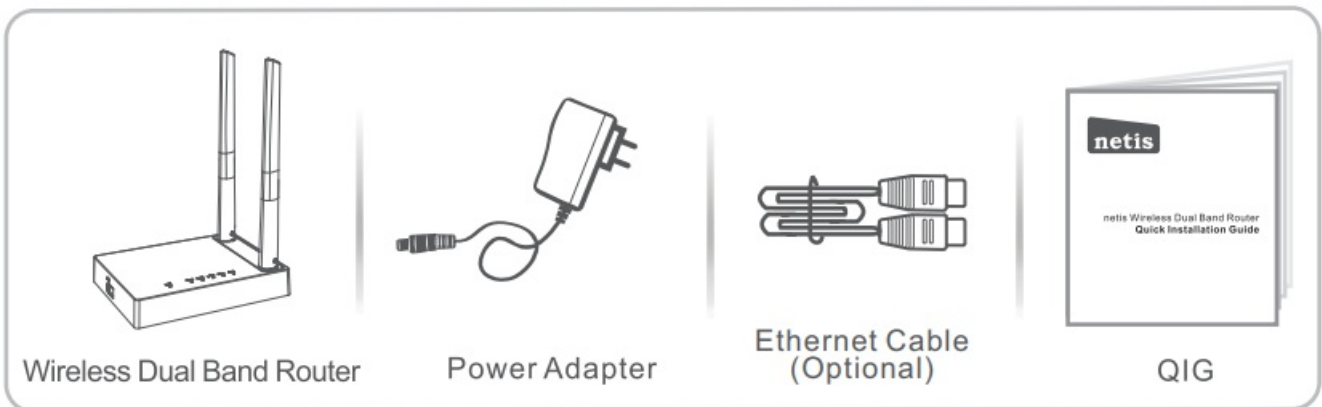

- This QIG is for all netis wireless dual band routers, the product model shown in this QIG is N4, as an example.
- You can visit our website: www.netis-systems.com to get more supports.
- Ethernet Cable is optional for some models.

Hardware Connection

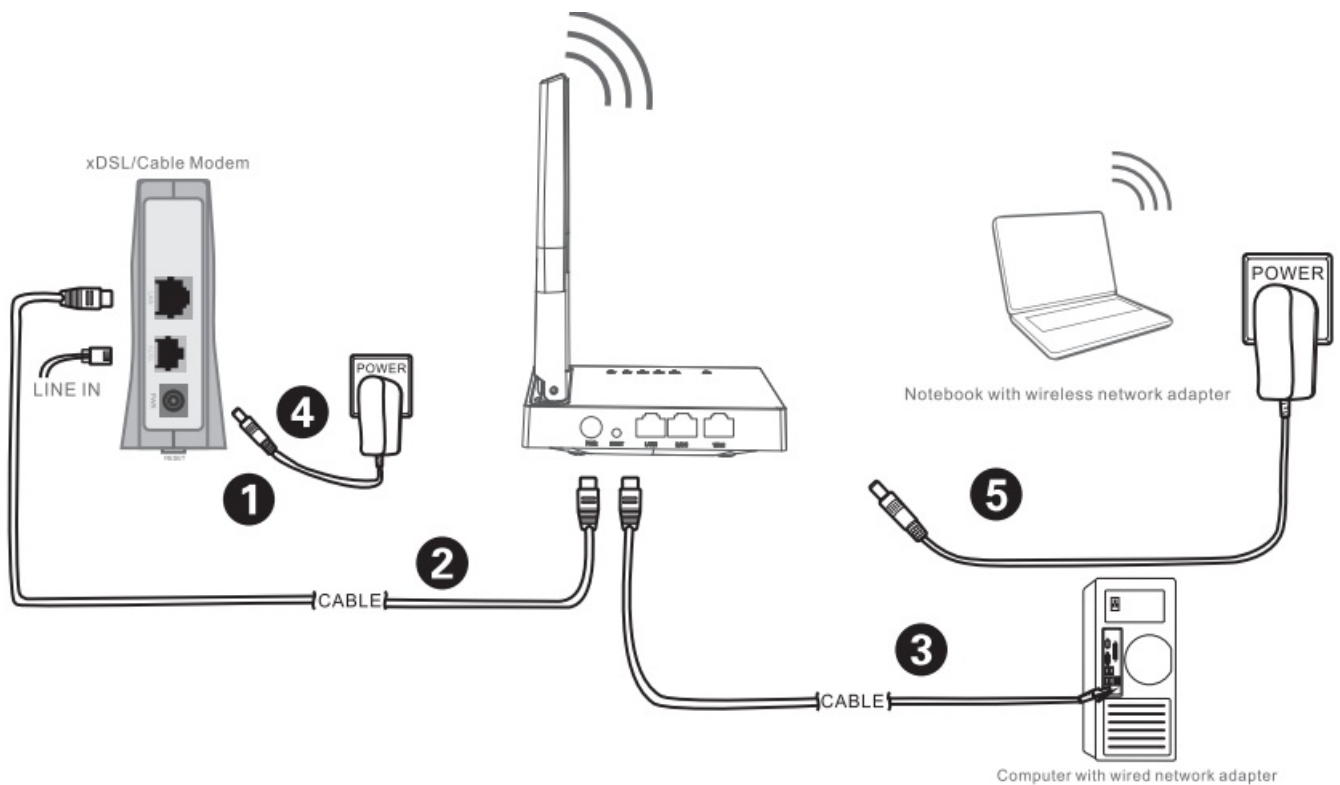

- Power off your Modem
- Connect the WAN port on netis Router to the Modem's LAN port with an Ethernet cable.
- Connect your computer to one of the LAN ports on netis Router with an Ethernet cable.
- Power on your Modem
- Plug the provided Power Adapter into the PWR jack of netis Router and the other end to a standard electrical socket. Then wait for one minute.

Configure the Router via Web Management Page

Set the IP address of the wired network adapter on your computer as "Automatic" or "DHCP".

For Windows 10/8/ 7/Vista

1. Go to "Settings" (Win 8)/ "Start" (Win 7/Vista)> "Control Panel"
2. Left-click on "Network and Internet"> "Network and Sharing Center"> "Change adapter settings" (Win 8/7y "Manage network connections" (Win Vista).
3. Right-click on "Local Area Connection" and left-click on "Properties".
4. Double-click on "Internet Protocol Version 4 (TCP/IPv4)".
5. Select "Obtain an IP address automatically" and "Obtain DNS server address automatically" then left-click on "OK".

For Windows XP/2000

1. Go to "Start"> "Control Panel"
2. Left-click on "Network and Internet Connections"> "Network Connections".
3. Right-click on "Local Area Connection" and left-click on "Properties"
4. Double-click on "Internet Protocol (TCP/IP)".

5. Select “Obtain an IP address automatically” and “Obtain DNS server address automatically” then left-click on “OK”.

For MAC Os

1. Click on the “Apple” menu> “System Preferences”
2. Click on the “Network” icon.
3. Click on “Ethernet” in the left side box and click on “Advanced” in the lower right corner.
4. In the top options, select “TCP/IP”
5. In the pull-down menu next to “Configure IPv4”, select “Using DHCP”
6. Click “OK” then “Apply”

Open your browser and type <http://netis.cc> in the address field to visit router’s web management page.



<http://netis.cc>

Select the language as you need on the top box,default is in English.

1. In “Quick Setup” page, select your Internet Connection Type. If “DHCP (Cable Modem)” is selected, the router will automatically receive the IP parameters from your ISP (Internet Service Provider). If “Static IP” is selected, please enter the IP Address/Subnet Mask/Default Gateway/DNS Servers given by your ISP. If “PPPoE” is selected, please enter the Username and Password given by your ISP.
2. Under Wireless Setup, configure your wireless network name (SSID) and password.
3. Left-click on “Save” to make your settings take effect.

The image shows the Netis Quick Setup web interface. At the top, there is a blue header with the 'netis' logo on the left, a language dropdown menu set to 'English' in the center, and a green 'Advanced' button on the right. Below the header, the main content area is titled 'Quick Setup'. It is divided into two sections: 'Internet Connection' and 'Wireless Setup'. The 'Internet Connection' section has a blue circular icon with a cloud and the word 'Internet'. It contains three radio buttons: 'DHCP (Cable Modem)' (selected), 'Static IP', and 'PPPoE'. Below these is a checkbox for 'MAC Clone' and an empty text field. The 'Wireless Setup' section has a green circular icon with a Wi-Fi symbol and the word 'Wireless'. It contains a 'Band Mode' dropdown set to '2.4GHz', an 'SSID' text field with the value 'netis_2.4G_8196C1', a 'Security' section with 'WPA2-PSK' selected, and a 'Password' text field with a masked password. A blue 'Save' button is at the bottom center.

Tip 1: Default address: <http://netis.cc> <http://192.168.1.254>

Username: guest **Password:** guest@XXXX

2.4G SSID: netis_2.4G_XXXXXX **5G SSID:** netis_5G_XXXXXX “XXXX ” “XXXXXX “:Last 4/6 digits of LAN MAC Address)




Tip 2 You can click on connection types and further settings. button on the top for other Internet

Troubleshooting

Q: How do I restore my netis Router's configuration to its default settings?

A: With the router powered on, use a pin to press and hold the Default button on the rear panel for 8 to 10 seconds before releasing it. The router will reboot and all configurations are back to factory default.

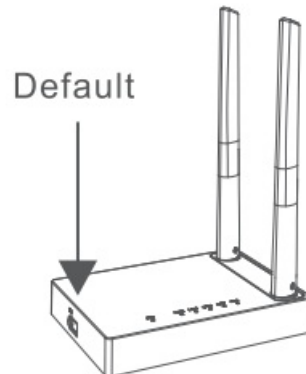

Q: What can I do if my Internet cannot be accessed?


1. Check to verify the hardware connections are correct. Please refer to the “Hardware Connection” step.
2. Login to netis Router's web management page and ensure that you set the correct Internet Connection Type. For cable modem users, please configure “MAC Clone” additionally.
> “Network”> “WAN”. On the left-side menu, left-click on And in the middle page, left-click on “Advanced”> “MAC Clone” and then “Save” it. Advanced



3. Reboot the modem first and then netis Router. Wait for one minute before you check the Internet again.
4. If Internet access is not available, please connect your computer directly to your modem and try the Internet again. If the Internet is still not working, please contact your ISP for further help.

Technical Support: support@netis-systems.com
NETIS SYSTEMS CO., LTD www.netis-systems.com

Documents / Resources

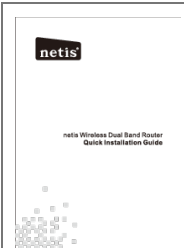	<p>netis N4 Wireless Dual Band Router [pdf] Installation Guide N4, Wireless Dual Band Router, Dual Band Router, Wireless Band Router, Band Router, Router , N4</p>
---	--

