



netvox R311D Wireless Asset Sensor User Manual

[Home](#) » [netvox](#) » netvox R311D Wireless Asset Sensor User Manual 



Contents

- [1 netvox R311D Wireless Asset Sensor](#)
- [2 Introduction](#)
- [3 Appearance](#)
- [4 Main Features](#)
- [5 Set up Instruction](#)
- [6 Data Report](#)
- [7 Installation](#)
- [8 Important Maintenance Instruction](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

netvox R311D Wireless Asset Sensor




Introduction

R311D is a simple positioning function, periodically reports RSSI and SNR information to the gateway for processing and can locate the position status of the device according to the reported RSSI and SNR information

LoRa Wireless Technology: LoRa is a wireless communication technology famous for its long-distance transmission and low power consumption. Compared with other communication methods, LoRa spread spectrum modulation technique greatly extend the communication distance. It can be widely used in any use case that requires long-distance and low-data wireless communications. For example, automatic meter reading, building automation equipment, wireless security systems, industrial monitoring. It has features like small size, low power consumption, long transmission distance, strong anti-interference ability and so on.

LoRaWAN: LoRaWAN uses LoRa technology to define end-to-end standard specifications to ensure interoperability between devices and gateways from different manufacturers.

Appearance

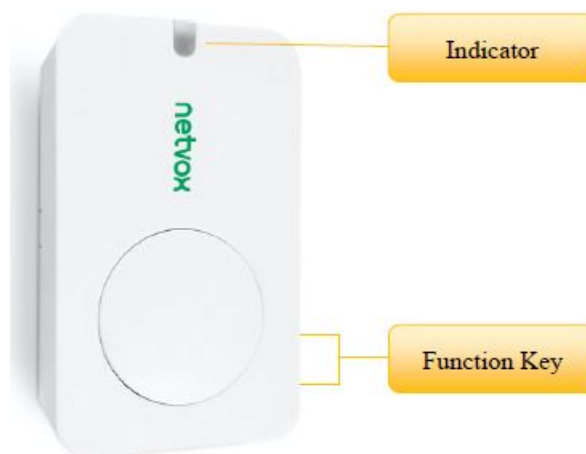

Main Features

- Compatible with LoRaWAN
- 2 sections of 3V CR2450 button battery power supply
- RSSI / SNR detection

- Simple operation and setting
- Compatible with LoRaWANTM Class A
- Frequency-hopping spread spectrum
- Configuration parameters can be configured via a third-party software platform, data can be read and alerts can be set via SMS text and email (optional)
- Applicable to third-party platforms: Actility/ThingPark, TTN, MyDevices/Cayenne
- Low power consumption and long battery life

Note: Battery life is determined by the sensor reporting frequency and other variables, please refer to http://www.netvox.com.tw/electric/electric_calc.html On this website, users can find battery life time for varied models at different configurations.

Set up Instruction

On/Off	
Power on	<p>Insert batteries. (users may need a screwdriver to open);</p> <p>Insert two sections of 3V CR2450 button batteries and close the battery cover.)</p>
Turn on	Press any function key till the green and red indicator flash once.
Turn off (Restore to factory setting)	Press and hold the function key for 5 seconds till the green indicator flashes for 20 times.
Power off	Remove Batteries.
Note:	<p>1. Remove and insert the battery; the device memorizes previous on/off state by default.</p> <p>2. On/off interval is suggested to be about 10 seconds to avoid the interference of capacitor inductance and other energy storage components.</p> <p>3. Press any function key and insert batteries at the same time; it will enter engineer testing mode.</p>
Network Joining	
Never joined the network	<p>Turn on the device to search the network to join. The green indicator stays on for 5 seconds: success</p> <p>The green indicator remains off: fail</p>

Had joined the network	<p>Turn on the device to search the previous network to join. The green indicator stays on for 5 seconds: success</p> <p>The green indicator remains off: fail</p>
<p>Fail to join the network</p> <p>(when the device is on)</p>	<p>Suggest to check the device verification information on the gateway or consult your platform</p> <p>server provider.</p>
Function Key	
Press and hold for 5 seconds	<p>Restore to factory setting / Turn off</p> <p>The green indicator flashes for 20 times: success The green indicator remains off: fail</p>
Press once	<p>The device is in the network: the green indicator flashes once and sends a report</p> <p>The device is not in the network: the green indicator remains off</p>
Sleeping Mode	
The device is on and in the network	<p>Sleeping period: Min Interval.</p> <p>When the reportchange exceeds setting value or the state changes: send a data report according to Min Interval.</p>

Low Voltage Warning

Low Voltage	2.4V
-------------	------

Data Report

When the device is turned on, it will immediately send a version package. Data will be reported by default setting before any configuration.

- **Default setting:**

- Maximum time: 3600s
- Minimum time: 3600s
- BatteryChange: 0x01 (0.1V)

The reported data is decoded by the Netvox LoRaWAN Application Command document and <http://www.netvox.com.cn:8888/page/index>

Note: The real data sending cycle is subject to the programming configuration before shipment. Data report configuration and sending period are as following:

Min Interval (Unit:second)	Max Interval (Unit:second)	Reportable Change	Current Change≥ Reportable Change	Current Change Reportable Change
Any number between n 1~65535	Any number between n 1~65535	Can not be 0.	Report per Min Interval	Report per Max Interval

Example of ConfigureCmd FPort 0x07

Bytes	1	1	Var (Fix =9 Bytes)
	CmdID	DeviceType	NetvoxPayloadData

- CmdID– 1 byte
- DeviceType– 1 byte – Device Type of Device
- NetvoxPayloadData– var bytes (Max=9bytes)

Description	Device	Cmd ID	Device Type	NetvoxPayloadData
-------------	--------	-----------	----------------	-------------------

ReadConfig				MinTime	MaxTime	B a t t e r y C h a n g e	Reserved
ReportRsp		0x82		(2bytes Unit:s)	(2bytes Unit:s)	(1 b y t e U n i t : 0. 1 v)	(4Bytes,Fixed 0x00)

- **Command Configuration:**


- MinTime = 1min MaxTime = 1min BatteryChange = 0.1v
- Downlink 014E003C003C0100000000 // 003C(Hex) = 60(Dec)
- Response 814E0000000000000000 Configuration success 814E0100000000000000 Configuration failure

- **Read Configuration:**

- Downlink 024E0000000000000000
- Response 824E003C003C0100000000 Current configuration


Example for MinTime/MaxTime logic:

Example#1 based on MinTime = 1 Hour, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange=0.1V

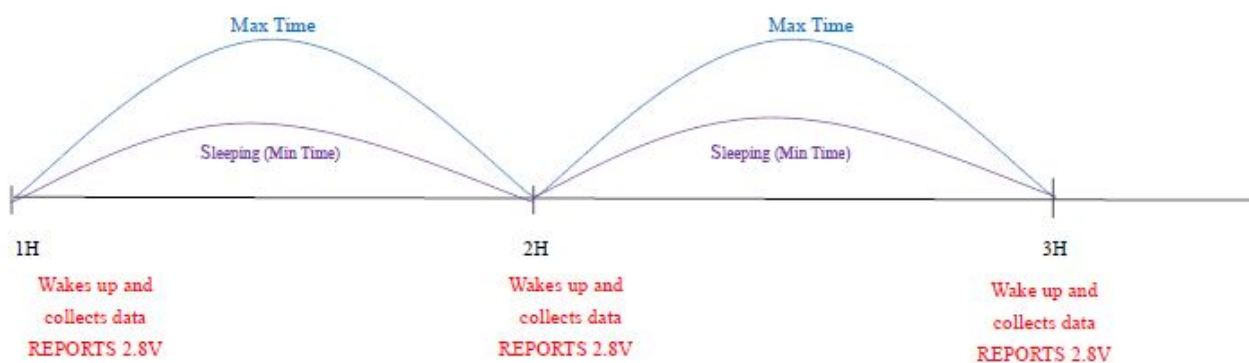


Note: MaxTime=MinTime. Data will only be report according to MaxTime (MinTime) duration regardless BatteryVoltageChange value.

Example#2 based on MinTime = 15 Minutes, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange= 0.1V.

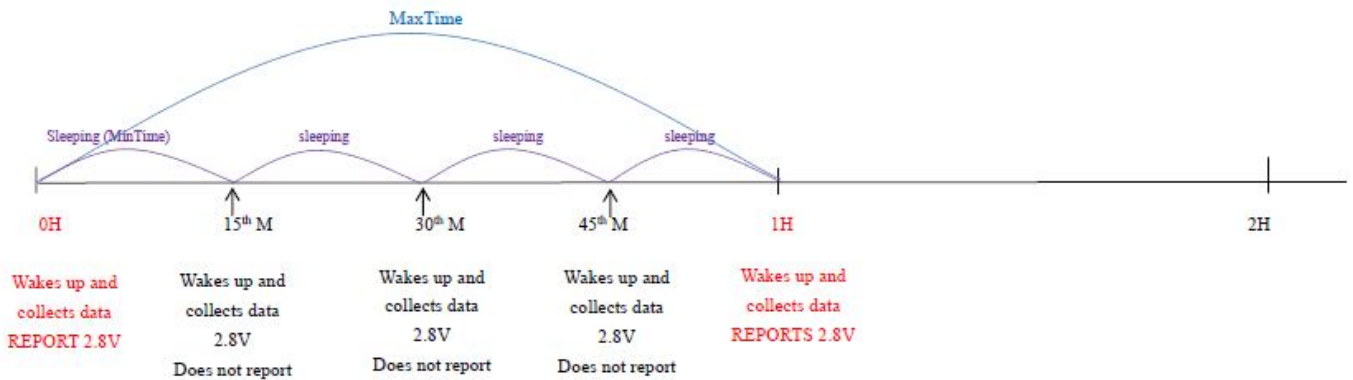

Example#3 based on MinTime = 15 Minutes, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange= 0.1V. MaxTime sleeping sleeping

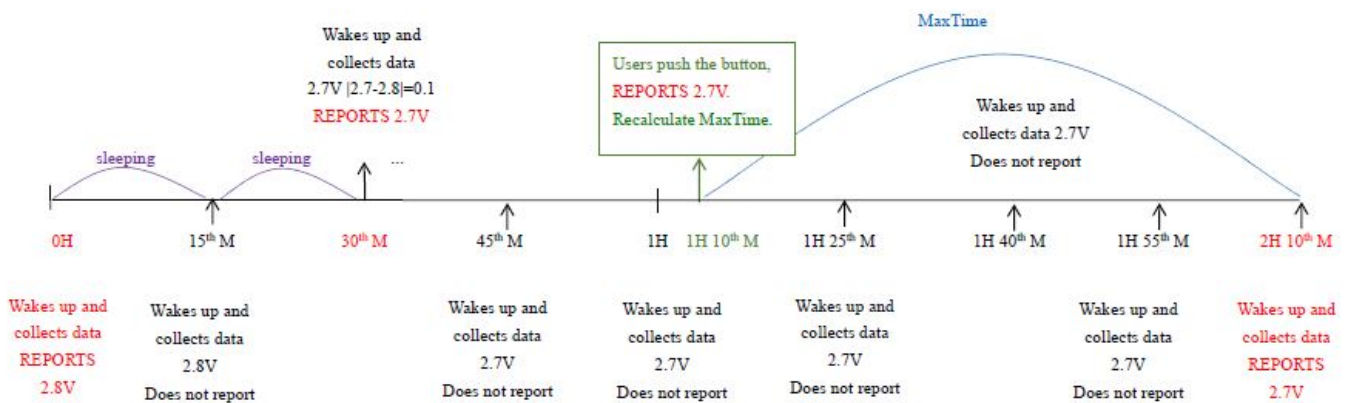


Note:

1. The device only wakes up and performs data sampling according to MinTime Interval. When it is sleeping, it does not collect data.
2. The data collected is compared with the last data reported. If the data change value is greater than the ReportableChange value, the device reports according to MinTime interval. If the data variation is not greater than the last data reported, the device reports according to MaxTime interval.
3. We do not recommend to set the MinTime Interval value too low. If the MinTime Interval is too low, the device wakes up frequently and the battery will be drained soon.
4. Whenever the device sends a report, no matter resulting from data variation, button pushed or MaxTime interval, another cycle of MinTime / MaxTime calculation is started.

Installation

This product does not have a waterproof function. After the screening is completed, please place it indoors.

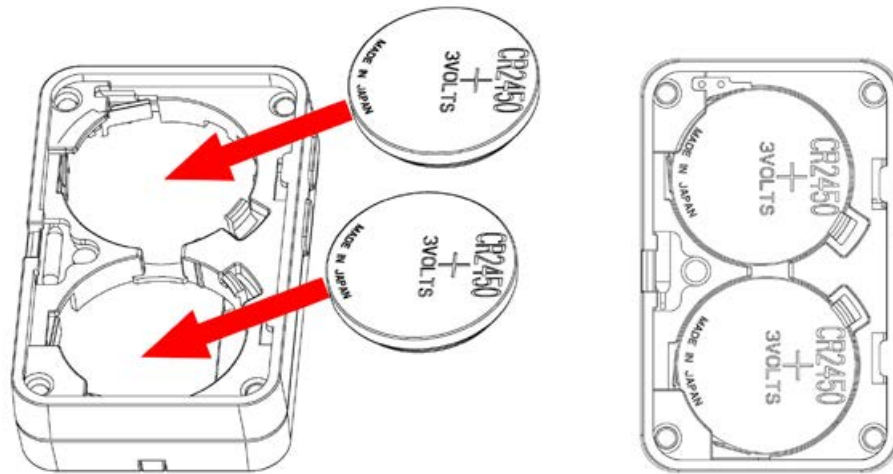

Note: To install the battery, use a screwdriver or similar tool to assist in opening the battery cover.


Important Maintenance Instruction

Kindly pay attention to the following in order to achieve the best maintenance of the product:

- Keep the device dry. Rain, moisture, or any liquid, might contain minerals and thus corrode electronic circuits. If the device gets wet, please dry it completely.
- Do not use or store the device in dusty or dirty environment. It might damage its detachable parts and electronic components.
- Do not store the device under excessive heat condition. High temperature can shorten the life of electronic devices, destroy batteries, and deform or melt some plastic parts.
- Do not store the device in places that are too cold. Otherwise, when the temperature rises to normal temperature, moisture will form inside, which will destroy the board.
- Do not throw, knock or shake the device. Rough handling of equipment can destroy internal circuit boards and delicate structures.
- Do not clean the device with strong chemicals, detergents or strong detergents.
- Do not apply the device with paint. Smudges might block in the device and affect the operation.
- Do not throw the battery into the fire, or the battery will explode. Damaged batteries may also explode.

All of the above applies to your device, battery and accessories. If any device is not working properly, please take it to the nearest authorized service facility for repair.

Documents / Resources

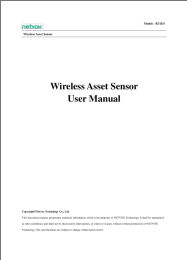	<p>netvox R311D Wireless Asset Sensor [pdf] User Manual</p> <p>R311D, Wireless Asset Sensor</p>
---	---

References

- [!\[\]\(b9463851ebdd8a3525de1cceb8d92d53_img.jpg\) Lora Command Resolver](#)
- [!\[\]\(9f995c877a90c057f78c081f2ddb8c28_img.jpg\) ÉÔ°ò;£¡£¡£](#)