



netvox R312 Wireless Doorbell Button User Manual

[Home](#) » [netvox](#) » netvox R312 Wireless Doorbell Button User Manual 

Contents

- [1 netvox R312 Wireless Doorbell Button](#)
- [2 Introduction](#)
- [3 Appearance](#)
- [4 Main Features](#)
- [5 Set up Instruction](#)
 - [5.1 Data Report](#)
- [6 Installation](#)
- [7 Important Maintenance Instruction](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

netvox®

netvox R312 Wireless Doorbell Button



Copyright©Netvox Technology Co., Ltd.

This document contains proprietary technical information which is the property of NETVOX Technology. It shall be maintained in strict confidence and shall not be disclosed to other parties, in whole or in part, without written permission of NETVOX Technology. The specifications are subject to change without prior notice.

Introduction

The R312 is a doorbell button device for Netvox ClassA type devices based on the LoRaWAN open protocol and is compatible with the LoRaWAN protocol.

LoRa Wireless Technology:

LoRa is a wireless communication technology famous for its long-distance transmission and low power consumption. Compared with other communication methods, LoRa spread spectrum modulation technique greatly extend the communication distance. It can be widely used in any use case that requires long-distance and low-data wireless communications. For example, automatic meter reading, building automation equipment, wireless security systems, industrial monitoring. It has features like small size, low power consumption, long transmission distance, strong anti-interference ability and so on.

LoRaWAN:

LoRaWAN uses LoRa technology to define end-to-end standard specifications to ensure interoperability between devices and gateways from different manufacturers.

Appearance



Main Features

- Compatible with LoRaWAN
- 2 sections of 3V CR2450 button battery power supply
- Doorbell status detection
- Simple operation and setting
- Protection class IP30
- Compatible with LoRaWANTM Class A
- Frequency hopping spread spectrum
- Configuration parameters can be configured via a third-party software platform, data can be read and alerts can

be set via SMS text and email (optional)

- Applicable to third-party platforms: Actility/ThingPark, TTN, MyDevices/Cayenne
- Improved power management for longer battery life

Battery Life:

- Please refer to web: http://www.netvox.com.tw/electric/electric_calc.html
- At this website, users can find battery life time for various models at different configurations.
 - Actual range may vary depending on environment.
 - Battery life is determined by sensor reporting frequency and other variables.

Set up Instruction

On/Off	
Power on	<p>Insert batteries (users may need a screwdriver to open)</p> <p>Insert two sections of 3V CR2450 button batteries and close the battery cover.</p> <p>Note: Require 2 button batteries to supply power at the same time.</p>
Turn on	Press any function key and indicator flashes once meaning it is turned on successfully.
Turn off (Restore to factory setting)	Press and hold the function key for 5 seconds and green indicator flashes 20 times.
Power off	Remove Batteries.
Note:	<ol style="list-style-type: none"> 1. Remove and insert the battery; the device memorizes previous on/off state by default. 2. On/off interval is suggested to be about 10 seconds to avoid the interference of capacitor inductance and other energy storage components. 3. If press any function key and insert batteries at the same time, it will enter engineer testing mode.
Network Joining	
Never joined the network	<p>Turn on the device to search the network.</p> <p>The green indicator stays on for 5 seconds: success The green indicator remains off: fail</p>
Had joined the network (not restore to the factory setting)	<p>Turn on the device to search the previous network. The green indicator stays on for 5 seconds: success</p> <p>The green indicator remains off: fail</p>
Fail to join the network	Suggest to check the device verification information on the gateway or consult your platform server provider.

Function Key	
Press and hold for 5 seconds	<p>Restore to factory setting / Turn off</p> <p>The green indicator flashes 20 times: success The green indicator remains off: fail</p>
Press once	<p>The device is in the network: green indicator flashes once and sends a report</p> <p>The device is not in the network: green indicator remains off</p>
Press doorbell button	<p>Trigger the doorbell alarm</p> <p>Note: Users can configure the button pressing time to send alarm by command</p>
Sleeping Mode	
The device is on and in the network	<p>Sleeping period: Min Interval.</p> <p>When the reportchange exceeds setting value or the state changes: send a data report according to Min Interval.</p>
Low Voltage	2.4V

Data Report

The device will immediately send a version packet report along with an uplink packet including doorbell alarm. The device sends data in the default configuration before any configuration is done.

Default setting

Maximum time: 3600s

Minimum time: 3600s

BatteryChange: 0x01 (0.1V)

Doorbell button trigger:

Press the doorbell button and immediately send a report.

R312 was pressed, Alarm=1

R312 was not pressed, Alarm=0

Note:

1. The actual data sending cycle of the device is subject to the programming configuration before shipment.
2. The interval between two reports must be the minimum time

The data report can be decoded by the Netvox LoraWAN Application Command document and

<http://www.netvox.com.cn:8888/page/index>

Report configuration and sending cycle are as follows:

Min Interval (Unit:second)	Max Interval (Unit:second)	Reportable Change	Current Change \geq Reportable Change	Current Change Reportable Change
Any number between 1~65535	Any number between 1~65535	Can not be 0.	Report per Min Interval	Report per Max Interval

Example of ConfigureCmd

FPort 0x07

Bytes	1	1	Var (Fix =9 Bytes)
	CmdID	DeviceType	NetvoxPayLoadData

CmdID– 1 byte

DeviceType– 1 byte – Device Type of Device

NetvoxPayLoadData– var bytes (Max=9bytes)

Description	Device	CmdID	Device Type	NetvoxPayloadData			
Config ReportReq	R312	0x01	0x55	MinTime (2bytes Unit:s)	MaxTime (2 bytes Unit:s)	Battery Change (1byte Unit:0.1v)	Reserved (4Bytes,Fixed 0x00)
Config ReportRsp		0x81		Status (0x00_success)	Reserved (8Bytes,Fixed 0x00)		
ReadConfig ReportReq		0x02		Reserved (9Bytes,Fixed 0x00)			
ReadConfig ReportRsp		0x82		MinTime (2bytes Unit:s)	MaxTime (2 bytes Unit:s)	Battery Change (1byte Unit:0.1v)	Reserved (4Bytes,Fixed 0x00)

- Command Configuration:

MinTime = 1min MaxTime = 1min BatteryChange = 0.1v Downlink 0155003C003C0100000000 003C(Hex) = 60(Dec)

Response

81550000000000000000 Configuration success 81550100000000000000 Configuration failure

- Read Configuration: Downlink 02550000000000000000

Response 8255003C003C0100000000 Current configuration

Example of Button Press Time

FPort 0x0D

Default Press Time 0x00

Description	CmdID	PayLoad (Fix byte,1byte)
SetButtonPressTimeReq	0x01	PressTime (1byte, 0x00_QuickPush_Less then 1 Second, 0x01_1 Second push, 0x02_2 Seconds push, 0x03_3 Seconds push, 0x04_4 Seconds push, 0x05_5 Seconds push, Other value is reserved)
SetButtonPressTimeRsp	0x81	Status (0x00_Success 0x01_Failure)
GetButtonPressTimeReq	0x02	
GetButtonPressTimeRsp	0x82	PressTime (1byte, 0x00_QuickPush_Less then 1 Second, 0x01_1 Second push, 0x02_2 Seconds push, 0x03_3 Seconds push, 0x04_4 Seconds push, 0x05_5 Seconds push, Other value is reserved)

- Command Configuration:

Trigger doorbell after press button 2 seconds

Downlink 0102 *Please notice port number is 0x0D (13) when downlink command Response

8100 Configuration success 8101 Configuration failure


- Read Configuration:

Downlink 02 Response

8202 Current configuration


Example for MinTime/MaxTime logic:

Example#1 based on MinTime = 1 Hour, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange=0.1V

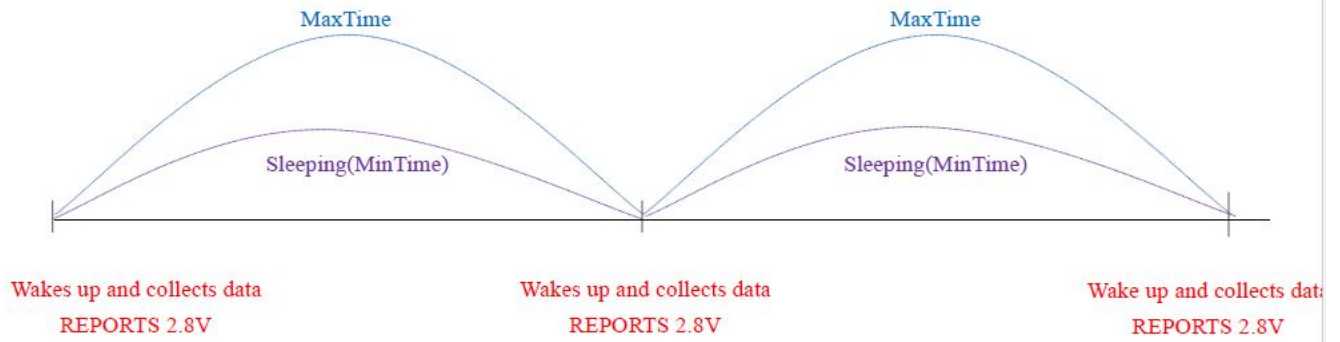


Note: MaxTime=MinTime. Data will only be report according to MaxTime (MinTime) duration regardless BtteryVoltageChange value.

Example#2 based on MinTime = 15 Minutes, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange= 0.1V.

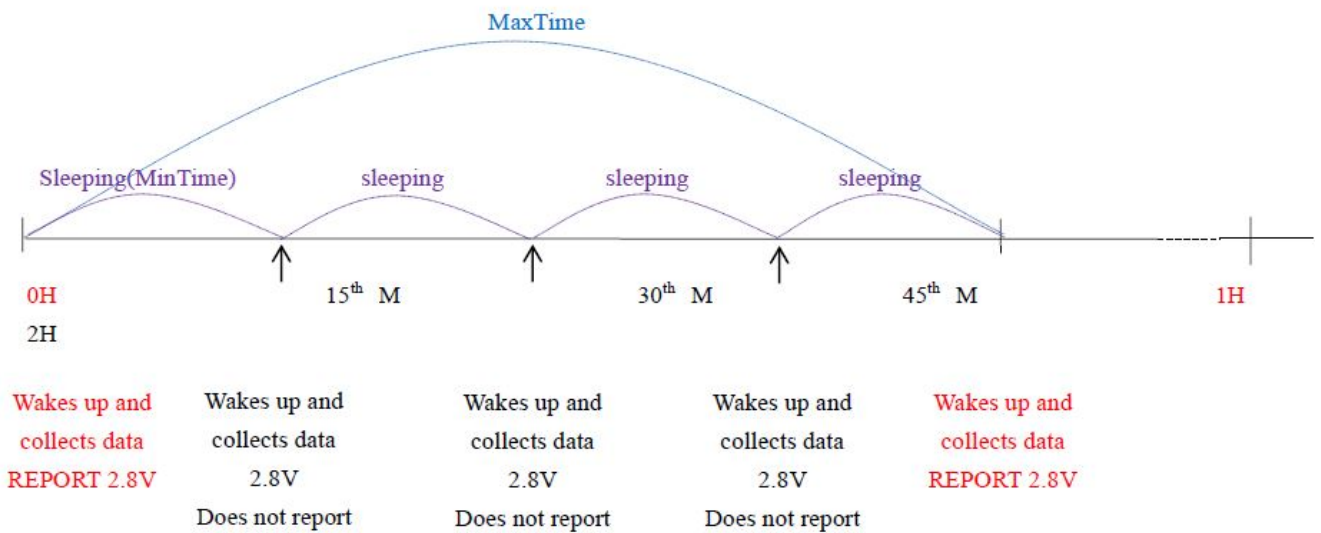

Example#3 based on MinTime = 15 Minutes, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange= 0.1V.

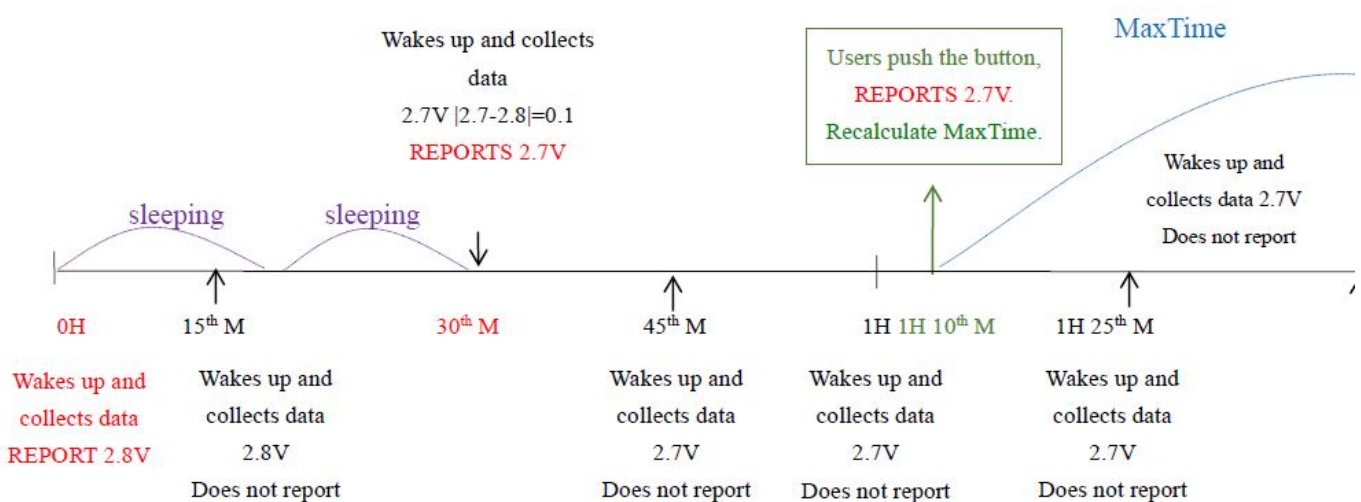


Notes:

1. The device only wakes up and performs data sampling according to MinTime Interval. When it is sleeping, it does not collect data.
2. The data collected is compared with the last data reported. If the data change value is greater than the ReportableChange value, the device reports according to MinTime interval.
If the data variation is not greater than the last data reported, the device reports according to MaxTime interval.
3. We do not recommend to set the MinTime Interval value too low. If the MinTime Interval is too low, the device wakes up frequently and the battery will be drained soon.
4. Whenever the device sends a report, no matter resulting from data variation, button pushed or MaxTime interval, another cycle of MinTime/MaxTime calculation is started.

Installation


1. This product does not have a waterproof function. After the screening is completed, please place it indoors.
2. The dust at the equipment installation position needs to be wiped clean and then pasted.
3. The battery installation method is as shown below (the battery has a “+” side facing outward)
(Users may need a screwdriver to open the battery cover.)

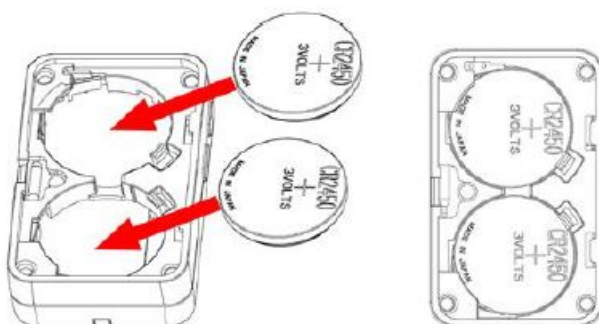

1. Remove the 3M release paper on the back of the device and attach the device to the smooth wall (please do not stick it to the rough wall to avoid falling off after a long time use). Note:
 1. Wipe the wall surface before installation to avoid dust on the wall surface and affect the paste capability.
 2. Do not install the device in a metal shielded box or other electrical equipment around it to avoid affecting the wireless transmission of the device.
2. When the doorbell (R312) button is pressed, the message “Alarm” is sent.

When the device reports data periodically, it restores the “normal” status and sends “normal” status information.

Note: With the sound and light alarm (R602A), the audible and visual alarm will ring the door after the doorbell is pressed.

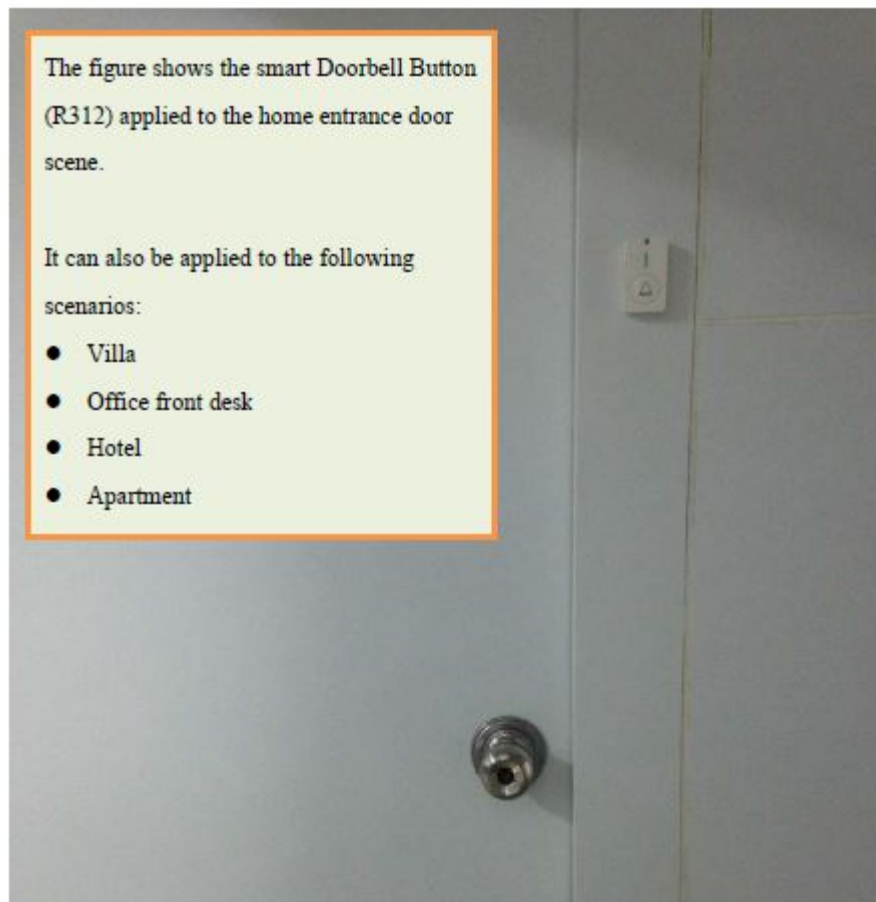

Important Maintenance Instruction

Kindly pay attention to the following in order to achieve the best maintenance of the product:

- Keep the device dry. Rain, moisture, or any liquid, might contain minerals and thus corrode electronic circuits. If the device gets wet, please dry it completely.
- Do not use or store the device in dusty or dirty environment. It might damage its detachable parts and electronic components.
- Do not store the device under excessive heat condition. High temperature can shorten the life of electronic devices, destroy batteries, and deform or melt some plastic parts.
- Do not store the device in places that are too cold. Otherwise, when the temperature rises to normal temperature, moisture will form inside, which will destroy the board.
- Do not throw, knock or shake the device. Rough handling of equipment can destroy internal circuit boards and delicate structures.
- Do not clean the device with strong chemicals, detergents or strong detergents.
- Do not apply the device with paint. Smudges might block in the device and affect the operation.
- Do not throw the battery into the fire, or the battery will explode. Damaged batteries may also explode.

All of the above applies to your device, battery and accessories. If any device is not working properly, please take it to the nearest authorized service facility for repair.

Documents / Resources

Copyright © NetScout Technology Co., Ltd.
This document contains proprietary technical information which is the property of NetScout Technology Co., Ltd. It shall be maintained in strict confidence and shall not be disclosed to other parties, in whole or in part, without written permission of NetScout Technology Co., Ltd. The specifications are subject to change without prior notice.

[netvox R312 Wireless Doorbell Button](#) [pdf] User Manual
R312, Wireless Doorbell Button