

netvox R312A Wireless Emergency Button User Manual

Home » netvox » netvox R312A Wireless Emergency Button User Manual





Wireless Emergency Button Model: R312A **User Manual**

Copyright©Netvox Technology Co., Ltd.

This document contains proprietary technical information which is the property of NETVOX Technology. It shall be maintained in strict confidence and shall not be disclosed to other parties, in whole or in part, without written permission of NETVOX Technology. The specifications are subject to change without prior notice

Contents

- 1 Introduction
- 2 Appearance
- 3 Main Features
- 4 Set up Instruction
- **5 Data Report**
- 6 Installation
- 7 Important Maintenance

Instruction

8 Documents / Resources

Introduction

The R312A is a long-range emergency button device for Netvox ClassA type devices based on the LoRaWAN open protocol and is compatible with the LoRaWAN protocol.

LoRa Wireless Technology:

LoRa is a wireless communication technology dedicated to long distance and low power consumption. Compared with other communication methods, LoRa spread spectrum modulation method greatly increases to expand the


communication distance.

Widely used in long-distance, low-data wireless communications. For example, automatic meter reading, building automation equipment, wireless security systems, industrial monitoring. Main features include small size, low power consumption, transmission distance, anti-interference ability and so on.

LoRaWAN:

LoRaWAN uses LoRa technology to define end-to-end standard specifications to ensure interoperability between devices and gateways from different manufacturers.

Appearance

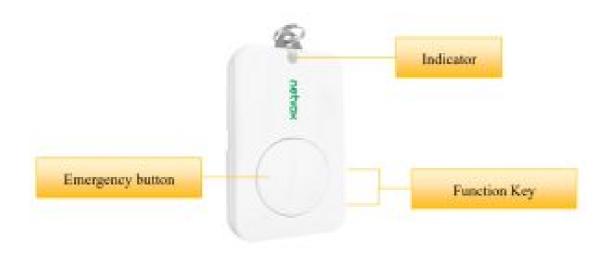

Main Features

- · Compatible with LoRaWAN
- 2 sections of 3V CR2450 button battery power supply
- · Detectable voltage value and emergency button status
- · Simple operation and setting
- · Easy to fix and carry with key ring
- Compatible with LoRaWAN Class A
- Frequency hopping spread spectrum
- Configuration parameters can be configured via a third-party software platform, data can be read and alerts can be set via SMS text and email (optional)
- Applicable to third-party platforms: Actility/ThingPark, TTN, MyDevices/Cayenne
- · Low power consumption and long battery life

Battery Life:

- Please refer to web: http://www.netvox.com.tw/electric/electric calc.html
- At this website, users can find battery life time for varier models at different configurations.

Set up Instruction

On/Off

| Power on | Insert batteries. (users may need a flat blade screwdriver to open); Insert two sections of 3V CR2450 button batteries and close the battery cover.) | | | |
|--|---|--|--|--|
| Turn on | Press any function key till green and red indicator flashes once. | | | |
| Turn off (Restore to factory settin g) | Press and hold both function keys for 5 seconds till green indicator flashes for 20 ti mes. | | | |
| Power off | Press and hold both function keys for 5 seconds till green indicator flashes for 20 times. | | | |
| Note: | Remove and insert the battery; the device memorizes previous on/off state by def ault. On/off interval is suggested to be about 10 seconds to avoid the interference of c apacitor inductance and other energy storage components. Press and hold any function key and insert batteries at the same time; it will ente r engineer testing mode. | | | |

Network Joining

| Never joined the network | Turn on the device to search the network to join. The green indicator stays on fo r 5 seconds: success The green indicator remains off: fail | | | |
|--|---|--|--|--|
| Had joined the network (not at factory setting) | Turn on the device to search the previous network to join. The green indicator st ays on for 5 seconds: success The green indicator remains off: fail | | | |
| Fail to join the network (when the device is on) | It is suggested to check the device verification information on the gateway or consult your platform server provider when the device fails to join the network. | | | |

Function Key

| Press and hold both keys on the side for 5 seconds | Restore to factory setting / Turn off The green indicator flashes for 20 times: success The green indicator remains o ff: fail |
|--|---|
| Press any key on the side on ce | The device is in the network: green indicator flashes once and sends a report T he device is not in the network: green indicator remains off |
| Emergency Button | Default: Press and hold the button for 3 seconds to send an alarm data Remark. Users can configure the button pressing time to send alarm by comma nd |

Sleeping Mode

| The device is on and in the e network | Sleeping period: Min Interval. When the reportchange exceeds setting value or the state changes: send a data re port according to Min Interval. |
|---------------------------------------|---|
|---------------------------------------|---|

Low Voltage Warning

| Low Voltage | 2.4V |
|-------------|------|
| | |

Data Report

The device will immediately send a version packet report along with an uplink packet including alarm status The device sends data in the default configuration before any configuration is done.

Default setting:

Maximum time: Max Interval =1 hour

Minimum time: Min Interval=1 hour (the current voltage value is detected every Min Interval)

Battery Change: 0x01 (0.1V)

Alarm button trigger:

Alarm status: 1 Normal status: 0

Note:

(1) The actual data sending cycle of the device is subject to the programming configuration before shipment.

(2) The interval between two reports must be the minimum time

The data report can be decoded by the Netvox LoraWAN Application Command document and http://loraresolver.netvoxcloud.com:8888/page/index

Report configuration and sending cycle are as follows:

| Min Interval (Unit: second) | Max Interval (Unit: second) | Reportable Chan ge | Current Change≥ Reportable Chan ge | Current Change Reportable Change |
|--------------------------------|-----------------------------------|-----------------------|--|-------------------------------------|
| Any number between 1~65535 | Any number betw een 1~65535 | Can not be 0. | Report per Min Interval | Report per Max Interval |

Example of ConfigureCmd

FPort: 0x07

| Ву | /tes | 1 | 1 | Var (Fix =9 Bytes) |
|----|------|-------|----------------|--------------------|
| | | CmdID | DeviceTyp e | NetvoxPayLoadData |

CmdID-1 byte

DeviceType— 1 byte — Device Type of Device NetvoxPayLoadData— var bytes (Max=9bytes)

| Description | Devic e | Cind ID | Device Type | NetvoxPayLoadData | | | |
|-----------------------------|------------|------------|----------------|----------------------------|----------------------------|------------------------------------|--------------------------------------|
| Config Report Re | | 0x01 | | MinTime (2bytes Unit:s) | MaxTime (2bytes Unit:s) | BatteryChange (lbyte Unit:0.1v) | Reserved (4Bytes, Fixed 0 x00) |
| Config Report Rs p | R312 | 0x81 | 0x4D | Status (0x00_success) | | Reserved (8Bytes,Fixed 0x00) | |
| ReadConfi g ReportReq | A | 0x02 | UNAD | | | erved ixed 0x00) | |
| ReadConfi gR eportRsp | | 0x82 | | MinTime (2bytes Unit:s) | MaxTime (2bytes Unit:s) | BatteryChange (lbyte Unit:0.1v) | Reserved (4Bytes, Fixed 0 x00) |

1. Command Configuration:

MinTime = 1min MaxTime = 1min BatteryChange = 0.1v

Downlink 014D003C003C0100000000 003C(Hex) = 60(Dec)

Response

814D00000000000000000 Configuration success

814D01000000000000000 Configuration failure

2. Read Configuration:

Response

824D003C003C0100000000 Current configuration

Example of Config Button Press Time

FPort 0x0D

Default Press Time 0x03

| Description | CmdID | PayLoad (Fix byte,1byte) |
|-----------------------|-------|---|
| SetButtonPressTimeReq | 0x01 | PressTime (1byte, 0x00_QuickPush_Less then 1 Second, 0x01_1 Second push, 0x02_2 Seconds push, 0x03_3 Seconds push, 0x04_4 Seconds push, 0x05_5 Seconds push, Other value is reserved) |
| SetButtonPressTimeRsp | 0x81 | Status (0x00_Success 0x01_Failure) |
| GetButtonPressTimeReq | 0x02 | |
| GetButtonPressTimeRsp | 0x82 | PressTime (1byte, 0x00_QuickPush_Less then 1 Second, 0x01_1 Second push, 0x02_2 Seconds push, 0x03_3 Seconds push, 0x04_4 Seconds push, 0x05_5 Seconds push, Other value is reserved) |

(1) Command Configuration:

Trigger doorbell after press button 2 seconds

Downlink 0102 *Please notice port number is 0x0D (13) when downlink command

Response 8100 (Configuration success)

8101 (Configuration failure)


(1) Read Configuration:

Downlink 02

Response: 8202 Current configuration

Example for MinTime/MaxTime logic


Example#1 based on MinTime = 1 Hour, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange=0.1V

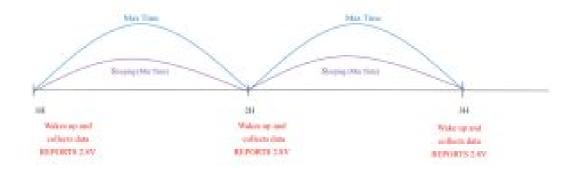


Note:

MaxTime=MinTime. Data will only be report according to MaxTime (MinTime) duration regardless BatteryVoltageChange value.

Example#2 based on MinTime = 15 Minutes, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange= 0.1V.

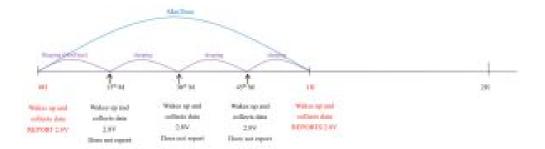

Example#3 based on MinTime = 15 Minutes, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange= 0.1V.

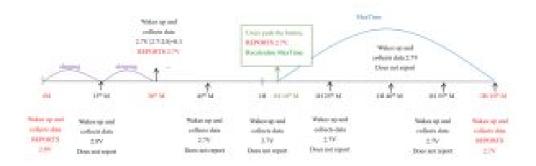


Note:

- 1. The device only wakes up and performs data sampling according to MinTime Interval. When it is sleeping, it does not collect data.
- 2. The data collected is compared with the last data reported. If the data change value is greater than the ReportableChange value, the device reports according to MinTime interval. If the data variation is not greater than the last data reported, the device reports according to MaxTime interval.
- 3. We do not recommend to set the MinTime Interval value too low. If the MinTime Interval is too low, the device wakes up frequently and the battery will be drained soon.
- 4. Whenever the device sends a report, no matter resulting from data variation, button pushed or MaxTime interval, another cycle of MinTime / MaxTime calculation is started.

Installation

- 1. This product does not have a waterproof function. After the screening is completed, please place it indoors.
- 2. The dust at the equipment installation position needs to be wiped clean and then pasted.
- 3. The battery installation method is as shown below (the battery has a "+" side facing outward)

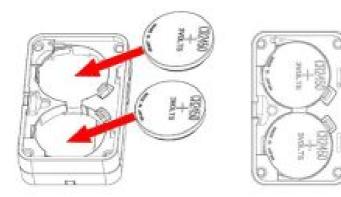

1. The key ring of the portable wireless emergency Button (R312A) can be snapped onto the backpack, the keychain around the waist, or hangs around the neck with a lanyard.

Note:

Do not install the device in a metal shielded box or other electrical equipment around it to avoid affecting the wireless transmission of the device.



2. Press and hole the emergency button for 3 seconds, the "alarm" message is generated.

When the device reports data periodically, it restores the "normal" status and sends "normal" status information.

Note:

When alarming, the data alarm bit is "1";

When it returns to normal, the data alarm bit is "0".



The emergency button (R312A) can be applied to the following scenarios:

- Nursing home
- Family (bathroom)
- School
- Hospital
- Bank
- · Wisdom site
- Wait for scenes where there is a possibility of an emergency.



Important Maintenance Instruction

Kindly pay attention to the following in order to achieve the best maintenance of the product:

- Keep the device dry. Rain, moisture, or any liquid, might contain minerals and thus corrode electronic circuits. If the device gets wet, please dry it completely.
- Do not use or store the device in dusty or dirty environment. It might damage its detachable parts and electronic components.
- Do not store the device under excessive heat condition. High temperature can shorten the life of electronic devices, destroy batteries, and deform or melt some plastic parts.
- Do not store the device in places that are too cold. Otherwise, when the temperature rises to normal temperature, moisture will form inside, which will destroy the board.
- Do not throw, knock or shake the device. Rough handling of equipment can destroy internal circuit boards and delicate structures.
- Do not clean the device with strong chemicals, detergents or strong detergents.
- Do not apply the device with paint. Smudges might block in the device and affect the operation.
- Do not throw the battery into the fire, or the battery will explode. Damaged batteries may also explode.
 All of the above applies to your device, battery and accessories. If any device is not working properly, please take it to the nearest authorized service facility for repair.

Documents / Resources



Manuals+,