



netvox R315 Series Wireless Multi Sensor Device User Manual

[Home](#) » [netvox](#) » netvox R315 Series Wireless Multi Sensor Device User Manual 

Contents

- [1 netvox R315 Series Wireless Multi Sensor Device](#)
- [2 Introduction](#)
- [3 Features](#)
- [4 Appearance](#)
- [5 R315 8 in 1 Combination List](#)
- [6 R315 Sensor Function](#)
- [7 Set up Instruction](#)
- [8 Data Report](#)
- [9 Important Maintenance Instruction](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)

netvox[®]

netvox R315 Series Wireless Multi Sensor Device



Wireless Multi-Sensor Device

R315 Series
User Manual

Copyright© Netvox Technology Co., Ltd.

This document contains proprietary technical information which is the property of NETVOX Technology. It shall be maintained in strict confidence and shall not be disclosed to other parties, in whole or in part, without written permission of NETVOX Technology. The specifications are subject to change without prior notice.

Introduction

R315 series is a multi-sensor device of Netvox's Class A type device based on LoRaWAN open protocol. It can be connected with temperature and humidity, illuminance, door magnetism, internal vibration, external vibration, infrared detection, emergency button, tilt detection, water leakage detection, glass break, seat occupancy detection, dry contact in, DO out related functions (up to 8 types of sensors can be compatible at the same time), and compatible with LoRaWAN protocol.

LoRa Wireless Technology

LoRa is a wireless communication technology dedicated to long distance and low power consumption. Compared with other communication methods, LoRa spread spectrum modulation method greatly increases to expand the communication distance. Widely used in long-distance, low-data wireless communications. For example, automatic meter reading, building automation equipment, wireless security systems, industrial monitoring. Main features include small size, low power consumption, transmission distance, anti-interference ability and so on.

LoRaWAN

LoRaWAN uses LoRa technology to define end-to-end standard specifications to ensure interoperability between devices and gateways from different manufacturers.

Features

- Simple operation and setting
- Compatible with LoRaWAN Class A
- 2 sections of 3V CR2450 button battery power supply
- Frequency hopping spread spectrum technology.
- Available third-party platforms: Actility / ThingPark, TTN, MyDevices/Cayenne

- Low power consumption and long battery life

Note: Please refer to web: http://www.netvox.com.tw/electric/electric_calc.html. Users can find battery lifetime for various models at different configurations on this website.

1. The actual range may vary depending on the environment.
2. Battery life is determined by sensor reporting frequency and other variables

Appearance


R31523

External Sensors

- PIR
- Light
- Reed switch
- Glass break
- Water leak

Internal Sensors

- Temperature & Humidity
- Vibration
- Tilt

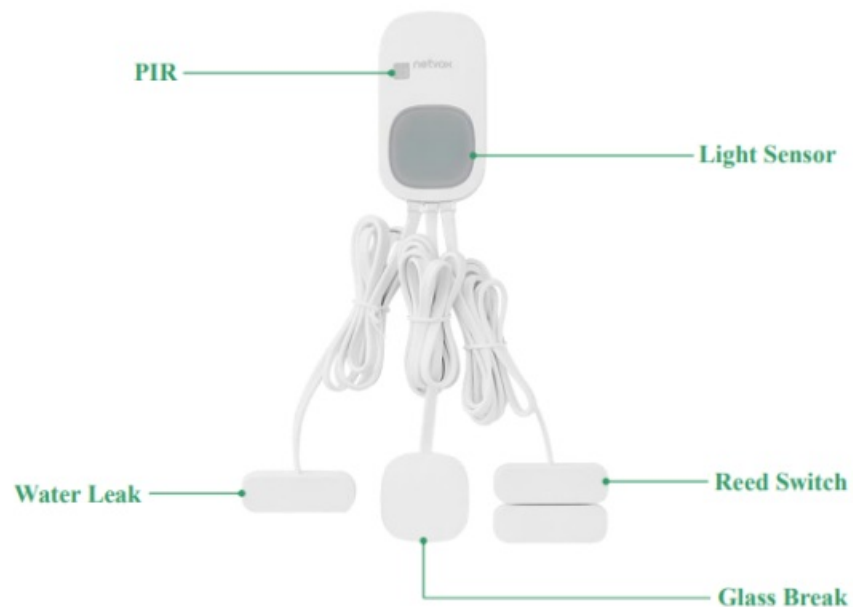

R31538

External Sensors

- PIR
- Reed switch
- Emergency button

R315 55	•			•	•	•	•						•			•	
R315 27	•	•		•	•		•						•			•	
R315 13	•			•	•	•	•	•	•			•					
R315 24	•	•		•	•		•	•	•			•					
R315 59	•			•	•	•	•				•				•		
R315 21	•	•		•	•		•				•				•		
R315 11	•			•	•	•	•	•	•		•						
R315 22	•	•		•	•		•	•	•		•						
R315 94	•			•	•	•	•	•	•	•							
R315 45	•	•		•	•		•	•	•	•							
R315 38	•			•	•	•	•		•	•	•						
R315 31	•	•		•	•		•		•	•	•						
R315 33	•			•	•	•	•	•		•	•						
R315 70	•	•		•	•		•	•		•	•						
R315 101	•			•	•	•	•		•		•			•			
R315 60	•	•		•	•		•		•		•			•			

R315 Sensor Function

Internal Sensors

Temperature & Humidity

Detect ambient temperature and humidity Unit: 0.01°C or 0.01%


Internal Vibration Sensor

- Detect the vibration state of the current device body. Vibration: report 1
- Still: report 0

- Adjust sensitivity:
- Range: 0 to 10; Default: 5
 - The lower the sensitivity value is, the more sensitive the sensor is.
 - Restore function could be set through configuration.
 - Configure sensitivity as 0xFF to turn off the sensor.
- Note: The vibration sensor should be fixed when it is in use.

Tilt Sensor

- Tilt detection
- Device tilt: report 1
- Device remain vertical: report 0
- Range: 45° to 180°
- Set the tilt sensor vertically. (the square part on the lower side)
- Tilt the sensor to any direction.
- Report 1 as the sensor tilts over 45° to 180°.
- Resend function could be configured.

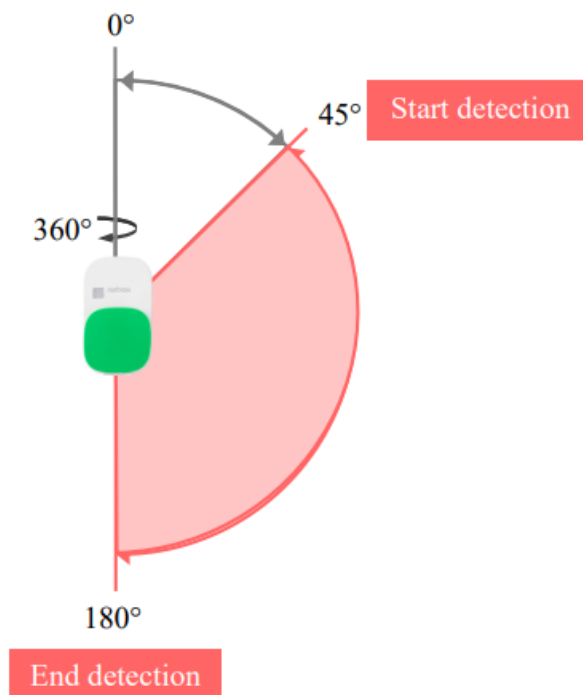

PIR


Default:

- IRRetectionTime: 5 minutes
- IRDisableTime: 30 seconds

Note:


IRDetectionTime: the total process of PIR detection; IR Disable Time: a short segment in IRRetectionTime

When the PIR sensor is not triggered, ...

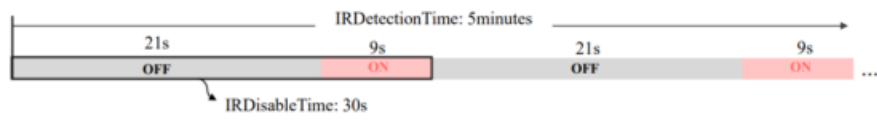

- The PIR sensor stays off in 70% of the IRDisableTime and starts detecting at the last 30% of time.
Note: To save energy, the IRDisableTime is divided into 2 parts: the first 70% (21 seconds) and the rest 30% (9 seconds).
- Once an IRDisableTime ends, the next one will continue until the whole process of IRDetectionTime ends.
- If the PIR sensor is not triggered, it will report “un-occupied” along with other sensors’ data, such as temperature or illuminance right after the IRDetectionTime ends.

When the PIR sensor is triggered, ...

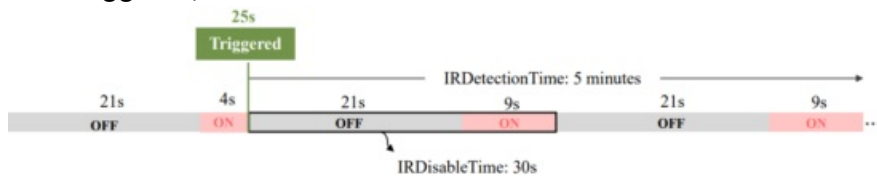


- when the PIR sensor is triggered before an IRDetectionTime ends (at the 25th second), it will report data and restart a new IRDetectionTime.
- If the PIR sensor is not triggered in the IRDetectionTime, it will report “un-occupied” along with other sensors’ data, such as temperature or illuminance right after the IRDetectionTime ends.

External Sensors

- Light Sensor




- Detect ambient illuminance Range: 0 – 3000Lux; unit: 1Lux
- **Glass Break Sensor**

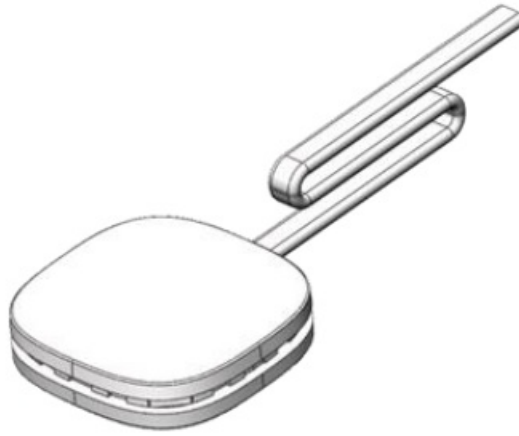


- No broken glass detected: report 0 Broken glass detected: report 1
- **Emergency Button**



- Press the emergency button to report the alarm status.
- No alarm: report 0 Alarm: report 1
- Configurable press duration
- **Reed Switch**

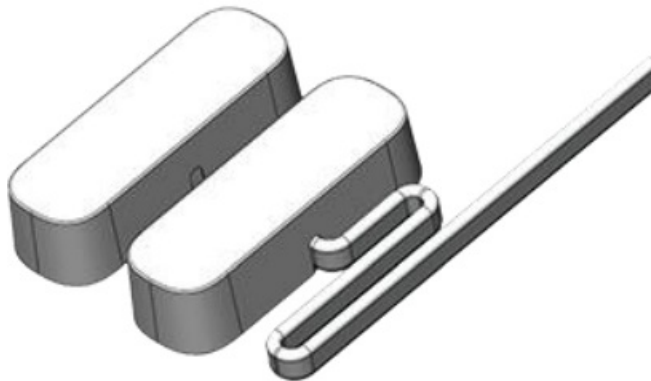


- Detect the opening and closing state of the reed switch. Open: report 1
Close: report 0
- Configurable resend function.
Note: The reed switch should be fixed when it is in use.
- **Water Leak Sensor**

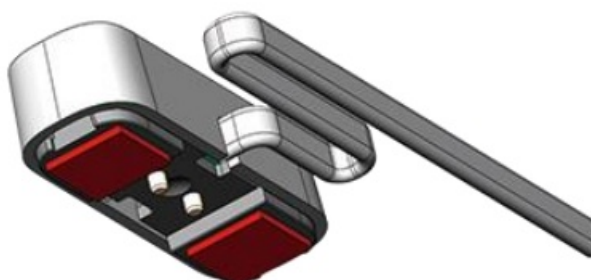


- Water detected: report 1 No water detected: report 0

- **Seat Occupancy Sensor**

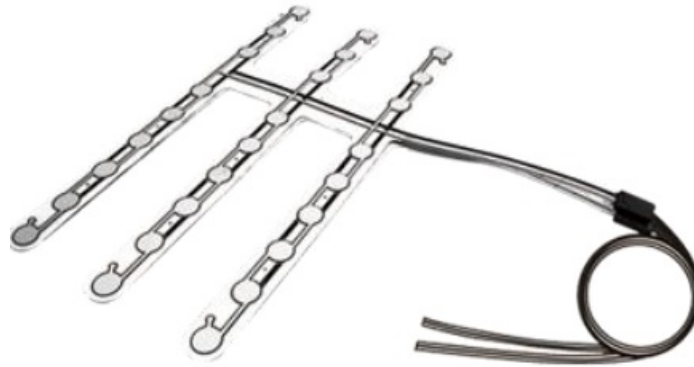

- Seat occupancy detection
Seat being occupied: report 1
- Seat not being occupied: report 0
- Report follows IR disable time and IR detection time rules.

- **External Vibration Sensor**

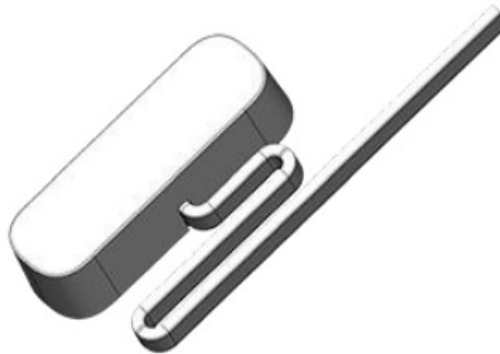

- Detect vibration of external sensor
- Vibration detected: report 1
- Still: report 0
- Adjust sensitivity:
- Range: 0 to 255; Default: 20
- The lower the sensitivity value is, the more sensitive the sensor is.
- Restore function could be set through configuration.
- Configure sensitivity as 0xFF to turn off the sensor.
- Note: The vibration sensor should be fixed when it is in use.

- **Dry contact IN & Digital OUT**



- **Dry contact IN**

Connected: report 1; Disconnected: report 0

- Dry contact can only receive signals from passive switch. Receiving voltage or current would damage the device.

- **Digital OUT**

Connect to tilt sensor, pir, emergency button, reed switch, water leakage sensor, glass break sensor, and internal/external vibration sensor.

- **Default:**

DryContactPointOutType = 0x00 (Normally Open)

Note: DryContactPointOutType and TriggerTime could be configured through commands.

Set up Instruction

On/Off	
Power on	Insert batteries.
Turn on	Short press the function key and the green indicator flashes once.
Turn off (Reset to factory setting)	<p>Step1. Press the function key for more than 8 seconds, and the green indicator light will flash continuously.</p> <p>Step 2. Release the key after the indicator starts flashing, and the device will automatically shut down after the flash ends.</p> <p>Note: The indicator will flash once every 2 seconds.</p>
Power off	Remove Batteries.
Note	<ol style="list-style-type: none"> 1. Please put the battery into the battery holder according to the positive and negative electrodes of the battery and push back the back cover. 2. Two CR2450 button batteries are required to supply power at the same time. 3. The device memorizes the previous on/off state by default even user removes and inserts the batteries. 4. On/off interval should be 10 seconds long to avoid the interference of capacitor inductance and other energy storage components. 5. The device would enter engineer test mode when the user presses the function key and inserts the batteries at the same time.
Network Joining	
Never joined the network	<ul style="list-style-type: none"> • <u>Turn on the device to search the network.</u> • The green indicator stays on for 5 seconds: Success The green indicator remains off: Fail
Had joined the network	<ul style="list-style-type: none"> • <u>Turn on the device to search the previous network.</u> The green indicator stays on for 5 seconds: Success • The green indicator remains off: Fail

Fail to join the network	Please check the device verification information on the gateway with your platform server provider.
Function Key	
Press the function key for more than 8 seconds	<u>Back to factory setting / Turn off</u> The green indicator flashes for 20 times: Success The green indicator remains off: Fail
Press once	<ol style="list-style-type: none"> 1. Network Checking <ul style="list-style-type: none"> • <u>The device is in the network:</u> <ul style="list-style-type: none"> • The green indicator flashes once and sends a report • <u>The device is not in the network:</u> <ul style="list-style-type: none"> • The green indicator remains off 2. Power on the device 3. Turn on the device for the first time after it was set back to the factory setting

Press and hold the function key for 4s	<u>Turn on/off the infrared detection function.</u> The indicator flash once: Success
Sleeping Mode	
The device is on and in the network	<ul style="list-style-type: none"> • Sleeping period: Min Interval. • When the reportchange exceeds setting value or the state changes, the device would send a data report according to Min Interval.
The device is on but not in the network	<ol style="list-style-type: none"> 1. Please remove the batteries if the device is not in use. 2. Please check the device verification information on the gateway with your platform server provider.
Low Voltage Warning	
Low Voltage	2.4V

Data Report

When the device is turned on, it will immediately send a version package. Default Setting:

- Max Interval: 0x0E10 (3600s)
- Min Interval: 0x0E10 (3600s) Note: The device would check the voltage every min interval.
- Battery Change: 0x01 (0.1V)
- Temperature Change: 0x64 (1°C)

- Humidity Change: 0x14 (10%)
- Illuminance Change: 0x64 (100 lux)
- InternalShockSensorSensitivity: 0x05 // Internal Vibration Sensor, Sensitivity Range:0x00–0x0A
ExternalShockSensorSensitivity: 0x14 // External Vibration Sensor, Sensitivity
- Range:0x00-0xFE RestoreReportSet: 0x00 (DO NOT report when sensor restore) // Vibration Sensor
- DisableTime: 0x001E (30s)
- DectionTime: 0x012C (300s)
- AlarmONTime: 0x0F (15s) // Buzzer
- DryContactPointOutType: Normally Open

Note:

1. The interval between two reports must be the minimum time.
2. The reported data is decoded by the Netvox LoRaWAN Application Command document and <http://www.netvox.com.cn:8888/cmddoc>.

Data report configuration and sending period are as follows:

Min Interval (Unit: second)	Max Interval (Unit: second)	Reportable Change	Current Change ≥ Reportable Change	Current Change Reportable Change
Any number between 1–65535	Any number between 1–65535	Cannot be 0	Report per Min Interval	Report per Max Interval

Example of ReportDataCmd

FPort 0x06

Bytes	1	1	1	Var (Fix=8 Bytes)
	Version	DeviceType	ReportType	NetvoxPayloadData

- Version– 1 byte –0x01—the Version of NetvoxLoRaWAN
- Application Command Version DeviceType– 1 byte – Device Type of Device
- ReportType – 1 byte –the presentation of the NetvoxPayloadData, according the devicetype
- NetvoxPayloadData– Fixed bytes (Fixed =8bytes)

Tips

1. Battery Voltage:

The voltage value is bit 0 – bit 6, bit 7=0 is normal voltage, and bit 7=1 is low voltage.

Battery=0x98, binary=1001 1000, if bit 7= 1, it means low voltage.

The actual voltage is 0001 1000 = 0x18 = 24, 24*0.1v =2.4v

2. Version Packet:

When Report Type=0x00 is the version packet, such as 01D2000A03202308150000, the firmware version is

2023.08.15.

3. Data Packet:

When Report Type=0x01 is data packet.

(If the device data exceeds 11 bytes or there are shared data packets, the Report Type will have different values.)

4. Signed Value:

When the temperature is negative, 2's complement should be calculated.

Version	Device Type	Report Type	NetvoxPayloadData			
0x01	0x D2	0x00	SoftwareVersion (1 byte) E.g.0x0A-V1.0	HardwareVersion (1 byte)	DateCode (4 bytes) e.g. 0x20170503	Reserved (2 bytes)
		0x01	Battery (1 byte, unit: 0.1v)	Temperature (2 bytes, unit: 0.01°C)	Humidity (2 bytes, unit: 0.01%)	Reserved (3 bytes)

				<ul style="list-style-type: none">FunctionEnableBits (3 bytes)BIT0: THSensor BIT1: LightSensor BIT2: PIRSensorBIT3: EmergencyButton BIT4: TiltSensorBIT5: InternalContactSwitchBIT6: ExternalContactSwitch1BIT7: ExternalContactSwitch2 BIT8: Internal ShockSensor BIT9: ExternalShockSensor	<ul style="list-style-type: none">BinarySensorReport (2 bytes)Bit0: IRSensorState (0b01_ON, 0b00_OFF)Bit1: EmergenceButtonAlarmState (0b01_Alarm, 0b00_NoAlarm)Bit2: TiltSensorState (0b01_ON, 0b00_OFF)Bit3: InternalContactSwitchSensorState (0b01_ON, 0b00_OFF)Bit4: ExternalContactSwitch1SensorState (0b01_ON, 0b00_OFF)Bit5: ExternalContactSwitch2SensorState (0b01_ON, 0b00_OFF)Bit6: InternalShockSensorState (0b01_ON, 0b00_OFF)Bit7: ExternalShockSensorState (0b01_ON, 0b00_OFF)	
--	--	--	--	---	--	--

			<div>or</div> <ul style="list-style-type: none">• BIT10:• ExternalDryContactPointIN BIT11: DryContactPointOut• BIT12:• ExternalWaterLeakSenor1• BIT13:• ExternalWaterLeakSenor2 BIT14: ExternalSeatSensor• BIT15:• ExternalGlassSensor1• BIT16:• ExternalGlassSensor2 BIT17-BIT23: Reserved• When BIT is 1, the function is enabled	<div>nsorState (0b01_ON, 0b00_OFF)</div> <ul style="list-style-type: none">• Bit8: ExternalDryContactPointINState (0b01_ON, 0b00_OFF)• Bit9: ExternalWaterLeak1SensorState (0b01_ON, 0b00_OFF)• Bit10: ExternalWaterLeak2SensorState (0b01_ON, 0b00_OFF)• Bit11: ExternalSeatSensorState (0b01_ON, 0b00_OFF)• Bit12: ExternalGlassSensor1State (0b01_ON, 0b00_OFF)• Bit13: ExternalGlassSensor2State (0b01_ON, 0b00_OFF)• BIT15: HeartBeat• (0b01_Heartbeat, 0b00_NOTHeartbeat)	<div>Reserved (2 byte, fixed 0x00)</div>
		0x11	Battery (1 byte, unit:0.1V)		

		0x12	Battery (1 byte, unit:0.1V)	<ul style="list-style-type: none"> • Temperature • (Signed 2 bytes, unit: 0.01°C) • (When THSensorBit is 0 in the FunctionEnable Bits, the filed is fixed 0xFFFF) 	<ul style="list-style-type: none"> • Humidity (2 bytes, unit: 0.01%) • (When THSensorBit is 0 in the FunctionEnable Bits, the filed is fixed 0xFFFF) 	illuminance (2 bytes, unit: 1 Lux) (When LightSensor is 0 in the FunctionEnable Bits, the filed is fixed 0xFFFF)	<ul style="list-style-type: none"> • ThresholdAlarm (1 byte) • Bit0_Low Temperature Alarm • Bit1_High TemperatureAlarm • Bit2_Low Humidity Alarm • Bit3_High Humidity Alarm • Bit4_Low illuminance Alarm • Bit5_High illuminance Alarm • Bit6-7: Reserved • (The Multi-Same ExternalSensor Don't Support this field)
--	--	------	-----------------------------	--	--	---	---

Note: R315 series would report 2 packets (DeviceType 0x11 and 0x12) when the light sensor and TH sensor are on. The interval of two packets would be 10 seconds. Only one packet (DeviceType 0x11) would be reported as the light sensor and TH sensor are off.

Example of Uplink1: 01D2111C01815700550000

- 1st byte (01): Version
- 2nd byte (D2): DeviceType – R315
- 3rd byte (11): ReportType
- 4th byte (1C): Battery–2.8V, 1C (HEX) = 28 (DEC), $28 * 0.1v = 2.8v$
- 5th – 7th byte (018157): FunctionEnableBits, 0x018157 = 0001 1000 0001 0101 0111 (BIN) //Bit 0, 1, 2, 4, 6, 8, 15, 16 =1 (enable)
- Bit0: Temperature and Humidity Sensor Bit1: Light Sensor
- Bit2: PIR Sensor
- Bit4: Tilt Sensor
- Bit6: External Contact Switch 1
- Bit8: Internal Shock Sensor
- Bit15: External Glass Sensor 2
- Bit16: External Glass Sensor 2
- 8th – 9th byte (0055): BinarySensorReport, 0x0055 = 0000 0000 0101 0101 //Bit 0, 2, 4, 6 = 1 (enable)
- Bit0: PIR Sensor
- Bit1: EmergenceButtonAlarm Bit2: TiltSensor
- Bit4: ExternalContactSwitch1 Bit6: InternalShockSensor
- 10th –11th byte (0000): Reserved
- Example of Uplink2: 01D2121C0B901AAA009900
- 1st byte (01): Version
- 2nd byte (D2): DeviceType – R315
- 3rd byte (12): ReportType
- 4th byte (1C): Battery – 2.8V, 1C (HEX) = 28 (DEC), $28 * 0.1v = 2.8v$
- 5th–6th (0B90): Temperature – 29.60°, 0B90 (HEX) = 2960 (DEC), $2960 * 0.01^{\circ} = 29.60^{\circ}$ 7th–8th (1AAA): Humidity – 68.26%, 1AAA (HEX) = 6826 (DEC), $6826 * 0.01\% = 68.26\%$
- 9th–10th (0099): illuminance – 153Lux, 0099 (HEX) = 153 (DEC), $153 * 1Lux = 153Lux$ 11th (00): ThresholdAlarm, 0x00 = 0000 0000 (BIN)

Example of ConfigureCmd

FPort: 0x07

Bytes	1	1	Var (Fix = 9 Bytes)
	CmdID	DeviceType	NetvoxPayLoadData

- CmdID– 1 byte
- DeviceType– 1 byte – Device Type of Device
- NetvoxPayLoadData– var bytes (Max = 9 bytes)

Description	Cmd ID	Device Type	NetvoxPayLoadData					
ConfigReport Req	0x01		MinTime (2 bytes, Unit: s)	MaxTime (2 bytes, Unit: s)	BatteryChange (1 byte, Unit: 0.1v)	Temperature Change (2 bytes, Unit: 0.01 °C)	HumidityChange (1 byte, Unit: 0.5 %)	Illuminancechange (1 byte, Unit: 1 Lux)
ConfigReport Rsp	0x81		Status (0x00_success)		Reserved (8 bytes, Fixed 0x00)			
ReadConfig Re								
portReq	0x02		Reserved (9 bytes, Fixed 0x00)					

ReadConfig ReportRsp	0x82		MinTime (2 bytes, Unit: s)	MaxTime (2 bytes, Unit: s)	BatteryChange (1 byte, Unit: 0.1v)	Temperature Change (2 byte, Unit: 0.01 °C)	HumidityChange (1 byte, Unit: 0.5 %)	Illuminancechange (1 byte, Unit: 1 Lux)
			PIREnable					
SetPIREnable			(1 byte,		Reserved			
Req	0x03		0x00_Disable,		(8 bytes, Fixed 0x00)			
			0x01_Enable)					
		0xD2						
SetPIREnable			Status		Reserved			
Rsp	0x83		(0x00_success)		(8 bytes, Fixed 0x00)			
GetPIREnable Req	0x04		Reserved (9 bytes, Fixed 0x00)					
			PIREnable					
GetPIREnable			(1 byte,		Reserved			
Rsp	0x84		0x00_Disable,		(8 bytes, Fixed 0x00)			
			0x01_Enable)					

SetShockSens orSensitivityReq	0x05		InternalShock SensorSensitivity (1 byte, 0xFF represents disable ShockSensor)	ExternalShockSensor Sensitivity (1 byte, 0xFF represents disable ShockSensor)	Reserved (7 bytes, Fixed 0x00)
SetShockSens orSensitivityResp	0x85		Status (0x00_success)	Reserved (8 bytes, Fixed 0x00)	

GetShockSens					
orSensitivityReq	0x06		Reserved (9 bytes, Fixed 0x00)		
GetShockSens orSensitivityResp	0x86		InternalShockSensor Sensitivity (1 byte, 0xFF represents disable ShockSensor)	ExternalShockSensor Sensitivity (1 byte, 0xFF represents disable ShockSensor)	Reserved (7 bytes, Fixed 0x00)

SetIRDisableTImeReq	0x07	IRDisableTime (2 bytes, Unit: s)	IRDetectionTime (2 bytes, Unit: s)	SensorType (1 byte, 0x00 - PIR Sensor, 0x01 - Seat Sensor)	Reserved (4 bytes, Fixed 0x00)
SetIRDisableTImeRsp	0x87	Status (0x00_success)	Reserved (8 bytes, Fixed 0x00)		
		SensorType			
GetIRDisableTImeReq		(1 byte, 0x00_PIRSensor,	Reserved (8 bytes, Fixed 0x00)		

		0x01_SeatSensor)	
GetIRDisable TimeRsp	0x88	IRDisableTime (2 bytes, Unit: s)	IRDetectionTime (2 bytes, Unit: s) Reserved (5 bytes, Fixed 0x00)
SetAlarmOnTimeReq	0x09	AlarmONTime (2 bytes, Unit: 1s)	Reserved (7 bytes, Fixed 0x00)
SetAlarmOnTimeRsp	0x89	Status (0x00_success)	Reserved (8 bytes, Fixed 0x00)
GetAlarmOnTimeReq	0x0A	Reserved (9 bytes, Fixed 0x00)	
GetAlarmOnTimeRsp	0x8A	AlarmONTime (2 bytes, Unit: 1s)	Reserved (7 bytes, Fixed 0x00)
SetDryContactPointOutTypeReq	0x0B	DryContactPointOutType (1 byte, 0x00_Normally Open 0x01_Normally Close)	Reserved (7 bytes, Fixed 0x00)
SetDryContactPointOutTypeRsp	0x8B	Status (0x00_success)	Reserved (8 bytes, Fixed 0x00)

GetDryContac			
tPointOutType	0x0C		Reserved (9 bytes, Fixed 0x00)
Req			
GetDryContac tPointOutType Rsp	0x8C	DryContactPointOut Type (1 byte, 0x00_Normally Open 0x01_Normally Clo se)	Reserved (7 bytes, Fixed 0x00)
		RestoreReportSet	
SetRestoreRe p ortReq	0x0D	(1 byte) 0x00_DO NOT repo rt when sensor rest ore	Reserved (8 bytes, Fixed 0x00)
		0x01_DO report wh en sensor restore	
SetRestoreRe p ortRsp	0x8D	Status (0x00_success)	Reserved (8 bytes, Fixed 0x00)
GetRestoreRe			
portReq	0x0E		Reserved (9 bytes, Fixed 0x00)
GetRestoreRe portRsp	0x8E	RestoreReportSet (1 byte) 0x00_DO N OT report when sen sor restore 0x01_DO report wh en sensor restore	Reserved (8 bytes, Fixed 0x00)

Note: Restore Function (only for internal vibration sensor and external vibration sensor)

- RestoreReportSet = 0x00 – send data as the sensor detects vibration;
- RestoRereportSet = 0x01 – sends data as vibration is detected and when vibration stops When the light sensor is on, the data will be sent 30 seconds after the vibration stops.

Configure device parameters

1. Configure device parameters

MinTime = 1min (0x3C), MaxTime = 1min (0x3C), BatteryChange = 0.1v (0x01), TemperatureChange=10°C (0x3E8),

HumidityChange = 20% (0x28), Illuminancechange=100lux (0x64)

Downlink: 01D2003C003C0103E82864

Response: 81D20000000000000000 (configuration success)

81D2010000000000000000 (configuration fail)

2. Read configuration

Downlink: 02D20000000000000000

Response: 82D2003C003C0103E82864 (device current parameter)

Example of ResendtimeCmd

(for resending time of reed switch and tilt sensor)

FPort: 0x07

Description	Device	Cmd ID	Device Type	NetvoxPayloadData	
SetLastMessageResendtimeReq	only used in contactswitch devicetype	0x1F	0xFF	Resendtime (1 byte, Unit: 1s, range: 3-254s), when 0 or 255 no resend, default is no resend	Reserved (8 bytes, Fixed 0x00)
SetLastMessageResendtimeRsp		0x9F		Status (0x00_success)	Reserved (8 bytes, Fixed 0x00)
GetLastMessageResendtimeReq		0x1E		Reserved (9 bytes, Fixed 0x00)	
GetLastMessageResendtimeRsp		0x9E		Resendtime (1 byte, Unit:1s, range: 3-254s), when 0 or 255 no resend, default is no resend	Reserved (8 bytes, Fixed 0x00)

1. Configure device parameters

Resendtime= 5s

Downlink: 1FFF0500000000000000

Response: 9FFF0000000000000000 (configuration success)

9FFF010000000000000000 (configuration fail)

2. Read configuration

Downlink: 1EFF0000000000000000

Response: 9EFF0500000000000000 (device current parameter)

Example of ConfigButtonPressTime (EmergenceButton)

FPort 0x0D

Description	CmdID	PayLoad (Fix byte, 1 byte)
SetButtonPressTimeReq	0x01	PressTime (1 bytes) 0x00_QuickPush_Less then 1 Second OtherValue present the presstime such as 0x01_1 Second push 0x02_2 Seconds push 0x03_3 Seconds push 0x04_4 Seconds push 0x05_5 Seconds push 0x06_6 Seconds push, and so on
SetButtonPressTimeRsp	0x81	Status (0x00_Success; 0x01_Failure)
GetButtonPressTimeReq	0x02	Reserved (1 byte, Fixed 0x00)
GetButtonPressTimeRsp	0x82	PressTime (1 byte) 0x00_QuickPush_Less then 1 Second OtherValue present the presstime such as 0x01_1 Second push 0x02_2 Seconds push 0x03_3 Seconds push 0x04_4 Seconds push 0x05_5 Seconds push 0x06_6 Seconds push, and so on

Default: presstime = 3s

1. Configure device parameters

Presstime= 5s

Downlink: 0105

Response: 8100 (configuration success)

8101 (configuration fail)

2. Read configuration

Downlink: 0200

Response: 8205 (device current parameter)

ConfigDryContactINTriggerTime (Bi-Direction)

FPort 0x0F

Description	CmdID	PayLoad (Fix byte, 2 byte)	
SetDryContactINTriggerTime Req	0x01	MinTriggeTime (2 bytes) (Unit: 1ms, Default 50ms)	
SetDryContactINTriggerTime Rsp	0x81	Status (0x00_Success; 0x01_Failure)	Reserved (1 byte, Fixed 0x00)
GetDryContactINTriggerTime Req	0x02	Reserved (2 byte, Fixed 0x00)	
GetDryContactINTriggerTime Rsp	0x82	MinTriggeTime (2 bytes) (Unit: 1ms, Default 50ms)	

Default: MinTriggerTime = 50ms

1. Configure device parameters

MinTriggeTime = 100ms

Downlink: 010064

Response: 810000 (configuration success)

810100 (configuration fail)

2. Read configuration

Downlink: 020000

Response: 820064 (device current parameter)

Set/GetSensorAlarmThresholdCmd

Fport:0x10

Cmd	CmdID	Payload (10 bytes)			
Descriptor	(1 byte)				
			SensorType		
		Channel (1 byte,	(1 byte,	SensorHighThreshold	SensorLowThreshold

SetSensorAlarm ThresholdReq	0x01	0x00_Channel1, 0x01_Channel2, 0x02_Channel3, etc)	0x00_Disable ALL SensorthresholdSet 0x01_Temperature , 0x02_Humidity, 0x05_illuminance,)	(4 bytes, Unit: same as reportdata in fport6, 0Xffffff_DISALBLE r HighThreshold)	(4 bytes, Unit:same as reportdata in fpo rt6, 0Xffffff_DISALBLE r HighThreshold)
SetSensorAlarm ThresholdRsp	0x81	Status (0x00_succe ss)	Reserved (9 bytes, Fixed 0x00)		
		Channel (1 byte,	SensorType		
GetSensorAlarm ThresholdReq	0x02	0x00_Channel1, 0x01_Channel2, 0x02_Channel3, etc)	(1 byte, Same as the SetSensorAlarmTh resh oldReq's Sen sorType)	Reserved (8 bytes, Fixed 0x00)	
		Channel (1 byte,	SensorType	SensorHighThresho ld	SensorLowThreshol d
GetSensorAlarm ThresholdRsp	z0x82	0x00_Channel1, 0x01_Channel2, 0x02_Channel3, etc)	(1 byte, Same as the SetS ensorAlarmThresh oldReq's SensorT ype)	(4 bytes, Unit: same as reportdata in fport6, 0Xffffff_DISALBLE r HighThreshold)	(4 bytes, Unit: same as reportdata in fpo rt6, 0Xffffff_DISALBLE r HighThreshold)
SetThresholdAla rm CheckCntReq	0x03	ThresholdAlarmCh eck Cn (1 byte)	Reserved (9 bytes, Fixed 0x00)		
SetThresholdAla rm CheckCntRsp	0x83	Status (0x00_succe ss)	Reserved (9 bytes, Fixed 0x00)		

GetThresholdAlarm CheckCntReq	0x04	Reserved (10 bytes, Fixed 0x00)	
GetThresholdAlarm CheckCntRsp	0x84	ThresholdAlarmCheck Cn (1 byte)	Reserved (9 bytes, Fixed 0x00)

Note:

- SensorHighThreshold and SensorLowThreshold = 0xFFFFFFFF by default as the thresholds are not set.
- Channel could only be set and started from 0x00_Channel1 when users adjust the sensor thresholds.
- SensorType = 0 when all thresholds are erased.

1. Configure device parameters

SensorHighThreshold = 40°C (0FA0), SensorLowThreshold = 10°C (03E8)

Downlink: 01000100000FA0000003E8

Response: 8100000000000000000000 (configuration success)

2. Read configuration

Downlink: 020001000000000000000000

Response: 82000100000FA0000003E8 (device current parameter)

3. Configure detection parameters

ThresholdAlarmCheckCn = 3

Downlink: 030300000000000000000000

Response: 830000000000000000000000

4. Read configuration

Downlink: 040000000000000000000000

Response: 840300000000000000000000

NetvoxLoRaWANRejoin

(**Note:** check if the device is still in the network. If the device is disconnected, it will automatically rejoin back to the network.)

Fport: 0x20

CmdDescriptor	CmdID(1Byte)	Payload(5Bytes)	
SetNetvoxLoRaWANRejoinReq	0x01	RejoinCheckPeriod (4 bytes, Unit: 1s) 0xFFFFFFFF Disable Netvox LoRaWANRejoinFunction)	RejoinThreshold (1 byte)
SetNetvoxLoRaWANRejoinRsp	0x81	Status (1 byte, 0x00_success)	Reserved (4 bytes, Fixed 0x00)
GetNetvoxLoRaWANRejoinReq	0x02	Reserved (5 Bytes, Fixed 0x00)	
GetNetvoxLoRaWANRejoinRsp	0x82	RejoinCheckPeriod (4 bytes, Unit: 1s)	RejoinThreshold (1 byte)

Note:

- Set RejoinCheckThreshold as 0xFFFFFFFF to stop the device from rejoining the network.
- The last configuration would be kept as users reset the device back to the factory setting.
- Default setting: RejoinCheckPeriod = 2 (hr) and RejoinThreshold = 3 (times)

1. Configure device parameters

RejoinCheckPeriod = 60min (0xE10), RejoinThreshold = 3 times (0x03)

Downlink: 0100000E1003

Response: 810000000000 (configuration success)

810100000000 (configuration fail)


2. Read configuration

Downlink: 020000000000

Response: 8200000E1003


Example for MinTime/MaxTime logic

Example#1 based on MinTime = 1 Hour, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange=0.1V

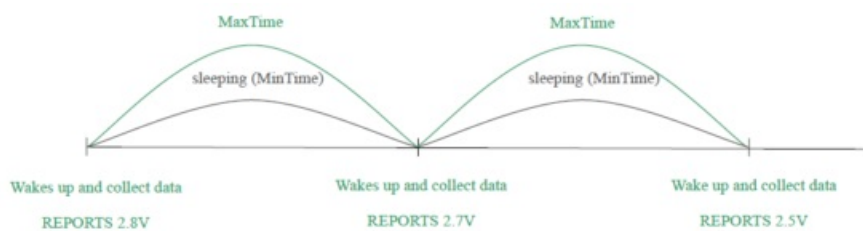


Note: MaxTime = MinTime. Data will only be reported according to MaxTime (MinTime) duration regardless BatteryVoltageChange value.

Example#2 based on MinTime = 15 Minutes, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange= 0.1V.

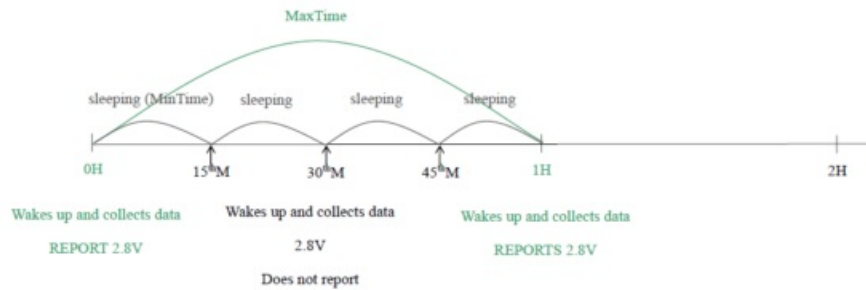

Example#3 based on MinTime = 15 Minutes, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange= 0.1V.

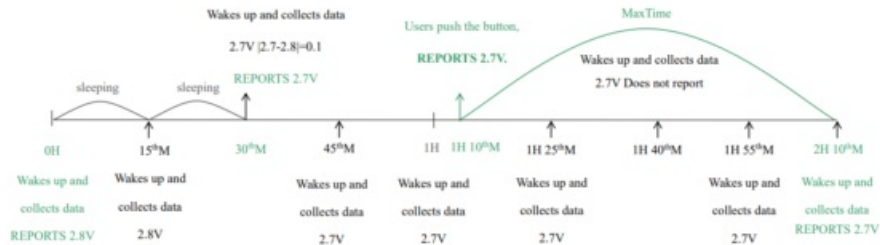

Notes:

1. The device only wakes up and performs data sampling according to MinTime Interval. When it is sleeping, it does not collect data.
2. The data collected is compared with the last data reported. If the data change value is greater than the ReportableChange value, the device reports according to MinTime interval. If the data variation is not greater than the last data reported, the device reports according to MaxTime interval.
3. We do not recommend to set the MinTime Interval value too low. If the MinTime Interval is too low, the device wakes up frequently and the battery will be drained soon.
4. Whenever the device sends a report, no matter resulting from data variation, button pushed or MaxTime interval, another cycle of MinTime / MaxTime calculation is started.

Important Maintenance Instruction

Kindly pay attention to the following in order to achieve the best maintenance of the product:

- Keep the device dry. Rain, moisture, or any liquid might contain minerals and thus corrode electronic circuits. If the device gets wet, please dry it completely.
- Do not use or store the device in a dusty or dirty environment. It might damage its detachable parts and electronic components.
- Do not store the device under excessively hot conditions. High temperatures can shorten the life of electronic devices, destroy batteries, and deform or melt some plastic parts.
- Do not store the device in places that are too cold. Otherwise, when the temperature rises to normal temperature, moisture will form inside, which will destroy the board.
- Do not throw, knock, or shake the device. Rough handling of equipment can destroy internal circuit boards and delicate structures.
- Do not clean the device with strong chemicals, detergents, or strong detergents.
- Do not apply the device with paint. Smudges might block the device and affect the operation.
- Do not throw the battery into the fire, or the battery will explode. Damaged batteries may also explode.

All of the above applies to your device, battery, and accessories. If any device is not working properly, please take it to the nearest authorized service facility for repair.

Documents / Resources

	<p>netvox R315 Series Wireless Multi Sensor Device [pdf] User Manual</p> <p>R315 Series Wireless Multi Sensor Device, R315 Series, Wireless Multi Sensor Device, Multi S ensor Device, Sensor Device, Device</p>
---	--

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.