



# netvox R718AB Wireless Temperature and Humidity Sensor User Manual

[Home](#) » [netvox](#) » netvox R718AB Wireless Temperature and Humidity Sensor User Manual 

## Contents

- [1 netvox R718AB Wireless Temperature and Humidity Sensor](#)
- [2 Introduction](#)
- [3 Appearance](#)
- [4 Main Features](#)
- [5 Set up Instruction](#)
- [6 Data Report](#)
- [7 Installation](#)
- [8 Battery installation steps](#)
- [9 Information about Battery Passivation](#)
- [10 Important Maintenance Instruction](#)
- [11 Documents / Resources](#)
  - [11.1 References](#)
- [12 Related Posts](#)



**netvox R718AB Wireless Temperature and Humidity Sensor**



## Introduction

R718AB, mainly used to detect the temperature and humidity. It collects data over LoRa network and sends it to devices to be shown, fully compatible with LoRa protocol.

### LoRa Wireless Technology:

LoRa is a wireless communication technology dedicated to long distance and low power consumption. Compared with other communication methods, LoRa spread spectrum modulation method greatly increases to expand the communication distance. Widely used in long-distance, low-data wireless communications. For example, automatic meter reading, building automation equipment, wireless security systems, industrial monitoring. Main features include small size, low power consumption, transmission distance, anti-interference ability and so on.

### LoRaWAN:

LoRaWAN uses LoRa technology to define end-to-end standard specifications to ensure interoperability between devices and gateways from different manufacturers.

## Appearance



## Main Features

- Compatible with LoRa protocol.
- 2 x ER14505 AA lithium batteries (3.6V/ section)
- Capable to detect the ambient temperature and humidity
- Simple and easy installation
- IP rating IP65
- Compatible with LoRaWANTM Class A
- Frequency hopping spread spectrum
- Configuration parameters can be configured via a third-party software platform, data can be read and alerts can be set via SMS text and email (optional)
- Applicable to third-party platforms: Actility/ThingPark, TTN, MyDevices/Cayenne
- Improved power management for longer battery life
- Battery Life:
  - Please refer to web: [http://www.netvox.com.tw/electric/electric\\_calc.html](http://www.netvox.com.tw/electric/electric_calc.html)
  - At this website, users can find battery life time for variety models at different configurations.
    - Actual range may vary depending on environment.
    - Battery life is determined by sensor reporting frequency and other variables.

## Set up Instruction

### On/Off

On/Off	
Power on	Insert batteries. (users may need a flat blade screwdriver to open)
Turn on	Press and hold the function key for 3 seconds till the green indicator flashes once.
Turn off (Restore to factory setting)	Press and hold the function key for 5 seconds till green indicator flashes for 20 times.
Power off	Remove Batteries.
Note	<ol style="list-style-type: none"> <li>1. Remove and insert the battery; the device is at off state by default.</li> <li>2. On/off interval is suggested to be about 10 seconds to avoid the interference of capacitor inductance and other energy storage components.</li> <li>3. At 1st -5th second after power on, the device will be in engineering test mode.</li> </ol>
<b>Network Joining</b>	

Never joined the network	<p>Turn on the device to search the network to join. The green indicator stays on for 5 seconds: success</p> <p>The green indicator remains off: fail</p>
Had joined the network (not at factory setting)	<p>Turn on the device to search the previous network to join. The green indicator stays on for 5 seconds: success</p> <p>The green indicator remains off: fail</p>
<b>Function Key</b>	
Press and hold for 5 seconds	<p>Restore to factory setting / Turn off</p> <p>The green indicator flashes for 20 times: success The green indicator remains off: fail</p>
Press once	<p>The device is in the network: green indicator flashes once and sends a report</p> <p>The device is not in the network: green indicator remains off</p>
<b>Sleeping Mode</b>	
The device is on and in the network	<p>Sleeping period: Min Interval.</p> <p>When the reportchange exceeds setting value or the state changes: send a data report according to Min Interval.</p>
<b>Low Voltage Warning</b>	
Low Voltage	3.2V

## Data Report

The device will immediately send a version packet report along with an uplink packet including temperature, humidity and battery voltage. The device sends data in the default configuration before any configuration is done.

**Default setting:**

- MaxTime: Max Interval = 15 min = 900s
- MinTime: Min Interval = 15 min = 900s
- BatteryChange: 0x01 (0.1V)
- TemperatureChange:0x0064 (1°C)
- HumidityChange:0x0064 (1%)

**Note:**

The device report interval will be programmed based on the default firmware which may vary. The interval between two reports must be the minimum time.

Please refer Netvox LoRaWAN Application Command document and Netvox Lora Command Resolver <http://www.netvox.com.cn:8888/page/index> to resolve uplink data.

**Data report configuration and sending period are as following:**

Min Interval  (Unit:second)	Max Interval  (Unit:second)	Reportable Change	Current Change≥  Reportable Change	Current Change  Reportable Change
Any number between n  1~65535	Any number between n  1~65535	Can not be 0.	Report  per Min Interval	Report  per Max Interval

**Example of ReportDataCmd****FPort 0x06**

Bytes	1	1	1	Var(Fix=8 Bytes)
	Version	DeviceType	ReportType	NetvoxPayLoadData

- Version– 1 byte –0x01—the Version of NetvoxLoRaWAN Application Command Version
- DeviceType– 1 byte – Device Type of Device The devicetype is listed in Netvox LoRaWAN Application Devicetype doc
- ReportType – 1 byte –the presentation of the NetvoxPayLoadData according the devicetype
- NetvoxPayLoadData– Fixed bytes (Fixed =8bytes)

Device	Device Type	Report Type	NetvoxPayLoadData			
R718AB	0x13	0x01	Battery (1Byte, unit:0.1V)	Temperature (Signed2Bytes,unit:0.01°C)	Humidity (2Bytes,unit:0.01%)	Reserved (3Bytes,fixed 0x00)

#### Example of Uplink: 0113012406701A9E000000

- 1st byte (01): Version
- 2nd byte (13): DeviceType 0x13 R718AB
- 3rd byte (01): ReportType
- 4th byte (24): Battery 24(HEX)=36(DEC), $36 \times 0.1v = 3.6v$
- 5th 6th byte (0670): Temperature 0670(HEX)=1648(DEC), $1648 \times 0.01^\circ C = 16.48^\circ C$
- 7th 8th byte (1A9E): Humidity 1A9E(HEX)=6814(DEC), $6814 \times 0.01\% = 68.14\%$
- 9th ~11th byte (000000): Reserved

#### Example of Uplink: 01130124FF391A9E000000

- 1st byte (01): Version
- 2nd byte (13): DeviceType 0x13 R718AB
- 3rd byte (01): ReportType
- 4th byte(24): Battery 24(HEX)=36(DEC), $36 \times 0.1v = 3.6v$
- 5th 6th byte (FF39): Temperature FF39(HEX)=-199(DEC), $-199 \times 0.01^\circ C = -1.99^\circ C$
- 7th 8th byte (1A9E): Humidity 1A9E(HEX)=6814(DEC), $6814 \times 0.01\% = 68.14\%$

The value of temperature field is a signed integer and the highest bit represent positive (0) or negative (1). If the value represent negative number, we need to calculate complement.

#### Example of ConfigureCmd

FPort 0x07

Bytes	1	1	Var (Fix =9 Bytes)
	CmdID	DeviceType	NetvoxPayLoadData

- CmdID– 1 byte
- DeviceType– 1 byte – Device Type of Device
- NetvoxPayLoadData– var bytes (Max=9bytes)

Description	Device	Cmd ID	Device Type	NetvoxPayLoadData					
Config ReportReq	R718AB	0x01	0x13	MinTime (2bytes Unit :s)	MaxTime (2bytesUnit:s)	B a t t e r y  C h a n g e  ( 1 b y t e U n i t : 0 . 1 v )	Temperature  Change (2byteUnit:0.01 °C)	Humidity  Change (2byte Unit:0.01 %)	
Config ReportRsp		0x81		Status  (0x00_success)		Reserved  (8Bytes,Fixed 0x00)			
ReadConfig ReportReq		0x02		Reserved  (9Bytes,Fixed 0x00)					

ReadConfig ReportRsp		0x82		MinTime (2bytes Unit :s)	MaxTime (2bytesUnit: s)	B a t t e r y  C h a n g e  ( 1 b y t e U n i t : 0 . 1 v )	Temperature  Change (2byteUnit:0.01 °C)	Humidity  Change (2byte Unit:0.01 %)
-------------------------	--	------	--	--------------------------------	-------------------------------	---	---	--

### Command Configuration:

- MinTime = 1min,MaxTime = 1min,BatteryChange = 0.1v,TemperatureChange = 1 °C,HumidityChange = 1%
- Downlink 0113003C003C0100640064 003C(Hex) = 60(Dec) 0064(Hex) = 100(Dec)
- Response 81130000000000000000 Configuration success 81130100000000000000 Configuration failure


### Read Configuration:

- Downlink: 02130000000000000000
- Response: 8213003C003C0100640064 Current configuration

### Example for MinTime/MaxTime logic


Example#1 based on MinTime = 1 Hour, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange=0.1V



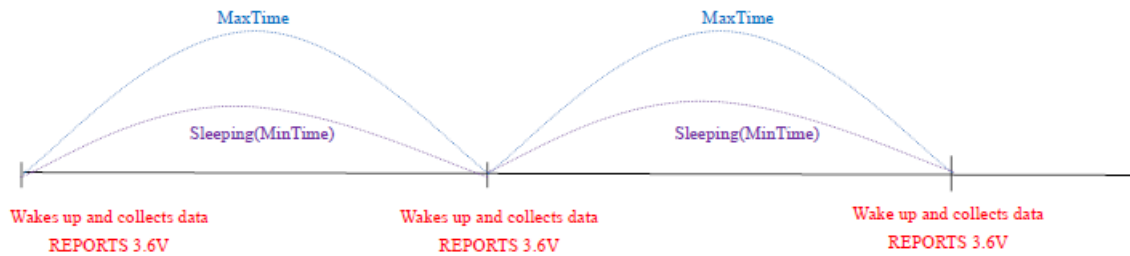


**Note:** MaxTime=MinTime. Data will only be report according to MaxTime (MinTime) duration regardless BatteryVoltageChange value.

**Example#2** based on MinTime = 15 Minutes, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange= 0.1V.

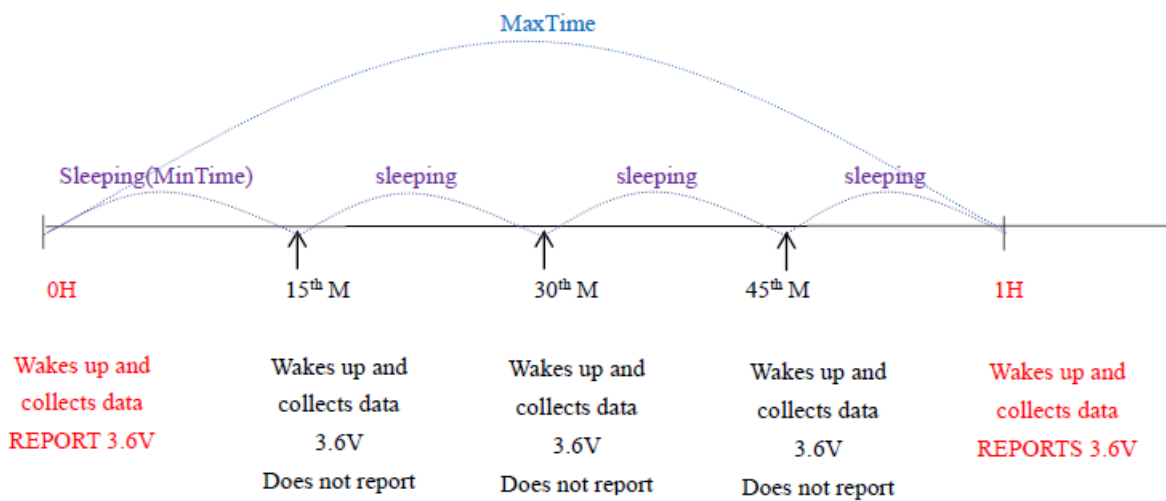

**Example#3** based on MinTime = 15 Minutes, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange= 0.1V.

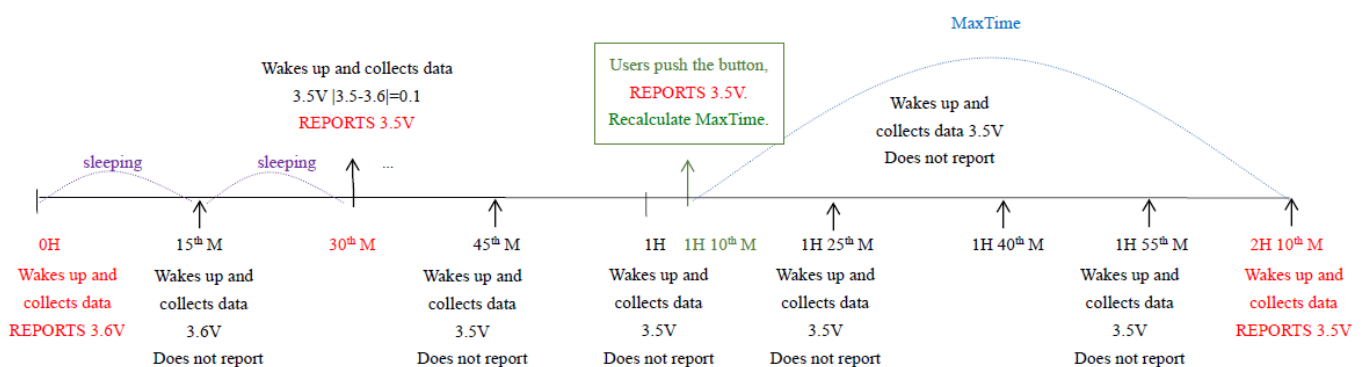

## Notes :

1. The device only wakes up and performs data sampling according to MinTime Interval. When it is sleeping, it does not collect data.
2. The data collected is compared with the last data reported. If the data variation is greater than the ReportableChange value, the device reports according to MinTime interval. If the data variation is not greater


than the last data reported, the device reports according to MaxTime interval.

3. We do not recommend to set the MinTime Interval value too low. If the MinTime Interval is too low, the device wakes up frequently and the battery will be drained soon.
4. Whenever the device sends a report, no matter resulting from data variation, button pushed or MaxTime interval, another cycle of MinTime/MaxTime calculation is started.

## Installation

1. The Wireless Temperature and Humidity Sensor (R718AB) has a built-in magnet (see Figure 1 below). When installed, it can be attached to the surface of an object with iron which is convenient and quick. To make the installation more secure, use screws (purchased) to secure the unit to a wall or other surface (see Figure 2 below).

**Note:** Do not install the device in a metal shielded box or in an environment with other electrical equipment around it to avoid affecting the wireless transmission of the device.

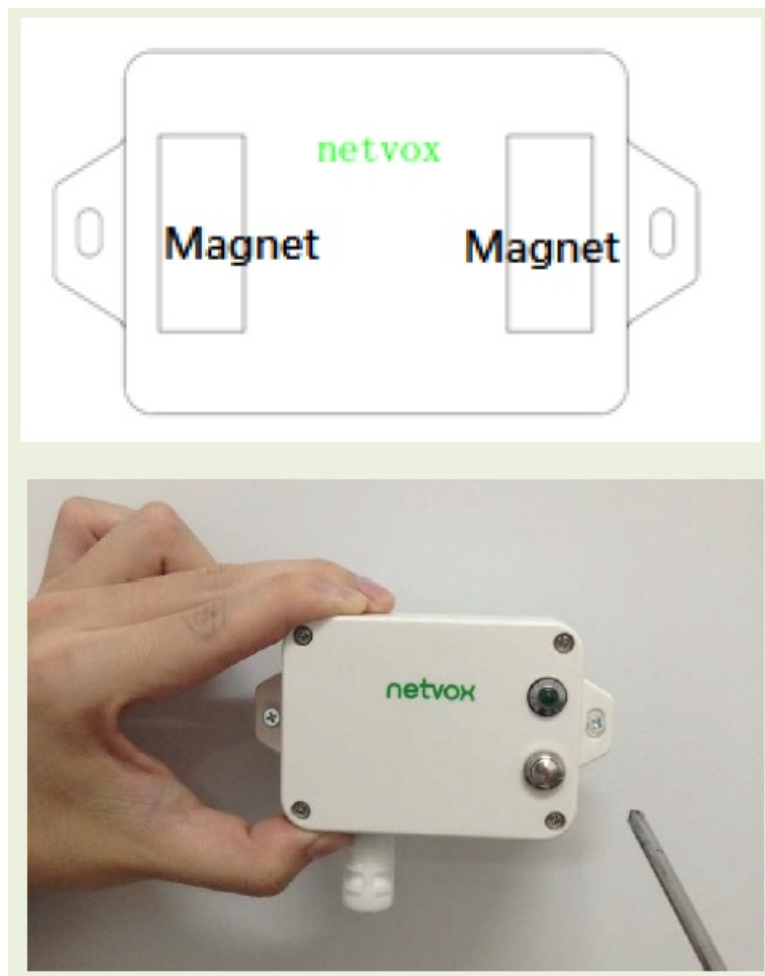

2. When the temperature and humidity detected by R718AB is compared with the last reported values, when the temperature change is exceeded 1°C (default) or the humidity change is exceeded 1%(default),it will report current values.
3. Installation height recommendation:1-2 m
4. Installation ambient temperature: -20C° ~ 55°C
5. Installation direction recommendation: The output port(sensor) is facing down, and the LOGO is facing towards the person.

The figure shows the scene where the temperature and humidity sensor (R718AB) is applied in the refrigerator. It can also be applied to the following scenarios:

- Restaurant (refrigerator or freezer)
- Shopping mall supermarket (freezer)
- Engine room
- Environmental monitoring
- Smart city and intelligent building
- Storage and transportation of food and medicine
- Flowers and other perishable foods
- Wall or logistics refrigerator

When it is necessary to detect temperature or humidity.

## Battery installation steps

Please replace the battery by a professional The device must use 2 sections of ER14505 battery (3.6v/section)


### Step 1

Unscrew the four corners of the device with a screwdriver, as shown in the red circle below.




### Step 2

Put the batteries into the battery bay of the device and note the positive and negative poles of the battery, please do not insert the battery reversely.

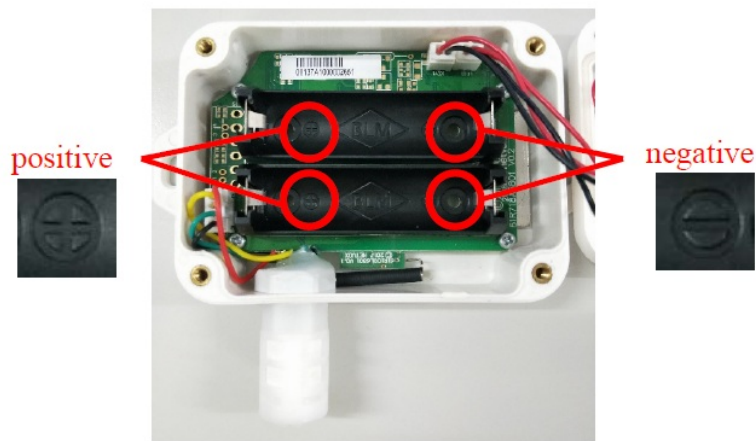

### Step 3

After inserting the batteries, put the lid back on and tighten the four screws.

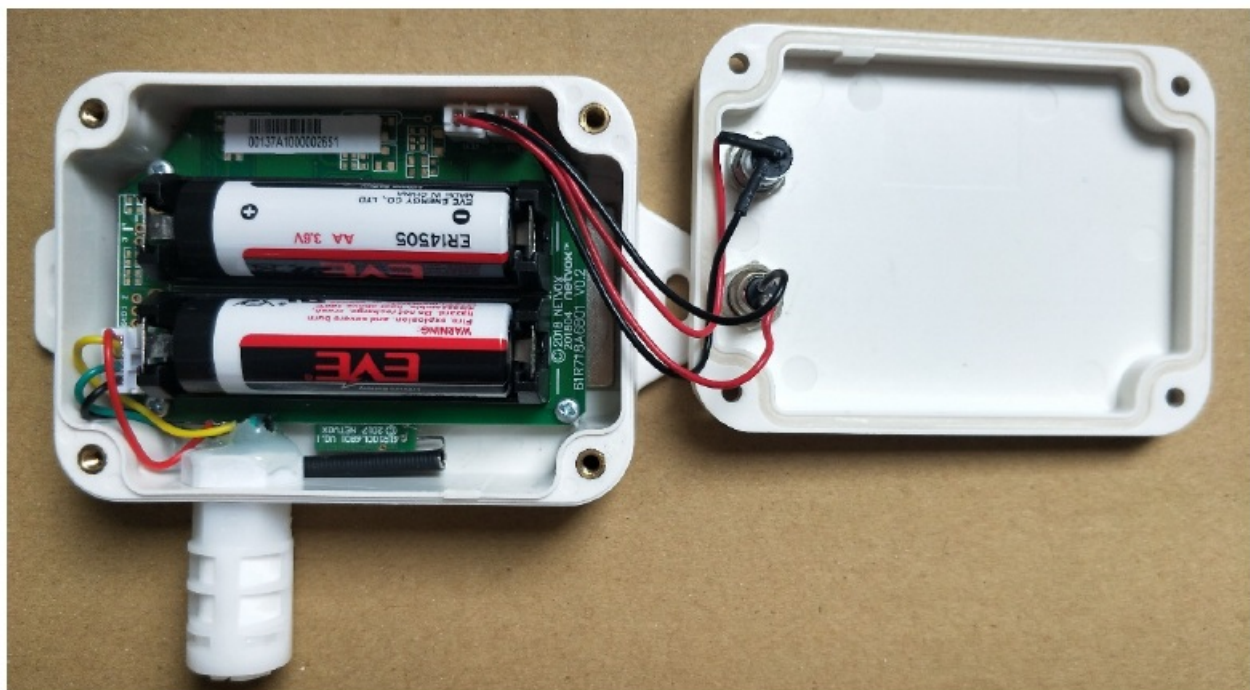

**Note:** Please do not disassemble the device unless it is required to replace the batteries. Do not touch the waterproof gasket, LED indicator light, function keys when replacing the batteries. Please use suitable screwdriver to tighten the screws (if using an electric screwdriver, it is recommended to set the torque as 4kgf) to ensure the device is impermeable.

### Information about Battery Passivation

Many of Netvox devices are powered by 3.6V ER14505 Li-SOCl<sub>2</sub> (lithium-thionyl chloride) batteries that offer many advantages including low self-discharge rate and high energy density. However, primary lithium batteries like Li-SOCl<sub>2</sub> batteries will form a passivation layer as a reaction between the lithium anode and thionyl chloride if they are in storage for a long time or if the storage temperature is too high. This lithium chloride layer prevents rapid self-discharge caused by continuous reaction between lithium and thionyl chloride, but battery passivation may also lead to voltage delay when the batteries are put into operation, and our devices may not work correctly in this situation.

As a result, please make sure to source batteries from reliable vendors, and it is suggested that if the storage period is more than one month from the date of battery production, all the batteries should be activated. If encountering the situation of battery passivation, users can activate the battery to eliminate the battery hysteresis.

## ER14505 Battery Passivation:

### To determine whether a battery requires activation

Connect a new ER14505 battery to a resistor in parallel, and check the voltage of the circuit. If the voltage is below 3.3V, it means the battery requires activation.

### How to activate the battery

- Connect a battery to a resistor in parallel
- Keep the connection for 5~8 minutes
- The voltage of the circuit should be  $\geq 3.3$ , indicating successful activation.

Brand	Load Resistance	Activation Time	Activation Current
NHTONE	165 $\Omega$	5 minutes	20mA
RAMWAY	67 $\Omega$	8 minutes	50mA
EVE	67 $\Omega$	8 minutes	50mA
SAFT	67 $\Omega$	8 minutes	50mA

**Note:** If you buy batteries from other than the above four manufacturers, then the battery activation time, activation current, and required load resistance shall be mainly subject to the announcement of each manufacturer.

### Important Maintenance Instruction

Kindly pay attention to the following in order to achieve the best maintenance of the product:

- Keep the device dry. Rain, moisture, or any liquid, might contain minerals and thus corrode electronic circuits. If the device gets wet, please dry it completely.
- Do not use or store the device in dusty or dirty environment. It might damage its detachable parts and electronic components.
- Do not store the device under excessive heat condition. High temperature can shorten the life of electronic devices, destroy batteries, and deform or melt some plastic parts.
- Do not store the device in places that are too cold. Otherwise, when the temperature rises to normal temperature, moisture will form inside, which will destroy the board.
- Do not throw, knock or shake the device. Rough handling of equipment can destroy internal circuit boards and delicate structures.
- Do not clean the device with strong chemicals, detergents or strong detergents.
- Do not apply the device with paint. Smudges might block in the device and affect the operation.
- Do not throw the battery into the fire, or the battery will explode. Damaged batteries may also explode.

All of the above applies to your device, battery and accessories. If any device is not working properly, please take it to the nearest authorized service facility for repair.

Documents / Resources

	<a href="#">netvox R718AB Wireless Temperature and Humidity Sensor</a> [pdf] User Manual R718AB Wireless Temperature and Humidity Sensor, R718AB, Wireless Temperature and Humidity Sensor
--	---

References

- [🌐 Lora Command Resolver](#)
- [🌐 Εύρεση Σειρών](#)