



## NEXXT SOLUTIONS NHC-D100 Smart WiFi Video Doorbell with Chime User Guide

[Home](#) » [Nexxt Solutions](#) » NEXXT SOLUTIONS NHC-D100 Smart WiFi Video Doorbell with Chime User Guide 





**Smart Wi-Fi video doorbell with chime  
NHC-D100**

## **Contents**

- [1 Introduction](#)
- [2 What is in the box](#)
- [3 Product Overview](#)
- [4 Preliminary steps](#)
  - [4.1 Installation of the mounting bracket to a wall or door frame](#)
  - [4.2 Powering your doorbell](#)
  - [4.3 How to insert the microSD™ card](#)
  - [4.4 Pairing your doorbell to the chime](#)
- [5 Installing the Nexxt Home App](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)

## **Introduction**


Thank you for purchasing the Smart video doorbell with chime from Nexxt Solutions. The combination of a high-definition camera, infrared technology with two-way audio, and alarm offers a versatile wireless monitoring solution that works in any home with or without an existing doorbell installation. Video can be stored directly to a SD memory card, providing users with both viewing and recording capabilities. Its compact and attractive enclosure with an IP65 rating is designed to withstand tampering and the exposure to the elements in harsh outdoor environments. Please read this guide thoroughly to ensure proper installation and operation of this innovative and feature-rich smart video doorbell with Bluetooth® chime.

## What is in the box

Open the box and make sure all items listed below are included:



Smart doorbell

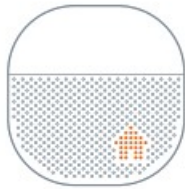

Pluggable chime



Tamper-proof plate



Doorbell angled bracket




3M self-adhesive  
with template



USB  
cable



Plastic anchor  
2 pcs

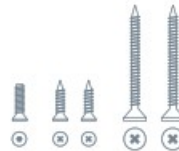

Screw  
5 pcs



Security screw  
wrench



Plastic electrical  
wire nut 2 pcs




Electrical installation  
wire 2 pcs



User guide

## Product Overview

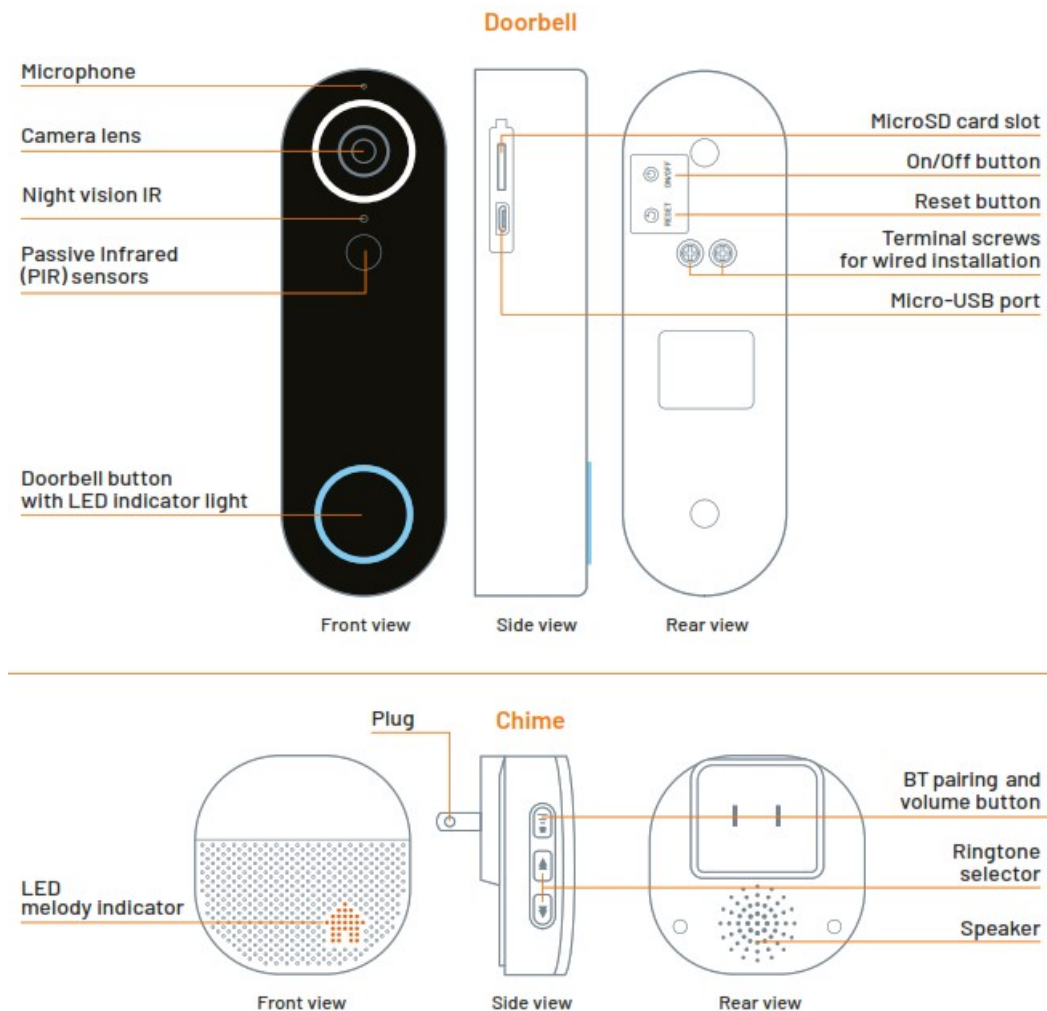


## Preliminary steps

### Installation of the mounting bracket to a wall or door frame


#### Method 1: 3M self-adhesive mount

1. Carefully remove the existing doorbell before proceeding, if any.
2. Determine the location of the doorbell, preferably one that offers the best viewing angle and Wi-Fi reception.
3. If you need to aim the doorbell to the left or right of the wall where it is mounted, you will have to also install the angled bracket that comes with the doorbell.
4. To do so, attach the angled bracket to the tamper-proof plate using the supplied screws.
5. Next, remove the adhesive film protecting the double-faced sticker. Carefully press it against the mounting plate or angled bracket.
6. Finished by fixing the plate or bracket to a smooth surface or to the wall.

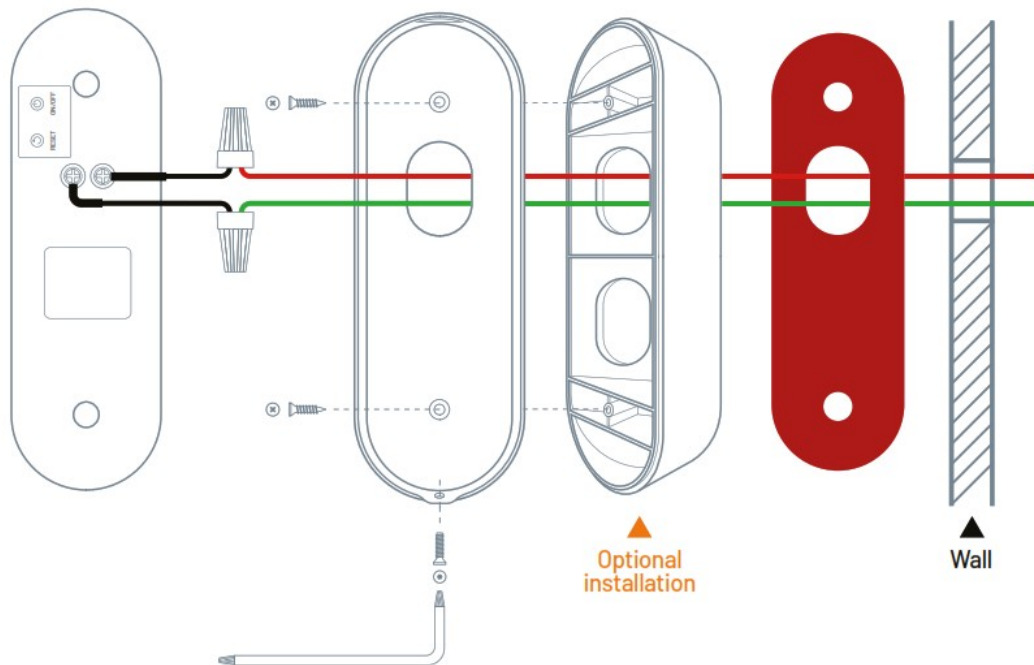

## Method 2: Screw mount

1. Carefully remove the existing doorbell before proceeding, if any.
2. Determine the location of the doorbell, preferably one that offers the best viewing angle and Wi-Fi reception.
3. If you need to aim the doorbell to the left or right of the wall where it is mounted, you will have to also install the angled bracket that comes with the doorbell.
4. To do so, attach the angled bracket to the tamper-proof plate using the supplied screws.
5. Proceed to mark the two mounting holes with a pencil and drill the pilot holes. Then insert the anchors until flush with the surface.
6. Drive the screws into the anchors you already installed and tighten them to secure the mounting plate or angled bracket in place, making sure that it is also at against the wall.

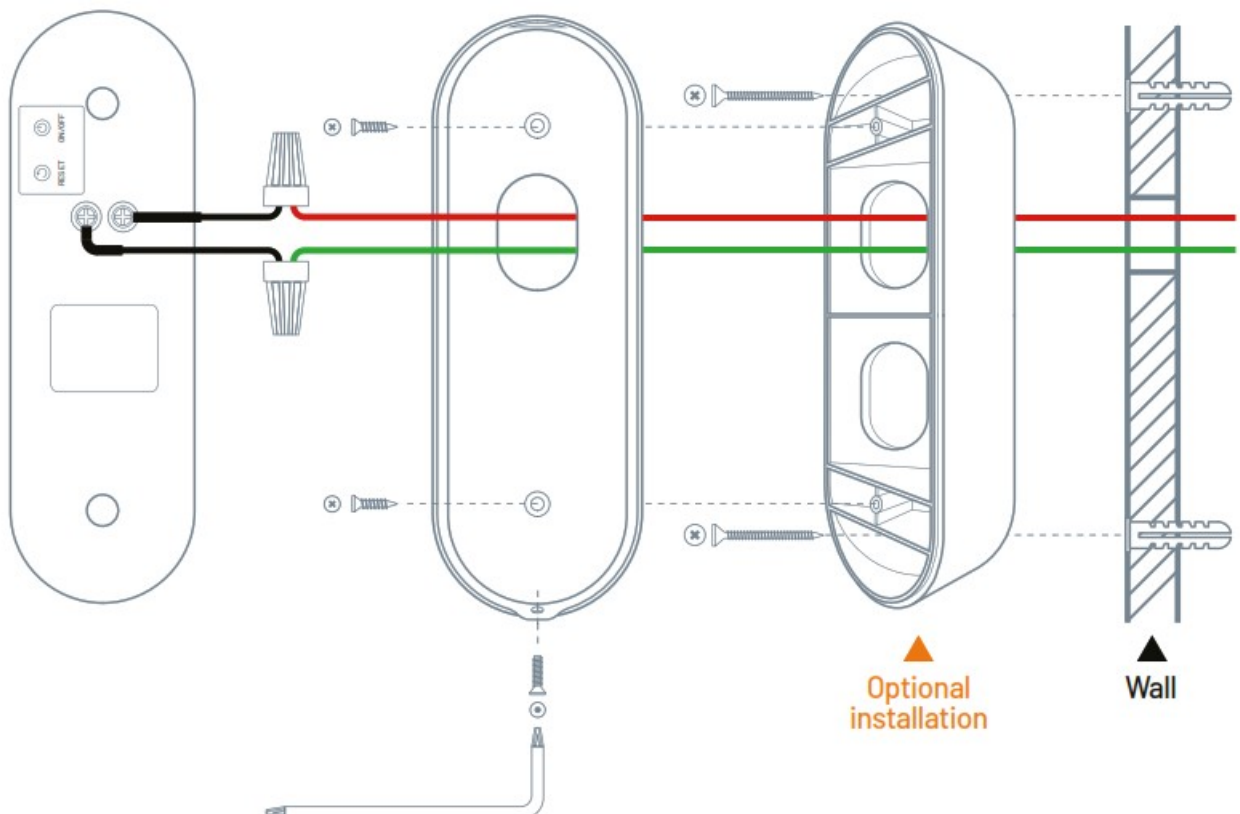

## Powering your doorbell

Important:

The doorbell allows two different power configurations:

1. It can run independently on DC power from its built-in rechargeable battery.
2. It can be hardwired to an existing low-voltage doorbell connection in your home, operating between 12 to 24 volts.

### Option 1.

#### **Wire-free, battery-operated (recommended)**

Use this option if you are using the battery to power the doorbell, for example, and easy deployment.

1. Before using the doorbell for the first time, it is recommended to fully charge the battery.
2. Gently lift the rubber cover protecting the compartment on the side of the doorbell. Insert the USB cable to the micro-USB port of the doorbell and the other end, to a compatible 5V USB outlet.
3. In order to view the charging status of the doorbell, you must open the application first. The LED on the doorbell initially blinks blue for 10 seconds when connected to a power source. After that, it will turn off completely. For continued monitoring of the charging status of the battery, you must keep the doorbell on and the application open on your mobile device. A solid blue LED on the device is an indication that the battery is fully charged. A flashing LED means that the battery is still being charged. The battery percentage can be viewed through the application by accessing the Power management interface.

For details, go to Installing the Nexxt Home App on page 11 of this guide.

4. When the battery doorbell is removed from the tamper-proof plate, the tampering alarm will be turned off by pressing the on/off button for 3 seconds and then turning it on again to initiate charging. These same steps should be followed every time you need to recharge the doorbell battery.
5. Remove the USB cable and then press down the rubber cover protecting the DC input and SD card slot.
6. Turn on the doorbell by holding the power button for 3 seconds, located on the back of the unit.
7. Slide the doorbell into the tamper-proof plate and finish by installing the security screw at the base with the supplied tool.
8. Battery life dwindles over time due to usages and other external factors, like the environment or user preferences.
9. The duration of each charge also depends for instance on the activity, number of triggering events, lighting conditions, power, and video settings.
10. The performance of this long-lasting battery can be extended if you select the settings that demand the lowest amount of energy to operate the doorbell.

### Option 2.

#### **Hardwired to a conventional AC connection**

This doorbell supports an AC connection of 12V to 24V. Test your wiring to make sure your current installation does not exceed the maximum rating specified.



#### **Electrical shock hazard**

##### **Turn the power off at the breaker**

Disconnect power to installation area at your circuit breaker or fuse box before beginning installation. Always use caution when handling electrical wiring.

Installation by a qualified electrician may be required in your area. Refer to your local

laws and building codes before performing electrical work; permits plus professional installation may be required by law. If you're not sure which breaker controls your doorbell chime, turn off the master breaker for your home or contact an electrician.

1. Verify that the power to your current doorbell has been shut off and that no voltage is present.
2. If you haven't done so, uninstall any existing chime or doorbell.
3. Loosen the screws of the terminals. Then, insert the end with the ring in each terminal on the back of the doorbell. Re-tighten the screws to secure the connection.

**Note:** since doorbell buttons are not polarity specific, either wire can connect to either terminal.

4. Match the wires coming out of the wall with the terminals on the back of the unit.
5. Tie the ends of each pair with a wire nut, twist each nut until the connection is secured, and no wire is exposed.
6. Feed the wires back into the wall.
7. Turn power on at the breaker to finish the process.
8. Turn on the doorbell by holding the power button for 3 seconds, which is located on the back of the unit.
9. Slide the doorbell into position and guide the cables through the rear opening of the tamper-proof plate.
10. Finish by installing the security screw at the base of the bracket with the supplied tool.

#### **How to insert the microSDTM card**

The Wi-Fi doorbell comes with a built-in card slot located on the side of the unit, which supports a microSDTM card of up to 128GB.

Once you insert the storage card, the camera will automatically start recording and storing videos on that memory. This type of card will normally store about one month of continuous video footage.

Step 1: Prior to inserting the doorbell in the plate as described in the sections above, gently lift the rubber cover protecting the compartment on the side of the unit.

Step 2: Insert the microSDTM card. Make sure it is placed in the correct direction inside the slot.

Step 3: Put the cover back by pushing it down with your thumb until it tightly closes the compartment.

**Note:** Failure to complete step 3 can lead to water damage on the device.

#### **Pairing your doorbell to the chime**

The chime alerts you when the doorbell button is pressed. Both devices must be first linked through their Bluetooth® connection.

Make sure the doorbell is turned on, and that the chime is plugged into a power outlet.

#### **Ringtone selection**

You can customize the chime melody and volume or turn it off completely if you don't want to be disturbed.

1. Briefly press the ringtone selector to circle through all the available chimes for the doorbell. There are 55 different ringtones available.
2. When you have selected the desired melody, wait until the melody stops playing. Press the BT pairing/Volume button for 5 seconds until the orange melody LED indicator blinks once.
3. Within 5 seconds, you must press the doorbell button to set up the selected tone.
4. The doorbell and the chime are now linked with the selected tone enabled.
5. Repeat the same instructions at any time when you want to choose a different chime melody.


**Note:** the doorbell has only one tone, and it remains the same whereas the chime can always be changed.

## Volume adjustment

Simply press the BT pairing /Volume button to adjust the volume of the chime. You can toggle through the 4 different settings available, from low, medium, high, and maximum levels.

## Installing the Nexxt Home App

Download Nexxt Home app on Google Play or Apple App Store.

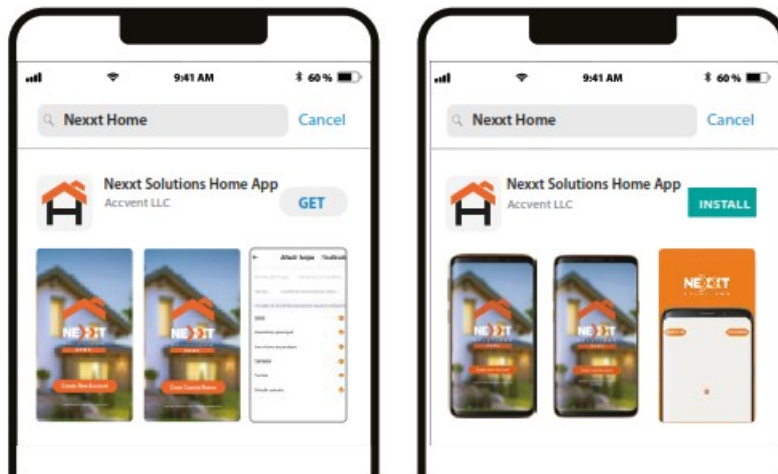

### Step 1

A smartphone screen displaying the 'Register by email' form. The form includes a dropdown menu for 'United States of America', an 'Email' input field, and a 'Get authentication code' button at the bottom.

Register by email. Fill in the required fields.


### Step 2

A smartphone screen displaying the 'Enter verification code' form. The form has five input fields for the verification code and a message at the bottom stating 'Verification code has been sent to your'.

Enter the verification code you received.



### Step 3

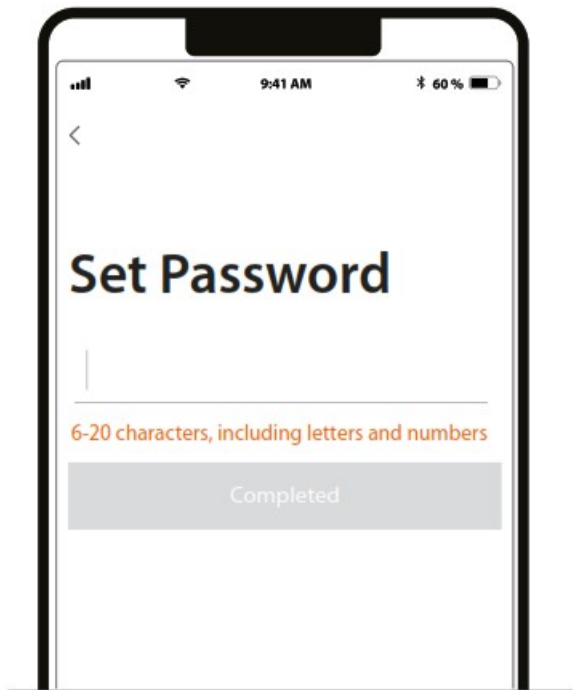

Create a new password and then select **Completed**.

### Step 4




The Nexxt Home App has been successfully installed.

### Initial setup and manual reset

- Make sure the device is powered on. If you haven't done so, turn on the doorbell by holding the power button for 3 seconds, located on the back of the unit.
- If the red LED indicator does not start blinking or if no audible notification is heard, press the reset button of the doorbell for 2 seconds or until you hear a tone indicating that a reset has occurred.
- Once the button is released, the red LED on the front will start blinking.
- Follow the app's instructions to complete the network configuration process.
- The LED changes to solid blue when the device is successfully connected to your Wi-Fi network.


### Add device +

#### Step 1

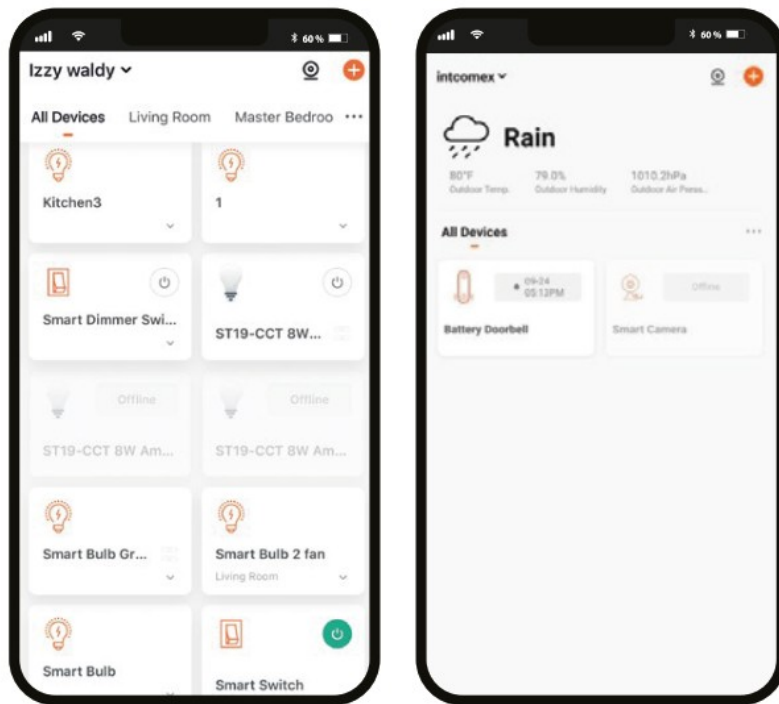


Select the + icon to add the device, followed by the smart doorbell.

## Step 2

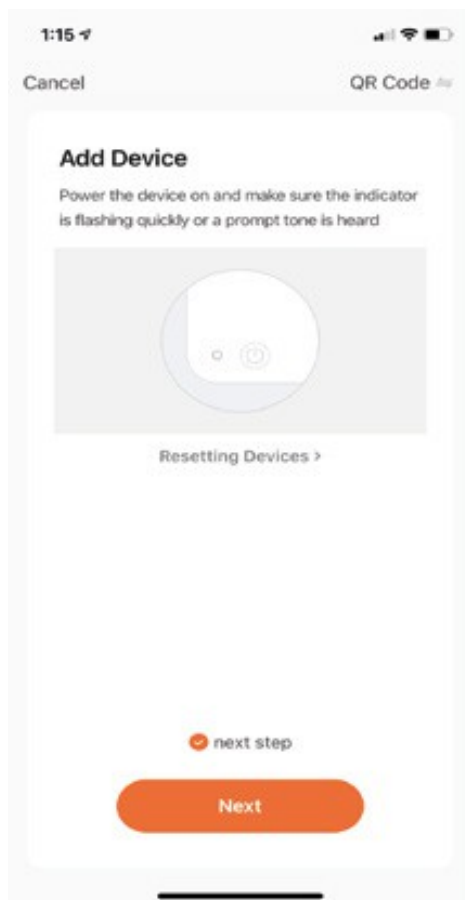


When the LED starts blinking, tap on next step followed by the Next button to continue.

## Step 3

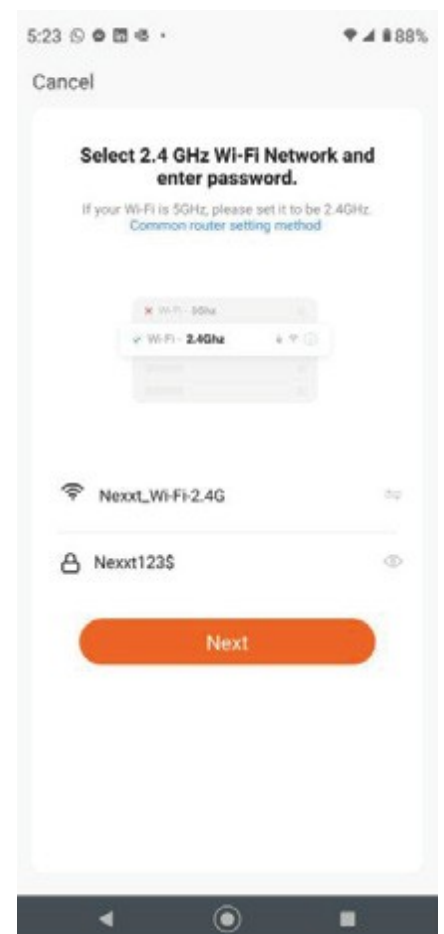

You must connect to a 2.4GHz Wi-Fi network. Enter the correct password. Make sure the correct code is entered, otherwise you will not be able to connect.


## Step 4

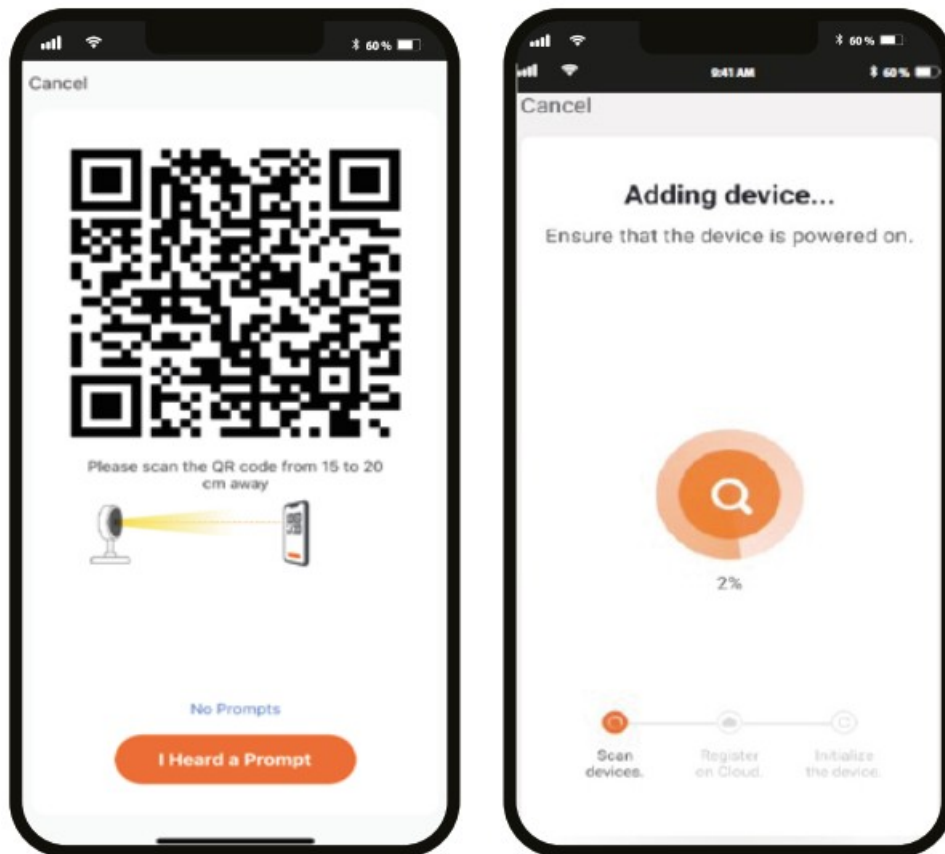

Scan the QR code from your mobile device with the smart doorbell. Once you hear the tone, click on the I Heard a Prompt button.


If you experience any issues, reset the doorbell. If a Registered Account added the doorbell through the app, then another user will be prevented from setting up that doorbell in a different account, unless permission is granted through the Share access option.

## Step 5

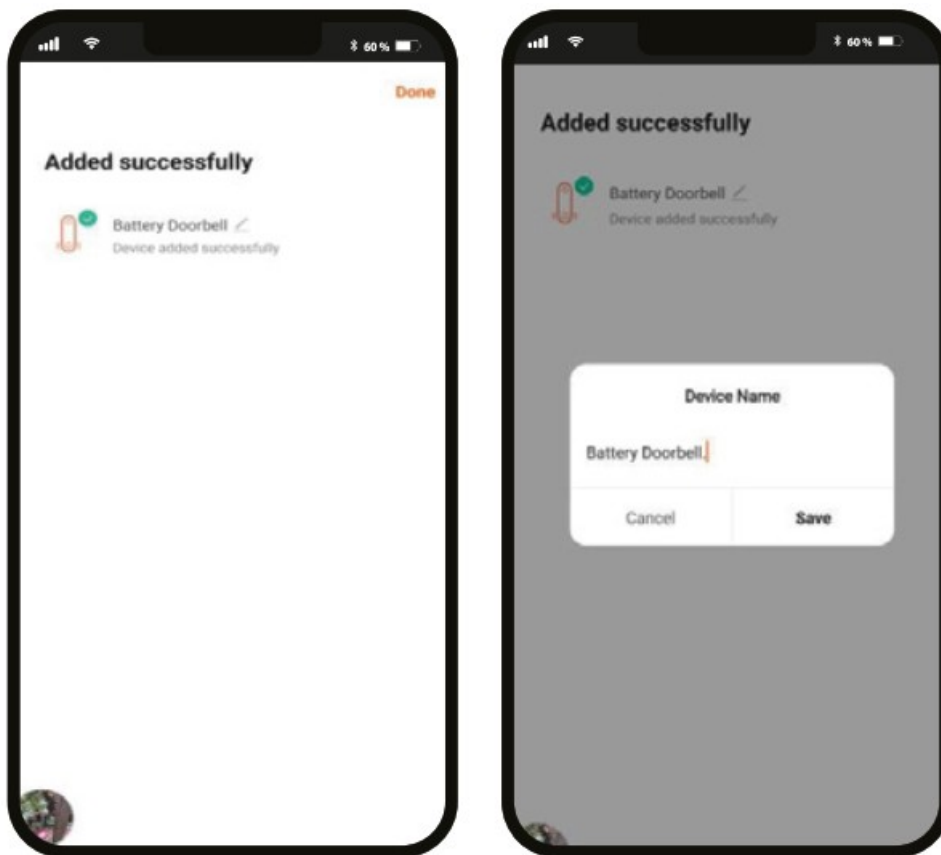

When the pairing process is completed, the notification Device added successfully will be displayed on the screen. Click on the pencil icon to rename the doorbell, if you prefer to change the default identifier. Select Save to store your settings, followed by Done to finish.

### Doorbell main interface

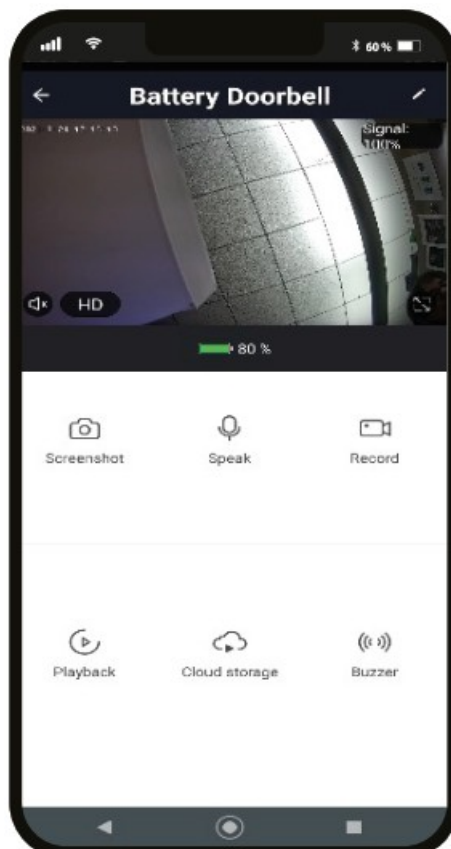



Settings: tap on the pencil icon to access the configuration menus



Signal: shows the Wi-Fi signal strength.



Full screen: toggles between half and full-screen modes.



/SD: switches between High Definition and the Standard Definition video resolution.



Mute: disables the microphone on the doorbell.



80%

Battery: when operated with DC power, the screen provides a visual indication of the battery charge in real-time.



Charging Hardwired: when operated with AC power, the screen provides a visual indication of a 100% charge. If utility power goes off or the voltage is too low, then the doorbell will automatically switch to DC input.



Screenshot: takes a snapshot of what the camera is viewing in real time.



Speak: allows two-way communications through the microphone.



Record: allows the recording of live video on your mobile device. The user must start and end the recording manually.



Playback: if a microSD™ is installed, you can use the playback function to watch the 10-second footage of a motion detection event. Still images and video can be also saved directly in your mobile device for future use by tapping on the camera or recorder icons available in that interface.



Cloud storage: users can upload digital data to the cloud through a subscription service.




Buzzer: tap this button to generate a sound that will send unwanted visitors away.



Photo album: provides access to images and videos captured by the camera.

### Answer your doorbell from your smartphone

When a visitor rings the video doorbell, your mobile device receives a voice over IP (VoIP) call through an internet connection. The Nexxt Home app will be activated, allowing you to:

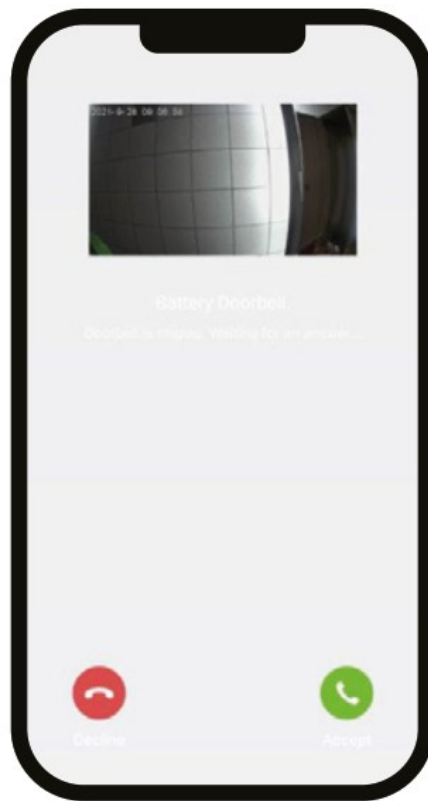

### **Accept the incoming call and speak to your visitor:**

- To talk to the visitor, speak into your phone as you normally do.  
The camera will capture real-time images of the people standing outside your front door.
- Should the Nexxt Home app be closed or running in the background, you will receive a push notification, ringing up to 7 times for about 10 seconds.



### **Decline the call:**

- If a visitor presses the doorbell, the smartphone will ring 20 times for about 25 seconds, only if the app is open.
- However, if the app is closed or running in the background, the smartphone will ring 7 times for about 10 seconds.
- If you don't answer within that time, a log is created in your Profile with the string of events and the time each one took place.

### **How to answer a doorbell call**

In the table below you will find the different scenarios and how to pick up a call based on the platform, you are using.

Operating status	iOS	Android
Nexxt Home app open (while the doorbell is video streaming)	Click the answer button (green) once to pick up the doorbell call	Click the answer button (green) once to pick up the doorbell call
Nexxt Home app open	Click the answer button (green) once to pick up the doorbell call	Click the answer button (green) once to pick up the doorbell call
Nexxt Home app in background	Click the Nexxt Home app push notification once, and then press the answer button (green) to pick up the doorbell call	Click the answer button (green) once to pick up the doorbell call
Nexxt Home app closed	Click the Nexxt Home app push notification once to open the video streaming, and then press the mic button to answer the doorbell call	Click the Nexxt Home app push notification once to open the video streaming, and then press the mic button to answer the doorbell call

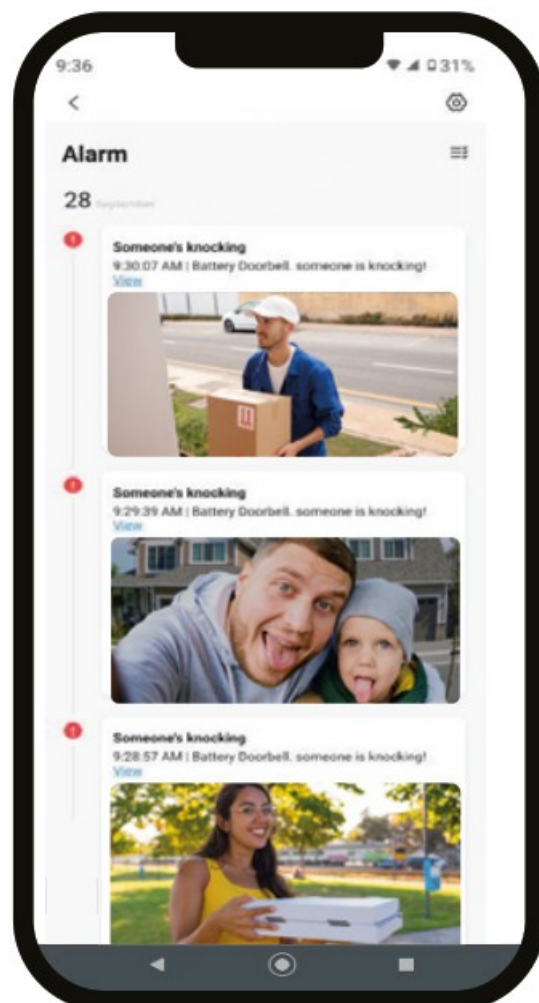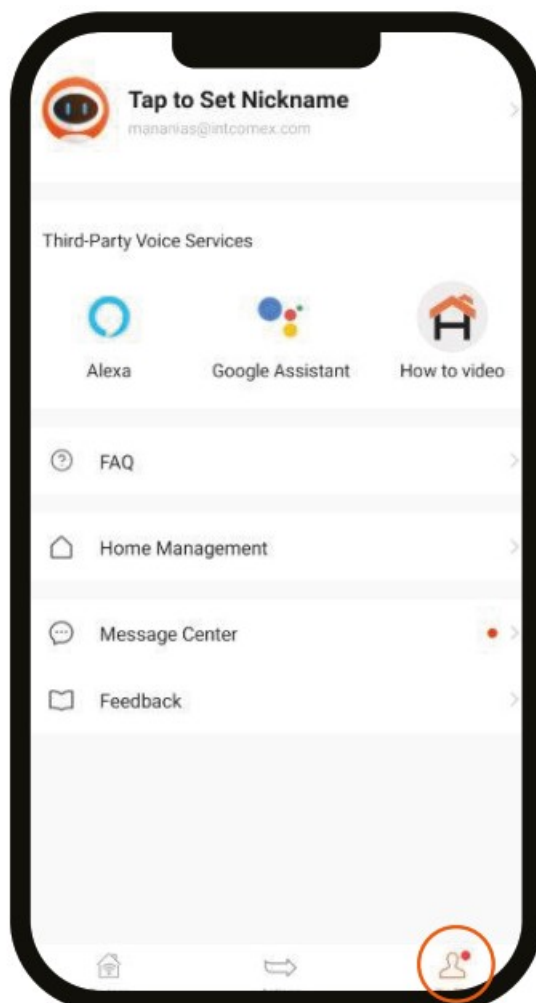


## Event log

Tap on the Profile icon, followed by Message center. This will open the interface to view all the activity and images captured by the doorbell.

### Configuration menus

Click on the pencil icon located on the top right corner of the screen to access the configuration menus and their corresponding parameters.

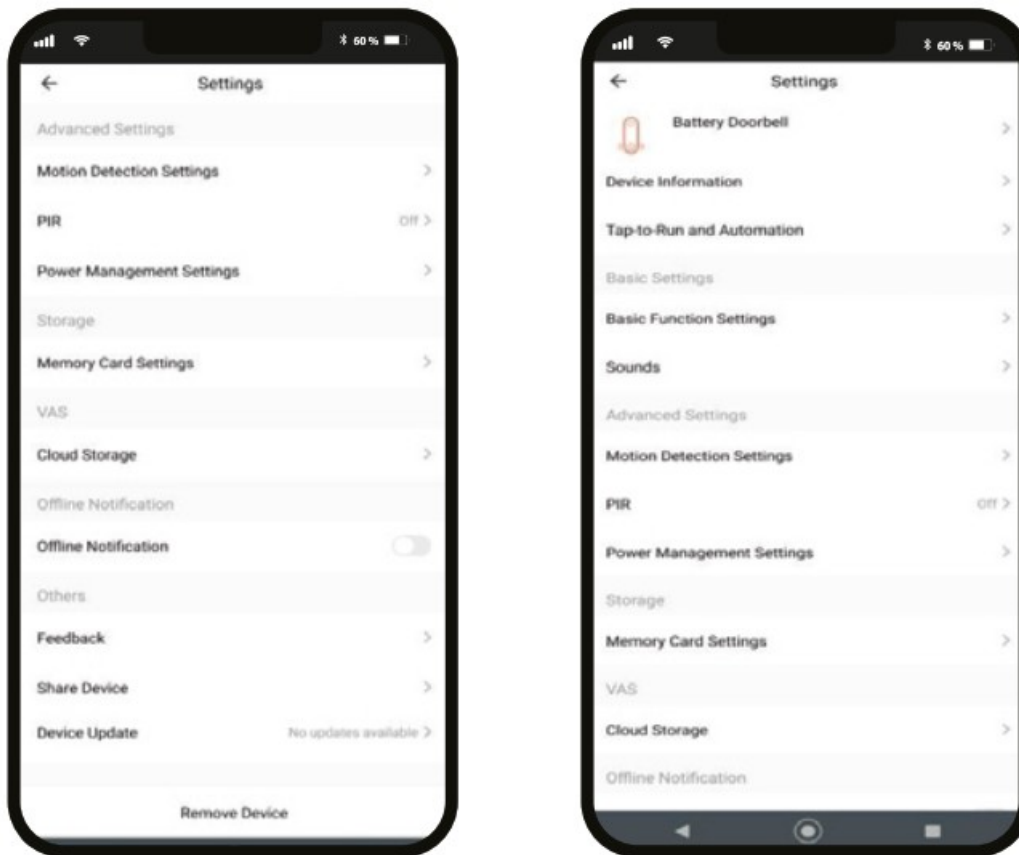

The main functionalities of each option are described below.




#### Battery doorbell


Changes the icon and the default name of the device.

Device location: tap on this option to assign the area where the doorbell is installed.



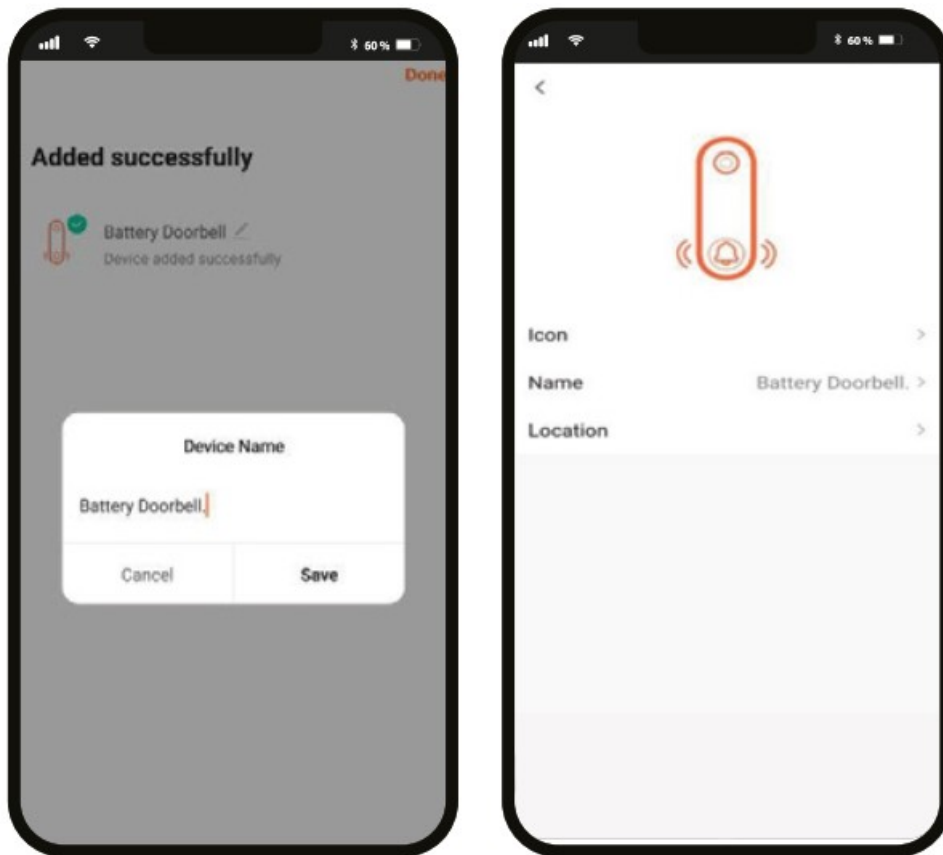

#### Device information:

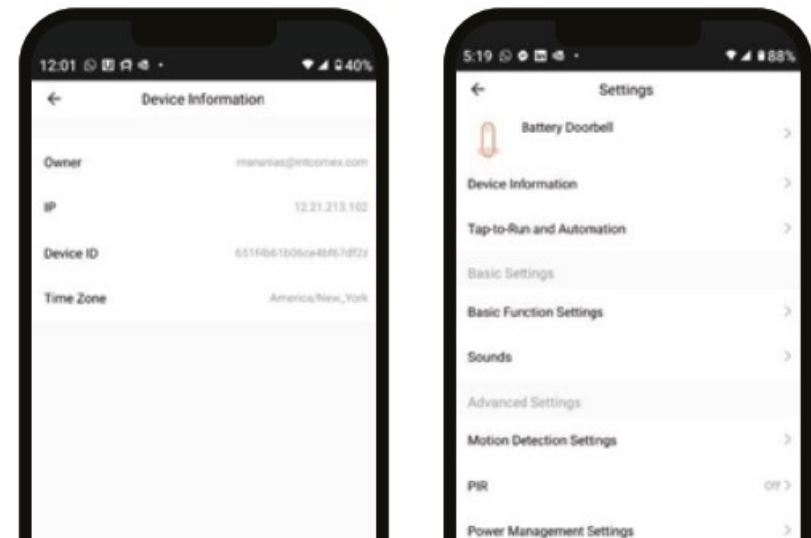


this option displays a submenu containing the information related to the doorbell.

#### Tap-To-Run and Automation:

this option links the Wi-Fi doorbell with other smart products to automatically control them through a customized command.

#### Basic settings

Basic function settings

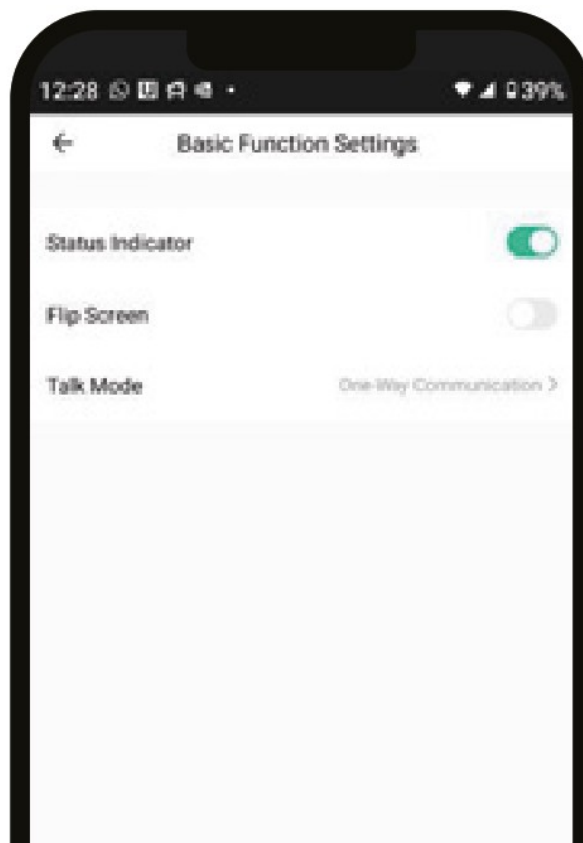

This submenu contains the following options.

**Status indicator:** enables and disables the LED on the doorbell button.

**Flip screen:** flips the image 180 degrees when the doorbell is mounted upside down.

**Talk method:** the user can select between One-way or Two-way communication.

**Sound:** this sliding bar adjusts the volume level of the doorbell, on a scale from 1 to 10.

#### Advanced settings:



#### Motion detection settings:

use this option to enable the Human body filtering feature.

It is designed to prevent false alarms by identifying more accurately when there is a person approaching the door.

#### PIR:

enables or disables the thermal-based Passive Infrared sensors. When activated, three sensitivity levels become available:

low, medium, and high.

This setting will determine at what point notifications will be triggered when activity is detected in the monitored area.

### Power management settings:

this menu displays the remaining charge of the battery, the power source being use, and the threshold for warning the user when the charge is running below the specified levels to be able to continue powering the device properly.

### Storage



### Memory card settings:


**Total capacity:** shows the capacity of the microSD™ card.

**Used:** shows how much memory has been used.

**Remaining capacity:** shows how much space is left on the microSD™ card.

**Format:** this will format the microSD™ card to be used on the doorbell.

### Value-added services (VAS)

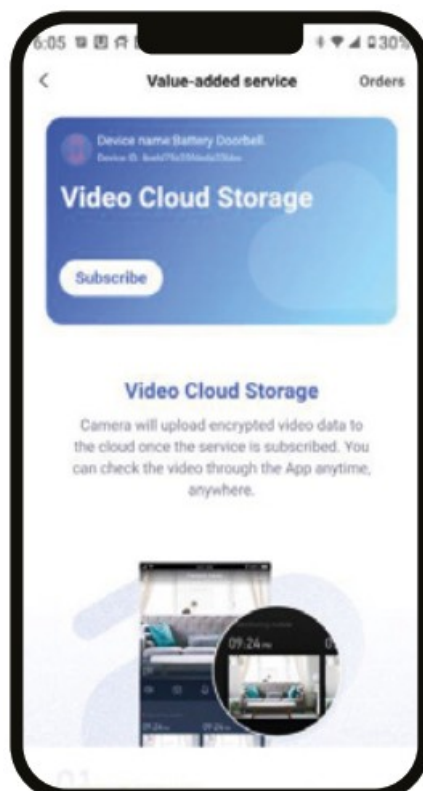

**Cloud storage:** access photos and videos at any time and from anywhere with an optional subscription plan.

### Offline notification

Offline notification: after 30 minutes of inactivity, the device will trigger a notification.

You can enable or disable this feature.

### Others

**Feedback:** let us know if you have any issues setting up the product.

**Share device:** allows sharing the Wi-Fi doorbell with family and friends.

**Device update:** we will sometimes add new features or provide updates with a new firmware upgrade.

**Remove device:** allows you to unbind the device from the Nexxt Home Account.


### Share device



Click on Share devices then tap Add sharing. Enter the e-mail address of the person you want to grant access to the device. Tap on Done. The newly configured users will now have access to your smart doorbell.

**Note:** family or friends will need their own Nexxt Solutions Home Account to access the device.

### Delete user

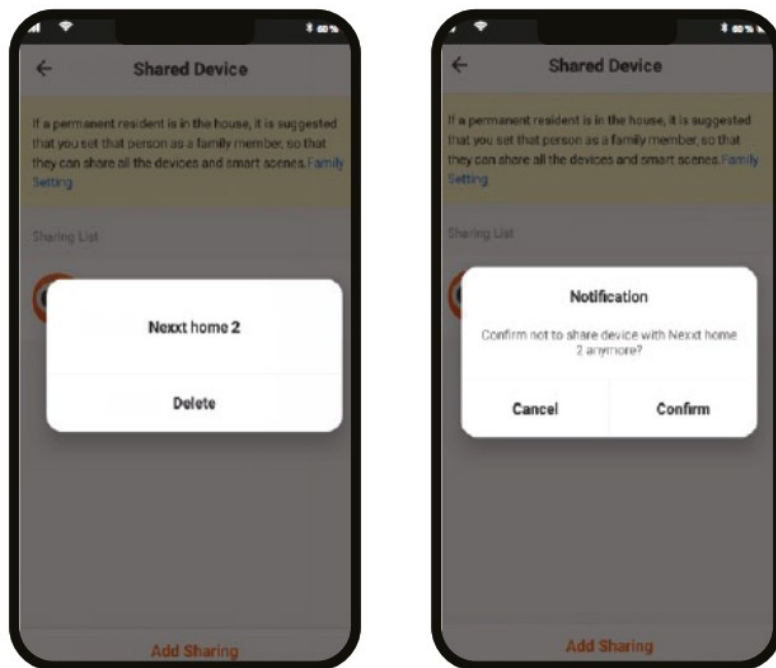

To remove a user on iOS, slide the name to the left. On Android, press and hold the name of the person you wish to eliminate. When the pop-up box comes up, select Delete. A Notification confirming that you no longer want to share the device with the selected user will be displayed. Tap on Confirm to permanently remove the user.

#### FCC ID: X4YHACD100

Nexxt Solutions® is a registered trademark. All rights reserved. Amazon, Alexa, and all related logos are trademarks of Amazon.com, Inc. or it's affiliates. Google, Android, and Google Play are trademarks of Google Inc. SD™ and microSD™ are trademarks owned by SD-3C, LLC. All other brand names and trademarks are the property of their respective owners. Made in China.



#### Smart Wi-Fi video doorbell with chime

#### Documents / Resources

	<p><b><a href="#">NEXXT SOLUTIONS NHC-D100 Smart WiFi Video Doorbell with Chime</a></b> [pdf] User Guide  NHC-D100 Smart WiFi Video Doorbell with Chime, NHC-D100, Smart WiFi Video Doorbell with Chime, Smart WiFi Video Doorbell, Video Doorbell with Chime, Doorbell with Chime, Doorbell</p>
---	--

#### References

- [Amazon.com. Spend less. Smile more.](#)

