



Nice IBT4ZWAVE Plug-In BiDi-ZWave Interface Instruction Manual

[Home](#) » [Nice](#) » Nice IBT4ZWAVE Plug-In BiDi-ZWave Interface Instruction Manual 

Contents

- [1 Nice IBT4ZWAVE Plug-In BiDi-ZWave Interface](#)
- [2 WARNINGS AND GENERAL PRECAUTIONS](#)
- [3 PRODUCT DESCRIPTION](#)
- [4 INSTALLATION](#)
- [5 ADDING TO THE Z-WAVE NETWORK](#)
- [6 REMOVING FROM THE Z-WAVE NETWORK](#)
- [7 EXTERNAL ANTENNA](#)
- [8 OPERATION](#)
- [9 RESET](#)
- [10 LED SIGNALS](#)
- [11 TECHNICAL SPECIFICATIONS](#)
- [12 PRODUCT DISPOSAL](#)
- [13 Documents / Resources](#)
- [14 Related Posts](#)

Nice

Nice IBT4ZWAVE Plug-In BiDi-ZWave Interface



WARNINGS AND GENERAL PRECAUTIONS


- **CAUTION!** – This manual contains important instructions and warnings for personal safety. Carefully read all parts of this manual. If in doubt, suspend installation immediately and contact Nice Technical Assistance.
- **CAUTION!** – Important instructions: keep this manual in a safe place to enable future product maintenance and disposal procedures.
- **CAUTION!** – All installation and connection operations must be performed exclusively by suitably qualified and skilled person-nel with the unit disconnected from the mains power supply.
- **Important!** – If the BUS T4 connection is used for the IBT4N interface, the BiDi-ZWave cannot be connected to the control unit.
- This product may only be used indoors or protected from weather conditions by control unit's housing.
- The product's packaging materials must be disposed of in full compliance with local regulations.
- Do not open the device protection housing as it contains non-serviceable electrical circuits.
- Never apply modifications to any part of the device. Operations other than those specified may only cause malfunctions. The manufacturer declines all liability for damage caused by makeshift modifications to the product.
- Never place the device near to sources of heat and never expose to naked flames. These actions may damage the product and cause malfunctions.
- This product is not intended for use by people (including children) with reduced physical, sensory or mental capabilities or who lack experience and knowledge, unless they have been given supervision or instruction concerning the use of the product by a person responsible for their safety.
- Make sure that children do not play with the product.
- Check the warnings in the instruction manual for the motor that the product is connected to.
- Handle the product with care, being sure not to crush, knock or drop it in order to avoid damage.

PRODUCT DESCRIPTION

CAUTION! – Any use other than that specified herein or in environmental conditions other than those stated in this manual is to be considered improper and is strictly forbidden!

The BiDi-ZWave accessory is a device that – by means of Z-Wave™ communication – allows for controlling the

movement and status of Gate&Door-type Nice automations compatible with the BUS T4 (Opera) protocol.

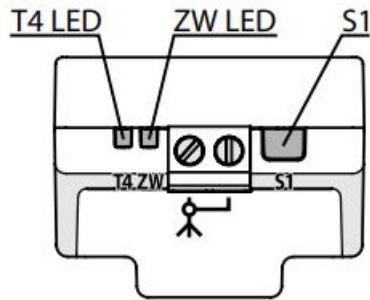

Before proceeding with the product's installation, make sure to have the following:

- Nice automation control unit of the Gate&Door catalogue equipped with BUS T4 connector
- 1 Z-Wave smart home controller
- If you want to improve the BiDi-ZWave Z-Wave range: 1 antenna compliant with the technical specification (see chapter 10) – not included.


INSTALLATION

1. Disconnect the power supply from the automation's control unit




2. All LEDs on the automation's control unit should be off before continuing
3. If you want to install the external antenna, you can do it now

Caution! Use only antennas and cables compliant with technical specifications (see chapter 10)!

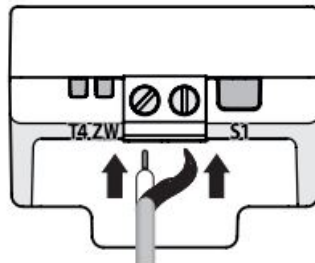


4. If present, remove the plastic pre-cut element from BUS T4 connector and check that there are no burrs

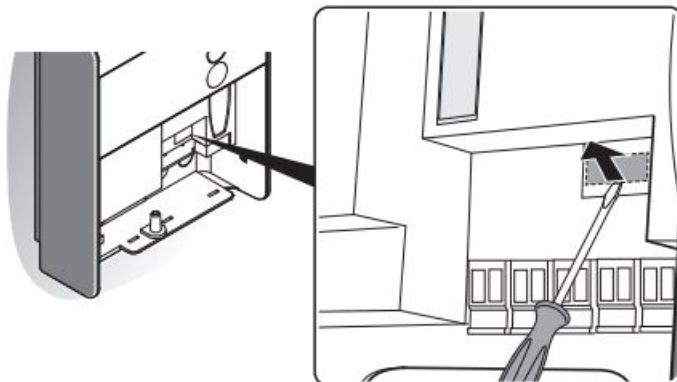

5. Insert the BiDi-ZWave into the BUS T4 port of the connector unit

Caution! If the BiDi-ZWave is inserted incorrectly, it may permanently damage the control unit!

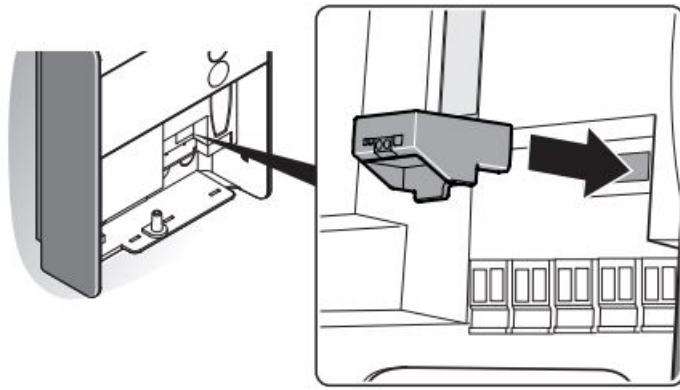

6. Power the automation's control unit



7. LEDs on the BiDi-ZWave will show adding and antenna status

8. Wait for the BiDi-ZWave to finish the initialization sequence (T4 LED flashing green)


9. Add the device to the Z-Wave network; for the relevant procedure

ADDING TO THE Z-WAVE NETWORK

Install the external antenna before powering the device and adding to the Z-Wave network for the device to automatically detect and enable it (use only antennas and cables compliant with technical specification – see chapter 10).

Adding manually

1. Set the Z-Wave gateway into adding mode (see the Z-Wave gateway's manual)
2. On the BiDi-ZWave press and release the S1 button 3 times

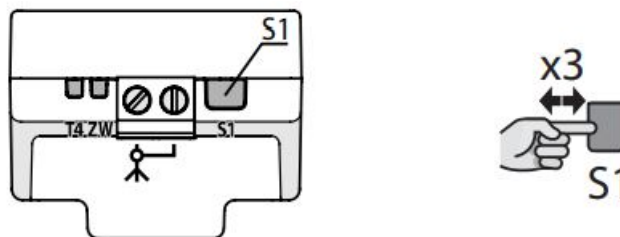

3. LEDs on the BiDi-ZWave will start slow flashing alternately
4. If you are adding in Security S2 Authenticated, input the underlined part of the DSK (label on the box)
5. When the adding process ends, the LEDs on the BiDi-ZWave will show adding and antenna status

Adding using SmartStart

SmartStart enabled products can be added into a Z-Wave network by scanning the Z-Wave QR Code present on the product with a controller providing SmartStart inclusion. SmartStart product will be added automatically within 10 minutes of being switched on in the network range.

1. To use SmartStart your Z-Wave gateway needs to support Security S2 (see the Z-Wave gateway's manual)
2. Disconnect the power supply from the automation's control unit





3. Enter the full DSK string code to your Z-Wave gateway. If your controller is capable of QR scanning, scan the QR code placed on the label on the device and bottom of the box
4. Power the automation's control unit



5. LEDs on the BiDi-ZWave will start slow flashing alternately
6. When the adding process ends, the LEDs on the BiDi-ZWave will show adding and antenna status (Table 1)

REMOVING FROM THE Z-WAVE NETWORK

1. Set the Z-Wave gateway into remove mode (see the Z-Wave gateway's manual)
2. On the BiDi-ZWave press and release the S1 button 3 times

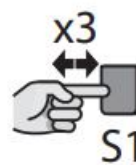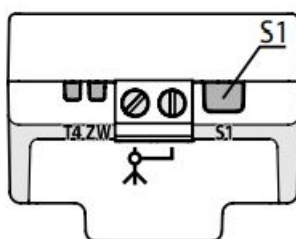

3. LEDs on the BiDi-ZWave will start slow flashing alternately
4. Wait for the removing process to end

EXTERNAL ANTENNA

The BiDi-ZWave is equipped with an internal antenna, but an external antenna can be connected to improve the Z-Wave network range, e.g. when the gate is far away from the house. Check the technical specification to buy the correct antenna and cable

Checking and switching enabled antenna

The external antenna will be detected and enabled automatically after powering the device (if not added to the Z-Wave network), but you can switch manually between antennas using the following procedure.

1. Press and hold the S1 button



2. Wait 3 seconds
3. LEDs will show adding and antenna status (Table 1) for 3 seconds
4. LEDs will turn off for 3 seconds
5. When LEDs show the selected antenna, release the button: ZW LED (blue) for internal antenna, T4 LED (green) for external antenna
6. If you want to switch the antenna, press and release the S1 button

7. If the antenna was switched, the corresponding LED will flash 2 times: ZW LED (blue) for internal antenna, T4 LED (green) for external antenna



OPERATION

To control the movement use Z-Wave gateway's interface or click the S1 button (works in Step-by-Step mode).

RESET

Reset procedure allows to restore the device back to its factory settings, which means all information about the Z-Wave gateway and user configuration will be deleted.

Resetting the device is not the recommended way of removing the device from the Z-Wave network. Use reset procedure only if the primary controller is missing or inoperable. Certain device removal can be achieved by the procedure of removing described.

1. Press and hold the S1 button



2. Wait 3 seconds
3. LEDs will show adding and antenna status (Table 1) for 3 seconds
4. LEDs will turn off for 3 seconds
5. LEDs will show selected antenna (Table 2) for 3 seconds
6. When both LEDs light up simultaneously, release the button



7. Press and release the S1 button
8. Both LEDs will flash once at the end of the procedure



LED SIGNALS

Table 1 – LEDs Z-Wave and antenna status			
T4 LED (green)	ZW LED (blue)	Z-Wave adding status	External antenna
OFF	ON for 3 seconds	Not added	Not connected
OFF	2 flashes	Added (non-secure, S0, S2 Unauthenticated)	Not connected
OFF	4 flashes	Added successful (Security S2 Authenticated)	Not connected
ON	ON for 3 seconds	Not added	Connected
ON	2 flashes	Added (non-secure, S0, S2 Unauthenticated)	Connected
ON	4 flashes	Added successful (Security S2 Authenticated)	Connected

Table 2 – LEDs selected antenna		
T4 LED (green)	ZW LED (blue)	Selected antenna
OFF for 3 seconds	ON for 3 seconds	Internal
ON for 3 seconds	OFF for 3 seconds	External

TECHNICAL SPECIFICATIONS

The product IBT4ZWAVE is produced by Nice S.p.a. (TV). Warnings: – All technical specifications stated in this section refer to an ambient temperature of 20°C (± 5°C) – Nice S.p.a. reserves the right to apply modifications to the product at any time when deemed necessary, while maintaining the same functionalities and intended use.

IBT4ZWAVE	
Type	control using Z-Wave network of devices fitted with connector compatible with BUS T4
Technology adopted	half duplex 19200 Bps serial connection on differential bus
Power supply	24V supplied by the control unit to which the BiDi-ZWave is connected
Absorbed current	max 50 mA
Radio frequencies	868.0–868.6; 869.7–870.0 MHz
Internal antenna max. transmit power	10 dBm
External antenna max. peak gain	3 dBi
External antenna cable length	1 ... 3 m
Antenna connector screws rated torque	0.4 Nm
Casing protection rating	IP 40 (use indoors or in protected environments only)
Operating temperature	– 20 °C ... +50 °C
Dimensions (mm)	37 x 28 x h 21
Weight	10g


PRODUCT DISPOSAL

This product is an integral part of the automation and therefore must be disposed together with the latter. As in installation, also at the end of product lifetime, the disassembly and scrapping operations must be performed by qualified personnel. This product is made of various types of material, some of which can be recycled while others must be scrapped. Seek information on the recycling and disposal systems envisaged by the local regulations in your area for this product category.

Caution! – some parts of the product may contain pollutant or hazardous substances which, if disposed of into the environment, may cause serious damage to the environment or physical health. As indicated by the symbol alongside, disposal of this product in domestic waste is strictly prohibited. Separate the waste into categories for disposal, according to the methods envisaged by current legislation in your area, or return the

product to the retailer when purchasing a new version.
Caution! – local legislation may envisage serious fines in the event of abusive disposal of this product.

Documents / Resources

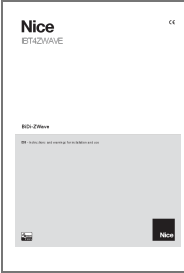 The thumbnail shows the front cover of a technical manual. At the top left, the 'Nice' logo is visible above the model number 'IBT4ZWAVE'. Below this, the text 'BiDi-ZWave' is printed. The central part of the cover is a light gray rectangle with some faint, illegible text. In the bottom right corner, there is a small black square with the 'Nice' logo in white.	<p>Nice IBT4ZWAVE Plug-In BiDi-ZWave Interface [pdf] Instruction Manual IBT4ZWAVE, Plug-In BiDi-ZWave Interface</p>
--	---

Manuals+.