



NITECORE TM10K LTP Low Temperature Resistant Rechargeable Flashlight User Manual

[Home](#) » [Nitecore](#) » NITECORE TM10K LTP Low Temperature Resistant Rechargeable Flashlight User Manual 

Contents

- [1 NITECORE TM10K LTP Low-Temperature Resistant Rechargeable Flashlight](#)
- [2 Warranty Service](#)
- [3 Accessories](#)
- [4 Technical Data](#)
- [5 Charging Function](#)
- [6 Operating Instructions](#)
- [7 Direct Access to ULTRALOW / HIGH](#)
- [8 TURBO Brightness Level](#)
- [9 Lockout / Unlock](#)
- [10 Location Indication](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)

NITECORE

NITECORE TM10K LTP Low-Temperature Resistant Rechargeable Flashlight



WARNINGS

1. The TURBO Brightness Level of 10,000 lumens will produce massive heat rapidly during long-time activation. To avoid overheating and prevent accidental damage, DO NOT activate TURBO repeatedly if the light becomes too hot to handle.
2. DO NOT cover the head of the flashlight or put it close to other objects when turned on to avoid accidents.
3. DO NOT submerge the flashlight into any liquid when it is hot. Doing so may cause irreparable damage to the light due to the difference of air pressure inside and outside of the tube.
4. **CAUTION!** Possible dangerous radiation! Don't look into the light! May be dangerous for your eyes. .

Warranty Service

All NITECORE® products are warranted for quality. Any DOA / defective product can be exchanged for a replacement through a local distributor/dealer within 15 days of purchase. After that, all defective/malfunctioning NITECORE® products can be repaired free of charge within 24 months from the date of purchase. Beyond 24 months, a limited warranty applies, covering the cost of labor and maintenance, but not the cost of accessories or replacement parts. The warranty will be nullified if

1. the product(s) is/are broken down, reconstructed and/or modified by unauthorized parties;
2. the product(s) is/are damaged due to improper use.

For the latest information on NITECORE® products and services, please contact a local NITECORE® distributor or send an email to service@nitecore.com. All images, texts and statements specified herein in this user manual are for reference purposes only. Should any discrepancy occur between this manual and information specified on www.nitecore.com, Sysmax Innovations Co., Ltd. reserves the right to interpret and amend the content of this document at any time without prior notice.

SYSMEX Innovations Co., Ltd.

TEL: +86-20-83862000

FAX: +86-20-83882723

E-mail: info@nitecore.com

Web: www.nitecore.com

Address: 24/F, TCL Plaza, No. 18 Haizhou Road, Haizhu District, Guangzhou, 510335, Guangdong, China

Accessories

- USB-C Charging Cable,
- Holster,
- Lanyard


Technical Data

| | TURBO | HIGH | MID | LOW | ULTRALOW |
|---------------------|-----------------------------|-----------------|---------------|---------------|-------------|
| Brightness | **10,000 lumens | 1,000 lumens | 300 lumens | 100 lumens | 3 lumens |
| Runtime | — | *1h 45min | 5h 45min | 12h | 170h |
| Beam Distance | 288m | 90m | 49m | 28m | 5m |
| Peak Beam Intensity | 20,000cd | 2,050cd | 600cd | 200cd | 7cd |
| Impact Resistance | 1m | | | | |
| Water Resistance | IP68 (2 meters submersible) | | | | |

Note: The stated data is measured using the built-in battery (1 x 4,200mAh 21700 low-temperature resistant Li-ion battery) at room temperature. The data may vary in real-world use due to different battery usage or environmental conditions.

- The HIGH Brightness Level is customizable between 400 – 2,000 lumens (Default: 1,000 lumens). Its runtime is tested in the default brightness without the temperature regulation.
- The Li-ion battery cannot work with full power in extremely cold environments. It is not recommended to activate TURBO in this case.

Charging Function

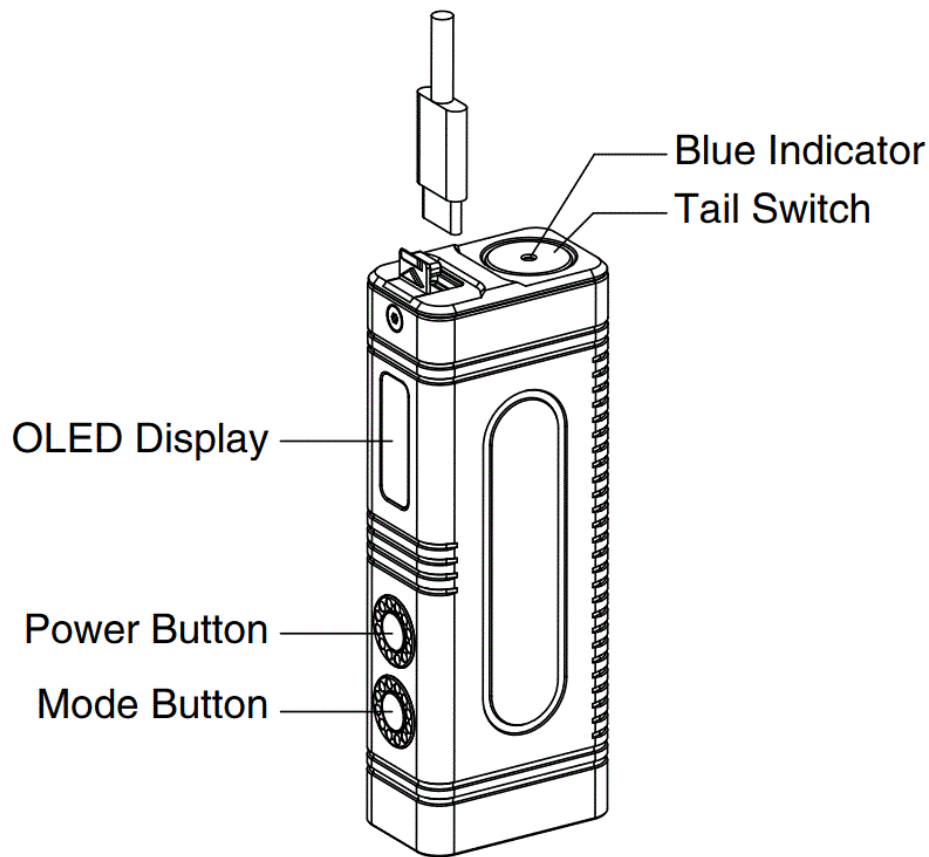

Charging

The TM10K LTP is equipped with an intelligent charging function. Please recharge the product before the first use. The TM10K LTP is available for both Standard Mode and QC Mode. As illustrated, uncap the charging port and connect it with the USB adapter (available as an optional accessory) via the USB cable.

- When charging via a QC adapter, it will automatically access the QC mode and the screen will show “Q.charge” and the current battery voltage. When charging via a non-QC adapter, the screen will show “Charging...” and the current battery voltage.
- When the product is fully charged, it will automatically cease the charging process and the screen will show “chg. finished” and the current battery voltage.
- When a malfunction occurs during the charging process, the screen will show “Error” to inform the user.
- When the light is on, connecting a charging cable will automatically turn the light off. The light will return to its previous memorized brightness level when the charging cable is disconnected.
- Full charging time in QC Mode is approx. 1h 45min. Full charging time in Standard Mode is approx. 4h 15min (5V / 2A Adapter).
- When fully charged, the standby time is approx. 12 months.

Operating Instructions

Multifunctional OLED Display

The TM10K LTP is equipped with a multifunctional OLED display.

- When the flashlight is turned on, the screen will successively show the current info (Brightness Level & Lumens → Battery Voltage → Power Remaining → Runtime Remaining → Temperature) before it goes out.
- When the flashlight is turned off, the screen will show “Standby” and the current battery voltage for approx. 10

seconds before it goes out.

- After the screen goes off, short pressing the Mode Button can reactivate the screen.

On / Off

On: When the light is off, short press the Power Button to turn it on.

Off: When the light is on, short press the Power Button to turn it off.

Brightness Levels

When the light and the screen is on, short press the Mode Button to cycle through “ULTRALOW – LOW – MID – HIGH”. (The flashlight will directly access the previously memorized brightness level when reactivated.)

Note: When the screen is off, short press the Mode Button to activate the screen before adjusting the brightness level.

Direct Access to ULTRALOW / HIGH

ULTRA LOW: When the light is off, long press the Power Button to directly access ULTRALOW.

HIGH: When the light is off, long press the Mode Button to directly access HIGH.

HIGH Brightness Level Customization

The HIGH Brightness Level is customizable between 400 – 2,000 lumens (Default: 1,000 lumens).

- When the light is at HIGH Brightness Level, press and hold both the Power Button and the Mode Button simultaneously for over 3 seconds to access the setting mode, during which the screen will flash to show the current brightness level and lumens.
- When in setting mode, short press the Power Button to increase the brightness by 100 lumens each time to a maximum brightness of 2,000 lumens; short press the Mode Button to decrease the brightness by 100 lumens each time to a minimum brightness of 400 lumens.
- Press and hold the Tail Switch to access TURBO. Release to return to the previous status. (This feature is not available in Full Lockout Mode. Please refer to the “Lockout / Unlock” Section for more details.)
- When the light is on, press and hold the Mode Button to access TURBO. Release to return to previous brightness level.

TURBO Brightness Level

TURBO Activation: When activating TURBO, a countdown progress bar will be shown on the display. The progress bar will be discharged while activating TURBO.

- Press and hold the Tail Switch to access TURBO. Release to return to previous status. (This feature is not available in Full Lockout Mode. Please refer to “Lockout / Unlock” Section for more details.)
- When the light is on, press and hold the Mode Button to access TURBO. Release to return to previous brightness level.

Note:

1. When holding the Tail Switch / the Mode Button with the progress bar fully discharged, the light will access HIGH Level instead and the progress bar will be shown empty. Release to return to the previous status, and the progress bar will be recharged.
2. The recharging time of the progress bar depends on the thermal status of the flashlight. During the recharging process, short press the Mode Button to exit displaying the progress bar. The progress bar might cease

recharging when the flashlight is at a high temperature.

3. When the temperature of the flashlight is too high to access TURBO, it will access HIGH instead and the screen will show "OVER HEAT" to inform the user.
4. When at a low temperature, the brightness of TURBO might be affected by insufficient battery power.

Lockout / Unlock

The TM10K LTP has two lockout modes (Half Lockout Mode and Full Lockout Mode).

Half Lockout Mode (Lockout 1):

- When the light is on, press and hold the Power Button, during which the screen will show "Locking...", until the light is turned off to access Half Lockout Mode. After that, the screen will show "Lockout 1" and the current battery voltage.
- When in Half Lockout Mode, both the Power Button and the Mode Button are unavailable to activate the flashlight. Short pressing either button will activate the screen only.
- When in Half Lockout Mode, the Tail Switch is still available for accessing TURBO.

Full Lockout Mode (Lockout 2):

- When the light is on, press and hold the Power Button even after accessing Half Lockout Mode until the light flashes once and the screen shows "Lockout 2" to access Full Lockout Mode.
- When in Full Lockout Mode, all 3 buttons are unavailable to activate the flashlight. Short pressing any button will activate the screen only.

Unlock:

In either Lockout Mode, short press and then long press the Power Button, during which the screen will show "Unlock...", until the flashlight is activated to exit Lockout Mode.

Location Indication

On: When the light is off, press and hold both the Power Button and the Mode Button until the screen shows "BEACON ON" to access Location Indication. The blue indicator located in the Tail Switch will flash once every 2 seconds to indicate the location of the TM10K LTP. The standby time in this status is approx. 3 months.

Off: When the light is off, press and hold both the Power Button and the Mode Button until the screen shows "BEACON OFF" to exit Location Indication.

ATR (Advanced Temperature Regulation): The integrated ATR technology regulates the output of the TM10K LTP according to the working condition and ambient environment to maintain optimal performance.

Warnings

1. The TURBO Brightness Level of 10,000 lumens will produce massive heat rapidly during long-time activation. To avoid overheating and prevent accidental damage, DO NOT activate TURBO repeatedly if the light becomes too hot to handle.
2. The HIGH Brightness Level is customizable between 400 – 2,000 lumens. To avoid overheating, DO NOT activate HIGH for a long time if the light becomes too hot to handle.
3. DO NOT cover the head of the flashlight or put it close to other objects when turned on to avoid accidents.
4. DO NOT submerge the flashlight into any liquid when it is hot. Doing so may cause irreparable damage to the light due to the difference of air pressure inside and outside of the tube.

5. When the flashlight is kept in the backpack or the holster, please activate the Lockout Mode.
6. **CAUTION!** Possible dangerous radiation! Don't look into the light! May be dangerous for your eyes.
7. Please recharge the product with the original charging cable and a 5V/2A adapter or a QC adapter.
8. Please recharge the product before the first use.
9. Please recharge the product every 6 months when left unused for a long time.
10. Please note that only 2 LEDs will be turned on when accessing ULTRALOW.

Documents / Resources

| | |
|---|--|
|  | NITECORE TM10K LTP Low Temperature Resistant Rechargeable Flashlight [pdf] User Manual TM10K LTP, Low Temperature Resistant Rechargeable Flashlight, TM10K LTP Low Temperature Resistant Rechargeable Flashlight, Rechargeable Flashlight, Flashlight |
|---|--|

References

- [NITECORE](#)
- [NITECORE](#)