


NOVUS
TxIsoLoop 1
Loop
Powered
Isolators

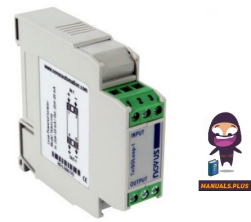

NoVus TxIsoLoop 1 Loop Powered Isolators User Guide

[Home](#) » [Novus](#) » NoVus TxIsoLoop 1 Loop Powered Isolators User Guide 

Contents

- [1 NoVus TxIsoLoop 1 Loop Powered Isolators](#)
- [2 Product Usage Instructions](#)
- [3 SAFETY ALERTS](#)
- [4 INTRODUCTION](#)
- [5 SPECIFICATIONS](#)
- [6 ELECTRICAL INSTALLATION](#)
- [7 MECHANICAL INSTALLATION](#)
 - [7.1 WARRANTY](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

NOVUS

NoVus TxIsoLoop 1 Loop Powered Isolators



Product Usage Instructions

Electrical Installation

Electrical Connections

Follow the wiring diagram provided in the manual to make proper electrical connections.

Active Current Signal

If using an active current signal, ensure proper setup and calibration according to the device specifications.

Installation Recommendations

Follow the installation recommendations provided to ensure optimal performance and safety.

Mechanical Installation

Mount the isolator securely in a suitable location following the mechanical installation guidelines provided in the manual.

Warranty

Refer to the warranty section in the manual for information on warranty coverage and terms.

FAQ (Frequently Asked Questions)

Q: What should I do if I encounter an electrical issue after installation?

A: If you encounter any electrical issues after installation, first ensure that all connections are secure and correct. If problems persist, refer to the troubleshooting section of the manual or contact customer support for assistance.

Q: Can the isolator be used in outdoor environments?

A: The work environment specifications provided in the manual will indicate whether the isolator is suitable for outdoor use.

Always adhere to the specified environmental conditions for optimal performance and longevity of the product.

TxIsoLoop-1



TxIsoLoop-2

Loop-Powered Isolators

USER GUIDE – V1.0x I

SAFETY ALERTS

The symbols below are used in the device and throughout this manual to draw the user’s attention to valuable information related to device safety and use.

		
CAUTION Read the manual fully before installing and operating the device.	CAUTION OR HAZARD Risk of electric shock.	ATTENTION Material sensitive to static charge. Check precautions before handling.

All safety recommendations appearing in this manual must be followed to ensure personal safety and prevent damage to the instrument or system. If the instrument is used in a manner other than that specified in this manual, the device’s safety protections may not be effective.

INTRODUCTION

TxIsoLoop-1 and TxIsoLoop-2 galvanic isolators are devices used for electrical isolation of 0(4)-20 mA current signals. Its purpose is to avoid measurement errors typically found in installations that have problems with electrical potential difference and ground loops
These isolators do NOT require an electrical power supply. The energy obtained by passing the electric current through the insulator input actively generates the output current.

Features

- Galvanic isolation between input and output.
- Models with one or two input/output channels.
- The device does not require a power supply.
- High accuracy.

SPECIFICATIONS

Table 1 Technical specifications

FEATURES	TXISOLOOP
Input signal	0(4) to 20 mA (Check minimum current for proper operation)
Voltage drop – Input/output without protection (Vdrop)	< 3 Vdc
Voltage drop – Input/output with protection (Vdrop)	< 5 Vdc
Output signal	0(4) to 20 mA
Max. load (RL)	1450 R
Total accuracy	<ul style="list-style-type: none"> · 0.2 % @ 0 to 60 °C / RL = 250 R · 0.3 % @ -20 to 75 °C / RL = 250 R
Minimum operating current	> 0.1 mA
Maximum input current	< 40 mA
Response time	2 ms @ RL= 250 R
Current limit	31 mA
Electrical isolation	<ul style="list-style-type: none"> · 3000 Vac / 10 seconds · 240 Vac continuous
EMC	EN 61326-1 (without performance degradation)
Work environment	<ul style="list-style-type: none"> · Temperature: -20 to 75 °C · Relative humidity: 20 to 90 %
Housing	ABS (60 %) + PC (40 %)
Protection index	IP40
Wire gauge for connections	0.14 a 1.5 mm ²
Recommended torque	0.8 Nm
Terminal enclosure	Polyamide

ELECTRICAL INSTALLATION

To ensure perfect operation of the TxIsoLoop isolator, the circuit where the isolator input is connected must provide a minimum electrical voltage (V1).

You can supply the electrical voltage in two ways:

1. The device that generates the current signal is of the active type (source), where it provides the necessary electrical voltage itself.

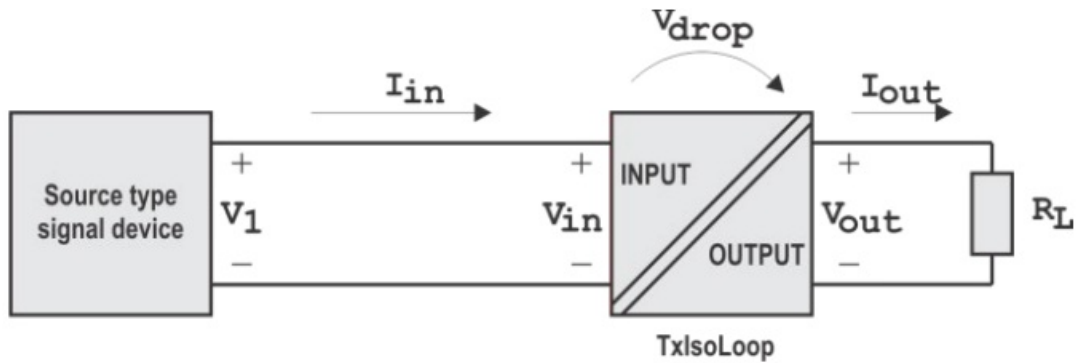


Figure 1 TxIsoLoop connections with source type device

With type source devices (transmitters, controllers, etc.), this voltage is provided by the device itself).

The minimum voltage value to be supplied by the generator can be calculated using the formula below:

$$V_1 = V_{in} \quad \text{Where: } V_{in} = V_{drop} + (I_{out(max)} \times R_L)$$

$$I_{in} = I_{out}$$

2. With sink type devices (2-wire transmitters), the energy is provided by an external power supply in series in the loop, as shown in Figure 2.

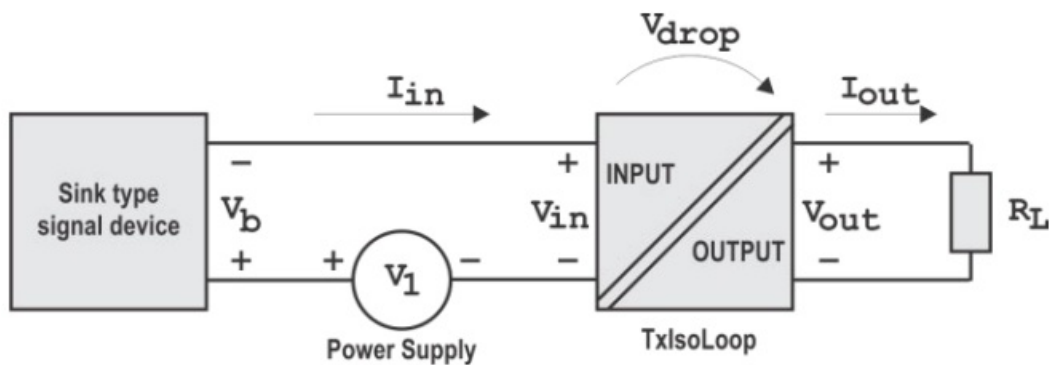


Figure 2 Connections on the TxIsoLoop with sink type devices

In this option, the inserted source must provide enough voltage to meet the needs of the current generating device (generator, transmitter, controller, etc.) and the isolator.

The minimum voltage value to be supplied by the power supply can be calculated using the formula below:

$$V_1 = V_b + \quad \text{Where: } V_1 = \text{Voltage from the source inserted into the circuit}$$

$$V_{in} \quad V_b = \text{Minimum voltage of the generator}$$

$$V_{in} = V_{drop} + (I_{out(max)} \times R_L)$$

$$I_{in} = I_{out}$$

ELECTRICAL CONNECTIONS

To configure TxIsoLoop-1, use the following wiring diagram:

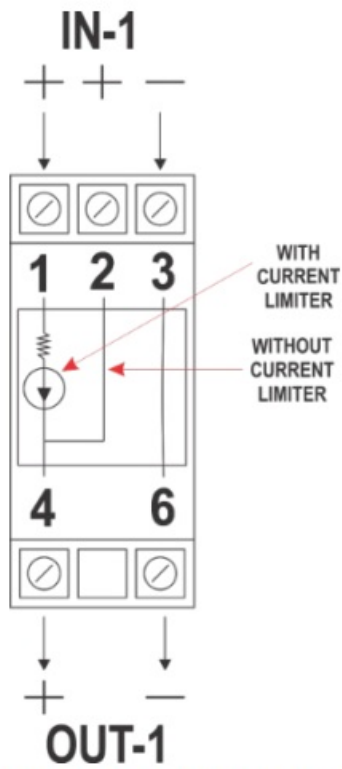


Figure 3 TxIsoLoop-1 Connections

To configure TxIsoLoop-2, use the following wiring diagram:

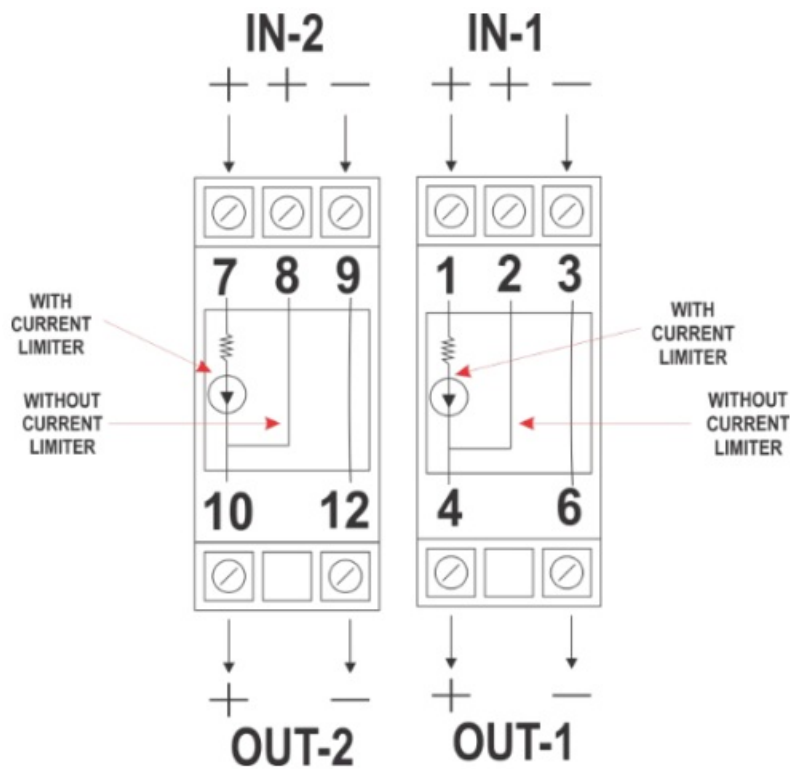


Figure 4 TxIsoLoop-2 Connections

TXISOLOOP-2 – SIGNAL SPLITTER FUNCTION

If needed, TxIsoLoop-2 can be used as a 4-20 mA signal splitter, as shown in the figures below:

ACTIVE CURRENT SIGNAL

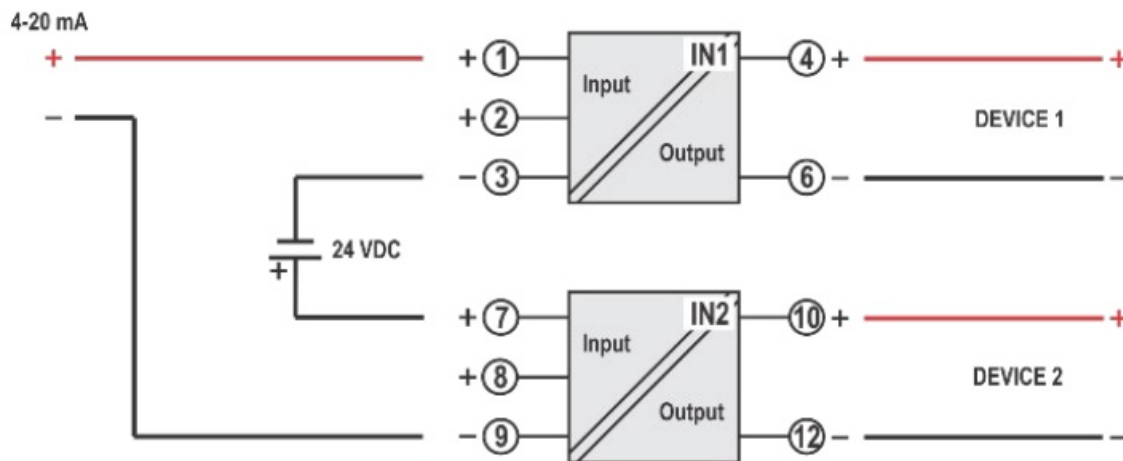


Figure 5 Active current signal

PASSIVE CURRENT SIGNAL

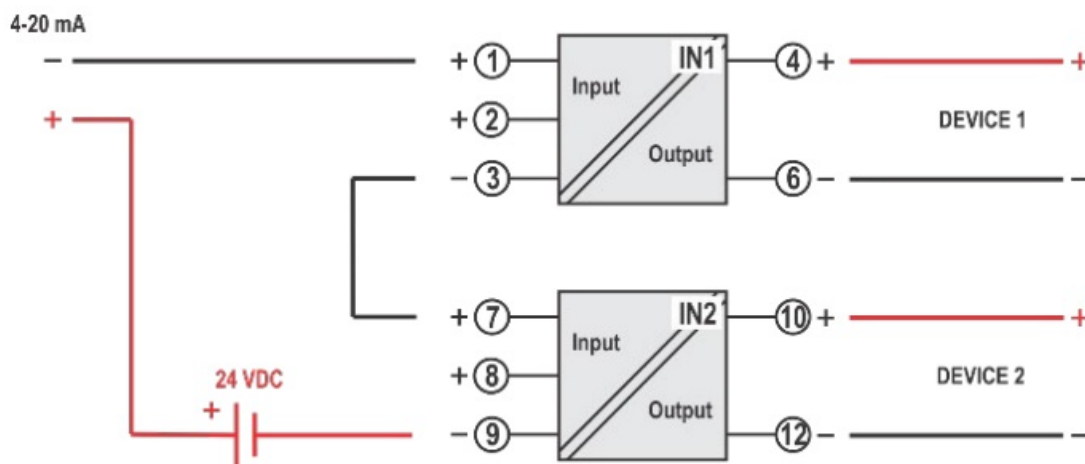


Figure 6 Passive current signal

To duplicate the signal, the two outputs of the device must be connected to a load.

INSTALLATION RECOMMENDATIONS

- Input signal conductors must run through the plant separately from the supply and output conductors. If possible, in grounded conduits.
- The power supply for the electronic instruments must come from a proper instrumentation network.
- In control applications, it is essential to consider what can happen when any part of the system fails.
- It is recommended to use RC FILTERS (noise suppressors) at contactor coils, solenoids, etc.

MECHANICAL INSTALLATION

The transmitter is intended for a 35 mm DIN rail mounting.

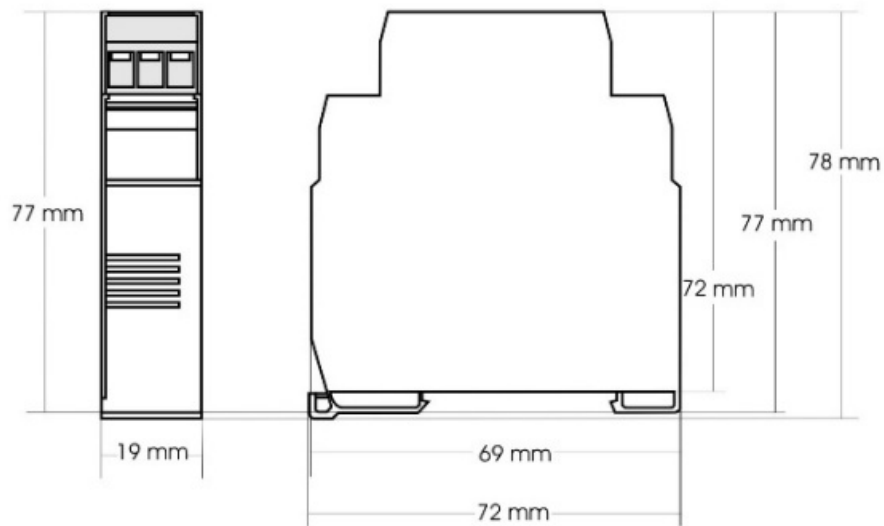



Figure 7 Isolator dimensions

WARRANTY

Warranty conditions are available on our website www.novusautomation.com/warranty.

Documents / Resources

	<p>NoVus TxIsoLoop 1 Loop Powered Isolators [pdf] User Guide TxIsoLoop-1, TxIsoLoop-2, TxIsoLoop 1 Loop Powered Isolators, TxIsoLoop 1, Loop Powered Isolators, Powered Isolators, Isolators</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.