



OMP HOBBY OSHM4117 Multifunction LCD Program Box User Manual

[Home](#) » [OMP HOBBY](#) » OMP HOBBY OSHM4117 Multifunction LCD Program Box User Manual 

Contents

- [1 OMP HOBBY OSHM4117 Multifunction LCD Program Box](#)
- [2 Product Features](#)
- [3 Product Specifications](#)
- [4 Product Description of Each Button and Port](#)
- [5 Product Instructions](#)
- [6 FEATURES](#)
- [7 SPECIFICATION](#)
- [8 DESCRIPTION](#)
- [9 INSTRUCTIONS](#)
- [10 Documents / Resources](#)
- [11 Related Posts](#)

OMP HOBBY

OMP HOBBY OSHM4117 Multifunction LCD Program Box



Thank you for purchasing the Multifunction LCD Program Box. This manual provides detailed information on the product features, specifications, and usage instructions. Please read this manual carefully before using the product.

Product Features

1. Works as an individual device to set parameters for Electronic Speed Controller (ESC)
2. Works as a Lipo battery voltmeter to measure the voltage of the whole battery pack and each cell
3. Displays real-time data for ESC with data returning feature, including: voltage, current, input throttle, output throttle, RPM, battery power, MOS temperature, and motor temperature
4. Reads data for ESC with data logging feature, including: maximum RPM, minimum voltage, maximum current, external temperature, and maximum temperature
5. Identifies and displays the input throttle pulse width and frequency for PWM throttle signal detection
6. Works like a remote control to adjust the speed for ESC/servo by pressing the program box's button (ESC/Servo Tester)
7. The LCD program box can be upgraded by the mobile App via the Bluetooth module

Product Specifications

- **Size:** 84*49*11.5mm
- **Weight:** 40g
- **Power supply:** DC5~12.6V
- **Suitable for the following ESC:** OMPHOBBY 65A ESC

Product Description of Each Button and Port

- **ITEM button:** Change the programmable items circularly
- **OK button:** Save and send the current parameters into the ESC
- **button:** Change the programmable items circularly in positive direction
- **button:** Change the programmable items circularly in negative direction
- **ESC port:** Use programming line to connect this port with programming port of ESC
- **Programming box power supply input port:** When the programming port of ESC has no voltage output such as OPTO ESC, a separated battery or UBEC is needed to supply power for LCD programming box from this port
- **Battery Check port:** Connect this port with the balance charging connectors of the battery

Product Instructions

Working as an individual device to set the parameters for the ESC

1. Disconnect the battery from the ESC
2. Select the corresponding connection method, and connect the ESC with LCD program box:
 - If the programming line of ESC shares a same line with throttle line, then unplug throttle line from receiver and plug into ESC port of LCD program box correspondingly.
 - If the ESC has independent programming port, then using programming line to connect programming port of ESC with ESC port of LCD program box.
3. Connect the ESC to battery
4. If the connection is correct, LCD program box shows initial screen, press ITEM or button on the LCD program box, the screen shows ESC CONNECTING then it shows the 1st programmable item after a few seconds, which means LCD program box connects with ESC successfully. Press the OK button to save data.
5. For OPTO ESC, a separated battery or UBEC is needed to supply power for LCD programming box from this port.

Note 1: Reset the ESC by the LCD program box. When the connection between ESC and LCD program box is successfully established, press ITEM button for several times until the Restore Default is displayed, press OK button, then all programmable items in the current profile are reset to factory default options.

Thanks for purchasing the LCD program box, please read this manual carefully before using it. Multifunction LCD program box is the equipment that integrates multiple functions, it is small to carry and convenient to set parameters for ESC(Electronic Speed Controller).

FEATURES

1. Working as an individual device to set the parameters for the ESC.
2. Working as a Lipo battery voltmeter to measure the voltage of the whole battery pack and each cell.
3. For the ESC with data returning feature, it can display real-time data including: voltage, current, input throttle, output throttle, RPM, battery power, MOS temperature and motor temperature.
4. For the ESC with data logging feature, it can read the data including: maximum RPM, minimum voltage, maximum current, external temperature, and maximum temperature.
5. **PWM throttle signal detection:** Identify and display the input throttle pulse width and frequency.
6. **ESC/Servo Tester:** It works like remote control to adjust the speed for ESC/servo by press the program box's

button.

7. The LCD program box can be upgraded by the mobile App via the bluetooth module.

SPECIFICATION


- **Size:** 84*49*11.5mm
- **Weight:** 40g
- **Power supply:** DC5~12.6V

SUITABLE FOR THE FOLLOWING ESC

- OMPHOBBY 65A ESC

DESCRIPTION

DESCRIPTION OF EACH BUTTON AND PORT

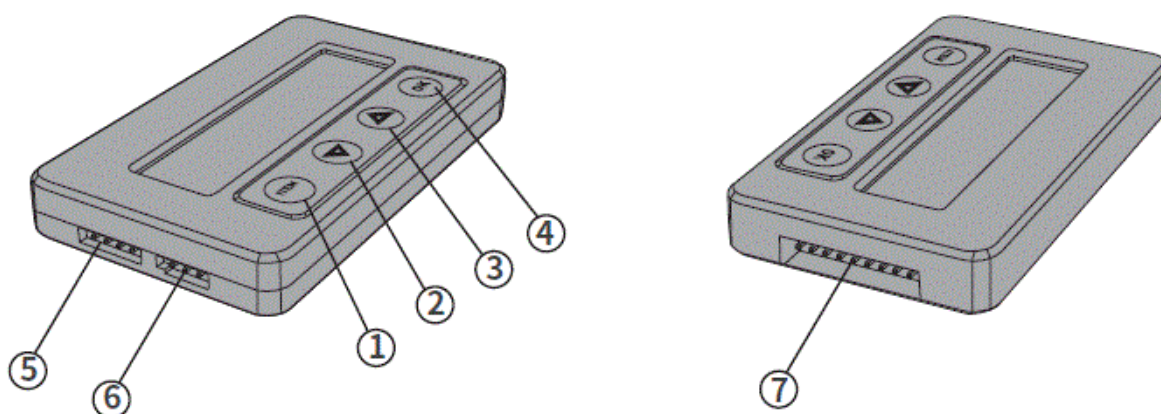

1. **ITEM:** Change the programmable items circularly.
2. ▽ : Change the programmable items circularly in positive direction.
3. △ : Change the programmable items circularly in negative direction.
4. **OK:** Save and send the current parameters into the ESC.
5. **ESC:** Use programming line to connect this port with programming port of ESC.
6. **Programming box power supply input port:** When the programming port of ESC has no voltage output such as OPTO ESC, a separated battery or UBEC is needed to supply power for LCD programming box from this port.
7. **Battery Check:** Connect this port with the balance charging connectors of the battery.

INSTRUCTIONS

Working as an individual device to set the parameters for the ESC

1. Disconnect the battery from the ESC.
2. Select the corresponding connection method, and connect the ESC with LCD program box.
 1. If the programming line of ESC shares a same line with throttle line, then unplug throttle line from receiver

and plug into“ ESC” port of LCD program box correspondingly.

2. If the ESC has independent programming port, then using programming line to connect programming port of ESC with“ ESC” port of LCD program box.
3. Connect the ESC to battery.
4. If the connection is correct, LCD program box shows initial screen,


OMP
PB-G2-V1.00

 press “ITEM” or “OK” button on the LCD program box, the screen shows

ESC CONNECTING

 then it shows the 1st programmable item after a few seconds, which means LCD program box connects with ESC successfully. Press the“ITEM” ▽ “ ” and“ △ ” button to select the options, press “OK ” button to save data.

For OPTO ESC, a separated battery or UBEC is needed to supply power for LCD programming box from this port

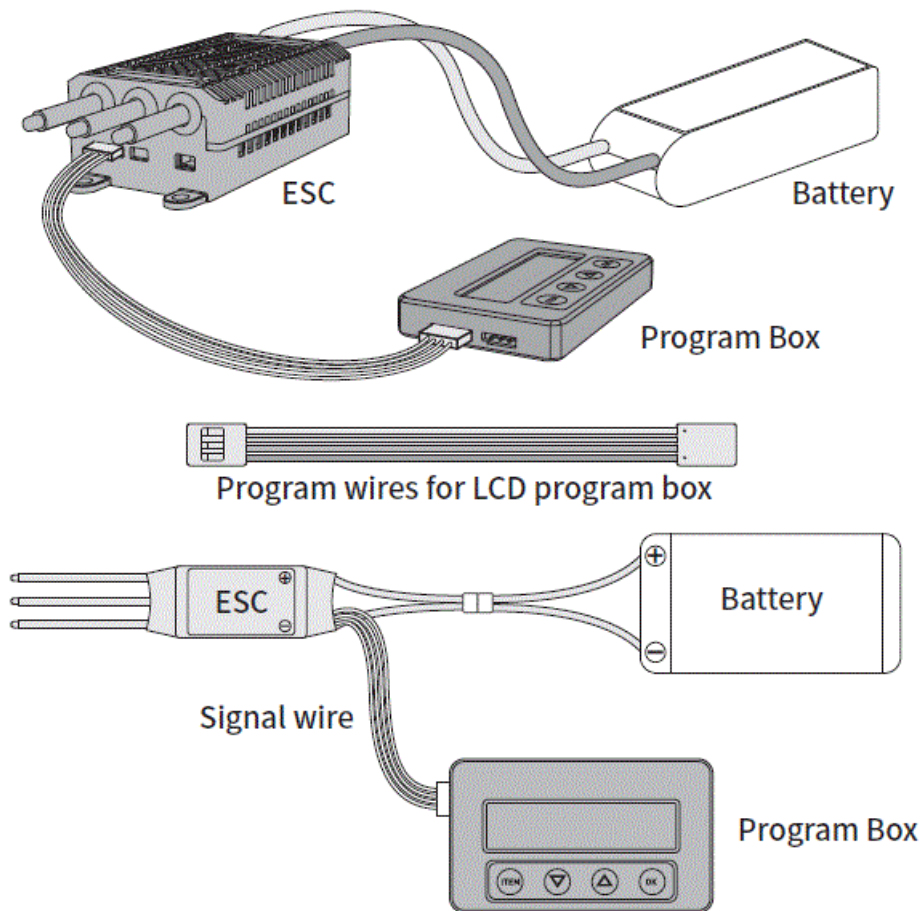


Note

1. Reset the ESC by the LCD program box
 - When the connection between ESC and LCD program box is successfully established, press“ ITEM” button for several times until the“ Restore Default” is displayed, press“ OK” button, then all programmable items in the current profile are reset to factory default options.
2. Read the data logging of ESC by LCD program box
 - For the ESCs with data logging function, the following data can be displayed after the menu of “Restore Default”: maximum RPM, minimum voltage, maximum current, external temperature, and maximum temperature. (ESCs without data logging function will not display these data)
3. Check the ESC running data in real time by LCD program box

- For the ESCs with data returning function, when the connection between ESC and LCD program box is successfully established:
 1. The LCD program box can display the following data in real time: voltage, current, input throttle, output throttle, RPM, battery power, MOS temperature and motor temperature.
 2. If the ESC has errors, the LCD program box will display the current error circularly. The errors are as below:
 - **SC Protection:** Short circuit protection
 - **Break Protection:** Motor wire brake protection
 - **Loss Protection:** Throttle loss protection
 - **Zero Protection:** Throttle is not in zero position when powered up
 - **LVC Protection:** Low voltage protection
 - **Temp Protection:** Temperature protection
 - **Start Protection:** Start locked rotor protection
 - **OC Protection:** Over current protection
 - **PPM_THR ERROR:** The PPM throttle is not in the range
 - **UART_THR ERROR:** The UART throttle is not in the range
 - **UART_THR LOSS:** UART throttle loss
 - **CAN_THR LOSS:** CAN throttle loss
 - **BAT_VOT ERROR:** The battery voltage is not in the range


PWM throttle signal detection

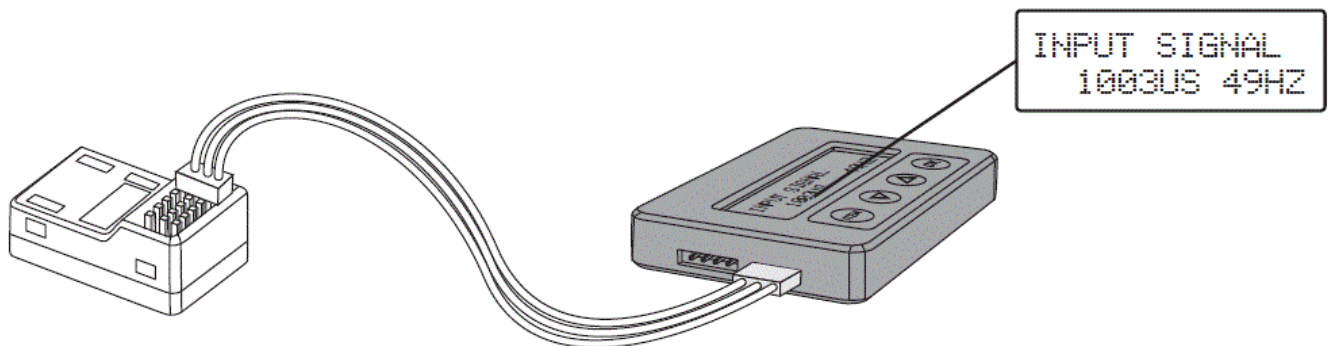

When the PWM signal device such as the receiver is in normal working state, connect the receiver and LCD program box, Press and hold the buttons $\triangle \nabla$ for 3 seconds at the same time, Then select“ Input Signal”, it can identify and display the input throttle pulse width and frequency.


ESC/Servo Tester

It works like remote control to adjust the speed for ESC/servo by press the program box's button.

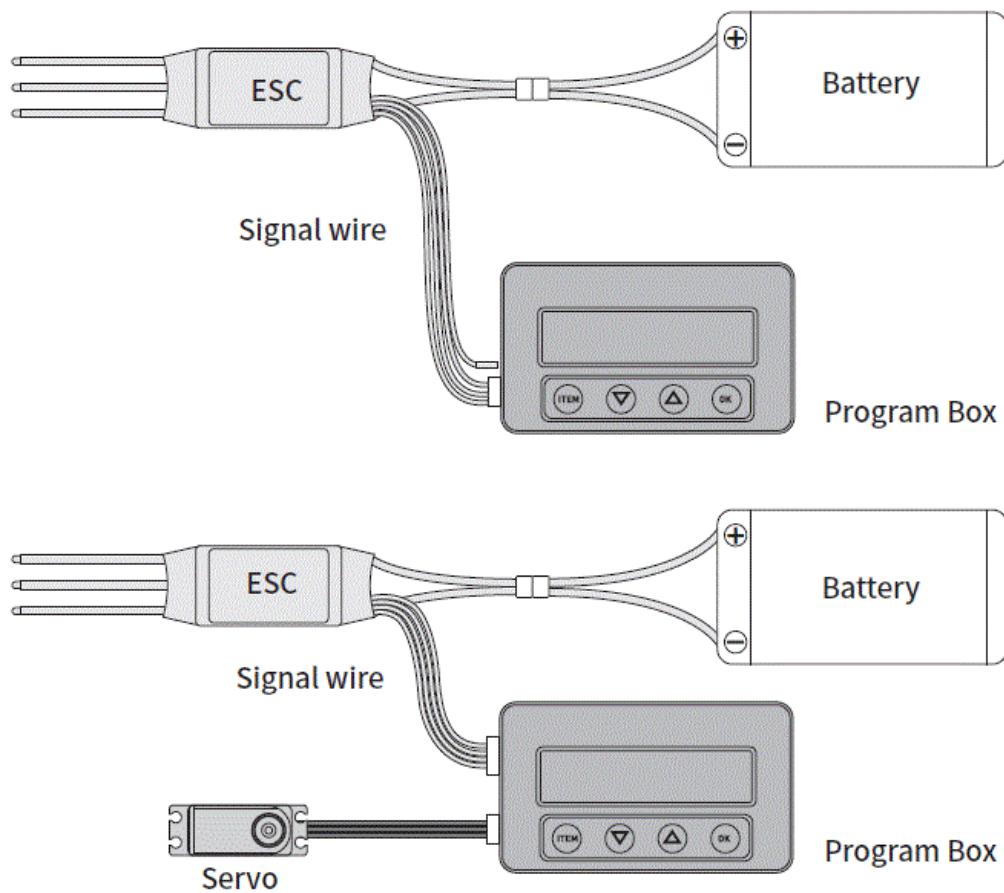

1. Press and hold the buttons $\Delta \nabla$ for 3 seconds at the same time, then select "Output Signal".
2. Press the button respectively $\Delta \nabla$, the throttle will be increased or decreased in units of "1us", long press the $\Delta \nabla$ or button for about 3 seconds to quickly increase or decrease the throttle.
3. Press the "ITEM" button, the throttle will decrease in units of "100us", press the "OK" button, the throttle will increase in units of "100us".

Working as a Lipo battery voltmeter to measure the voltage of the whole battery pack and each cell

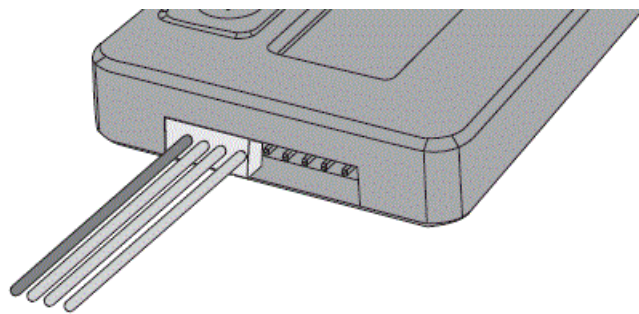

OMPHOBBY PB-G2-V1.00	BATTERY VOLTAGE 11.31V	1: 3.74V 2: 3.76V 3: 3.81V 4: 0.00V	5: 0.00V 6: 0.00V 7: 0.00V 8: 0.00V
-------------------------	---------------------------	--	--

1. **Battery:** 2-8SLi-Polymer/Li-Lon/LiHV/Li-Fe
2. **Precision:** $\pm 0.1V$
3. **Usage:** Plug the battery balance charge connector into the "BATTERY CHECK" port of the LCD program box


separately, (Please make sure that the negative pole points to the“-” symbol on the program box).

Update the firmware of LCD program box

The LCD program box should be updated because the functions of ESC are improved continuously, the method is as follows:

1. Provide power for LCD program box by ESC, battery or external power supply device, the power supply range is 5-12.6V.
2. Connect the Bluetooth module to the “ESC” port of the LCD program box.
3. Download APP and install it on your phone, after install it successfully, open your phone’s bluetooth, find“xxx-BLE-XXXX”, then click“Connect”.
4. After the connection is successful, select “Firmware”, then select “Firmware Update”.
5. Select the latest firmware and click “OK” to upgrade.
6. Wait for a few seconds until the interface displays “Upgrade Successful”.

Documents / Resources

	OMPHOBBY OSHM4117 Multifunction LCD Program Box [pdf] User Manual OSHM4117, OSHM4117 Multifunction LCD Program Box, Multifunction LCD Program Box, LCD Program Box, Program Box
--	--