



ONDAS NETWORKS WCP Radio Mobile Station User Guide

[Home](#) » [ONDAS NETWORKS](#) » ONDAS NETWORKS WCP Radio Mobile Station User Guide 

Contents

- 1 ONDAS NETWORKS WCP Radio Mobile Station
- 2 FCC Compliance
- 3 FCC Exposure Statement
- 4 ISED Canada
- 5 4 Physical Installation
 - 5.1 Airlink WCP Enclosure
- 6 System Overview
- 7 Documents / Resources



ONDAS NETWORKS WCP Radio Mobile Station



- **Document Version:** 1.7 November 2022
- **Warning:** Never power on an Airlink WCP without a load on the RF connector.
- **Ondas Networks Inc.** | 165 Gibraltar Court, Sunnyvale, CA 94089 | (888) 350-9994 | [ondas.com](https://www.ondas.com)

Table of Contents

1. FCC Compliance
2. FCC Exposure Statement
3. ISED Canada

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by Ondas Networks could void the user's authority to operate the equipment.

FCC Exposure Statement

- This equipment complies with the FCC RF radiation exposure limits set forth for a controlled environment. This transmitter must follow the specific operating instructions for satisfying RF exposure compliance.
- The maximum gain antenna to be used with this equipment is 19 dBi. So equipped, this transmitter must be at least 9.1 meters from the user and must not be co-located or operating in conjunction with any other antenna or transmitter.
- The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Ondas Networks may void the user's authority to operate the equipment.

ISED Canada

Statement

This device complies with Innovation, Science and Economic Development Canada's license-exempt RSSs. Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Radiation Exposure Statement

This equipment complies with the IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 9.1 meters between the radiator and your body.

Physical Installation

Introduction

An Airlink WCP radio is comprised of software and hardware which is packaged in an indoor enclosure intended for mounting in a 19 rack or directly attached to a wall board.

Airlink WCP Enclosure

Enclosure Material	Dimensions (W x D x H)	Operating Temperature	DC Input Power Range	Power Consumption
Aluminum Alloy	9 x 9 x 10 (230mm x 230mm x 255mm)	10 to 36 VDC	Nominal voltage 24VDC	No load: 100 watts @ 24 VDC Peak load: 150 watts @ 24 VDC

Product Overview:



Airlink WCP Front Panel:

Warning: Never power on a Airlink WCP without a load on the RF connector.

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
 2. This device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by Ondas Networks could void the user's authority to operate the equipment.

FCC Exposure Statement

This equipment complies with the FCC RF radiation exposure limits set forth for a controlled environment. This transmitter must follow the specific operating instructions for satisfying RF exposure compliance.

The maximum gain antenna to be used with this equipment is 19 dBi. So equipped, this transmitter must be at least 9.1 meters from the user and must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The FCC requires the user to be notified that any changes or modifications made to this device that are not

expressly approved by Ondas Networks may void the user's authority to operate the equipment.

ISED Canada

Statement

This device complies with Innovation, Science and Economic Development Canada's license-exempt RSSs. Operation is subject to the following two conditions:

1. This device may not cause interference; and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Radiation Exposure Statement

This equipment complies with the IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 9.1 meters between the radiator and your body.

Énoncé d'exposition aux rayonnements: Cet équipement est conforme aux limites d'exposition aux rayonnements ioniques RSS-102 Pour un environnement incontrôlé. Cet équipement doit être installé et utilisé avec un Distance minimale de 9.1 metres entre le radiateur et votre corps.

4 Physical Installation

Introduction

A Airlink WCP radio is comprised of software and hardware which is packaged in an indoor enclosure intended for mounting in a 19" rack or directly attached to a wall board.

Airlink WCP Enclosure

Specifications

Enclosure Material	Aluminum Alloy
Dimensions (W x D x H)	9" x 9" x 10" (230mm x 230mm x 255mm)
Operating Temperature	-40° F to 158° F (-40° C to 70° C)
DC Input Power Range	10 to 36 VDC Nominal voltage 24VDC
Power Consumption	No load : 100 watts @ 24 VDC Peak load : 150 watts @ 24 VDC

Product Overview



Figure 1 ; Airlink WCP Overview

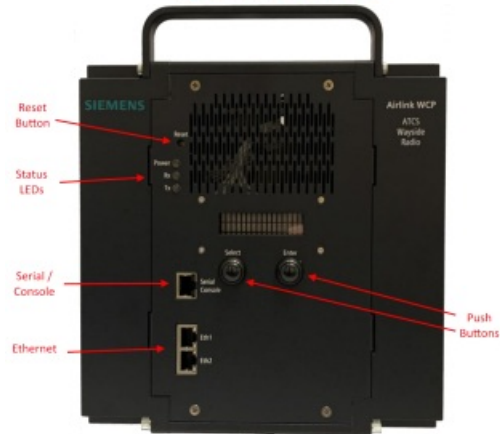


Figure 2 : Airlink WCP Front Panel

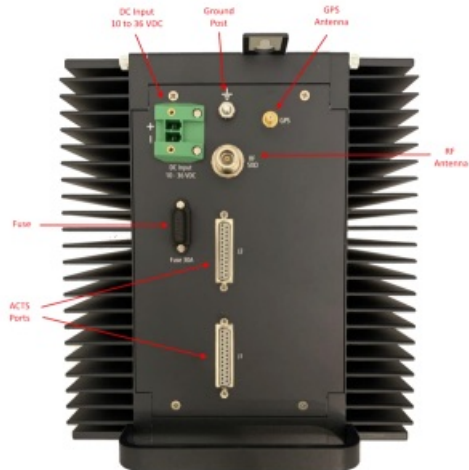


Figure 3 : Airlink WCP Top Panel

Connection Descriptions

Connector	Application
GPS Antenna	SMA female connector for optional GPS antenna.
RF Out	50Ω N-Type female connector for RF input from antenna
DC Input	DC power input 10 to 36 volts. Warning: Ensure Correct Polarity
Ground Post	Connection to building ground
Fuse	30 amp Fuse
ATCS Ports	2 x DB25 female connectors for ATCS data
Ethernet	2 x RJ45 connector for Ethernet 10/100 Base-T interface
Console / Serial	RJ45 8-pin connector wired using the Cisco interface specification for serial access and console access via an adapter cable
Reset Button	Recessed access to system reset function
Push Buttons	Select and Enter functions for user interface

Mounting Guidelines

The Airlink WCP can be mounted in a purpose built rack using the teardrop pin mounting cutouts, or attached to a wall board as described below.

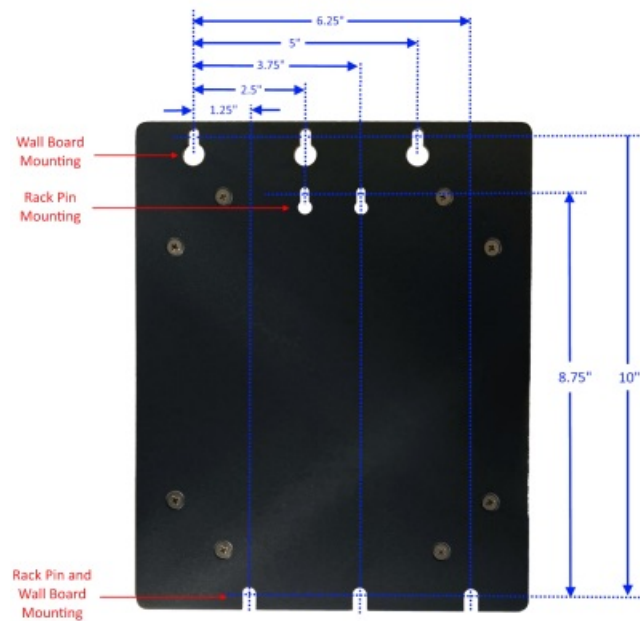


Figure 4 : Airlink WCP Mounting Dimensions

System Overview

Airlink WCP may operate in ATCS Mode as a Mobile Station, or in MC-IoT mode as a Base Station or Mobile Station as defined by FCC Part 90 (§90.7).

ATCS Operation

The Airlink WCP makes up a wayside communications package, including the radio and associated software/hardware that enables the transmission of ATCS datagrams from the WIU to the BCPs and vice-versa. It will function as per the standards that are defined in S-9553.V1.0 & S-9553A.V1.0

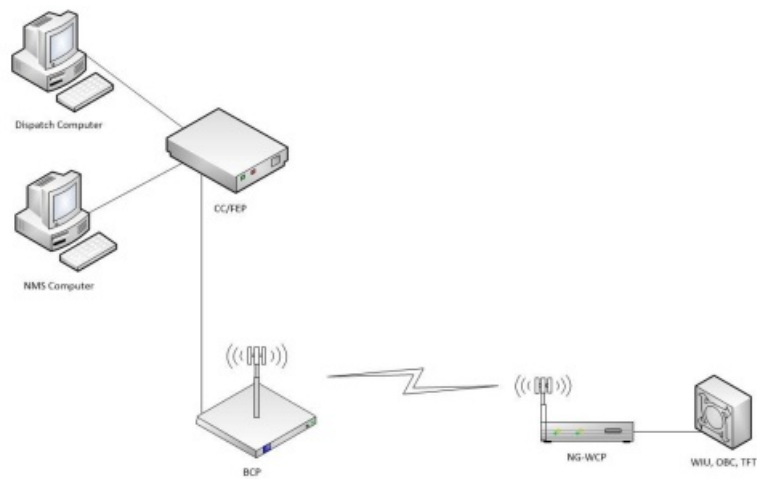


Figure 5 System Overview

Airlink WCPs will interoperate with the existing Siemens BCP infrastructure. It provides a standard interface to the data network for a wide variety of user devices.

Airlink WCP shall be used to perform the following general functions,

- Provide the interface between Base Communication Package (BCP) and Wayside device Interface Unit (WIU)
- Deliver ATCS messages to and receive messages from BCP via an RF link
- Deliver ATCS messages to and receive messages from WIU via the serial ports and a local network interface
- Deliver ATCS messages to and receive messages from a Network Management System in the office.

MC-IoT Operation

In MC-IoT mode the Airlink WCP may operate as a Base Station or Mobile Station in a point-to-multipoint network and employs Ondas Networks' FullMAX technology.

FullMAX is a multi-cell, Point-to-Multipoint (PtMP) broadband wireless system based on the IEEE 802.16 standard with modifications to enable its operation in a wide range of frequencies and a wide range of channel sizes. The system is used to establish a private, broadband wireless service for mission critical industries. FullMAX supports both fixed and mobile applications.

The main characteristics of the FullMAX System include the following:

FullMAX employs HD-FDD or TDD framing to provide greater flexibility and to maximize spectrum utilization. FullMAX is capable of operating in any frequency band between 40 MHz and 6 GHz and in any channel size between 12.5 kHz and 5 MHz. FullMAX can be configured to operate in a downlink to uplink ratio to support symmetrical, asymmetrical and reverse asymmetrical applications.

The FullMAX system offers the private system operator wide area coverage by leveraging the following:

- High transmit power from both the Base Station and Remote Stations
- Exceptional receiver sensitivity
- Superior propagation due to the operation in narrower channel sizes and low band frequencies


The FullMAX system offers excellent frequency utilization through the following capabilities:

- Adaptive Modulation and Coding per link in both the downlink and uplink
- Optimization of the downlink and uplink ratio for the user's main applications. For example, in the case of SCADA applications, the FullMAX frame is configured as reverse asymmetrical, i.e., more bandwidth is allocated to the uplink than to the downlink.
- Modifications to the standard air interface protocol to minimize MAC layer overhead.
- Employ Band-AMC subcarrier allocation scheme in both uplink and downlink direction to maximize the percentage of data transport subcarriers.
- Packet Header Suppression (PHS) with the following characteristics: o

Compressible header field values are learned automatically with no need for manual configurations. o Support for multiple compressible values for the same header fields. As a result, PHS can be used even when the header fields are not constant.

FullMAX includes a versatile set of Quality of Service (QoS) tools that can optimize traffic performance for each application and prioritize access to the available bandwidth according to the operator’s requirements. QoS tools include various scheduling methods (e.g., Best Efforts and Unsolicited Grant Service), service flows with various QoS parameters such as priority level, minimum and maximum traffic rates, guaranteed delay, jitter, etc.

Documents / Resources

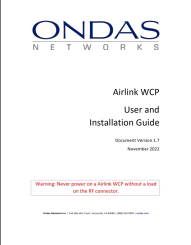	<p>ONDAS NETWORKS WCP Radio Mobile Station [pdf] User Guide NGWCP-1, X27-NGWCP-1, X27NGWCP1, WCP Radio Mobile Station, Radio Mobile Station, Mobile Station</p>
---	--