



OPTONICA 6391 4 Ways DMX Signal Splitter Instructions

[Home](#) » [OPTONICA](#) » OPTONICA 6391 4 Ways DMX Signal Splitter Instructions 

Contents

- [1 OPTONICA 6391 4 Ways DMX Signal Splitter Instructions](#)
- [2 Ways DMX Signal Splitter](#)
- [3 Features](#)
- [4 Technical Parameters](#)
- [5 Mechanical Structures and Installations](#)
- [6 Dimension](#)
- [7 Wiring Diagram](#)
 - [7.1 DMX 512 Mater](#)
- [8 Read More About This Manual & Download PDF:](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

OPTONICA 6391 4 Ways DMX Signal Splitter Instructions



Ways DMX Signal Splitter

SKU: 6391

Input and output optical isolation/Four independent outputs/DMX512-A compatible



Features

- One DMX512 signal input, repeat four DMX512 signal output, each allowing for 32 DMX devices to be connected.
- Dedicated to amplify, distribute and insulate the signal that comes from the lighting system equipment when it is connected to the bus of DMX512(or RS-485).
- Photo-electricity insulation between input and output terminals, output terminals among channels.
- Input isolated from outputs to 500VAC, 1000VDC.
- Outputs are isolated from each other to 500VAC, 1000VDC.
- Input and outputs are ture RS-485 rated, and no microprocessors are used for maximum reliability.
- 3 pin XLR / 3 screw terminals input and loop through, 5 pin XLR option available.
- front panel LEDs indicate power in, DMX in and DMX output status at each output


Technical Parameters

Input and Output	
Input voltage	12-36VDC
Input current	0.5A Max.
Input signal	DMX512
Output signal	DMX512 x 4


Safety and EMC	
EMC standard (EMC)	EN55032:2015, EN61000-3-2:2014, EN61000-3-2:2013, EN 55024 :2010/A1:2015
Safety standard(LVD)	EN 61347-1:2015 EN 61347-2-11:2015
Certification	CE,EMC,LVD

Warranty and Protection	
Warranty	3 years
Protection	Reverse Polarity

Mechanical Structures and Installations

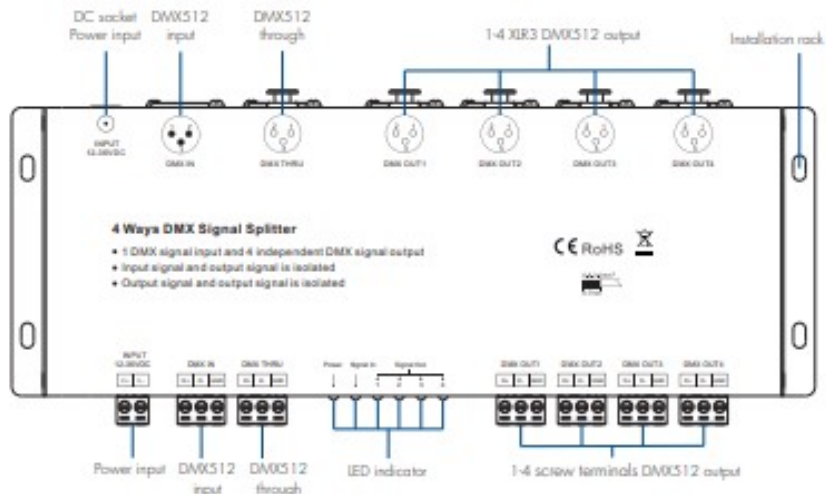


Dimension

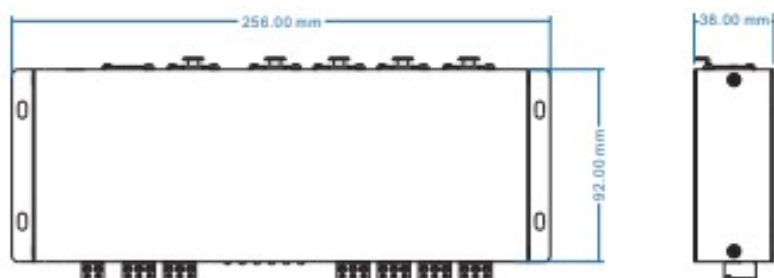

Wiring Diagram

DMX 512 Mater

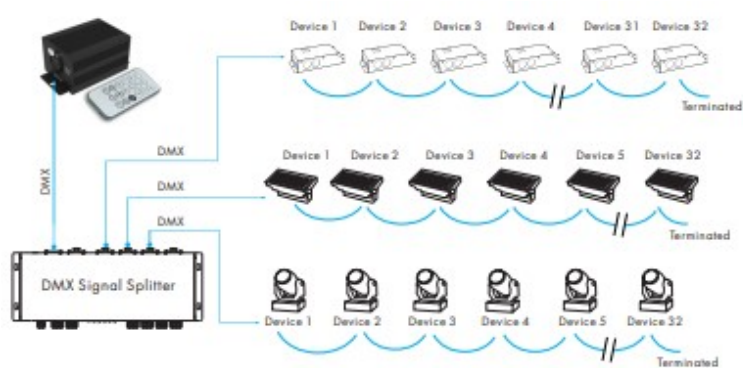

Note:


1. A passive loop-through connection allows onward connection to other DMX512 devices. If this feature is not required then the signal must be terminated.
2. Each output is capable of driving 32 additional DMX512 devices. It is not necessary to terminate any outputs that are not connected.
However, a terminator must be connected to the final DMX512 device.

3. Connect 0.25W 90-120Ω terminal resistor for termination

IMPORTER: Prima Group 2004 LTD, Bulgaria, 1784 Sofia, Mladost 1, bl. 144, Ground Floor; Phone: +359 2 988 45 72;

Read More About This Manual & Download PDF:

Documents / Resources

	<p>OPTONICA 6391 4 Ways DMX Signal Splitter [pdf] Instructions 6391 4 Ways DMX Signal Splitter, 6391, 4 Ways DMX Signal Splitter</p>
---	--