



PCE Instruments PCE-HT 112 Data Logger Temperature User Manual

[Home](#) » [PCE Instruments](#) » PCE Instruments PCE-HT 112 Data Logger Temperature User Manual 

Contents

- [1 PCE Instruments PCE-HT 112 Data Logger Temperature](#)
- [2 Device description](#)
- [3 Technical specifications](#)
- [4 Operating instructions](#)
- [5 Hints](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



PCE Instruments PCE-HT 112 Data Logger Temperature



Product Information

PCE-HT 112 & PCE-HT 114 Data Logger The PCE-HT 112 and PCE-HT 114 are data loggers designed for measuring and recording temperature. They are equipped with an LC display, start/stop key, display time switch, external sensor connections, and a reset key/mounting tab. The data loggers are used to monitor temperature fluctuations during the storage or transport of pharmaceuticals.

Technical Specifications

PCE-HT 112

- Display: LC display
- External Sensor Connections: 1

PCE-HT 114

- Display: LC display
- External Sensor Connections: 4

Operating Instructions

1. Read the user manual carefully before using the device for the first time.
2. The device should only be used by qualified personnel.
3. Ensure that any repairs are carried out by PCE Instruments personnel.
4. Press the start/stop key to begin or end data recording.
5. Use the display time switch to show data on the display.
6. Connect the external sensor(s) to the corresponding sensor connection(s) on the backside of the device.
7. Press the reset key/mounting tab to reset the device.

Hints

- For models with multiple external sensor connections, the connections may vary. Refer to the specific model's

documentation for details.

- Certain icons may or may not be displayed depending on the model.

Contact and Disposal

If you have any questions or need assistance, please contact PCE Instruments using the contact details provided at the end of the user manual. For disposal instructions, refer to the disposal section at the end of the user manual.

Safety notes


Please read this manual carefully and completely before you use the device for the first time. The device may only be used by qualified personnel and repaired by PCE Instruments personnel. Damage or injuries caused by non-observance of the manual are excluded from our liability and not covered by our warranty.

- The device must only be used as described in this instruction manual. If used otherwise, this can cause dangerous situations for the user and damage to the meter.
- The instrument may only be used if the environmental conditions (temperature, relative humidity, ...) are within the ranges stated in the technical specifications. Do not expose the device to extreme temperatures, direct sunlight, extreme humidity or moisture.
- Do not expose the device to shocks or strong vibrations.
- The case should only be opened by qualified PCE Instruments personnel.
- Never use the instrument when your hands are wet.
- You must not make any technical changes to the device.
- The appliance should only be cleaned with a damp cloth. Use only pH-neutral cleaner, no abrasives or solvents.
- The device must only be used with accessories from PCE Instruments or equivalent.
- Before each use, inspect the case for visible damage. If any damage is visible, do not use the device.
- Do not use the instrument in explosive atmospheres.
- The measurement range as stated in the specifications must not be exceeded under any circumstances.
- Non-observance of the safety notes can cause damage to the device and injuries to the user.

We do not assume liability for printing errors or any other mistakes in this manual. We expressly point to our general guarantee terms which can be found in our general terms of business. If you have any questions please contact PCE Instruments. The contact details can be found at the end of this manual.

Device description

Frontpage

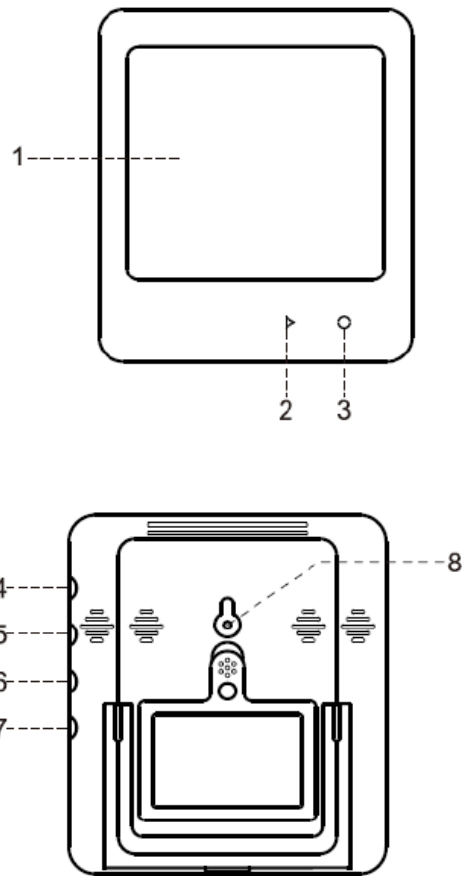

1. LC display
2. Start/stop key/display time
3. Switch display on/off / show data/mark

Backside

4. External sensor connection
5. External sensor connection
6. External sensor connection
7. External sensor connection
8. Reset key/mounting tab

Note: The connections for external sensors may vary depending on the model.

Display



1. Channel number
2. Alarm exceeded
3. Alarm display
4. Alarm underrun
5. Factory reset
6. External sensor connected
7. Recording
8. USB connected
9. The data logger is being charged
10. Radio connection active (depending on the model)
11. Air quality indicator
12. Marker
13. Time
14. Percentage symbol
15. Clock symbol
16. Memory symbol
17. Td: Dew point
18. The lower measured value display
19. Temperature or humidity symbol
20. Waiting symbol
21. KT: mean kinetic temperature¹
22. Time unit
23. The upper measured value display
24. House symbol
25. Display symbol
26. Settings symbol
27. MIN / MAX / average display
28. Warning symbol
29. Buzzer symbol

- 30. Backlight
- 31. Keys locked
- 32. Battery status display

Note: Certain icons may or may not be displayed depending on the model. The “mean kinetic temperature” is a simplified way to determine the overall influence of temperature fluctuations during the storage or transport of pharmaceuticals. The MKT can be regarded as an isothermal storage temperature that simulates the non-isothermal effects of changes in the storage temperature. Source: MHRA GDP

Technical specifications

Parameters	Temperature	Relative humidity
Measurement range	-30 ... 65 °C / -22 ... 149 °F (internal) -40 ... 125 °C / -40 ... 257 °F (external)	0 ... 100 % RH (internal) 0 ... 100 % RH (external)
Accuracy	±0.3 °C / 0.54 °F (-10 ... 65 °C / 14 ... 149 °F) ±0.5 °C / 0.9 °F (remaining range)	±3 % (10 % ... 90 %) ±4 % (remaining range)
Resolution	0.1 °C / 0.18 °F	0.1 % RH
Response time	15 min (internal) 5 min (external)	
Memory	25920 measured values	
Storage rates	30 s, 60 s, 2 min, 5 min, 10 min, 15 min, 20 min, 25 min, 30 min, 1 h or individually adjustable	
Measuring interval / display refresh rate	5 s	
Alarm	adjustable audible alarm	
Interface	USB	
Power supply	3 x 1.5 V AAA batteries 5 V USB	
Battery life	approx. 1 year (without backlight / without alarm)	
Operating conditions	-30 ... 65 °C / -22 ... 149 °F	
Storage conditions	-30 ... 65 °C / -22 ... 149 °F (without battery)	
Dimensions	96 x 108 x 20 mm / 3.8 x 4.3 x 0.8 in	
Weight	120 g	
Protection class	IP20	

Scope of delivery PCE-HT 112

- 1 x data logger PCE-HT112 3 x 1.5 V AAA battery
- 1 x fixing set (dowel & screw) 1 x micro USB cable
- 1 x software on CD
- 1 x user manual

Accessories

- PROBE-PCE-HT 11X external probe

Technical data PCE-HT 114


Parameters	Temperature	Relative humidity
Measurement range	-40 ... 125 °C / -40 ... 257 °F (external)	0 ... 100 % RH (external)
Accuracy	±0.3 °C / 0.54 °F (-10 ... 65 °C / 14 ... 149 °F) ±0.5 °C / 0.9 °F (remaining range)	±3 % (10 % ... 90 %) ±4 % (remaining range)
Resolution	0.1 °C / 0.18°F	0.1 % RH
Response time	5 min	
Memory	25920 measured values	
Storage rates	30 s, 60 s, 2 min, 5 min, 10 min, 15 min, 20 min, 25 min, 30 min, 1 h or individually adjustable	
Measuring interval / display refresh rate	5 s	
Alarm	adjustable audible alarm	
Interface	USB	
Power supply	3 x 1.5 V AAA batteries 5 V USB	
Battery life	approx. 1 year (without backlight / without alarm)	
Operating conditions	-30 ... 65 °C / -22 ... 149 °F	
Storage conditions	-30 ... 65 °C / -22 ... 149 °F (without battery)	
Dimensions	96 x 108 x 20 mm / 3.8 x 4.3 x 0.8 in	
Weight	120 g / <1 lb	
Protection class	IP20	

Scope of delivery PCE-HT 114

- 1 x refrigerator thermo hygrometer PCE-HT
- 114 1 x external sensor
- 3 x 1.5 V AAA battery

- 1 x fixing set (dowel & screw)
- 1 x micro USB cable
- 1 x software on CD
- 1 x user manual

Operating instructions

If no key is pressed within 15 seconds, the automatic key lock is activated. Press the  key for three seconds to make the operation possible again.

Switch on the device

The data logger switches on as soon as batteries are inserted into the device.

Switch off the device

The data logger is permanently switched on and switched off as soon as the batteries are no longer sufficiently charged to ensure proper operation.

Switch on the display

Press the  key for three seconds and the display switches on.

Switch off the display

Press the  key for three seconds and the display switches off.

Note: The display cannot be turned off when it shows REC or MK.


Switching the time/date

Press the  key to switch between date, time, and marker view.


Start data recording

Press the  key for three seconds to start data recording.


Stop data recording

If the software has been set to stop recording, press the  key for three seconds to stop recording. Furthermore, recording stops when the memory is full or the batteries are no longer sufficiently charged to ensure proper operation.



Display minimum, maximum, and average measured value

As soon as one or more measured values have been saved to the memory of the data logger, it is possible to display the MIN, MAX, and average measured values by pressing  the key. If no measured values are recorded, the key can be used to display the upper and lower alarm limits.

Deactivate the audible alarm

As soon as an alarm is triggered and the meter beeps, the alarm can be acknowledged by  pressing one of the two keys.

Set markers

Once the meter is in recording mode, you can switch to marker view by pressing the  key. To set a marker, press  the key for three seconds to save a marker in the current recording. A maximum of three markers can be

set.

Read out data

To read out data from the data logger, connect the measuring instrument to the PC and start the software. When the instrument is connected to the computer, the USB icon appears on the display.

Hints

External sensor

If the external sensor was not recognized, it may have been deactivated in the software. First, activate the external sensor in the software.

Battery

When the battery icon flashes or the display shows OFF, this indicates that the batteries are low and need to be replaced. contact If you have any questions, suggestions or technical problems, please do not hesitate to contact us. You will find the relevant contact information at the end of this user manual.

Disposal

For the disposal of batteries in the EU, the 2006/66/EC directive of the European Parliament applies. Due to the contained pollutants, batteries must not be disposed of as household waste. They must be given to collection points designed for that purpose. In order to comply with the EU directive 2012/19/EU we take our devices back. We either re-use them or give them to a recycling company that disposes of the devices in line with the law. For countries outside the EU, batteries, and devices should be disposed of in accordance with your local waste regulations. If you have any questions, please contact PCE Instruments.

United States of America

PCE Americas Inc.

711 Commerce Way Suite 8

Jupiter / Palm Beach

33458 FL

USA


Tel: +1 (561) 320-9162

Fax: +1 (561) 320-9176

info@pce-americas.com














www.pce-instruments.com/us

Documents / Resources

	<p>PCE Instruments PCE-HT 112 Data Logger Temperature [pdf] User Manual PCE-HT 112, PCE-HT 114, PCE-HT 112 Data Logger Temperature, Data Logger Temperature, Logger Temperature, Temperature</p>
---	--

References

- [France.fr : Actualités, destinations et infos du tourisme en France](#)
- [iberica.es](#)
- [instruments.cn - The domain is available for purchase](#)
- [Make an offer on the domain instruments.co.uk - Domains.co.uk](#)

-  [Computer Instruments | Home](#)
-  [Discover Italy: Official Tourism Website - Italia.it](#)
-  [PCEİ¼^åCE—ä¬İ¼%çŞ'æŠœœ%é™å...¬å](#)
-  [Industrial Measurement Products and Solutions | PCE Instruments](#)
-  [PCE Deutschland GmbH Prüfgeräte vom Hersteller | PCE Instruments](#)
-  [PCE Brookhuis B.V. | PCE Instruments](#)
-  [PCE Americas Inc. : Test Instruments | PCE Instruments](#)
-  [PCE Iberica S.L. Instrumentación | PCE Instruments](#)
-  [PCE Instruments France | PCE Instruments](#)
-  [PCE Italia s.r.l. / Strumenti di Misura | PCE Instruments](#)
-  [PCE Teknik Cihazlar Paz. Tic. Ltd.Şti. | PCE Instruments](#)
-  [PCE Americas Inc. : Test Instruments | PCE Instruments](#)
-  [PCE Americas Inc. : Test Instruments | PCE Instruments](#)

Manuals+.