




## PENTAIR GloBrite Color Changing Pool Globrite LED Light User Guide

[Home](#) » [Pentair](#) » PENTAIR GloBrite Color Changing Pool Globrite LED Light User Guide 

PENTAIR GloBrite Color Changing Pool Globrite LED Light

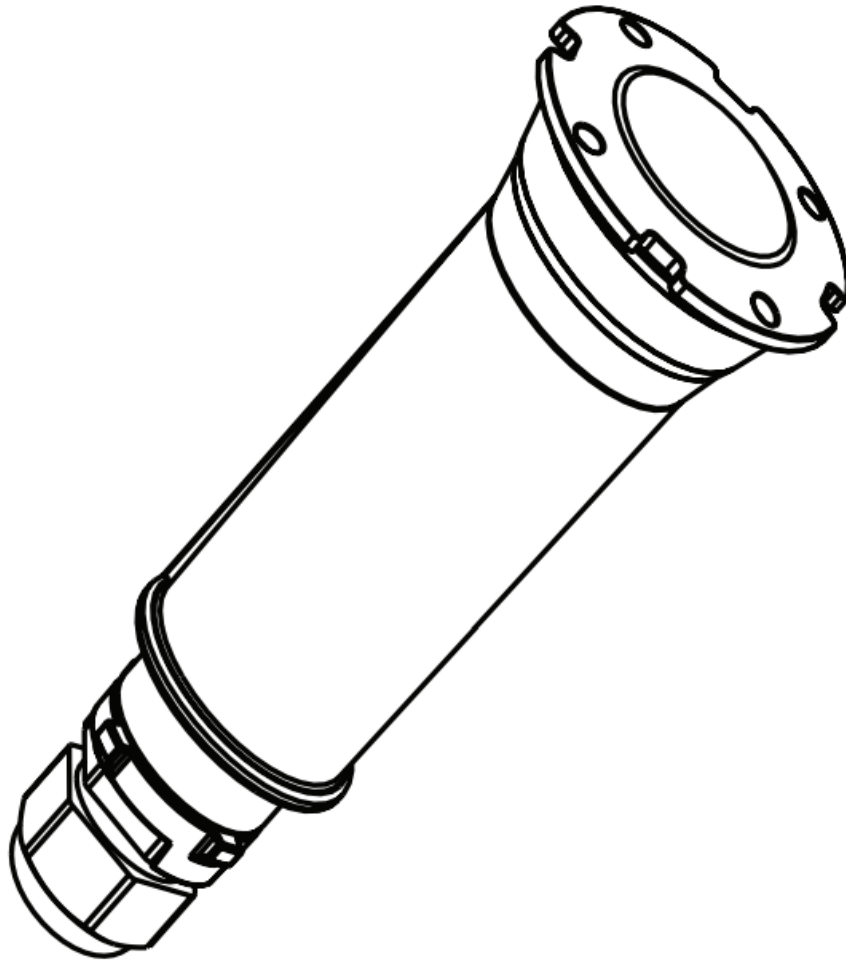

## Contents

### [1 IMPORTANT WARNING AND SAFETY INSTRUCTIONS](#)

### [2 Operating GloBrite® Lights Using a Wall Switch](#)

### [3 GLOBRITE® LIGHT FIXTURE INSTALLATION \(NEW POOL CONSTRUCTION – USA\)](#)

### [4 GLOBRITE® LIGHT FIXTURE INSTALLATION \(NEW POOL CONSTRUCTION – CANADA\)](#)

### [5 INSTALLING THE GLOBRITE® LIGHT ASSEMBLY \(AFTER NICHE INSTALLATION\)](#)

### [6 REPLACING THE GLOBRITE® LIGHT ASSEMBLY \(IN AN EXISTING POOL OR SPA\)](#)

### [7 IMPORTANT NOTICE: THE GLOBRITE LIGHT IS A NON-SERVICEABLE LIGHT. THE COMPLETE LIGHT ASSEMBLY MUST BE REPLACED.](#)

### [8 REPLACING THE GLOBRITE® LIGHT ASSEMBLY \(AFTER ELECTRICAL REQUIREMENTS ARE MET\)](#)

### [9 CONNECTING GLOBRITE® LIGHTS TO EASYTOUCH® OR INTELLITOUCH® CONTROL SYSTEM LOAD CENTER TO AN AUXILIARY RELAY](#)

### [10 SETTING UP GLOBRITE® WHITE LIGHTS WITH EASYTOUCH® AND INTELLITOUCH® CONTROL SYSTEM](#)

### [11 GloBrite® White Lights Parts List and Replacement Kits](#)

### [12 Technical Support](#)

### [13 CUSTOMER SUPPORT](#)

### [14 Documents / Resources](#)

#### [14.1 References](#)

### [15 Related Posts](#)

## IMPORTANT WARNING AND SAFETY INSTRUCTIONS



SERIOUS BODILY INJURY OR DEATH CAN RESULT IF THIS LIGHT IS NOT INSTALLED AND USED CORRECTLY.



**INSTALLERS, POOL OPERATORS AND POOL OWNERS MUST READ THESE WARNINGS AND ALL INSTRUCTIONS BEFORE USING THE POOL AND/OR SPA LIGHT.**



Most states and local codes regulate the construction, installation, and operation of public pools and spas, and the construction of residential pools and spas. It is important to comply with these codes, many of which directly regulate the installation and use of this product. Consult your local building and health codes for more information.



**IMPORTANT NOTICE** – Attention Installer: This Installation and User's Guide ("Guide") contains important information about the installation, operation and safe use of this underwater pool and spa light. This Guide should be given to the owner and/or operator of this equipment.



Before installing this product, read and follow all warning notices and instructions in this Guide. Failure to follow warnings and instructions can result in severe injury, death, or property damage. Call **800-831-7133** for additional free copies of these instructions. Please refer to [www.pentairpool.com](http://www.pentairpool.com) for more information related to this products.



#### **RISK OF ELECTRICAL SHOCK OR ELECTROCUTION:**

UNDERWATER POOL LIGHTS REQUIRE HIGH VOLTAGE WHICH CAN SHOCK, BURN, OR CAUSE DEATH. Before working or servicing pool lights, always disconnect power to the pool and/or spa lights at the source circuit breaker. Failure to do so could result in death or serious injury to service person, pool users or others due to electric shock.

When installing and using this electrical equipment, basic safety precautions should always be followed.

This underwater light must be installed by a licensed or certified electrician or a qualified pool professional in accordance with the current National Electrical Code (NEC), NFPA 70 or the Canadian Electrical Code (CEC), CSA C22.1. All applicable local installation codes and ordinances must also be adhered to. Improper installation will create an electrical hazard which could result in death or serious injury to installers or others due to electrical shock, and may also cause damage to power source. Always disconnect the power to the pool light at the circuit breaker before servicing the light. Failure to do so could result in serious injury to service person, due to electrical shock.



**For countries in compliance with International Electrotechnical Commission (IEC) regulatory standards:** The light fixture must be installed by a licensed or certified electrician or a qualified pool service person, in accordance with current IEC 364-7-702 and all applicable local codes and ordinance. Improper installation will create an electrical hazard, which could result in serious injury to the installer or other due to electrical shock and may also cause damage to the property.

#### **INSTALLERS AND INSPECTORS**

THE GLOBRITE® LED LIGHT AND PLASTIC NICHE FORM A COMPLETE NONMETALLIC LOW VOLTAGE LIGHTING SYSTEM. THIS CONFIGURATION DOES NOT REQUIRE BONDING OR GROUNDING WHEN POWERED BY A LISTED 100 WATT OR 300 WATT TRANSFORMER (LISTED ON PAGE 19) AND INSTALLED IN COMPLIANCE WITH THE CURRENT NATIONAL ELECTRIC CODE (NEC).

**UNBONDED LIGHTING NEC PROVISIONS:** When the UL listed non-metallic GloBrite LED Light low voltage lights are used with the GloBrite light approved niches (as listed on page 19), the current NEC provides an exception to luminaire bonding and grounding in Article 680.6 and 680.23 **POOL WATER BONDING NEC PROVISIONS :** For Pool Water Bonding required by NEC Article 680.26C, concrete pools are considered conductive (refer to 680.26 (b)(1) due to the porosity of concrete and the bonding of rebar. No additional bonding is required.

**POOL AND SPA FIXED LUMINARIES:** Follow these guidelines when installing or replacing Pentair Water Pool and Spa Pool and Spa fixed luminaries:

**FOR LIGHT OPERATION, ONLY USE A SAFETY ISOLATION TRANSFORMER.**


Note: Connect both wires to the corresponding circuit wires in the Junction Box (black wire to power, and white wire to common) **FIXED POOL AND SPA LUMINARIES SPECIFICATION:** 12 VAC 50/60 Hz

**IMPORTANT NOTICE:** THE GLOBRITE LED LIGHT IS A NONSERVICEABLE LIGHT. THE COMPLETE LIGHT ASSEMBLY MUST BE REPLACED.

### **GloBrite® White LED Pool Light Overview**

This manual describes how to install and replace the GloBrite White LED Light for pool and spa. The 12 VAC GloBrite White LED Light allows you to choose from one of three brightness levels. For more information see page 2.

**Accessory:** The optional GloBrite Glare Shield (P/N 620314 – sold separately] is for use on GloBrite Color and White LED lights to reduce light glare.

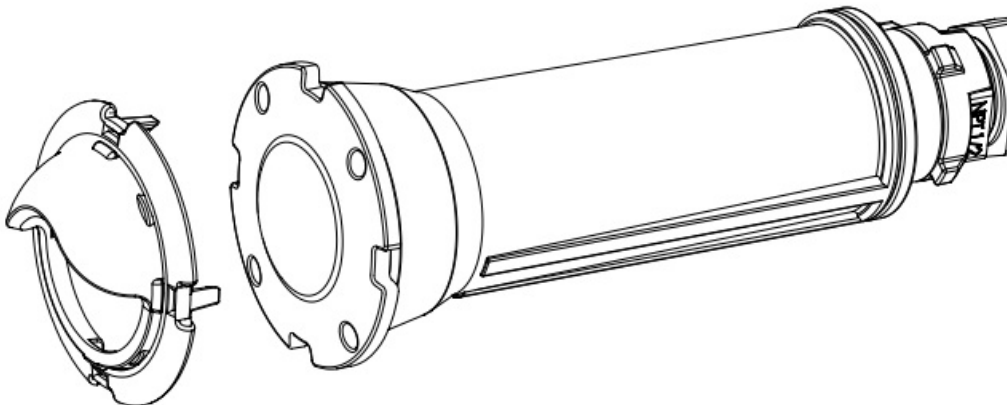


### **Operating GloBrite LED Lights Using a Wall Switch**

The GloBrite LED light can be manually controlled using a standard wall-mount light switch. Multiple GloBrite lights can be connected via a junction box and a 12 VAC isolation transformer to a single switch so that all lights can be switched on and off together. For wiring diagram, see page 14.

### **Using an External Safety Isolation Transformer for Multiple 12 VAC GloBrite Lights**

When using multiple GloBrite 12 VAC lights on a 100 Watt safety isolation transformer, it is recommended that no more than five (5) GloBrite lights be used. For long cable lengths with a single light, It is recommended not to exceed 150 feet (45.72 m) of total cable run between the 12 VAC isolation transformer and the GloBrite light.

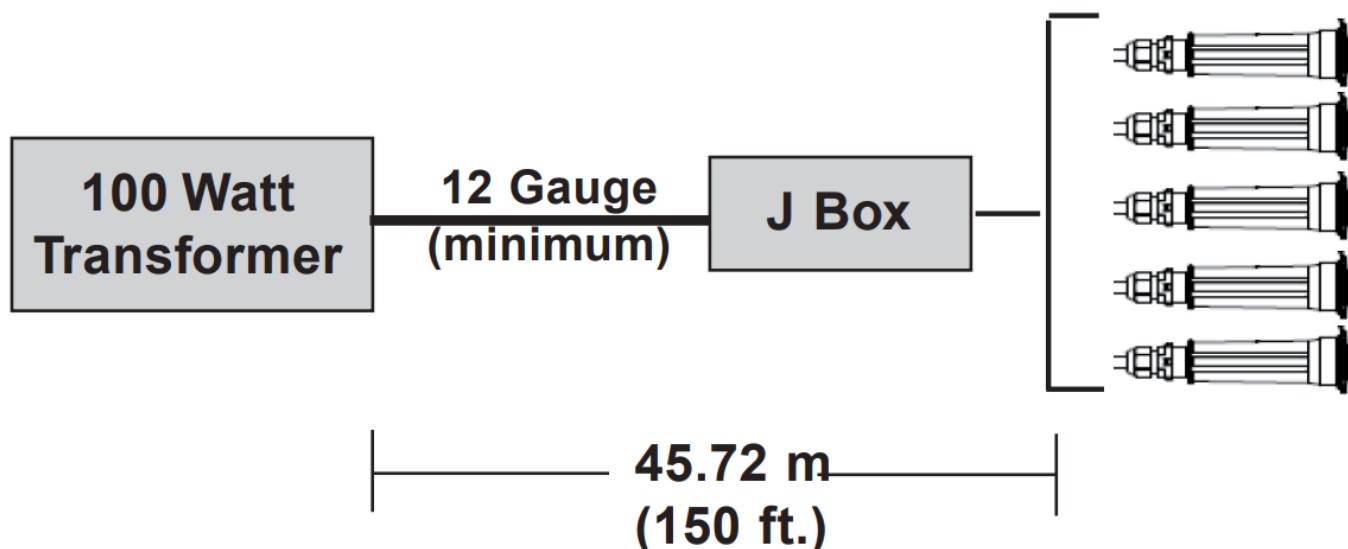

**Note:** If a longer cable run is necessary, it is recommended that separate 100 Watt safety isolation transformers be used for each light with no more than 45.72 m (150 ft.) of total cable run between the transformer and lights.

#### **Maximum Wattage Using Multiple GloBrite LED lights (with a 300 Watt Isolation Transformer)**

**IMPORTANT!** When using multiple 12 VAC Pentair LED pool and spa lights the total allowable light wattage is 300 Watts maximum. The individual light wattage is as follows:

- One GloBrite Color LED Pool light is 15 Watts maximum
- One GloBrite White LED Pool light is 15 Watts maximum
- One AmerBrite White LED (500W) pool light is 51 Watts maximum
- One AmerBrite White LED (400W) pool light is 44 Watts maximum
- One AmerBrite White LED (300W) pool light is 36 Watts maximum
- One AmerBrite Color LED pool light is 36 Watts maximum
- One IntelliBrite Color LED pool light is 30 Watts maximum
- One IntelliBrite Color LED spa light is 18 Watts maximum

#### **Operating GloBrite® Lights Using a Wall Switch**

GloBrite White Lights can be controlled using a standard wall-mount light switch. Multiple GloBrite white lights can be connected via a junction box and a 12 VAC transformer to a single switch so that all lights can be switched on and off together. GloBrite White lights are controlled by cycling AC power to the 12 VAC transformer from a standard wall switch.

By turning the switch on and off a specific number of times, you can choose from one of three brightness levels.

#### **Powering on the GloBrite White LED Lights**

**Note:** The GloBrite White LED light ships from the factory in the 100% brightness mode.

When the GloBrite White light is powered on, it defaults to the previously selected brightness level. Note: If power to the light is off for more than five (5) seconds, the last brightness level that was saved will be displayed.

#### **Selecting a GloBrite White Light Brightness Level using a Wall Switch**

GloBrite White lights allow you to choose from one of three brightness levels (100%, 75% and 50%). Whenever the GloBrite white light is turned on, it starts at its highest brightness level (100%). If it has been set to the medium (75%) or low brightness level (50%).

To select one of the GloBrite's three brightness levels (100%, 75% and 50%) first power on the lights, then by rapidly cycling the light switch OFF and ON a specified number of times, you can select the desired light brightness level.

Selecting the light's brightness levels is as follows:

- **100% Brightness:** Switching the lights OFF then rapidly back ON, will set the lights to 100% brightness.
- **75% Brightness:** Switch OFF-ON-OFF-ON and the lights will come on at 100% then dim to 75% after 1 second.
- **50% Brightness:** Switch OFF-ON-OFF-ON-OFF-ON and the lights will come on at 100%, dim to 75% after one second and then dim to 50% after another second.

## **GLOBRITE® LIGHT FIXTURE INSTALLATION (NEW POOL CONSTRUCTION – USA)**

There are three types of GloBrite White Light niches for pool or spa: Concrete/gunite (see page 5), fiberglass (see page 6) or vinyl liner (see page 10).

**BEFORE STARTING:** The following information describes the tasks that must be completed by the electrician before the light fixture is installed. See Figure 2 on page 7.

### **⚠ WARNING**

Be sure that the pool or spa meets the requirements of the current National Electrical Code (N.E.C.) Article 680-22 and all local codes and ordinances. A licensed or certified electrician must install the electrical system to meet or exceed those requirements before the underwater light is installed. Some of the requirements of the National Electrical Code which the pool's electrical system must meet are as follows:

- The Junction Box and the low voltage transformer is located at least 4 (four) inches (10.16 cm) above ground level or eight (8) inches (20.3 cm) above maximum water level, whichever is higher. The Junction Box must be at least 48 inches (1.22 m) from the edge of the pool. See Figure 2 on page 7.
- The GloBrite light niche must be properly installed so that the top edge of the lens of the GloBrite light is at least 4 inches below (not more than 48 inches below in Canada) the surface of the water in the pool or spa. See Figure 2 on page 7.
- To be certain that the pool or spa electrical system meets all applicable requirements, the electrician should also consult the local building department.

## **GLOBRITE® LIGHT FIXTURE INSTALLATION (NEW POOL CONSTRUCTION – CANADA)**

### **⚠ WARNING**

Be sure the electrical system of your pool conforms with the following requirements of the Canadian Electrical Code (CE), and all local codes and ordinances. A licensed or certified electrician must install the electrical system to meet or exceed those requirements before the light and (fixture-housing) is installed. Some of the CE requirements are listed below.

- The junction/deck box must be sealed to the conduit to prevent water from getting into the box, see Figure 2 on page 7.

- The niche must be properly installed so the center line of the Underwater Light's lens is at a maximum depth of 600 mm below the surface of the water in the pool, see Figure 2 on page 7.

The following information is for the Junction Box and pool deck location for Canada only.  
Junction/Deck boxes shall be installed:

- (a) above the normal water level of the pool;
- (b) so that the top of the box is located at or above the finished level of the pool deck;
- (c) in such a manner or location that the box will not be an obstacle; and
- (d) in such a manner that any water on the deck will drain away from the box (See diagram below).

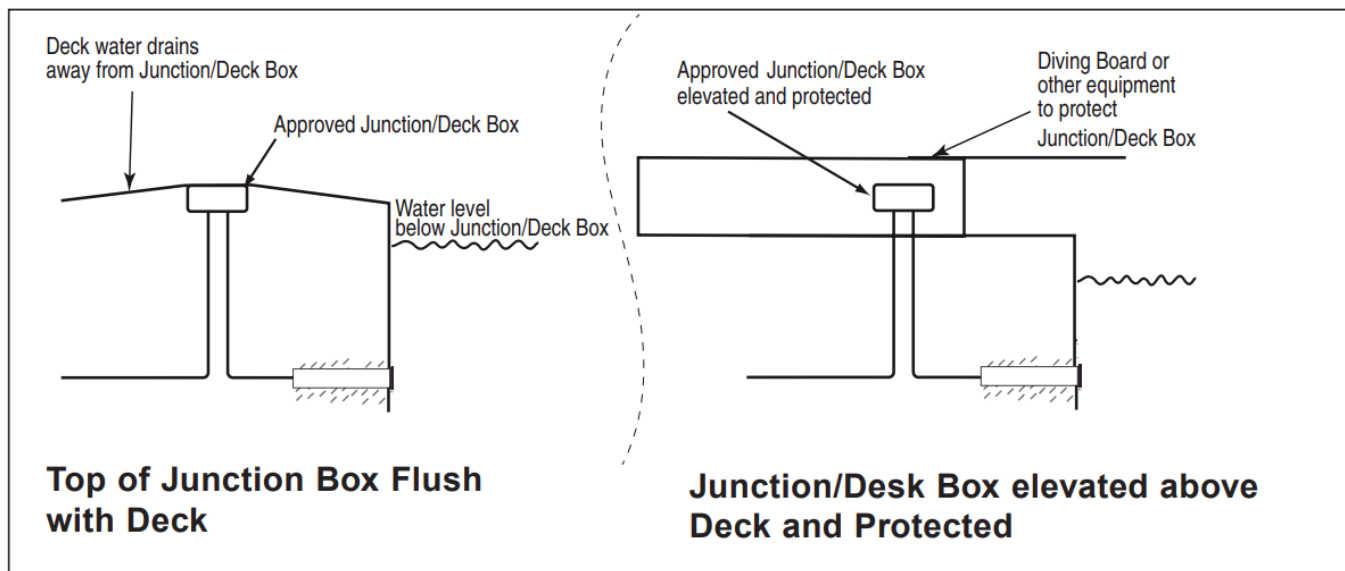


Figure 1, Canada.


### Installing GloBrite® Light Sleeve and Niche in a Concrete/Gunite Pool – Option 1 and Option 2 (see page 6)

**Option 1:** Niche Sleeve with Cone (Cone is used for applications where the niche is installed after the conduit has been connected to the 2" sleeve)

1. **Install Sleeve: Note:** The GloBrite white light niche must be installed in or on the wall of the pool (or water feature) with the top of the lens not less than 10.2 cm (4 in) below the normal water level of the pool. Refer to Figure 2 on page 7 for the exact depth requirements. The GloBrite white light can also be installed in the bottom of the pool.
2. Install a 5 cm (2 in) PVC pipe Schedule 40, 38.1 cm (15 in.) long in the desired location of the light niche sleeve.
3. Allow at least 2.5 cm (1 in) of the niche sleeve 5 cm (2 in) PVC pipe to extend out on both sides of the wall during your gunite operation. Cut any excess off the pipe so that it is flush against the wall before plastering.
4. Glue a 5 cm (2 in) x 2.54 cm (1 in) reducer bushing to the back side of the niche sleeve.
5. Glue the 2.45 cm (1 in) conduit into the reducer as shown below in "Option 1 Installation Diagram". Make sure the 5 cm (2 in) PVC pipe Schedule 40. accommodates for the total length of niche/cone and reducer assembly.
6. Glue the cone into gunite niche (the cone is used to guide the fish tape from the junction box into the niche).
7. Apply PVC cement to the inside of the sleeve. Slide the gunite niche into the sleeve until it is flush with the gunite wall.
8. Install the desired white ring to the front of the niche.  
Note: If required by local codes, install the light into niche as described on page 9.
9. Using the niche cover to seal the front of the niche, snap on the gunite cover over the front of the niche. This

will protect the light cooling cavity of the niche during plastering. Note: If a gunite cover is not available, use masking tape to protect lens and cooling cavity from plaster operation.

10. Apply gunite plaster to pool wall up to the outer edge of the gunite cover. The gunite cover should be the only exposed part of the niche after plastering.
11. After the plastering has been completed, remove and dispose of the gunite cover.

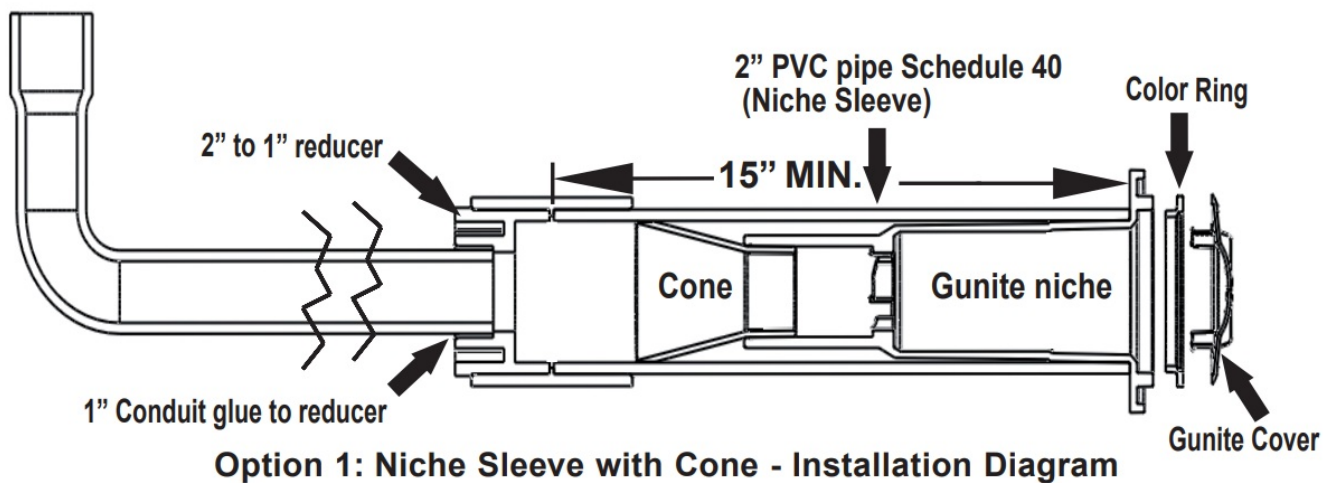


### Option 2: Install Conduit to Light Niche

To install the conduit onto the GloBrite® White Light niche:

1. Install Sleeve: Locate position on vertical pool or spa wall where light is to be installed. The top of the light lens must be a minimum of 10.2 cm (4 in) inches below normal water level. Refer to Figure 2 on page 7 for the exact depth requirements.
2. Install a 5 cm (2 in) PVC pipe Schedule 40, 38.1 cm (15 in.) long in the desired location of the light niche sleeve.
3. Allow at least 2.5 cm (1 in) of the niche sleeve 5 cm (2 in) PVC pipe to extend out on both sides of the wall during your gunite operation. Cut any excess off the pipe so that it is flush against the wall before plastering.
4. Pull the fish tape and the light power cord through the 2.5 cm (1 in) conduit and the 5 cm (2 in) PVC sleeve schedule 40.
5. Glue the 2.5 cm (1 in ) conduit into the back of the conduit shown below in "Option 2 Installation Diagram".
6. Glue the cone into gunite niche (the cone is used to guide the fish tape from the junction box into the niche).
7. Apply PVC cement to the inside of the sleeve. Slide the gunite niche into the sleeve until it is flush with the gunite wall.
8. Install the desired white ring to the front of the niche.  
**Note:** If required by local codes, install the light into niche as described on page 9.
9. Using the niche cover to seal the front of the niche, snap on the gunite cover over the front of the niche. This will protect the light cooling cavity of the niche during plastering. Note: If a gunite cover is not available, use masking tape to protect lens and cooling cavity from plaster operation.
10. Apply gunite plaster to pool wall up to the outer edge of the gunite cover. The gunite cover should be the only exposed part of the niche after plastering.
11. After the plastering has been completed, remove and dispose of the gunite cover.



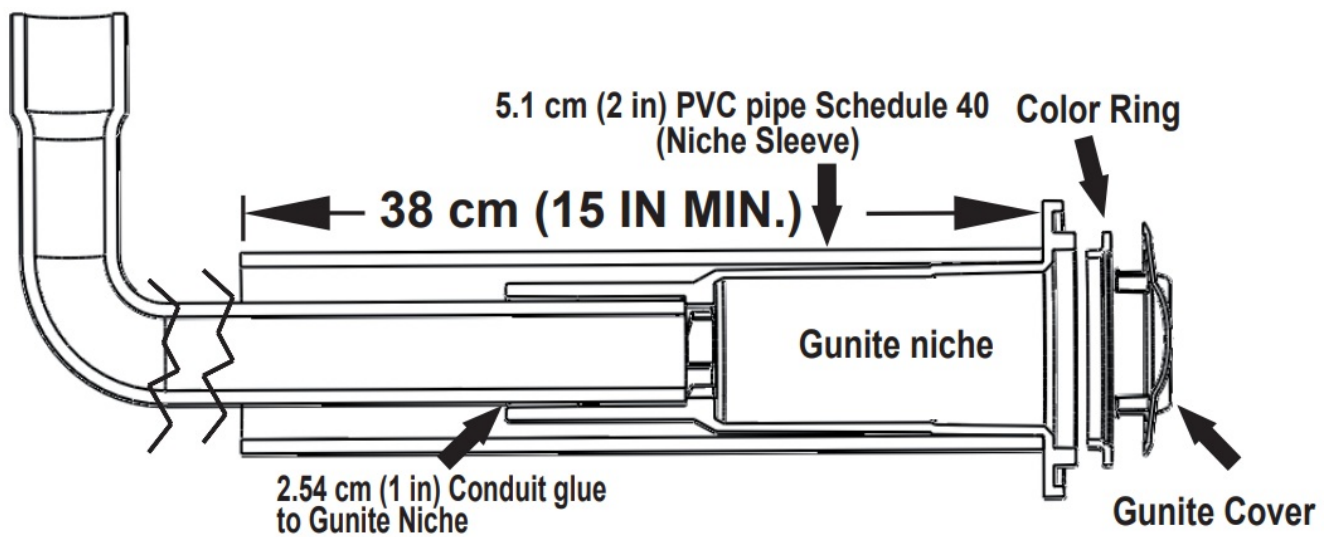

### Option 2: Conduit to Light - Installation Diagram


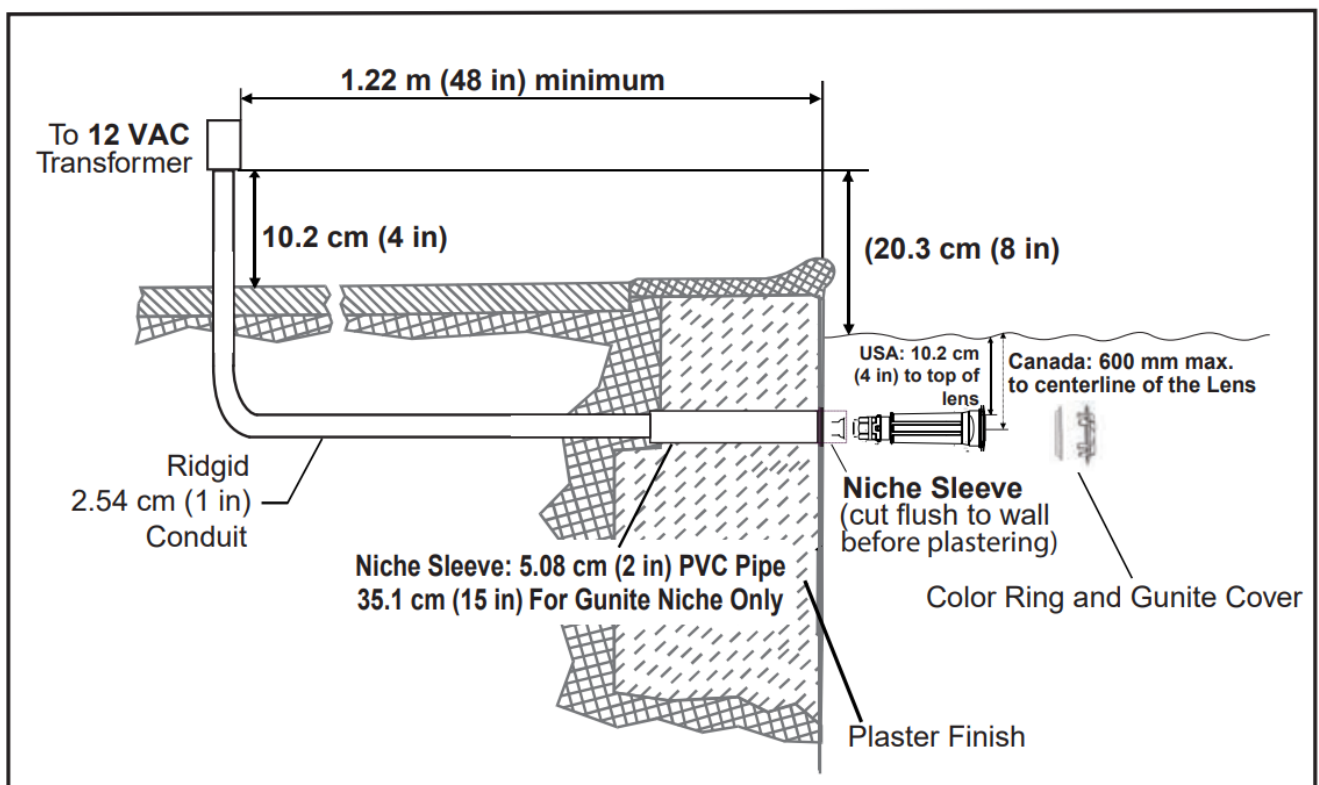


Figure 2, Gunite Light Installation Diagram

### Installing GloBrite® Light Niche in a Fiberglass Pool

To install the GloBrite white light niche in a fiberglass pool:

1. Drill or punch a 5 cm (2 in) hole in the desired location for the GloBrite light niche.
2. Place the sealing gasket on the niche as shown below.
3. Insert the niche through the 5 cm (2 in) hole in the pool wall.
4. Install the PVC washer to the back of the niche.
5. Install the plastic nut onto the back of the niche. Hand tighten the nut to secure the niche in place.
6. Glue the 2.5 cm (1 in) conduit into back of niche.

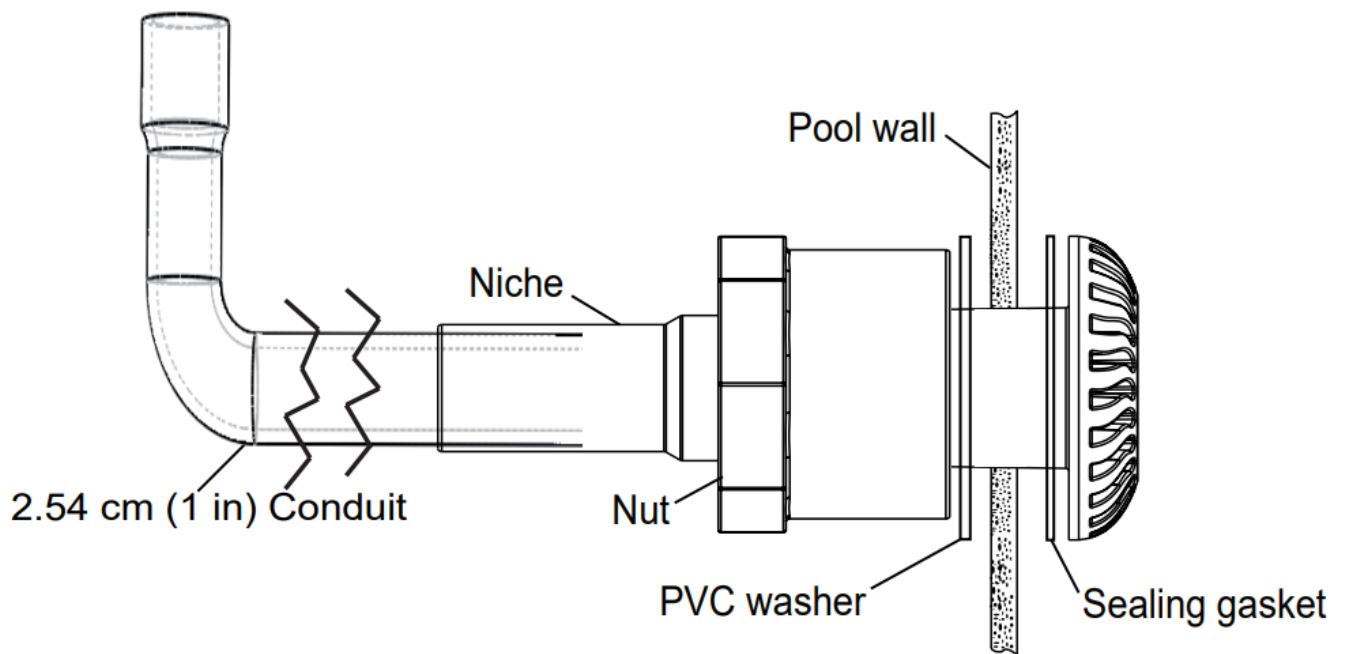


## GloBrite White Light Niche (Fiberglass pool) Installation Diagram

### Installing GloBrite® Light Niche in a Vinyl Pool

To install the GloBrite white light niche in a vinyl liner pool:


1. Drill a 7.62 cm (3 in) hole in the desired location for the light vinyl niche.
2. From the inside of the pool, insert the vinyl niche through the 7.62 cm (3 in) hole.
3. Install the plastic nut onto the back of the niche. Hand tighten the nut to secure the niche in place.
4. Place the sealing gasket onto the front of the niche as shown below.
5. Install the vinyl liner.
6. Install the conduit. See Figure 2 on page 7.
7. Using the alignment tabs on the niche, carefully align the faceplate to the niche. Once the faceplate is properly aligned, pierce liner through faceplate and install the screws one at a time.
8. Using a No. 2 Phillips head screwdriver, hand tighten each retaining screw to secure the cover. **DO NOT OVER TIGHTEN THE SCREWS. DO NOT USE A POWER TOOL TO SECURE THE SCREWS.** Over tightening or using a

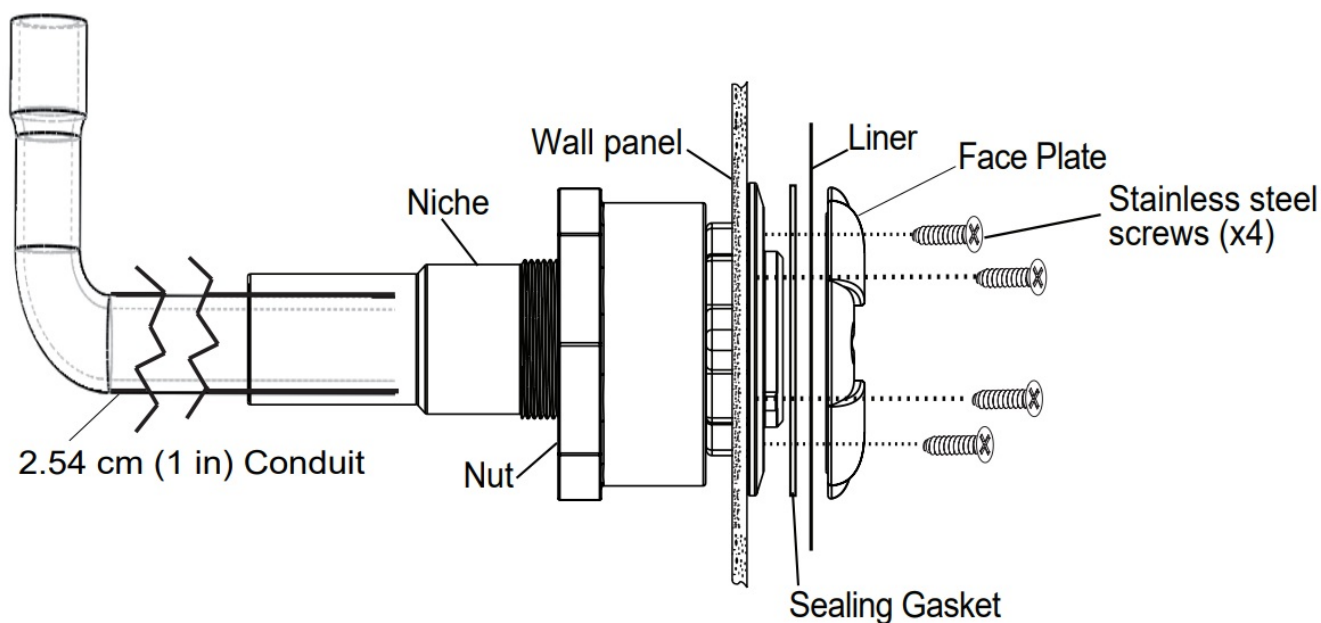

## INSTALLING THE GLOBRITE® LIGHT ASSEMBLY (AFTER NICHE INSTALLATION)

To install the GloBrite white light into the gunite, fiberglass or vinyl niche:

1. Route the GloBrite light power cord through the front of the niche, to the location of the 12 VAC pool transformer or junction box.
2. At the 12 VAC transformer or junction box, cut off any extra cord. Leave at least 15.2 cm (6 in) of cord in the Junction Box or transformer to facilitate the light installation, niche inspection. Cut off any extra cord. See Figure 2 on page 7. For junction box installation for Canada, see Figure 1 on page 4.
3. Strip back the outer cord jacket of the wires to expose the two (2) insulated conductors. Strip back the two conductors. Be careful not to damage the copper conductor.
4. Connect the two (2) conductors to the corresponding circuit wires in the Junction Box (black wire to power, white wire to common). Secure the Junction Box cover.
5. Install the new GloBrite light assembly: Push the light into the niche while pulling the power cord from the junction box or transformer, making sure the locking tabs in the back end of the light are properly aligned with the niche openings (inside the niche).

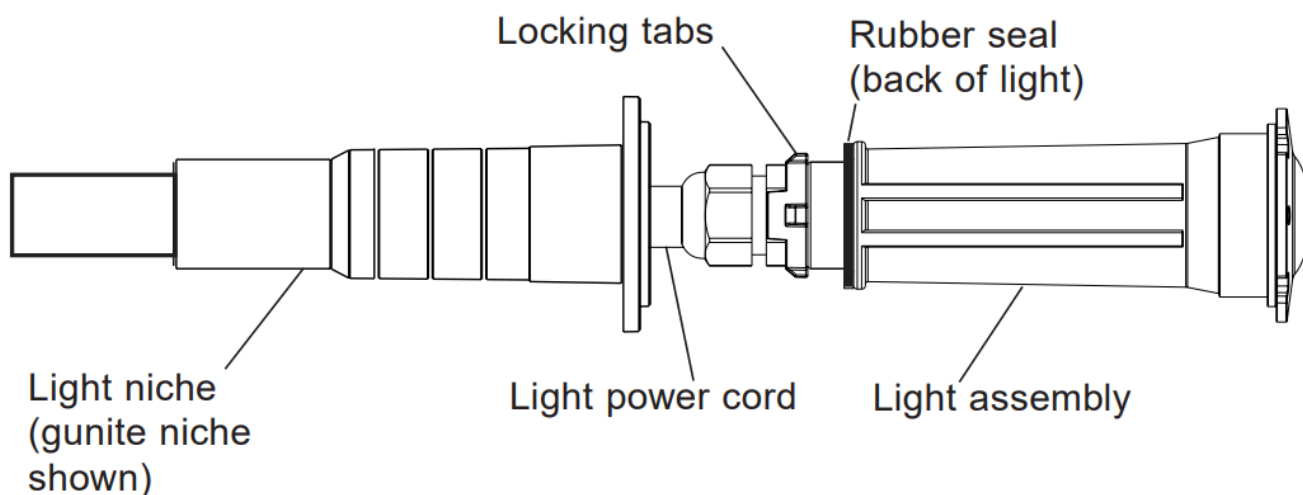

## GloBrite Niche and Light


**Note:** When using longer runs of cables or multiple lights per transformer, it is recommended to use the 13 VAC

or 14 VAC tap on the transformer.

6. Place the light installation tool (P/N 620057) over the front of the light.

Turn the tool and light clockwise (less than an  $.3175$  cm (1/8th. turn), while pushing inward, until you feel the stop point. This indicates the light is properly seated, locked and the niche is completely sealed.

**Note:** If the light does not turn smoothly, pull the light slightly out and make sure that it's seated properly and the niche is free of debris, then install the light as described in step 6.

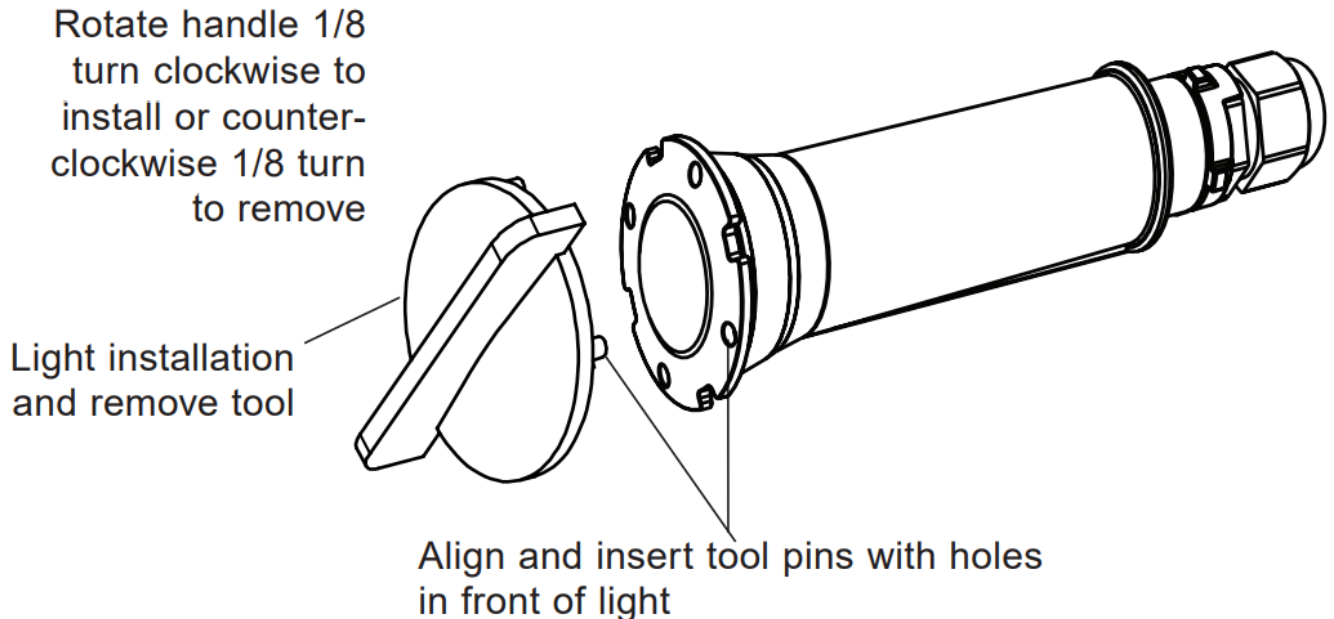

### GloBrite® White Light Installation/Removal Tool

7. Before operating the GloBrite white light, fill the pool with water until the light is completely submerged.

**Note:** The GloBrite white light should not be powered for more than 30 seconds if is not submersed in water.

8. Final check for proper GloBrite light operation: Switch on the main switch or circuit breaker to the 12 VAC transformer and the switch that operates the GloBrite light itself. The light should illuminate when the 12 VAC power is applied. If not recheck the installation steps.

### REPLACING THE GLOBRITE® LIGHT ASSEMBLY (IN AN EXISTING POOL OR SPA)



#### **Risk of Electrical Shock or Electrocution!**

This underwater light must be installed by a licensed or certified electrician or a qualified pool professional in accordance with the current National Electrical Code (NEC), NFPA 70 or the Canadian Electrical Code (CEC), CSA C22.1 and all applicable local codes and ordinances. Improper installation will create an electrical hazard which could result in death or serious injury to pool users, installers or others due to electrical shock, and may also cause damage to property.

Always disconnect the power to the pool light at the circuit breaker before servicing the light. Failure to do so could result in death or serious injury to service person, pool users or others due to electrical shock.

**IMPORTANT NOTICE: THE GLOBRITE LIGHT IS A NON-SERVICEABLE LIGHT. THE COMPLETE LIGHT ASSEMBLY MUST BE REPLACED.**



**WARNING** Be sure that the pool or spa meets the requirements of the current National Electrical Code (N.E.C.) Article 680-22 and all local codes and ordinances. A licensed or certified electrician must install the electrical system to meet or exceed those requirements before the underwater light is installed. Some of the requirements of the National Electrical Code which the pool's electrical system must meet are as follows:

- The Junction Box and the low voltage transformer is located at least 4 (four) inches (10.16 cm) above ground level or eight (8) inches (20.3 cm) above maximum water level, whichever is higher. The Junction Box must be at least 48 inches (1.22 m) from the edge of the pool. See Figure 2 on page 7.
- The GloBrite light niche must be properly installed so that the top edge of the lens of the GloBrite light is at least 4 inches below (not more than 48 inches below in Canada) the surface of the water in the pool or spa. Figure 2 on page 7.
- To be certain that the pool or spa electrical system meets all applicable requirements, the electrician should also consult the local building department.

## **REPLACING THE GLOBRITE® LIGHT ASSEMBLY (AFTER ELECTRICAL REQUIREMENTS ARE MET)**

The following removal and installation instructions describe how to remove and install the GloBrite light assembly.




**WARNING** Failure to bring the pool or spa's electrical system up to code requirements before installing the underwater light will create an electrical hazard which could result in death or serious injury to pool users, installers, or others due to electrical shock, and may also cause damage to property.

1. Switch off electrical switch or circuit breaker at the source. **Note:** DO NOT service the light while in the pool water. Service the light on the deck.
2. Remove Junction Box or Transformer cover. Disconnect the light wires and attach a fish tape to the existing light power cord. This will assist in pulling the replacement light power cord through the conduit back to the junction box.
3. **Remove the GloBrite light assembly from the pool or spa water and place it on the deck:** Using the provided installation tool (P/N 620057), rotate the light assembly counter-clockwise about a 1/8th turn to release the light from the niche as shown on page 10).
4. Slowly pull the light and attached power cord (with attached fish tape) out of the niche. Pull the light's power cord and fish tape out of the niche and place the light on the deck.
5. Attach the new light power cord to the fish tape and carefully feed the fish tape and cable to the junction box.
6. **Install the light into the niche:** Place the light installation tool over the front of the light. Turn the tool and light clockwise while pushing inward, until you feel the stop point. This indicates the light is properly seated, locked and the electrical conduit, is completely sealed (see page 10).  
**Note:** If the light does not turn smoothly, pull the light slightly out and be sure that it's seated properly and the niche is free of debris, then install the light as described in step 5.
7. Connect the two (2) conductors to the corresponding circuit wires in the Junction Box (black wire to power, white wire to common) and secure the Junction Box cover in place.
8. **Final check for proper GloBrite light operation:** Switch on the main switch or circuit breaker to the 12 VAC transformer and the switch that operates the light itself. The light should illuminate when 12 VAC power is applied. If not recheck the installation steps.


## CONNECTING GLOBRITE® LIGHTS TO EASYTOUCH® OR INTELLITOUCH® CONTROL SYSTEM LOAD CENTER TO AN AUXILIARY RELAY

### RISK OF ELECTRICAL SHOCK OR ELECTROCUTION


 **DANGER** Always disconnect AC power to EasyTouch and IntelliTouch control system load center at the circuit breaker before servicing, or removing the HIGH VOLTAGE FRONT PANEL. Failure to do so could result in death or serious injury to installer, service person, pool users, or others due to electrical shock

1. EasyTouch or IntelliTouch Control System Load Center: Unlatch the enclosure door spring latch, and open the door.
2. Discharge Electrostatic energy before removing the cover by first touching the metal part of the enclosure.
3. Loosen the two (2) retaining screws from the HIGH VOLTAGE FRONT PANEL. Remove the panel from the enclosure.
4. Run the GloBrite white light power cord to a auxiliary relay in the EasyTouch/IntelliTouch load center.
5. Connect the 120 Volt side of a 12 VAC transformer to the LOAD SIDE of one of the auxiliary (AUX) relays in the load center.
6. Connect the Neutral conductor from the 12 VAC transformer to the Neutral bus bar in the load center.
7. After the connection has been completed, close the control panel and secure it with the two (2) retaining screws.
8. Close the load center front door. Fasten the spring latch.



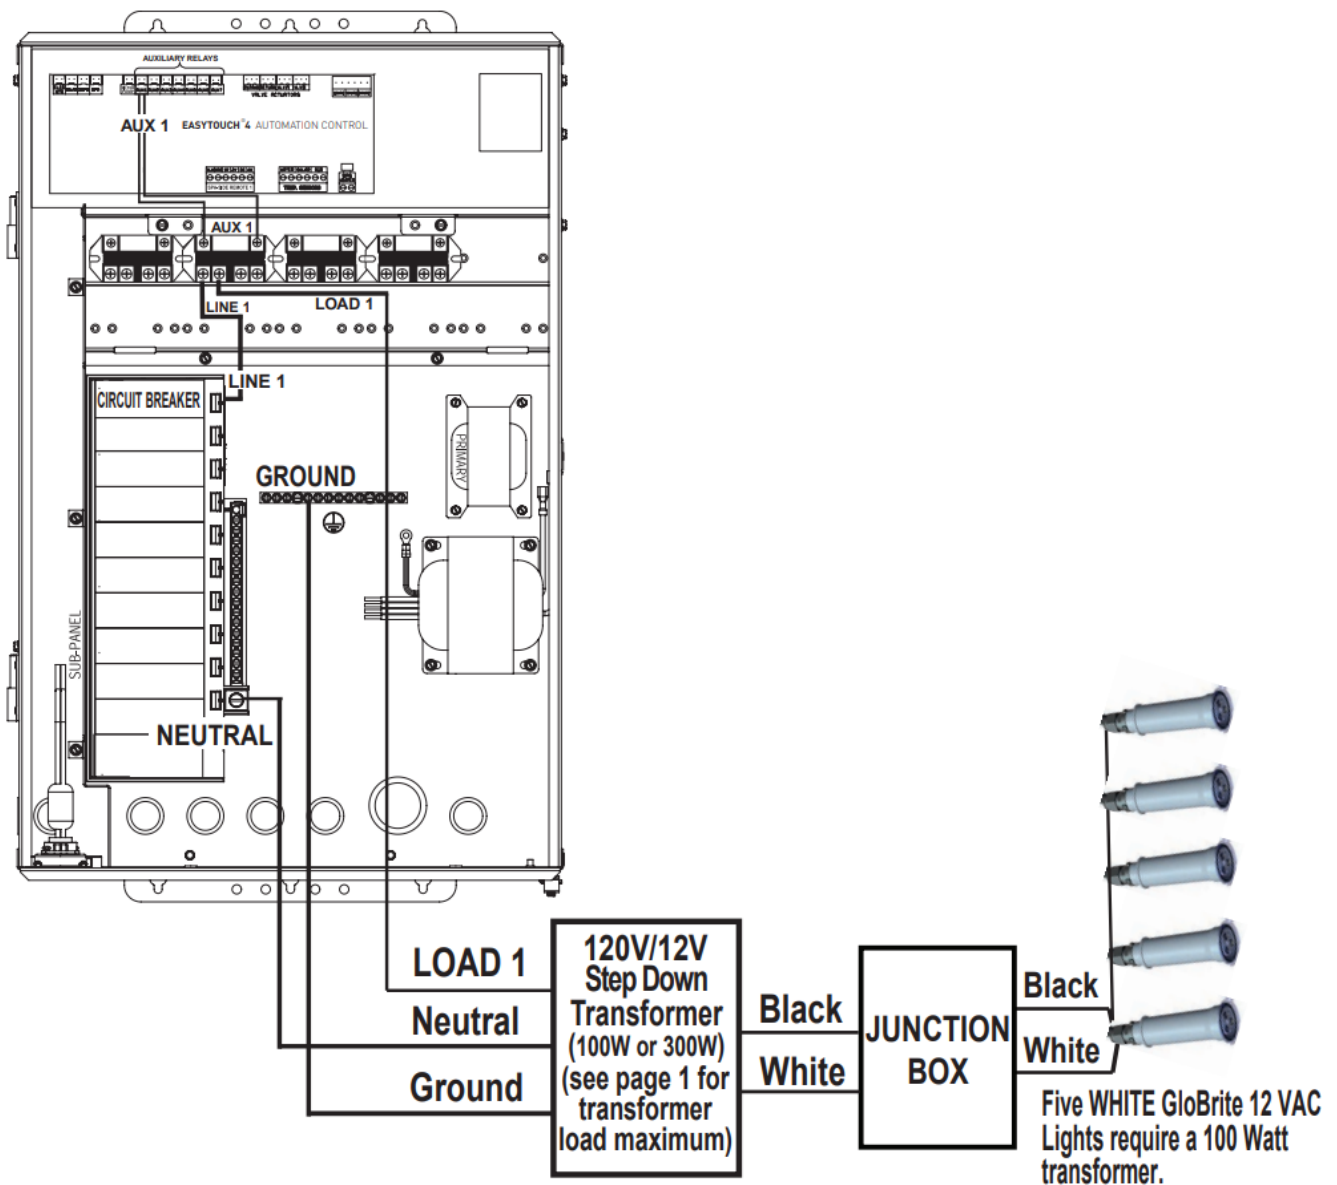

EasyTouch® and IntelliTouch® Control System Load Center Wiring Diagram

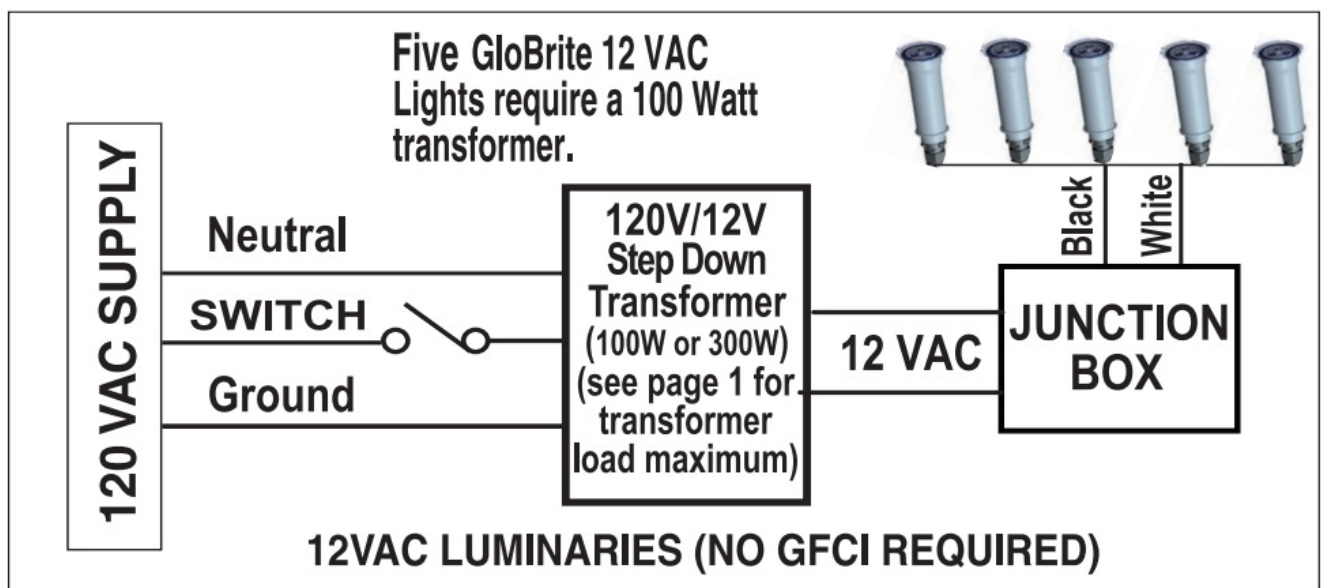

## SETTING UP GLOBRITE® WHITE LIGHTS WITH EASYTOUCH® AND INTELLITOUCH® CONTROL SYSTEM


## EasyTouch® Control System

The following describes how to setup the GloBrite White Light from the EasyTouch® control system indoor control panel or the EasyTouch control system wireless control panel. From the EasyTouch control panel you can control the light shows.

To set up a GloBrite light circuit; assign the "Light Circuit Name" to the relay circuit (example; AUX 3, as "Pool Light") and "Function": assign the name "Pool Light" circuit in the Circuit Func. menu as a "light" circuit (IntelliBrite). After assigning the circuit name and function, the light circuit name "Pool Light" can be setup in the CONFIG menu for light position, color etc.


### To assign a Circuit Name go to: MENU > SETTINGS > CIRCUIT NAMES

1. Press the Up/Down button to select a circuit number 1/18. Press the Up button two times to select AUX 1 to choose this circuit for a light circuit On/ Off button. The circuit number (1/18) corresponds to its assigned circuit name.
2. Press the Up/Down button to scroll through the list of preset names. Select a name such as "Pool Light." AUX 1 has now been assigned the circuit name "Pool Light."

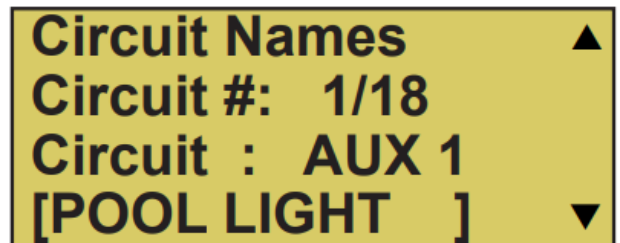

### To assign a Circuit Function go to: MENU > SETTINGS > CIRCUIT FUNC.

3. Press the Menu button to return to the Settings menu. Press the Down button to and select "Circuit Func." Press the Right button to access the Circuit Func. menu.
4. Press the Up/Down button to select the already assigned circuit name "Pool Light."
5. Press the Right button to view "Circuit Functions" to assign to light circuit "Pool Light."
6. Press the Up/Down button to select the type of light circuit function to use.  
Select "INTELLIBRITE" for the GloBrite light circuit function.
7. Press the Menu button three times to return to the main screen.

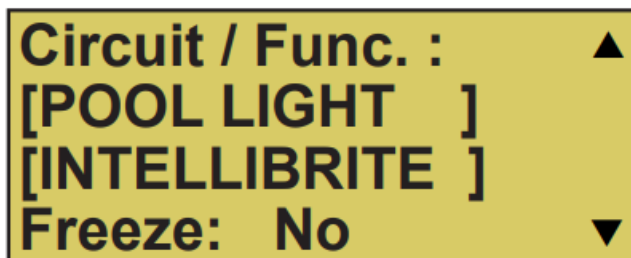

**Operating the GloBrite lights:** The GloBrite white light is ready to operate using the EasyTouch control panel button 1 (auxiliary 1 circuit). To access the Lights menu screen (special Light Features), press Menu > Lights. The Lights menu settings are: MODES, COLORS, ALL ON, ALL OFF, SYNC, MAGICSTREAM, CONFIG: From the Modes screen you can control the color light shows. To access the Modes menu, press Menu > Lights > Modes. See page 2 for GloBrite color light shows.

## IntelliTouch® Control System



The following describes how to setup the GloBrite White Light from the IntelliTouch® control system control panel. From the IntelliTouch® control system control panel you can control the light shows. To access the GloBrite light screens, from the IntelliTouch indoor control panel or the Mobile Touch® Wireless Remote control panel.

## **Assigning a Circuit Name**

To identify the GloBrite light connected to the auxiliary circuits (AUX 1, AUX 2) in the IntelliTouch load center, you need to assign the GloBrite light circuit name to the corresponding auxiliary circuits in the IntelliTouch indoor control panel. Choose a circuit name from the preset list of names for the GloBrite light connected to the auxiliary relay installed in the IntelliTouch load center.

**Assigning a Circuit Name for the GloBrite Light:** To assign a Circuit Name for the GloBrite light, go to: MENU > SETUP > ADVANCED > CIRCUIT NAMES > ASSIGN CIRCUIT NAMES > DISPLAY.

Selecting DISPLAY Screen 1, 2, 3, or 4: The auxiliary circuits that control the pool and spa equipment can be accessed from the “Display” screen on the Indoor Control Panel or Mobile Touch wireless control panel. Selecting the button next to Display 1, 2, 3, or 4 displays the screen with circuits belonging to that particular expansion Load Center or Power Center. “Feature Circuits” can also be assigned from this screen.

### **To assign circuit names for a specific display screen:**

**Display #1** – This screen shows circuit names for the filter pump, pool and spa modes, and all high voltage auxiliary circuits connected to the main Load Center or Power Center. **Display #2** – This screen shows circuit names for the additional auxiliary circuits connected to the first expansion center (Load Center or Power Center).

**Display #3** – This screen shows circuit names for the additional auxiliary circuits connected to the second expansion center (Load Center or Power Center)

**Display #4** – This screen shows circuit names for the additional auxiliary circuits connected to the third expansion center (Load Center or Power Center).

### **To assign a GloBrite light circuit name for the MAIN SCREEN:**

1. Select the button next to Display #1. These are the circuit names that will be displayed on the Main Screen.  
Note: If there is an expansion Load Center or Power Center installed, select the appropriate Display #2, #3, or #4 associated with that expansion Load Center or Power Center.
2. From the Main Display screen, press the button next to AUX 1. A small arrow pointing to AUX 1 is displayed.
3. Use the Up and Down buttons at the bottom of the screen to scroll through the alphabetical list of preset equipment names. Choose the equipment name that matches the label name for button number 1 on the Load Center Outdoor Control Panel.
4. Continue to name other auxiliary circuits (AUX2, AUX3, etc.): After selecting the equipment name you want to use for AUX 1, press the button next to the AUX 2 and choose a circuit name. The small arrow indicates which circuit is selected for naming.
5. Repeat the process to assign the other equipment to circuits on this screen.
6. When you have finished assigning equipment circuit names, press the Save button. Press the Exit button to return to the Main screen.
7. **CONTINUE TO NEXT PAGE to set up the GloBrite “Function Circuit.”**

## **Set up a GloBrite® Light Circuit Function**

To setup an AUX circuit to control the GloBrite white light, assign the circuit light function an auxiliary relay circuit (AUX 1), then assign the circuit name for that light circuit. The light circuit name will appear on the main screen.

Each GloBrite light must also be assigned a circuit function.

**To assign a Circuit Name for the GloBrite light, go to: MENU > SETUP > ADVANCED > CIRCUIT FUNCTIONS**

Setup a GloBrite light function circuit: Assign each light auxiliary relay circuit a circuit name, then assign that light relay circuit in the "CIRCUIT FUNCTIONS" section, as "INTELLIBRITE."

To setup the GloBrite light circuit function (use the "IntelliBrite" circuit name):

1. Press the button next to the AUX button (the relay auxiliary circuit connected to the GloBrite (IntelliBrite) light).
2. Press the right or left side (PREV/NEXT) button next to "INTELLIBRITE." Scroll through the circuit functions until "INTELLIBRITE" is displayed.
3. Press the SAVE button on the bottom of the screen. Press the EXIT button to return to the main screen.

**Assign the GloBrite light circuit to the Lights screen:**

4. Press the Lights button on the bottom of the screen.
5. Press the right side button next to "CONFIGURE."
6. Press the button next to "NONE" to assign an IntelliBrite light circuit to the selected button. Light names can be setup to display on the left side for "Spa" features and on the right side for the "Pool" features.
7. Press the top left or right side button to scroll through the available light circuits which can be used for the GloBrite (IntelliBrite) lighting features. Select at the circuit name you wish to use. The displayed circuit names are circuit names that were previously assigned when assigning a circuit function.

**Operating and Selecting GloBrite (IntelliBrite® White Light) White Mode**

Special Light Features: Up to twelve (12) IntelliBrite light circuits can be displayed on the main Lights screen (special light features). From the Lights screen you can activate the IntelliBrite lighting features (i.e., color swim, color set). Assuming each GloBrite (IntelliBrite) light has its own relay and separate circuit.

**Troubleshooting (GloBrite Lights)**

Both of the LEDs are flashing: Check the light wiring connection to the junction box at the pool side and to the AC power switch.

**The light will not illuminate:**

Check the light wiring connection to the junction box at the pool side and to the AC power switch. Be sure that there is proper AC power applied to the light.

**GloBrite® White Lights Parts List and Replacement Kits**

**GloBrite Lights**

Part No.	Description
602053	GloBrite 12 VAC 30' cord
602054	GloBrite 12 VAC 50' cord
602055	GloBrite 12 VAC 100' cord
602056	GloBrite 12 VAC 150' cord

## GloBrite Bundles

Part No.	Description
619993	Gunitite Combo #1- 1 GloBrite 100' w/300W transformer & Gunitite niche
619994	Gunitite Combo #2 – 2 GloBrite 100' w/300W transformer & 2 Gunitite niches
620051	Fiberglass combo #1- 1 GloBrite 100' w/300W txfmr & Fiberglass niche
620052	Fiberglass combo #2 – 2 GloBrite 100' w/300W txfmr & 2 Fiberglass niches
620080	Vinyl combo #1- 1 GloBrite 100' w/300W txfmr and vinyl niche
620081	Vinyl combo #2 – 2 GloBrite 100' w/300W txfmr and two vinyl niches

## GloBrite Light Niches

Part No.	Description
620039	Vinyl Niche for GloBrite
620040	Gunitite Niche for GloBrite
620041	Fiberglass Niche for GloBrite
620093	Fiberglass Niche for GloBrite (Blue)
620094	Fiberglass Niche for GloBrite (Gray)

## GloBrite Light Replacement Kits

Part No.	Description
620054	Vinyl (gasket, front face and screws (4))
620055	Fiberglass (washer and gasket)
620056	Color Ring (color ring and plaster cover)
620057	O-Ring (o-ring, insertion tool)
620058	Nut (fiberglass/vinyl nut)
620314	Glare Shield

## Technical Support

Phone: [800-831-7133](tel:800-831-7133) – Fax: [800-284-4151](tel:800-284-4151)  
[www.pentair.com](http://www.pentair.com)

## CUSTOMER SUPPORT

1620 HAWKINS AVE., SANFORD, NC 27330 • [919-566-8000](tel:919-566-8000)  
10951 WEST LOS ANGELES AVE., MOORPARK, CA 93021 • [805-553-5000](tel:805-553-5000)  
[WWW.PENTAIR.COM](http://WWW.PENTAIR.COM)

All Pentair trademarks and logos are owned by Pentair, Inc. GloBrite®, IntelliFlo®, IntelliBrite®, EasyTouch®, IntelliTouch®, Sun Touch®, IntelliChlor®, Mobile Touch® and SAm® are trademarks and/or registered trademarks of Pentair Water Pool and Spa, Inc. and/or its affiliated companies in the United States and/ or other countries. Unless expressly noted, names and brands of third parties that may be used in this document are not used to indicate an affiliation or endorsement between the owners of these names and brands and Pentair Water Pool and Spa, Inc. Those names and brands may be the trademarks or registered trademarks of those third parties. Because we are continuously improving our products and services, Pentair reserves the right to change specifications without prior notice.



Pentair is an equal opportunity employer.

© 2019 Pentair Water Pool and Spa, Inc. All rights reserved.

This document is subject to change without notice.



## Documents / Resources

 GLOBRITE™ WHITE LED LIGHT FOR POOL AND SPA  INSTALLATION AND USER'S GUIDE <small>IMPORTANT SAFETY INSTRUCTIONS READ AND FOLLOW ALL INSTRUCTIONS GIVE THESE INSTRUCTIONS</small>	<p><a href="#">PENTAIR GloBrite Color Changing Pool Globrite LED Light</a> [pdf] User Guide GloBrite Color Changing Pool Globrite LED Light, Color Changing Pool Globrite LED Light, Pool Globrite LED Light, Globrite LED Light, LED Light</p>
---	---

## References

- [Residential Pool Supplies and Pool Solutions | Pentair](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.