



Contents [[hide](#)]

- [1 PIXSYS TCT101 Timer Counter Tachometer](#)
- [2 SIZE AND INSTALLATION](#)
- [3 TECHNICAL DATA](#)
- [4 INTRODUCTION](#)
- [5 WIRING DIAGRAM](#)
- [6 MEMORY CARD](#)
- [7 SETPOINT MODIFICATION](#)
- [8 LOADING DEFAULT VALUES](#)
- [9 CONFIGURATION PARAMETER MODIFICATION](#)
- [10 PARAMETERS LIST](#)
- [11 SERIAL COMMUNICATION](#)
- [12 MODBUS RTU PROTOCOL MAIN FEATURES](#)
- [13 PARAMETERS LIST](#)
- [14 MODBUS WORD ADDRESSES IN TIMER MODE](#)
- [15 Frequently Asked Questions](#)
- [16 Documents / Resources](#)
 - [16.1 References](#)



PIXSYS TCT101 Timer Counter Tachometer




PIXSYS www.pixsys.net

e-mail: sales@pixsys.net – support@pixsys.net

Software V 2.08

2300.10.140-RevH 240314

SIZE AND INSTALLATION

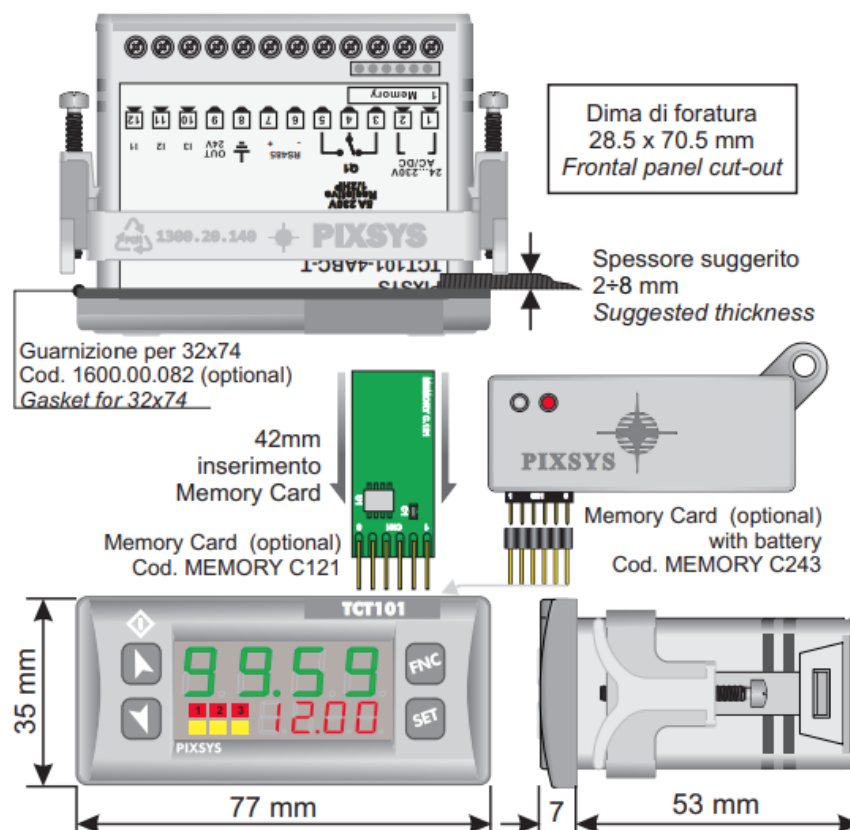

LED	MEANING
	Report the activation of Q1
	Report the activation of Q2
	Report serial transmission by the TCT101

TECHNICAL DATA


- **Operating temperature:** Operating temperature 0-40°C, humidity 35..95uR%
- **Sealing:** Front panel IP65 (with optional gasket) , Box IP30, Terminal blocks IP20
- **Material:** PC ABS UL94V0 self-extinguishing
- **Digital Inputs:** 3PNP/NPN configurable as analogue for potentiometers (max 28 Vdc in PNP mode)
- **Outputs:** 1 relays 5A resistive charge
- **OUT 24V:** 30mA(24Vac),40mA(24 Vdc),60mA (110...230Vac)
- **Serial:** RS485
- **Back-UP:** Rechargeable battery, approx. 7days autonomy
- **Programming Software:** Labsoftview 2.6 or later
- **Power Supply:** 24...230Vac/Vdc +/-15% 50/60Hz / 2W

INTRODUCTION

Thanks for choosing a Pixsys device. TCT101-4ABC-T can be set in 3 different modes: ,timer counter or tachometer. 3 universal digital inputs are availables (NPN/PNP/Potential free contact) and can be used for reading external switches, proximity sensors and bidirectional encoders. One input is also analogue in order to allow setpoint modification by external potentiometer. Rs485 serial interface allows communication via Modbus RTU protocol.

- Read carefully the safety guidelines and programming instructions contained in this manual before using/connecting the device.
- Disconnect power supply before proceeding to hardware settings or electrical wirings.
- Only qualified personnel should be allowed to use the device and/or service it and in accordance to technical data and environmental conditions listed in this manual.
- Do not dispose electric tools together with household waste materials in observance of European Directive 2002/96/CE

WIRING DIAGRAM

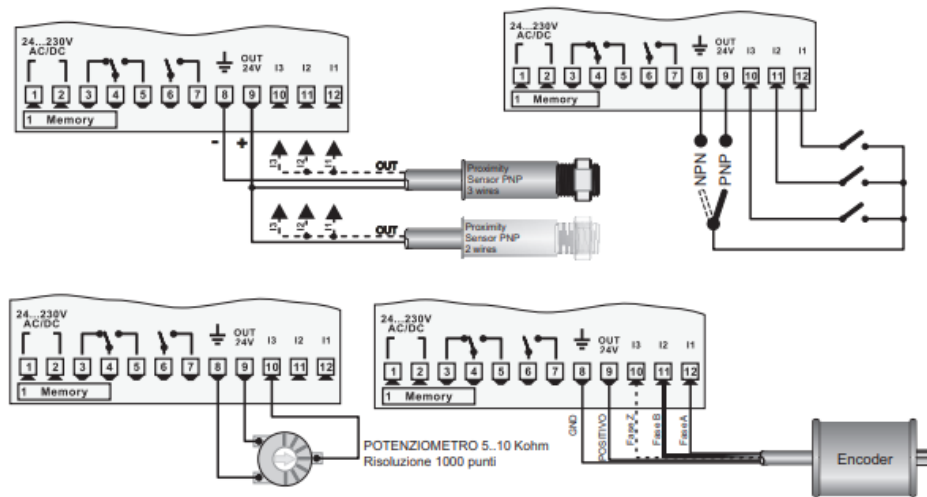

Potentiometer:

To modify Set1 or Set2 by external potentiometer follow the steps below:

1. use potentiometers 5kOhm to 10kohm
2. connect cursor to pin I3; a wrong connection may damage the potentiometer and lead to lock of the device.
3. accuracy on input is max 1000 points, therefore set the parameters "Upper limit" and "Lower limit" with a max difference of 1000 units.
(Ex.: LoS1 to 50,0 and uPS1 to 150,0 to modify time value related to Set1 between 50 and 150 seconds with steps of one tenth). Greater differences would make unstable the less significant digit.
4. To calibrate the scale of potentiometer enter the configuration mode and select: Hin.3 as Pot Fin.3 as Set1 or Set2 P.tAr as Enable Exit configuration mode and place potentiometer at minimum level and press  key, then place potentiometer at max level and press premere  key: the device automatically exit the calibration procedure.

N.B.:A switch-off of the device would interrupt the calibration.

MEMORY CARD

(optional)

Parameters and setpoint values can be copied from one device to another using the Memory car.

There are two methods:

- With the device connected to the power supply insert the memory card when the controller is off On activation display 1 shows and display 2 shows  (Only if the values stored on Memory Card are correct).
- By pressing the  key display 2 shows **LoAd** Confirm using the  key.



The device loads the new data and starts again

With the controller disconnected from the power supply:

The memory card is equipped with an internal battery with a life of about 1000 uses. Insert the memory card and press the programming button.

When writing the parameters, the LED turns red and on completing the procedure it changes to green. It is possible to repeat the procedure.

UPDATING MEMORY CARD.

To update the memory card values, follow the procedure described in the first method, setting display 2 to  so as not to load the parameters on controller.

Enter configuration and change at least one parameter

Exit configuration. Changes are saved automatically.

SETPOINT MODIFICATION

PRESS		DISPLAY
1		Visualizes SETPOINT 1 / 2
2	 or 	Modifies selected SET
2a		Selects chosen digit
3a	 or 	Modifies blinking digit of selected SET

LOADING DEFAULT VALUES

PRESS		DISPLAY	DO
1	 for 3 seconds	Display 1 shows  with 1st digit blinking, while Display 2 shows 	
2	 or 	Modify blinking digit and pass to the next one pressing 	Enter password 
3	 to confirm	Instrument loads default settings	Switch the device off and restart it

CONFIGURATION PARAMETER MODIFICATION

PRESS		DISPLAY	DO
1	 for 3 seconds	Display 1 shows  with 1st digit blinking, while Display 2 shows 	
2	 or 	Modify blinking digit and pass to the next one pressing 	Enter password 
3	 to confirm	Display visualizes the first parameter of configuration table 	
4	 or 	Scroll parameters	
5	 +  or 	Increase or decrease visualized parameter pressing  and an arrow key	Enter new data that will be saved when releasing keys
6		End configuration, controller exits from configuration	

PARAMETERS LIST

TCT101-4ABC-T allows to select operating mode, modifying first configuration parameter. According to chosen mode, only the relevant parameters will be displayed. Refer to technical notes of each mode to find parameters list.

TCT101 MODE CONFIGURATION

ModE	P-00 Mode	TCT101 operating mode selection	
cont	Counter	TCT101 operating as counter	
tAch	Tachometer	TCT101 operating as tachometer	
tINE	Timer	TCT101 operating as timer	Default

Here below you can find parameters to set serial port and Modbus protocol, independently from selected operating mode.

SERIAL CONFIGURATION

SLAd	P-50 Slave Address	Device Modbus address	
1	Slave n°1	Modbus 1 address	Default
	...	...	
254	Slave n° 254	Modbus 254 address	
bdrE	P-51 Baudrate	Serial communication speed	
110	110 baud	110 b/s communication	
150	150 baud	150 b/s communication	
300	300 baud	300 b/s communication	
600	600 baud	600 b/s communication	
1200	1200 baud	1200 b/s communication	
2400	2400 baud	2400 b/s communication	
4800	4800 baud	4800 b/s communication	
9600	9600 baud	9600 b/s communication	
19200	19200 baud	19200 b/s communication	Default
28800	28800 baud	28800 b/s communication	
38400	38400 baud	38400 b/s communication	
57600	57600 baud	57600 b/s communication	
FaSE	P-52 Format Serial	Serial data format	
8n1	8 bit, parity none, 1 stop	8 data bit, no parity, 1 stop bit	Default
SEdE	P-53 Serial Delay	Serial delay	
0	0 ms	Slave answer after 0 ms	
	...	...	Default 2ms
100	100 ms	Slave answer after 100 ms	

SERIAL COMMUNICATION

- TCT101-4ABC-T is provided with RS485 serial and can receive/transmit data via MODBUS RTU protocol. Device can be configured only as Slave. This function allows to control multiple controllers connected to a supervisory system (Master). Each instrument will answer to a Master query only if it contains some addresses as on parameter **SLAd** (SlaveAddress).
- Allowed addresses range are from 1 to 254 and there should not be controllers with

the same address on the same line.

- Address 255 can be used by the Master to communicate with all connected equipments (all connected devices will answer Master query with this address), while with 0 all devices receive command, but no answer is expected (broadcast mode).
- TCT101-4ABC-T can introduce an answer delay (in milliseconds) to Master request. This delay has to be set on parameter **SEdE** (Serial Delay).
- At each parameter modification, instrument stores values in EEPROM memory (100000 writing cycles).
- NB: Modifications made to Word different to those described in the following table can lead to instrument malfunction.

MODBUS RTU PROTOCOL MAIN FEATURES

Baudrate	Selectable by parameter
Format	8,N,1 (8 bit data, no parity, 1 stop bit)
Supported functions	WORD READING (0x03, 0x04) (max 20 word) SINGLE WORD WRITING (0x06) MULTIPLE WORDS WRITING (0x10) (max 20 word)
Read/Write	RO Read Only WO Write Only RW Read / Write
Reset Value	? Data unknown at reset EEPROM Value stored on EEPROM Valore Value indicated at reset

Modbus Address	Description	Read Write	Reset Value
0	Device type (ID TCT101-4ABC-T)	RO	153
1	Software version	RO	203
3	Slave address	RO	EEPROM
10	Setpoint storing delay	RW	0
11	Parameter storing delay	RW	0
100	Relay outputs status – bit 0 = relay Q1 – bit 1 = relay Q2	RO	?
101	Digital inputs status – bit 0 status I1 – bit 1 status I2 – bit 2 status I3	RO	?
102	Keys status – bit 0 UP key status – bit 1 DOWN key status – bit 2 SET key status – bit 3 FNC key status	RO	?

300	Loading default values – writing 9999 restores all default values – writing 9998 restores all default values keeping unchanged slave address – writing 9997 restores all default values keeping unchanged communication baudrate – writing 9996 restores all default values keeping unchanged slave address and communication baudrate	RO	153
400	Setpoint 1	RW	EEPROM
401	Setpoint 2	RW	EEPROM

PARAMETERS LIST

FUNCTION CONFIGURATION

Func.	P-01 Timer Function	Timer functions	
ton	Timer On	Activates output at count end	Default
toff	Timer Off	Deactivates output at count end	
PAUSE	Pause/Work	T1 and T2 start in sequency	
OSC	Oscillator	T1 and T2 start in sequency repeatedly	
PWM	PWM	Percentage output activation on fixed time base	

BACKUP MEMORY CONFIGURATION

P.ON	P-02 Power-off Memory	Power-off memory	
DIS	Disabled	Disabled	Default
ONLY	Only Timer	Only timer value in memory	
ALL	Timer / State	Timer value and START/STOP status in memory	

INPUT CONFIGURATION

H.in1	P-03 Hardware Input 1 Input 1 configuration		
nPn	NPN	NPN	
PnP	PNP	PNP	Default
tTL	TTL	TTL	
H.in2	P-04 Hardware Input 2 Input 2 configuration		
nPn	NPN	NPN	
PnP	PNP	PNP	Default
tTL	TTL	TTL	
H.in3	P-05 Hardware Input 3 Input 3 configuration		
PnP	PNP	PNP	Default
tTL	TTL	TTL	
Pot.	Potent.	Potentiometer	
A.in1	P-06 Active State Input 1 Input 1 activation		
HLEw	High Level 	High level	
LEw	Low Level 	Low level	
r.S	Rising edge 	Transitory in rising	Default
A.in2	P-07 Active State Input 2 Input 2 activation		
HLEw	High Level 	High level	
LEw	Low Level 	Low level	
r.S	Rising edge 	Transitory in rising	Default
A.in3	P-08 Active State Input 3 Input 3 activation		
HLEw	High Level 	High level	
LEw	Low Level 	Low level	
r.S	Rising edge 	Transitory in rising	Default
F.in1	P-09 Function Input 1 Input 1 function		
d.S	Disable	Desabled	
SESt	Start / Stop	Start / Stop	Default
SESr	Start / Stop-Reset	Start / Stop-Reset	
rSSt	Reset-Start / Stop	Reset-Start / Stop	
rSS	Reset / Start / Stop	Reset / Start / Stop	
F.in2	P-10 Function Input 2 Input 2 function		
d.S	Disable	Desabled	
rES	Reset	Reset	Default

OUTPUT CONFIGURATION

F.in3	P-11 Function Input 3 Input 3 function		
d.S	Disable	Desabled	
UR.tE	Wait	Wait (count lock)	
HoLd	Hold	Hold (lock the display but count continues)	Default
SEt1	Potent. To SET1	Variation by potentiometer on SET1	
SEt2	Potent. To SET2	Variation by potentiometer on SET2	
F.t.uP	P-12 Function Key UP Function on key 		
d.S	Disable	Desabled	Default
SESt	Start / Stop	Start / Stop	
SESr	Start / Stop-Reset	Start / Stop-Reset	
rSSt	Reset-Start / Stop	Reset-Start / Stop	
rSS	Reset / Start / Stop	Reset / Start / Stop	
rES	Reset	Reset	
UR.tE	Wait	Wait (count lock)	
HoLd	Hold	Hold (lock the display but count continues)	

DISPLAY CONFIGURATION

out 1	P-13 Output Q1 Setup	Output Q1 selection	
d.is	Disable	Disabled	
t.1n	Out Timer 1 n.o.	Timer Output 1 n.o.	Default
t.1nc	Out Timer 1 n.c.	Timer Output 1 n.c.	
t.2n	Out Timer 2 n.o.	Timer Output 2 n.o.	
t.2nc	Out Timer 2 n.c.	Timer Output 2 n.c.	
StAr	Start	Start	
StoP	Stop	Stop	
out 2	P-14 Output Q2 Setup	Output Q2 selection	
d.is	Disable	Disabled	Default
t.1n	Out Timer 1 n.o.	Timer Output 1 n.o.	
t.1nc	Out Timer 1 n.c.	Timer Output 1 n.c.	
t.2n	Out Timer 2 n.o.	Timer Output 2 n.o.	
t.2nc	Out Timer 2 n.c.	Timer Output 2 n.c.	
StAr	Start	Start	
StoP	Stop	Stop	

SETPOINT CONFIGURATION

TYPE	P-15 Type of Timer	Count mode	
incr	Incremental	Incremental	Default
dEcr	Decremental	Decremental	
Fo.S. 1	P-16 Format Set 1	Count format	
Fo.S. 2	P-17 Format Set 2	Count format	
SScc	Second.Cent	Seconds, Cents	
SSSd	Second.Decimal	Seconds, Tenths	Default
SSSS	Second	Seconds	
nnSS	Minute.Second	Minutes, Seconds	
HHnn	Hour.Minute	Hours, Minutes	
HHHH	Hour	Hours	
d.S. 1	P-18 Display Set 1	Set 1 visualization	
d.is	Disable	Disabled	
U.is	Visualized	Visualized	
Mod.v	Modifiable	Visualized and modifiable	Default
d.S. 2	P-19 Display Set 2	Set 2 visualization	
d.is	Disable	Disabled	Default
U.is	Visualized	Visualized	
Mod.v	Modifiable	Visualized and modifiable	
Lo.S. 1	P-20 Lower limit Set 1	Set 1 lower limit	0.0
UP.S. 1	P-21 Upper limit Set 1	Set 1 upper limit	99.9
Lo.S. 2	P-22 Lower limit Set 2	Set 2 lower limit	0.0
UP.S. 2	P-23 Upper limit Set 2	Set 2 upper limit	99.9
PtAr.	P-24 Potent. tarature	Potentiometer calibration procedure	
d.is	Disable	Disabled	Default
En	Enable	Enabled	

MODBUS WORD ADDRESSES IN TIMER MODE


500	Timer H value	RO	?
-----	---------------	----	---

501	Timer L value	RO	?
502	Timer value / 60	RO	?
503	Module 60 timer value	RO	?
504	Timer status – 0 timer in stop – 1,2 timer in start	RO	?
505	Active timer – 0 no active timer – 1 timer 1 active – 2 timer 2 active	RO	?
506	Timer logic outputs – bit 0 timer 1 logic output – bit 1 timer 2 logic output	RO	?
507	Wait Hold timer status – bit 0 Wait status – bit 1 Hold status	RO	?
508	Timer serial command done	RO	?
509	Timer in Hold	RO	?
510	Hold H timer value	RO	?
511	Hold L timer value	RO	?

512	Hold / 60 timer value	RO	?
513	Hold module 60 timer value	RO	?
514	Partial minutes (only for timer in hours)	RO	?
530	Timer serial command – 0 no command – 1 start timer command – 2 stop timer command – 3 reset timer command – 4 reset start timer command – 5 stop reset timer command – 6 enables/ disables wait timer function command – 7 enables/ disables hold timer command functio n	WO	0
1000	Parameter P-00	RW	EEPROM
1001	Parameter P-01	RW	EEPROM
1002	Parameter P-02	RW	EEPROM
	...	RW	EEPROM
1052	Parameter P-52	RW	EEPROM
1053	Parameter P-53	RW	EEPROM

TCT101-4ABC-T “TIMER” MODE

TCT101-4ABC-T "TIMER" MODE

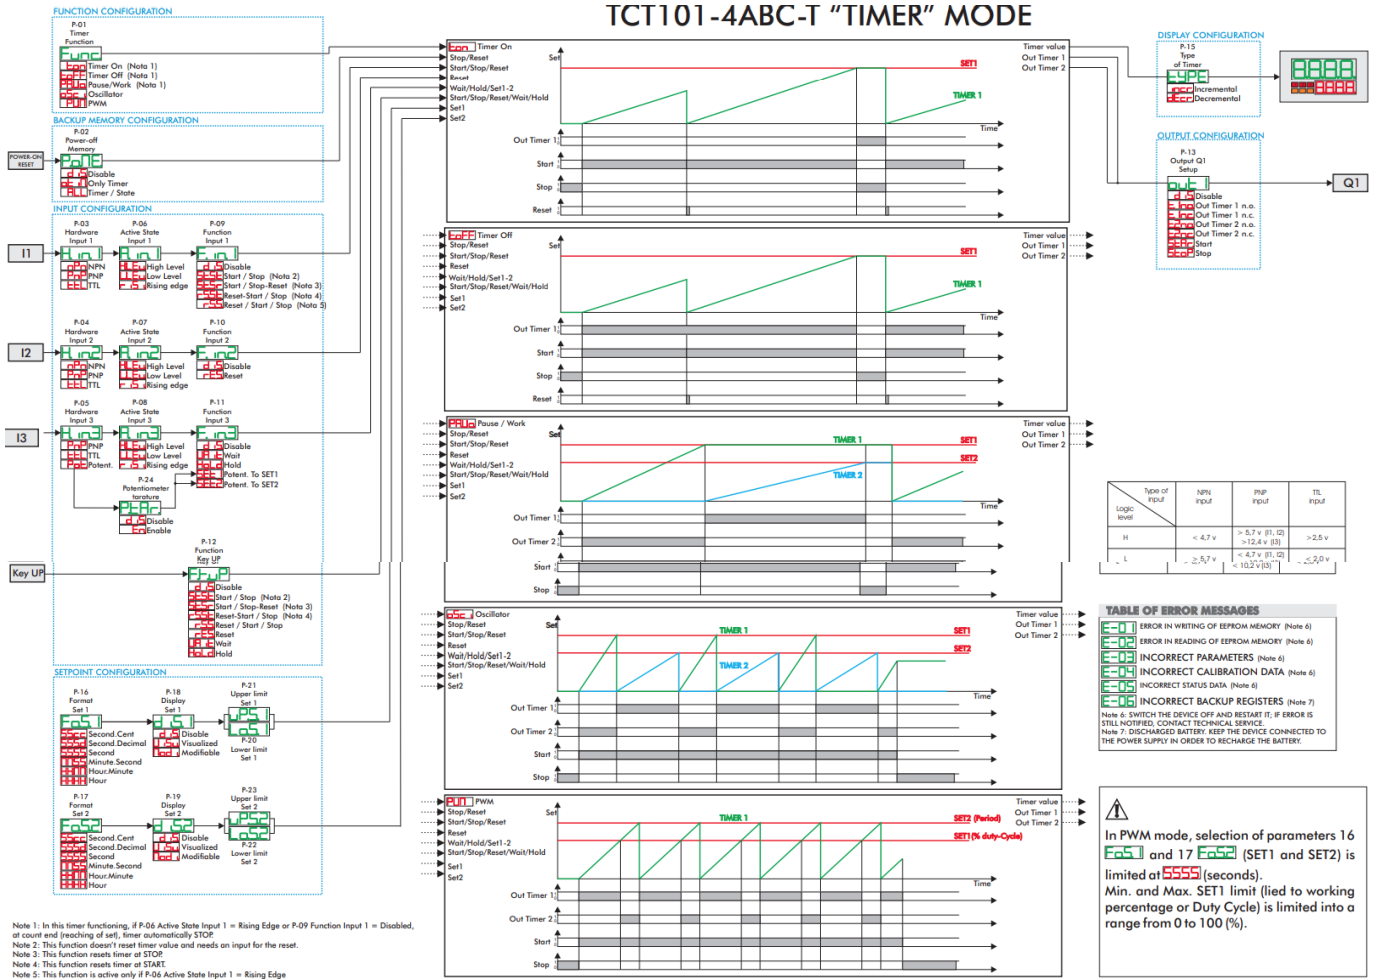

PARAMETERS LIST

FUNCTION CONFIGURATION

Func.	P-01 Counter Function	Counter functions	
Sing	Single (1 Counter)	1 counter functioning	Default
doub	Double (2 Counters)	2 counters functioning	

BACKUP MEMORY CONFIGURATION

Power	P-02 Power-off Memory	Power-off memory	
dis	Disable	No counter stored at switch-off	Default
cnt1	Counter 1	Counter 1 stored at switch-off	
cnt2	Counter 2	Counter 2 stored at switch-off	
ALL	All Counters	All counters stored at switch-off	

INPUT CONFIGURATION

H.in1	P-03 Hardware input 1	Input 1 hardware configuration	
H.in2	P-04 Hardware input 2	Input 2 hardware configuration	
H.in3	P-05 Hardware input 3	Input 3 hardware configuration	
nPN	NPN	NPN (not available on input 3)	
pNP	PNP	PNP	Default
tTL	TTL	TTL	
Pot	Potent.	Potenzimetro (available only on input 3)	
FIL1	P-06 Filter Delay Input 1	Digital input 1 filter configuration	
FIL2	P-07 Filter Delay Input 2	Digital input 2 filter configuration	
FIL3	P-08 Filter Delay Input 3	Digital input 2 filter configuration	
00	No delay	Input filter disabled	Default
05	0,5 ms	0,5 ms filter	
	...	...(Step 0,5 ms)	
1000	100,0 ms	100,0 ms filter	
A.in1	P-09 Active State Input 1	Input 1 active state	
A.in2	P-10 Active State Input 2	Input 2 active state	
A.in3	P-11 Active State Input 3	Input 3 active state	
HLEu	High Level	High level (only for input 2)	
LEu	Low Level	Low level (only for input 2)	
rIS	Rising edge	Rising edge	Default
FALL	Falling edge	Falling edge	
F.in3	P-12 Function Input 3	Input 3 related function	

d IS	Disable	Disabled	
Enc 2	Encoder Z	Phase Z encoder loading	
Ld 1	Load Counter 1	Counter 1 loading	Default
Ld 2	Load Counter 2	Counter 2 loading	
Ld 12	Load Counter 1&2	Counters 1 and 2 loading	
SEt 1	Set1	Set 1 setting by potentiometer	
SEt 2	Set2	Set 2 setting by potentiometer	
F u P	P-13 Function Key UP	UP (up arrow key)	
d IS	Disable	Disabled	Default
Ld 1	Load Counter 1	Counter 1 loading	
Ld 2	Load Counter 2	Counter 2 loading	
Ld 12	Load Counter 1&2	Counters 1 and 2 loading	
P E A r	P-14 Potentiom. Tarature	Potentiometer calibration procedure	
d IS	Disable	Disabled	Default
En	Enable	Enabled	

COUNTER CLOCK CONFIGURATION

CLC 1	P-15 Clock Counter 1	Counter 1 count mode selection	
CLC 2	P-33 Clock Counter 2	Counter 2 count mode selection	
d IS	Disable	Disabled	Default C2
Enc	Encoder	Bidirectional encoder (I1) phase A, (I2) phase B	
uP --	I1 Up, I2 Off	UP mode (I1)	Default C1
da --	I1 Down, I2 Off	DOWN mode (I1)	
--uP	I1 Off, I2 Up	UP mode (I2)	
--da	I1 Off, I2 Down	DOWN mode (I2)	
uPda	I1 Up, I2 Down	UP (I1) - DOWN mode (I2)	
uP rd	I1 Up, I2 Incr./Decr.	UP mode (I1) with reverse direction (I2)	
uPEL	I1 Up, I2 En./Lock	UP mode (I1) with count lock (I2)	
uPEH	I1 Up, I2 En./Hold	UP mode (I1) with keeping value on display (I2)	
daEL	I1 Down, I2 En./Lock	DOWN mode (I1) with count lock (I2)	
daEH	I1 Down, I2 En./Hold	DOWN mode (I1) with keeping value on display (I2)	
oc 2	Output Counter 2/1	UP count on rising edge of counter 2/1 output	

COUNTER DISPLAY CONFIGURATION

d LC 1	P-16 Display Counter 1	Counter 1 visualization selection	
d LC 2	P-34 Display Counter 2	Counter 2 visualization selection	
d IS	Disable	Counter value not visualized	Default C2
u IS u	Visualized	Counter value visualized	Default C1
dPC 1	P-17 Decimal Point Counter 1	Counter 1 visualization format	
dPC 2	P-35 Decimal Point Counter 2	Counter 2 visualization format	
0	0	Visualization with no decimal digit	Default
00	0.0	Visualization with 1 decimal digit	
000	0.00	Visualization with 2 decimal digits	
0000	0.000	Visualization with 3 decimal digits	
in LC 1	P-18 Counter 1 input counts	Counter 1 input counts (1...9999)	Default 1
in LC 2	P-36 Counter 2 input counts	Counter 2 input counts (1...9999)	Default 1
u LC 1	P-19 Counter 1 Visualized Counts	Counter 1 visualized counts (1...9999)	Default 1
u LC 2	P-37 Counter 2 Visualized Counts	Counter 2 visualized counts (1...9999)	Default 1

SETPOINT CONFIGURATION

d.S.1	P-20 Display Set 1	Counter 1 setpoint visualization selection	
d.S.2	P-38 Display Set 2	Counter 2 setpoint visualization selection	
d.S.	Disable	Setpoint value not visualized	Default C2
u.S.	Visualized	Setpoint value visualized	
Mod.	Modifiable	Setpoint value visualized and modifiable	Default C1
Lo.S.1	P-21 Lower Limit Set 1	Set 1 minimum value (0...9999)	Default 0
Lo.S.2	P-39 Lower Limit Set 2	Set 2 minimum value (0...9999)	Default 0
u.P.S.1	P-22 Upper Limit Set 1	Set 1 maximum value (0...9999)	Default 999
u.P.S.2	P-40 Upper Limit Set 2	Set 2 maximum value (0...9999)	Default 999

AUTOMATIC LOAD CONFIGURATION

ALC.1	P-23 Automatic Load Counter 1	Counter 1 automatic loading	
ALC.2	P-41 Automatic Load Counter 2	Counter 2 automatic loading	
d.S.	Disable	Automatic loading disabled	Default
SEt.1	Counter = Set 1	Loading if counter = Set1	
SEt.2	Counter = Set 2	Loading if counter = Set2	
Sod.1	Counter = Set 1+Output Duration 1	Loading if counter = Set1 + "Output Duration 1"	
Sod.2	Counter = Set 2+Output Duration 2	Loading if counter = Set2 + "Output Duration 2"	
u.C.1	Counter = Visualized counts	Loading if counter = "Visualized Counts"	
S-d.1	Counter = Set 1-Output Duration 1	Loading if counter = Set1 - "Output Duration 1"	
S-d.2	Counter = Set 2-Output Duration 2	Loading if counter = Set2 - "Output Duration 2"	
Sdt.1	Counter = Set 1 after Out. Dur. 1(time)	Loading if counter = Set1 "Output Duration 1"	
Sdt.2	Counter = Set 2 after Out. Dur. 2(time)	Loading if counter = Set2 "Output Duration 2"	

COUNTER LOAD VALUE CONFIGURATION

CLd.1	P-24 Counter Load Value 1	Counter 1 loading value	Default 0
CLd.2	P-42 Counter Load Value 2	Counter 2 loading value	Default 0

COUNTER OUTPUT MODE CONFIGURATION

CoN.1	P-25 Counter 1 Output Mode	Counter 1 output mode	
CoN.2	P-43 Counter 2 Output Mode	Counter 2 output mode	
SEt.1	Counter $\geq$ Set	Output active if Counter $\geq$ Set	Default
t.NE	Counter $\geq$ Set * Output Duration (time)	Output active for "Output Duration" time if Counter $\geq$ Set	
Coun	Counter $\geq$ Set * Output Duration (counts)	Output active for "Output Duration" counts if Counter $\geq$ Set	
SEt.2	Counter $\geq$ Set1+Set2	Output active if Counter $\geq$ Set1+Set2	
-SE.1	Counter $\leq$ Set	Output active if Counter $\leq$ Set	Default
-t.N	Counter $\leq$ Set * Output Duration (time)	Output active for "Output Duration" time if Counter $\leq$ Set	
-Coun	Counter $\leq$ Set * Output Duration (counts)	Output active for "Output Duration" counts if Counter $\leq$ Set	
-S.t.2	Counter $\leq$ Set1 + Set2	Output active if Counter $\leq$ Set1+Set2	

OUTPUT DURATION CONFIGURATION

adU.1	P-26 Output 1 Duration	Counter 1 output duration	Default 10
adU.2	P-44 Output 2 Duration	Counter 2 output duration	Default 10
uSEr	Output Duration Input by User	Value modifiable by user	Default
LAte	Latch output (clear only by load)	Latch output, resettable by counter loading	
1	Min output duration	Output duration minimum value	
999	Max output duration	Output duration maximum value	

COUNTER FREQUENCY DISPLAY CONFIGURATION

d F.1	P-27 Display Frequency Counter 1	Counter 1 frequency visualization	
d F.2	P-45 Display Frequency Counter 2	Counter 2 frequency visualization	
d .5	Disable	Counter frequency value not visualized	Default
u .5	Visualized	Counter frequency value visualized	
dPF.1	P-28 Decimal Point Frequency Counter 1	Counter 1 frequency format	
dPF.2	P-46 Decimal Point Frequency Counter 2	Counter 1 frequency format	
0	0	Visualization with no decimal digit	Default
00	0.0	Visualization with 1 decimal digit	
000	0.00	Visualization with 2 decimal digits	
0000	0.000	Visualization with 3 decimal digits	
inF.1	P-29 Counter 1 Input frequency	Counter 1 input frequency (1...9999Hz)	Default 1
inF.2	P-47 Counter 2 Input frequency	Counter 2 input frequency (1...9999Hz)	Default 1
u F.1	P-30 Counter 1 Visualized Frequency	Counter 1 visualized frequency	Default 1
u F.2	P-48 Counter 2 Visualized Frequency	Counter 2 visualized frequency	Default 1
out1	P-31 Output Q1 Setup	Output Q1 setting	
out2	P-32 Output Q2 Setup	Output Q2 setting	
d .5	Disable	Disabled output	Default C2
C1na	Out Counter 1 n.o.	Counter 1 output on n.o. contact	Default C1
C1nc	Out Counter 1 n.c.	Counter 1 output on n.c. contact	
C2na	Out Counter 2 n.o.	Counter 2 output on n.o. contact	
C2nc	Out Counter 2 n.c.	Counter 2 output on n.c. contact	


MODBUS WORD ADDRESSES IN COUNTER MODE

600	Counter 1 H value	RO	?
601	Counter 1 L value	RO	?
602	Counter 1 H counts	RO	?
603	Counter 1 L counts	RO	?
604	Counter 1 logic output – bit 0 Counter 1 logic output	RO	?

605	Counter 1 Lock Hold status – bit 0 lock function status – bit 1 hold function status	RO	?
606	Counter 1 count direction – 0 normal count direction – 1 reverse count direction	RO	?
607	Counter 1 serial command done Shows value of the last serial command done	RO	0
608	Counter 1 H hold value	RO	?
609	Counter 1 L value	RO	?
610	Counter 1 H frequency (Hz)	RO	?
611	Counter 1 L frequency (Hz)	RO	?
612	Counter 1 H frequency value	RO	?
613	Counter 1 L frequency value	RO	?

620	Counter 1 serial command – 0 no command – 1 load command – 2 enable/disable lock function – 3 enable/disable hold function – 4 reverse count direction – 5 Enter onward count – 6 Enter backward count	WO	0
630	Counter 2 H value	RO	?
631	Counter 2 L value	RO	?
632	Counter 2 H counts	RO	?
633	Counter 2 L counts	RO	?
634	Counter 2 logic output	RO	?
635	Counter 2 Lock Hold status	RO	?
636	Counter 2 count direction	RO	?
637	Counter 2 serial command done	RO	0
638	Counter 2 H Hold value	RO	?
639	Counter 2 L Hold value	RO	?
640	Counter 2 H frequency (Hz)	RO	?
641	Counter 2 L frequency (Hz)	RO	?

642	Counter 2 H frequency value	RO	?
643	Counter 2 L frequency value	RO	?
650	Counter 2 serial command	WO	0
2000	Parameter P-00	RW	EEPROM
2001	Parameter P-01	RW	EEPROM
2002	Parameter P-02	RW	EEPROM
...		RW	EEPROM
2052	Parameter P-52	RW	EEPROM
2053	Parameter P-53	RW	EEPROM

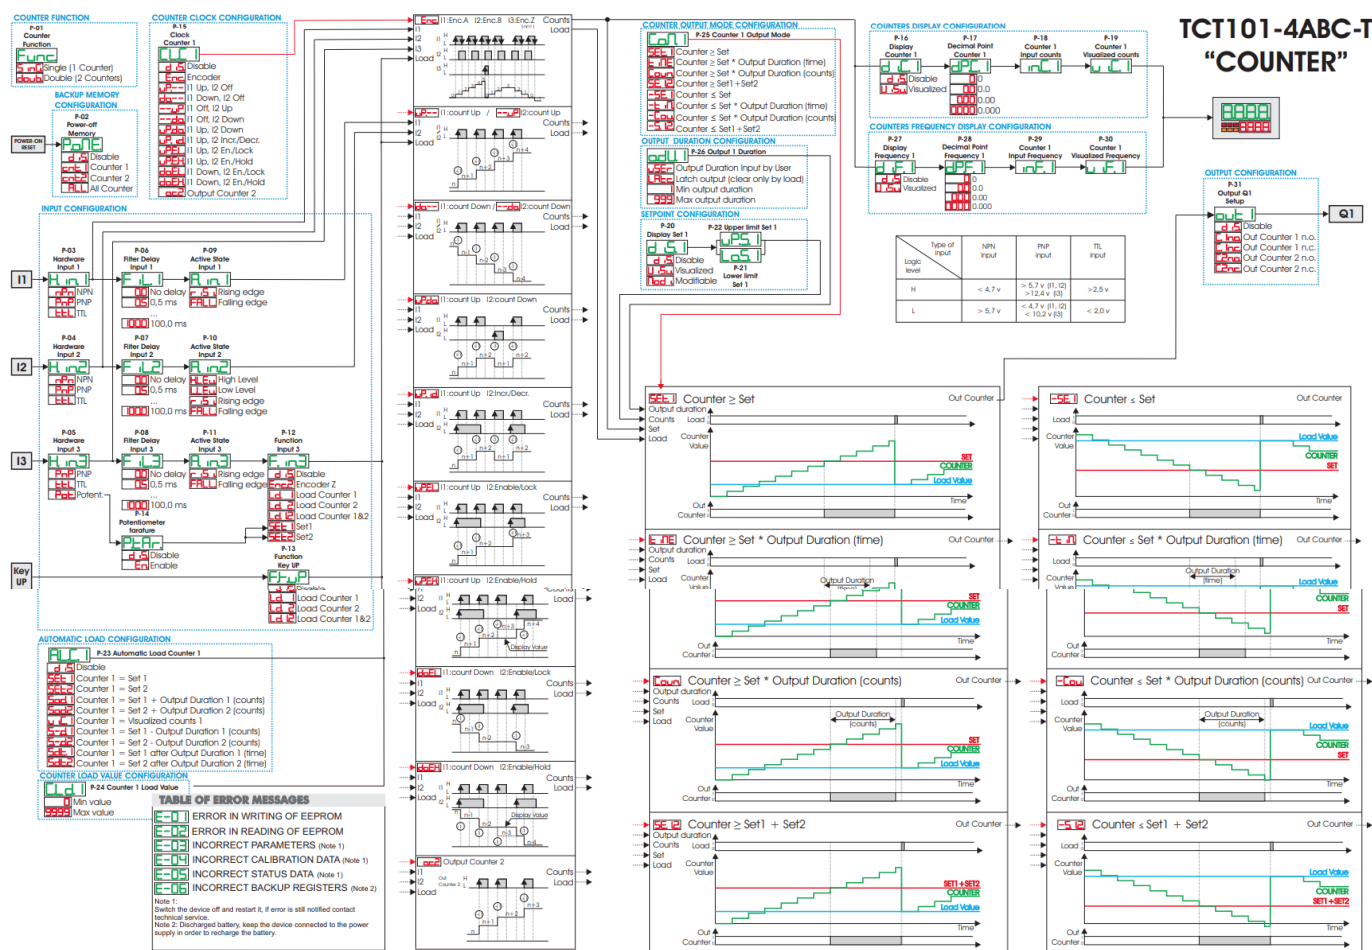

PARAMETERS LIST

CLOCK INPUT CONFIGURATION

CL_{in}	P-01 Clock Input	Input signal selection	
I1		Input signal on I1	Default
Enc	Encoder	Input signal on I1 and I2 (bidirectional encoder)	

INPUT CONFIGURATION

H_{in1}	P-02 Hardware input 1	Input 1 hardware configuration	
H_{in2}	P-03 Hardware input 2	Input 2 hardware configuration	
H_{in3}	P-04 Hardware input 3	Input 3 hardware configuration	
NPN	NPN	NPN (not available on input 3)	
PNP	PNP	PNP	Default
TTL	TTL	TTL	
Pot	Potentiometer	Potentiometer (available only on input 3)	
F_{IL1}	P-05 Filter Input 1	Input 1 hardware filter configuration	
Off	Off	Input hardware filter disabled	Default
On	On	Input hardware filter enabled (22nF)	
R_{in2}	P-06 Active State Input 2	Input 2 active status	
R_{in3}	P-07 Active State Input 3	Input 3 active status	
HLEw	High Level	High level	Default
LLEw	Low Level	Low level	
F_{in2}	P-08 Function Input 2	Function associated to input 2	
F_{in3}	P-09 Function Input 3	Function associated to input 3	
d.S	Disable	Disabled	Default
OutE	Out Enable/Disable	Tachometer outputs enabled	
Hold	Hold (solo per I3)	Hold of visualized tachometer value	
Set1	Set1 (solo per I3)	Set1 setting by potentiometer	
Set2	Set2 (solo per I3)	Set2 setting by potentiometer	
PtAr	P-10 Potentiom. Tarature	Potentiometer calibration function	
d.S	Disable	Disabled	Default
En	Enable	Enabled	
F_{UP}	P-11 Function Key UP	Function associated to UP key (up arrow)	
d.S	Disable	Disabled	Default
NAHP	Display max peak	Max. registered peak visualization (reset with UP+DOWN key)	
F_{down}	P-12 Function Key DOWN	Function associated to DOWN key (down arrow)	
d.S	Disable	Disabled	Default
n.p	Display min peak	Min. registered peak visualization (reset with UP+DOWN key)	

BACKUP MEMORY CONFIGURATION

Power	P-13 Power-off Memory	Power-off memory	
d.S	Disable	No peak value stored at power-off	Default
NAHP	Max Peak	Max. peak stored at power-off	
n.p	Min Peak	Min. peak stored at power-off	
ALL	All Peak	Max. and Min. peaks stored at power-off	

CLOCK INPUT CONFIGURATION

n_{inF}	P-14 Minimum Input Frequency	Minimum visualized frequency	
00 I	0.01 Hz	For lower frequency values 0 is visualized	
...		on display. This parameter changes maximum display	
009	0.09Hz	update time from 100 to 0.1 sec.	
0 I	0.1 Hz		Default
...			
100	10.0Hz		
SFLT	P-15 Software Filter	Sampling frequency software filter	
off	off	No software filter used for reading.	Default
00 I	0.01 sec	Mean realized on samplings done within the time	
...		set in this parameter. Display will be update at max.	
100	1.00 sec	with this time interval.	

DISPLAY CONFIGURATION

base	P-16 Timebase	Visualization time base	
Sec	sec	Visualized value referred to second	Default
min	min	Visualized value referred to minute	
hour	hour	Visualized value referred to hour	
PULS	P-17 Pulse in Unit	Number of impulses on single unit. Revolution	
9999	99.99 pulse	counter indicates how many impulses corresponds at a complete revolution.	
...			
00 I	0.01 pulse		
I	1 pulse		Default
...			
9999	9999 pulse		
dP	P-18 Decimal Point	Tachometer value visualization format	
0	0	No decimal digit visualization	Default
00	0.0	1 decimal digit visualization	
000	0.00	2 decimal digits visualization	
0000	0.000	3 decimal digits visualization	

MEASURE UNIT CONFIGURATION

n_{in1}	P-19 Measure Unit 1	Setting digit 1 of visualized measure unit	
n_{in2}	P-20 Measure Unit 2	Setting digit 2 of visualized measure unit	
n_{in3}	P-21 Measure Unit 3	Setting digit 3 of visualized measure unit	
n_{in4}	P-22 Measure Unit 4	Setting digit 4 of visualized measure unit	
8888	Edit digits	Set as chosen each of 4 digits	Default ----

SETPOINT CONFIGURATION

d.S1	P-23 Display Set 1	Setpoint 1 visualization selection	
d.S2	P-26 Display Set 2	Setpoint 2 visualization selection	
d.S	Disable	Setpoint value not visualized	Default Set2
u.S	Visualized	Setpoint value visualized	
Mod	Modifiable	Setpoint value visualized and modifiable	Default Set1
LoS1	P-24 Lower Limit Set 1	Set 1 lower limit (0...9999)	Default 0
LoS2	P-27 Lower Limit Set 2	Set 2 lower limit (0...9999)	Default 0
uPS1	P-25 Upper Limit Set 1	Set 1 upper limit (0...9999)	Default 999
uPS2	P-28 Upper Limit Set 2	Set 2 upper limit (0...9999)	Default 999

OUTPUT ENABLE CONFIGURATION

outE	P-29 Output Enable	Enabled outputs	
EnAb	Always enable	Tachometer outputs always enabled	Default
Auto	Automatic enable	Outputs enabled automatically	
inP	Enable by input	Tachometer outputs enabled by digital inputs	

TACHOMETER LOGIC OUTPUT MODE CONFIGURATION


Lo1	P-30 Logic Output Mode1	Tachometer logic output 1 mode	
Lo2	P-34 Logic Output Mode2	Tachometer logic output 2 mode	
HdEU	High Deviation	Output active with upward deviation	Default
LdEU	Low Deviation	Output active with downward deviation	
inSb	Inside Band	Output active inside band	
outb	Out of Band	Output active out of band	
PdE1	P-31 Activation Delay 1	Logic output 1 activation delay	
PdE2	P-35 Activation Delay 2	Logic output 2 activation delay	
00	0.0 sec	Defines logic output activation delay.	Default
	to	Setting range from 0.0 sec	
9999	999.9 sec	to 999.9 sec.	
ddE1	P-32 Deactivation Delay 1	Logic output 1 deactivation delay	
ddE2	P-35 Deactivation Delay 2	Logic output 2 deactivation delay	
00	0.0 sec	Defines logic output deactivation delay.	Default
	to	Setting range from 0.0 sec	
9999	999.9 sec	to 999.9 sec.	
odU1	P-33 Output 1 Duration	Tachometer logic output 1 duration	
odU2	P-37 Output 2 Duration	Tachometer logic output 2 duration	
Auto	Automatic	Automatic output duration	Default
LAte	Latch output (clear by FNC key)	Latch output, reset from FNC key	
0.1	Pulse 0.1 sec	Output impulse duration 0,1 sec	
	to		
999	Pulse 99.9 sec	Output impulse duration 99,9 sec	

MODBUS WORD ADDRESSES IN TACHOMETER MODE

700	Tachometer H value	RO	?
701	Tachometer L value	RO	?
702	Tachometer H minimum peak value	RO	?
703	Tachometer L minimum peak value	RO	?
704	Tachometer H maximum peak value	RO	?
705	Tachometer L maximum peak value	RO	?

706	Tachometer logic outputs – bit 0 logic output 1 – bit 1 logic output 2	RO	?
707	Tachometer serial command done Shows value of the last serial command done	RO	0
708	Tachometer word Out-Enable – bit 0 out enable output 1 – bit 1 out enable output 2	RO	?
709	Tachometer Hold – bit 0 tachometer hold status	RO	?
710	Hold H tachometer value	RO	?
711	Hold L tachometer value	RO	?
720	Tachometer serial command – 0 no command – 1 command – 2 command enable / disable output – 3 command enable / disable hold function – 4 command reset max. and min. peak – 5 command clear output (if in latch)	WO	0

3000	Parameter P-00	RW	EEPROM
3001	Parameter P-01	RW	EEPROM
3002	Parameter P-02	RW	EEPROM
	...	RW	EEPROM
3052	Parameter P-52	RW	EEPROM
3053	Parameter P-53	RW	EEPROM

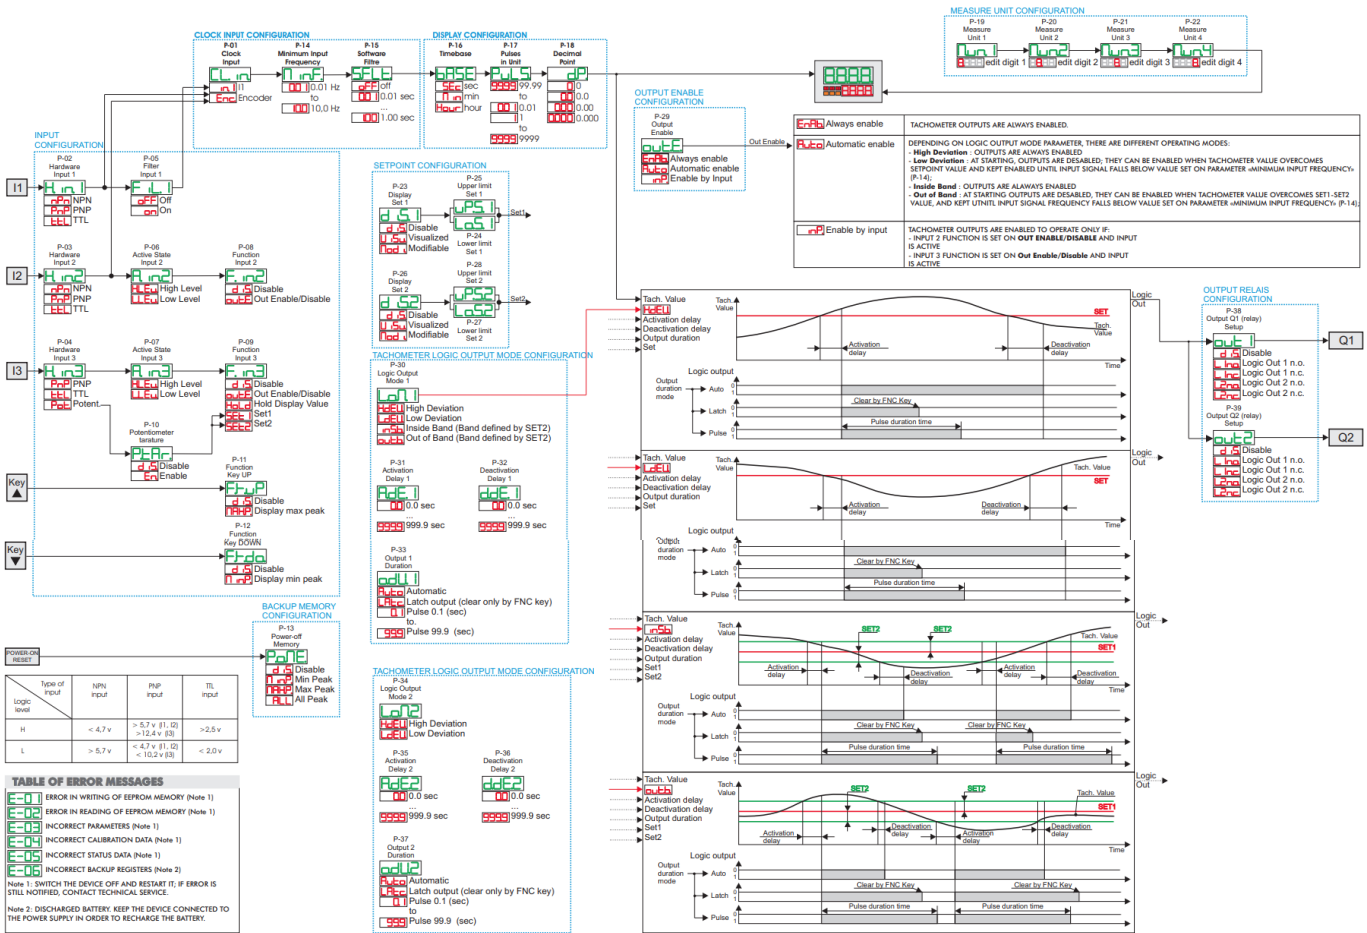

Frequently Asked Questions

Q: What are the available modes for TCT101-4ABC-T?

A: The device can be set in three different modes: timer, counter, or tachometer.


Q: What type of inputs are supported by the device?

A: The device supports three universal digital inputs (NPN/PNP/Potential free contact) for reading external switches, proximity sensors, and encoders.

Q: How can I modify Set1 or Set2 using an external potentiometer?

A: Follow the steps mentioned in the manual, using a potentiometer with a resistance of 5kOhm to 10kOhm and connecting it appropriately to pin I3.

Documents / Resources

	PIXSYS TCT101 Timer Counter Tachometer [pdf] User Manual TCT101, TCT101 Timer Counter Tachometer, TCT101, Timer Counter Tachometer, Counter Tachometer, Tachometer
	PIXSYS TCT101 Timer Counter Tachometer [pdf] User Manual 2300.10.120-G, TCT101-1ABC, 2300.10.120-RevJ, TCT101 Timer Counter Tachometer, TCT101, Timer Counter Tachometer, Counter Tachometer, Tachometer

References

- [User Manual](#)

■ Pixsys

◆ Counter Tachometer, Pixsys, Tachometer, TCT101, TCT101 Timer Counter Tachometer, Timer Counter Tachometer

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.