



Home » Planet Technology » Planet Technology ISW-500T-E 5-Port 10/100TX Ethernet Switch User Manual ₹

Contents [hide]

- 1 Planet Technology ISW-500T-E 5-Port 10/100TX Ethernet Switch
- 2 Package Contents
- 3 Product Specifications
- 4 Hardware Introduction
- 5 Installation
- 6 Customer Support
- 7 FCC STATEMENT
- 8 FAQ
- 9 Documents / Resources
 - 9.1 References




Planet Technology ISW-500T-E 5-Port 10/100TX Ethernet Switch



Package Contents

- Thank you for purchasing PLANET Compact Industrial 5-port 10/100TX Ethernet Switch, ISW-500T-E. In the following section, the term "Industrial Ethernet Switch" means the ISW-500T-E.
- Open the box of the Industrial Ethernet Switch and carefully unpack it. The box should contain the following items:

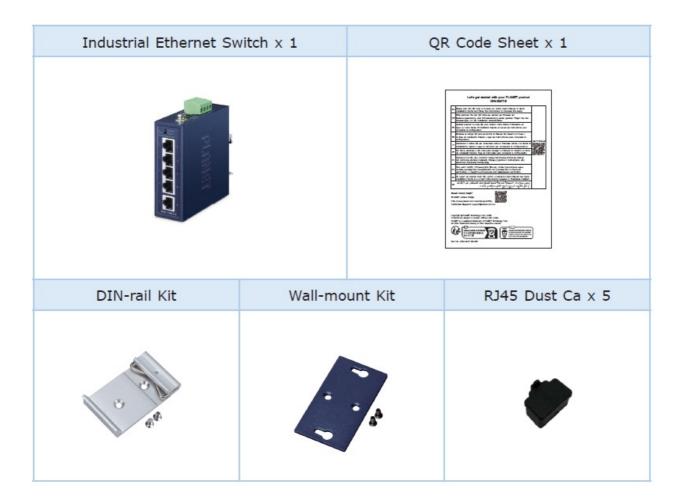

• If any of these are missing or damaged, please contact your dealer immediately; if possible, retain the carton including the original packing material, and use them again to repack the product in case there is a need to return it to us for repair.

Product Specifications

Product	ISW-500T-E		
Hardware Specifications			
Copper Ports	5 x 10/100BASE-TX RJ45 auto-MDI/MDI-X ports, auto neg otiation		
Switch Architecture	Store-and-Forward		
Switch Fabric	1Gbps (non-blocking)		
Throughput			
(packet per second)	0.744Mpps@ 64 bytes		

Address Table	1K entries	
Shared Data Buffer	448K bits	
Flow Control	IEEE 802.3x pause frame for full-duplex Back pressure for half-duplex	
ESD Protection	6KV DC	
Enclosure IP40 metal case		
Installation	DIN-rail kit and wall-mount kit	
Connector	Removable 4-pin terminal block for power input Pin 1/2 for Power 1, Pin 3/4 for Power 2 One for DC jack with central pole 2.1mm with Power 3	
LED Indicator	System: Power (Green) Per 10/100TX RJ45 Ports: 10/100 LNK/ACT (Green)	
Dimensions (W x D x H)	30.2 x 76.1 x 100 mm	
Weight 266g		
Power Requirements	12~55V DC (Support Polarity Protection) Redundant power support	
Power Consumption	Max. 1.1 watts/3.75 BTU (Ethernet full loading)	

DIP Switch	Standard: In the normal mode, all interfaces can communic ate with each other. Transmission distance is within 100 me ters, and transmission rate is 10/100Mbps. Extend: In the link extension mode, the data transmission d istance for Port 1-4 can be extended to 250 meters, and th e transmission speed is 10Mbps.			
Standards Conformance				
Regulatory Compliance FCC Part 15 Class A, CE				
Stability Testing	IEC60068-2-32 (free fall) IEC60068-2-27 (shock) IEC60068-2-6 (vibration)			
Standards Compliance	IEEE 802.3 10BASE-T IEEE 802.3u 100BASE-TX IEEE 802.3x flow control and back pressure IEEE 802.3az Energy Efficient Ethernet (EEE)			
Environment				
Operating Temperature	-40 ~ 75 degrees C			
Storage Temperature	-40 ~ 85 degrees C			
Operating Humidity	10 ~ 90% (non-condensing)			
Storage Humidity	5 ~ 95% (non-condensing)			

Hardware Introduction

Three-View Diagram

• The three-view diagram of the Industrial Ethernet Switch consists of five autosensing 10/100/BASE-TX RJ45 ports and one removable 4-pin terminal block.

• The LED indicators are also located on the front panel.

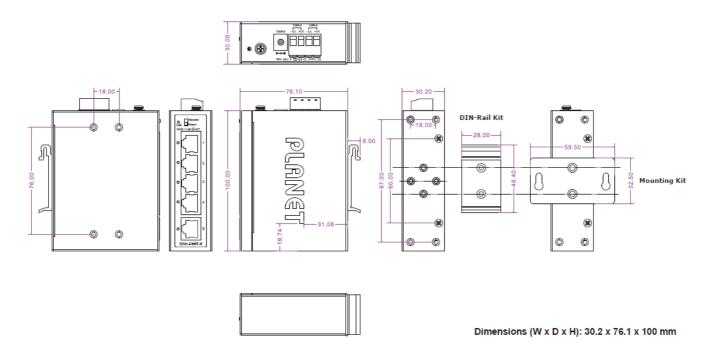


Figure 1: ISW-500T-E Three-View Diagram

Front View



Figure 2: ISW-500T-E Front View

LED Definition

System

LED	Color	Function
PWR	Green	Lights to indicate DC power input has power.

Per 10/100BASE-TX Port

LED	Color	Function		
10/100 LNK/AC T	Gree	Light	Indicating the port is running at 10/100Mbps and is succe ssfully established.	
		Blink s	Indicating that the switch is actively sending or receiving d ata over that port.	

Top View

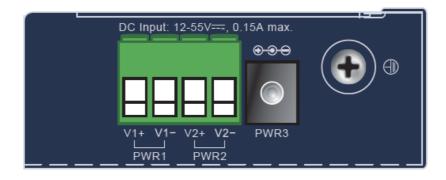


Figure 3: ISW-500T Top View


Wiring the Power Inputs

 The 4-contact terminal block connector on the top panel of the Industrial Ethernet Switch is used for two DC redundant power inputs. Please follow the steps below to insert the power wire.


CAUTION: When performing any of the procedures, like inserting the wires or tightening the wire-clamp screws, make sure the power is OFF to prevent from getting an electric shock.

1. Insert positive and negative DC power wires into contacts 1 and 2 for POWER 1, or

contacts 3 and 4 for POWER 2.

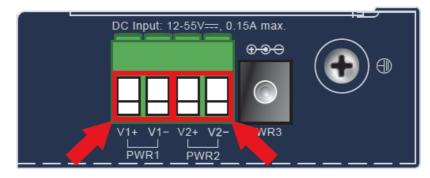

2. Tighten the wire-clamp screws to prevent the wires from loosening.

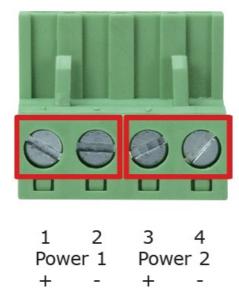


NOTE

- 1. The wire gauge for the terminal block should be in the range between 12 and 24 AWG.
- 2. The DC power input range is 12V \sim 55V DC

Grounding the Device

 Users MUST complete grounding wired with the device; otherwise, a sudden lightning could cause fatal damage to the device. EMD (Lightning) DAMAGE IS NOT COVERED UNDER WARRANTY.

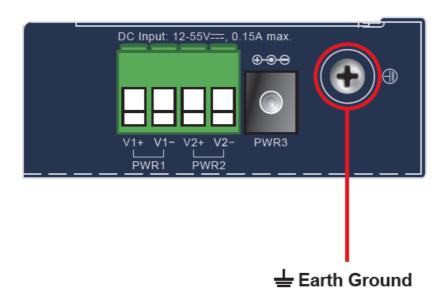

Installation


 This section describes the functionalities of the Industrial Ethernet Switch's components and guides you to installing it on the DIN rail and wall. Please read this chapter completely before continuing.

NOTE: The following pictures show the user how to install the device, and the device is not ISW-500T-E.

DIN-rail Mounting Installation






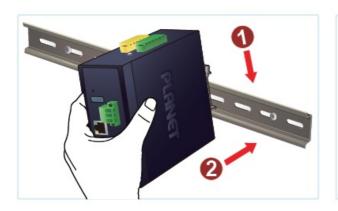



• Place the bracket on the back of the device and with the given 3 screws, tighten them. Slide the device with the bracket mounted through the DIN-rail to finish the installation.

Wall-mount Plate Mounting

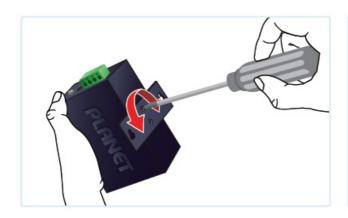



- Place mounting plates on the back of the device, and tighten them with the given screws.
- Then put the device with the plates mounted on the wall, and screw them of to finish the installation.

CAUTION: You must use the screws supplied with the wall-mounting brackets.

Damage caused to the parts by using incorrect screws would invalidate your warranty.

Customer Support

- Thank you for purchasing PLANET products. You can browse our online FAQ resource on the PLANET web site first to check if it could solve your issue.
- If you need more support information, please contact the PLANET switch support team.
- PLANET online FAQs: https://www.planet.com.tw/en/support/faq.php
- Switch support team mail address: support@planet.com.tw

Copyright © PLANET Technology Corp. 2025.

Contents are subject to revision without prior notice.

PLANET is a registered trademark of PLANET Technology Corp.

All other trademarks belong to their respective owners.

Trademarks

- Copyright © PLANET Technology Corp. 2025.
- Contents are subject to revision without prior notice.
- PLANET is a registered trademark of PLANET Technology Corp.
- All other trademarks belong to their respective owners.

Disclaimer

- PLANET Technology does not warrant that the hardware will work properly in all
 environments and applications, and makes no warranty and representation, either
 implied or expressed, with respect to the quality, performance, merchantability, or
 fitness for a particular purpose. PLANET has made every effort to ensure that this
 User's Manual is accurate; PLANET disclaims liability for any inaccuracies or
 omissions that may have occurred.
- Information in this User's Manual is subject to change without notice and does not represent a commitment on the part of PLANET. PLANET assumes no responsibility for any inaccuracies that may be contained in this User's Manual.
- PLANET makes no commitment to update or keep current the information in this
 User's Manual, and reserves the right to make improvements to this User's Manual
 and or to the products described in this User's Manual, at any time without notice.

 If you find information in this manual that is incorrect, misleading, or incomplete, we would appreciate your comments and suggestions.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the Instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

CE Mark Warning

• This device is compliant with Class A of CISPR 32. In a residential environment, this equipment may cause radio interference.

WEEE Warning

To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste as it has to be collected such WEEE separately.



Energy Saving Note of the Device

This power required device does not support Standby mode operation. For energy savings, please remove the DC plug or slide the hardware-based Power Switch to the OFF position to disconnect the device from the power circuit. Without removing the DC plug from or switching off the device, the device will still consume power from the power

source. In view of Saving Energy and reducing the unnecessary power consumption, it is strongly suggested to power off or to remove the DC plug from the device if this device is not intended to be active.

FAQ

Q: What should I do if any components are missing or damaged?

A: If any components are missing or damaged, please contact your dealer immediately. Retain the original packing material for possible return.

Documents / Resources

Compact industrial 5-Port 18730 Bibevel Switch <u>Planet Technology ISW-500T-E 5-Port 10/100TX Ethernet Switch [pdf]</u> Us er Manual

ISW-500T-E 5-Port 10-100TX Ethernet Switch, ISW-500T-E, 5-Port 10-10 0TX Ethernet Switch, 10-100TX Ethernet Switch, Ethernet Switch

References

- User Manual
- Planet

Technology

● 10-100TX Ethernet Switch, 5-Port 10-100TX Ethernet Switch, Ethernet Switch, ISW-500T-E, ISW-500T-E 5-Port 10-100TX Ethernet Switch, Planet Technology

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name		
Email		
<u> </u>		
Website		
☐ Save my name, email, and website in this browser for the next time I com	ment.	
Post Comment		
Search:		
e.g. whirlpool wrf535swhz	Search	

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.