



POTTER PIR-TECT1 Dual PIR Ext. Motion Detection Instruction Manual

[Home](#) » [POTTER](#) » POTTER PIR-TECT1 Dual PIR Ext. Motion Detection Instruction Manual 

Contents

- [1 POTTER PIR-TECT1 Dual PIR Ext. Motion Detection](#)
- [2 INTRODUCTION](#)
- [3 Installation & Set Up](#)
- [4 Technical Specification](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



POTTER PIR-TECT1 Dual PIR Ext. Motion Detection



INTRODUCTION

- A CCTV event trigger utilizing two independent passive infrared detectors combined in a TOS package and a microwave sensor. Both sensors have to trigger before the detector signals an alarm. This high-precision, very reliable presence detector has been designed for use within CCTV installations. Programmable parameters include a pulse count feature and a choice of detection ranges from 1 to 30 metres (33 to 98 ft).
- Additionally, independent front and rear tamper circuits are combined to provide a volt free alarm contact.
- The integral dual axis tilt sensor allows 180° of pan and 90° tilt. This increases the speed of the outdoor installation and provides incredibly accurate aiming of the detection pattern. The electronics module is acrylic coated for additional component stability. It is encased in a vandal-resistant high impact zinc alloy housing with a UV stabilized translucent front cover ensuring the sensor is impervious to and unaffected by weather conditions. Additionally, the combination of precision electronics, digital white light filter and double shielding eliminates false alarms from the sun and other visible light sources.

The PIR-TECT 1 design gives a neat and professional appearance with no visible indication of the orientation of the detector head, and completely hides the wiring.


Apply supply voltage to the unit, the blue led flashes 3 times The detector takes approximately 2-3 minutes to settle The walk test led is factory set to OFF. Pressing the programme button once will enable the walk test led for 5 minutes.

THE FRONT COVER MUST BE FITTED WHEN WALK TESTING
FACTORY SETTINGS ARE:-

- 1 RANGE 98 FT.
- 2 PULSE COUNT 1
- 3 LED OFF

Installation & Set Up

1. Stage 1 – Mounting the unit

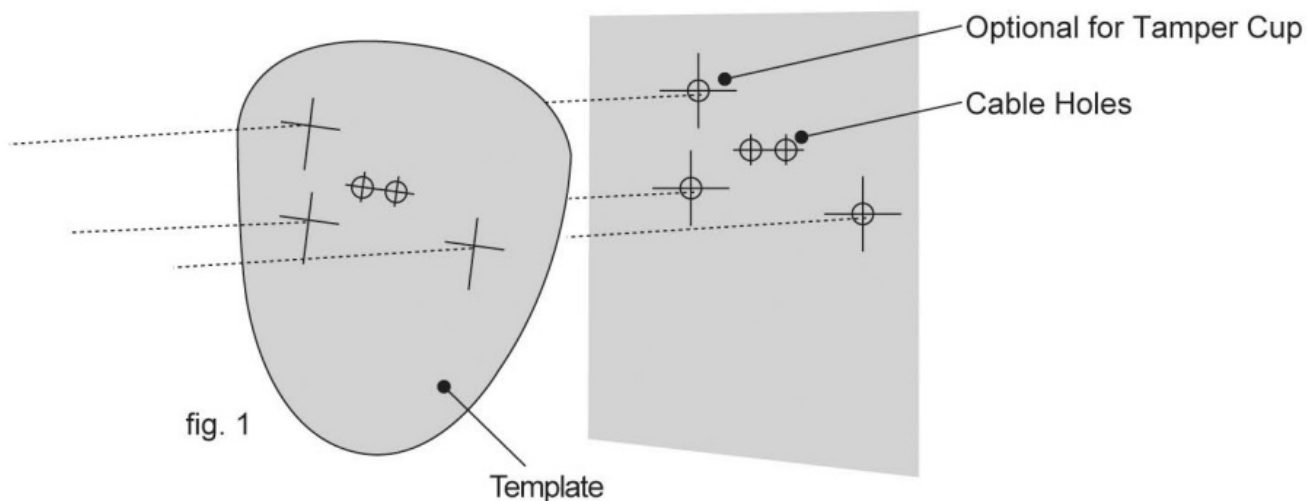


- During installation the electronics must be protected against water. Trapped moisture can affect or damage the unit.

- Using the template provided, drill the wall to accept the two fixing screws, the cable entry and the tamper cup (if used). See fig. 1 and 2.

Note: We recommend using the tamper cup on uneven wall surfaces.

- Remove the cover assembly by loosening the locking screw using the alien key provided. The cover hinges from the top and lifts out of the location slot. See fig. 3.

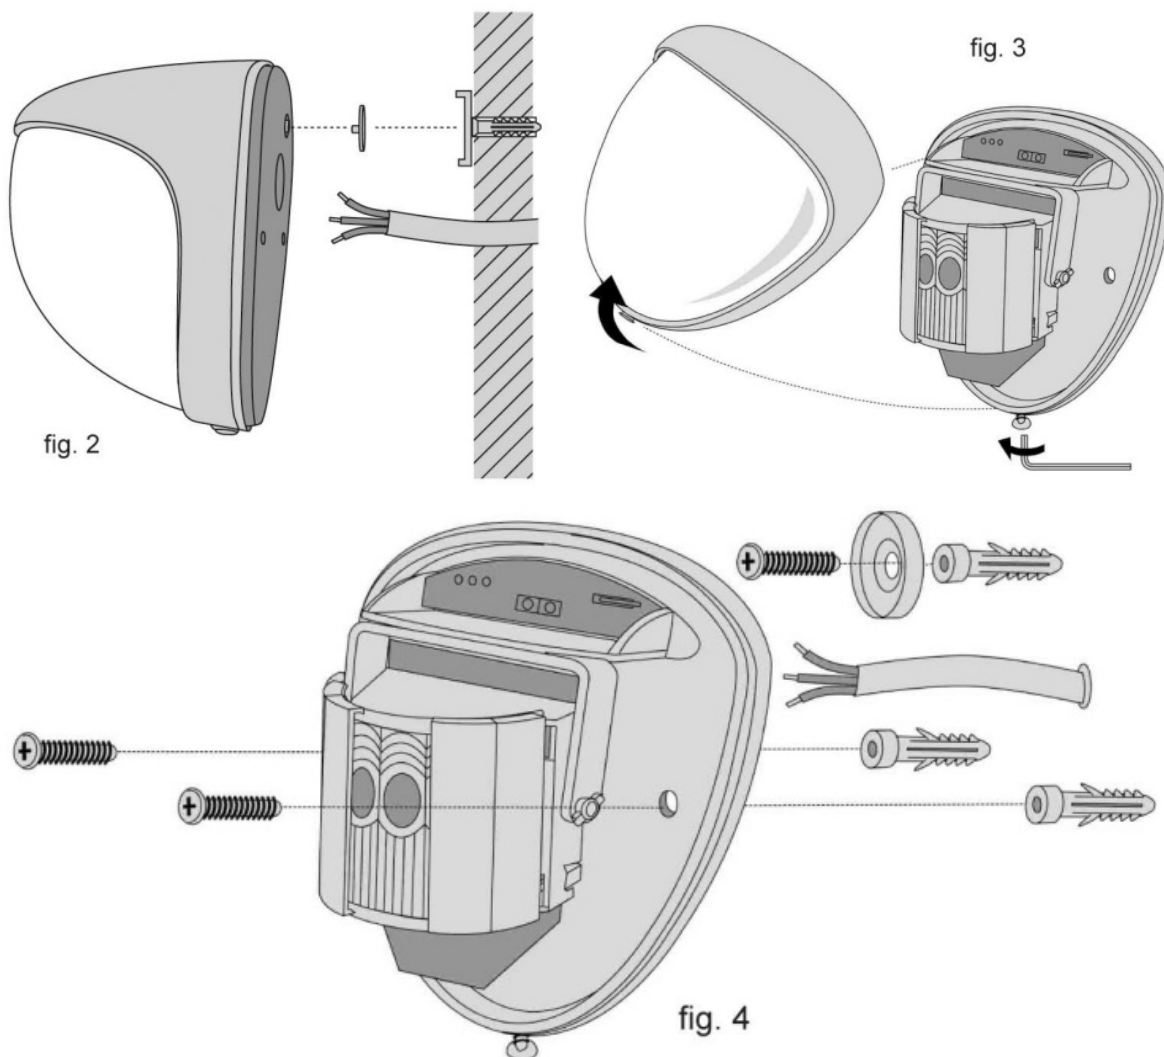


- Feed standard unshielded twisted four pair alarm cable into the cable entry; bare the wires and

connect to the removable terminal block as shown in fig . 7. Screw the unit to the wall ensuring that the tamper pin is correctly located and that the tamper microswitch is closed . See fig. 4 and 5. To aid installation, two spare tamper feet are provided. One is 0.04 inches longer and the other is 0.08 inches longer than the tamper foot originally fitted. The tamper foot is a push fit and can be removed by carefully pulling it from the pin . See fig. 2.

4. Always ensure when replacing the electronics module that the LED is facing forward to ensure correct alignment of the beam pattern . (Refer to section titled “Multi beam Alignment & Masking”)
5. When the detector has been aligned to suit the installation, replace the front cover and lock as shown. See fig. 6.

See fig. 6.

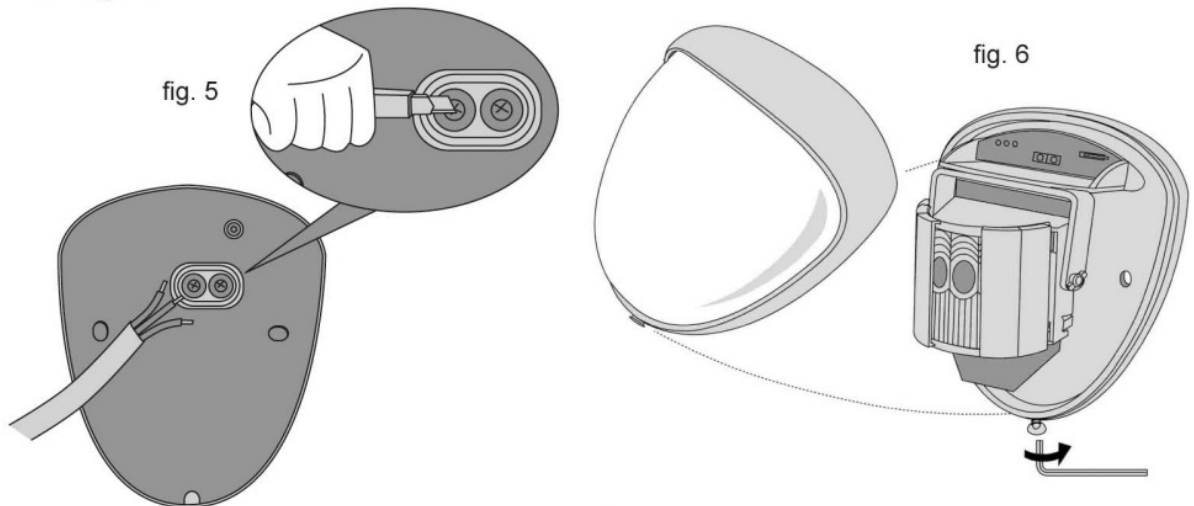

2. Stage 2 – Connecting the Unit

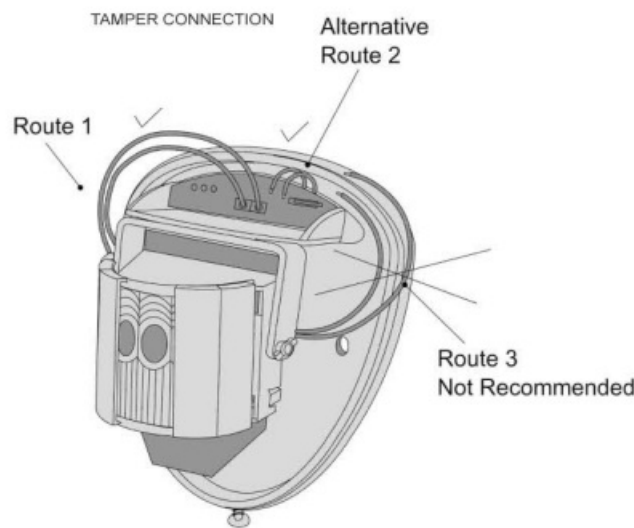



fig. 7

3. Stage 3 – Multibeam Alignment & Masking

- The GJD multifunction lens fitted to the PIR-TECT 1 detector produces 7 long range beams and 7 medium to short range curtain beams. Movement across the beams produces the best response and range, while movement towards the detector will be less responsive. The unit detects the changes in heat and movement in the beam pattern . Items such as trees, shrubs, ponds, boiler flues and animals should be considered when positioning the detector.
- The detector module is fitted with two sliding shutters to reduce the detection angle. An additional set of curtains is provided should the beam pattern need to be narrowed even further, e.g. if the minimum detection angle of 10 degrees is required. The curtains are fitted to the pan and tilt module as indicated in

fig. 8 below. Each section of the detector's lens gives a coverage pattern of approximately 10 degrees. See fig. 8.

- When mounting higher than boundary fences, rotate the module and mask off any beams (vertically or horizontally) that fall outside the area being covered. Use portions of the self-adhesive silver mask supplied to the rear, smooth side, of the lens as shown in the diagrams on the next page. Always replace the lens the correct way up to ensure exact beam pattern coverage (the top of the Fresnel lens is marked – TOP). See fig. 9.

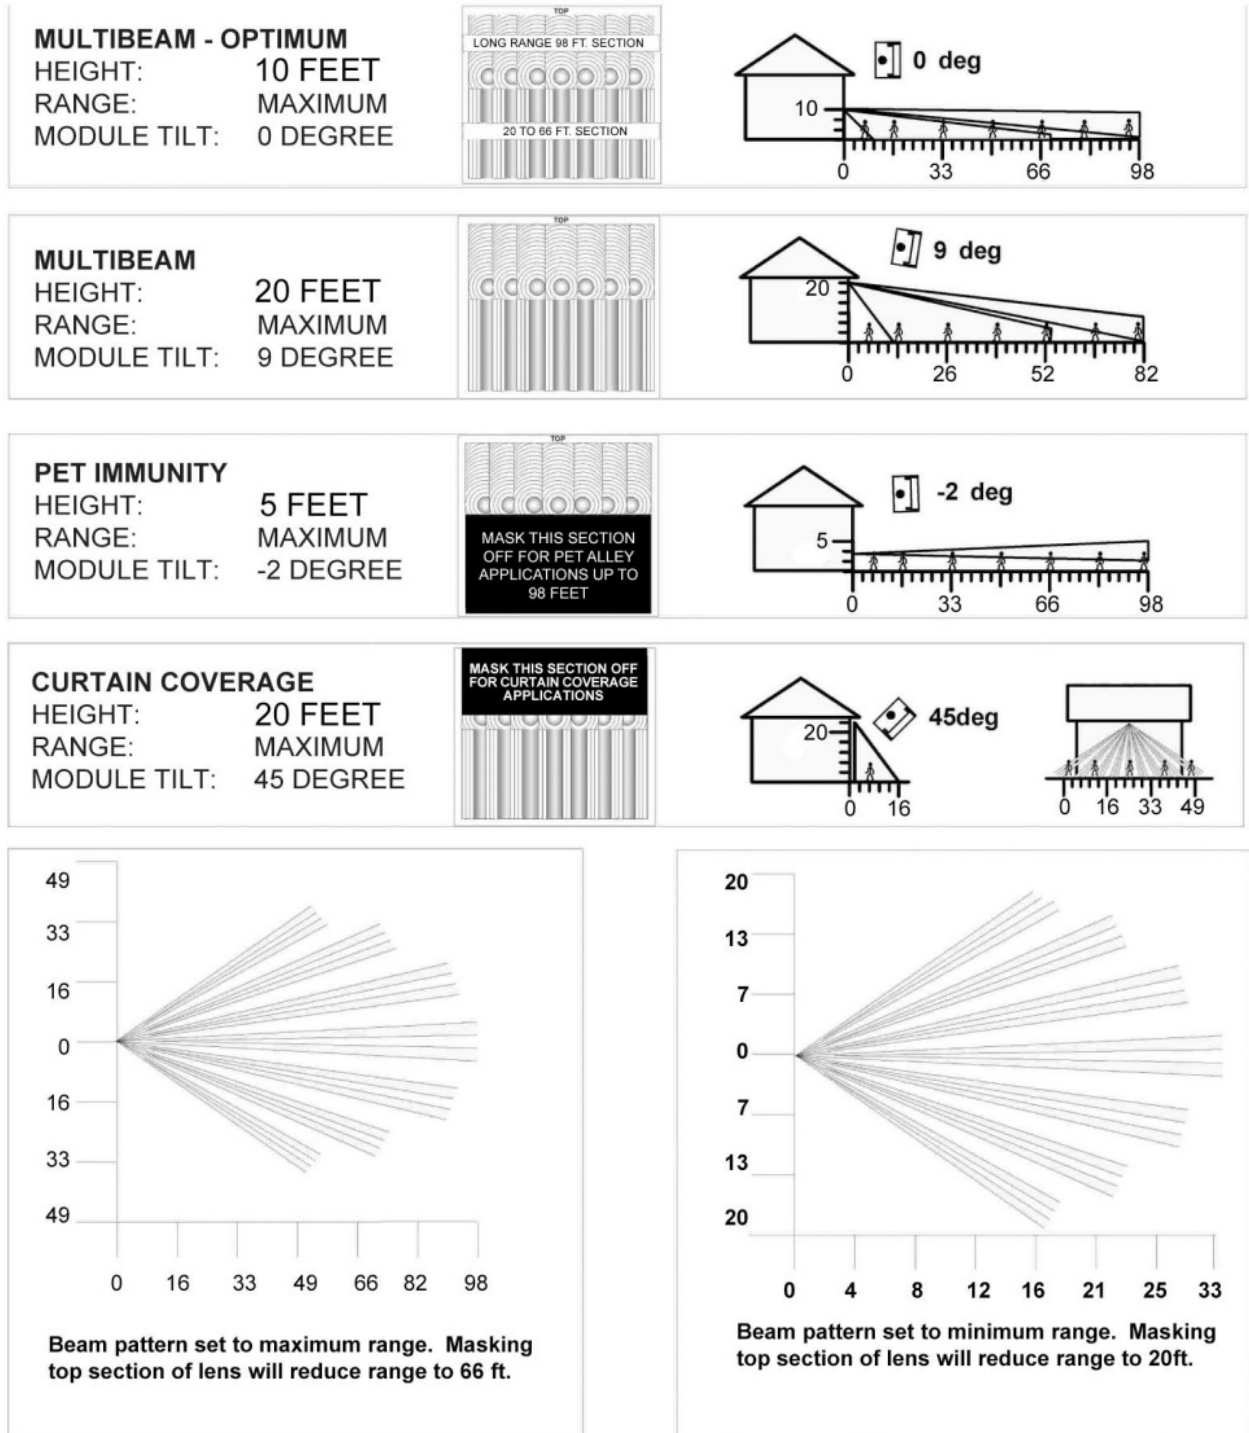

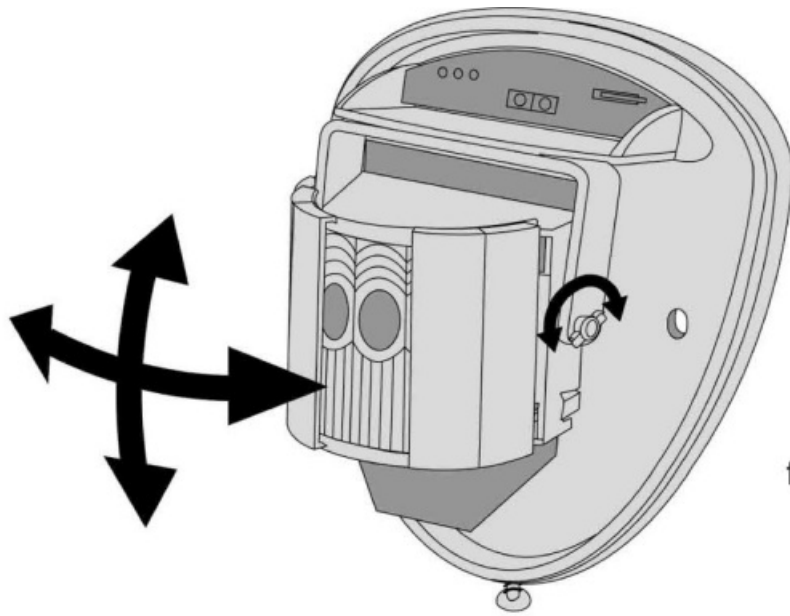


fig. 9

4. Stage 4 – Programming

- The user can individually program a number of configurable settings as illustrated in the programming chart. Factory settings are shown as shaded boxes. Changes to the existing settings can easily be made. To reset the factory settings simply remove power from the detector, press and hold the program button (fig. 10) while temporarily applying power to the detector either before installation , with a 9-Volt battery, or by applying 12 Volts to the unit on site.

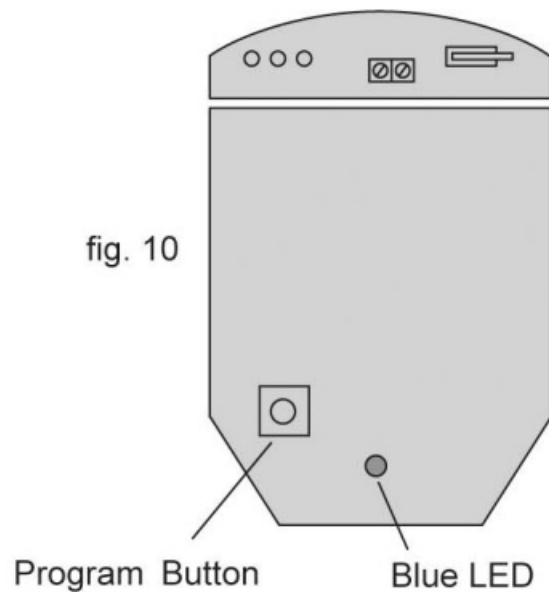


fig. 10

PROGRAMMING CHART

| | | SETTING | | | |
|---------|---|-------------|-----|----|----|
| | | 1 | 2 | 3 | |
| OPTIONS | 1 | RANGE FEET | 33 | 66 | 98 |
| | 2 | PULSE COUNT | 1 | 2 | |
| | 3 | LED | OFF | ON | |

- To change any of the PIR-TECT 1 settings: –
 - Press the program button as shown in fig. 10 for the number of the Option to be changed i.e. once for range, twice for pulse count, three times for LED.
 - Wait four seconds until the blue LED indicator goes off.
 - The indicator will then flash out the existing setting.
 - To change the setting for that option, press the button the number of times required for the new setting.
 - The indicator blinks twice and the changes are stored.
- Any alterations made to the PIR-TECT 1 settings are stored in the detector's non volatile memory.

EXAMPLE

To change the LED Setting from OFF to ON.

- Press the program button three times and release the button.
- Wait until the indicator goes off.
- The indicator will now flash once.
- Press the program button twice and release the button.
- The indicator flashes twice showing that the option has been stored and the detector returns to normal operation.

5. Stage 5 – Walk Test

- The range of the detector increases without the front protective cover. Therefore the front cover must be fitted to establish the correct beam pattern alignment and when testing the outputs. Use the program table on page 8 to adjust the range as necessary and pan and tilt the lens module over the field of view to obtain the correct coverage area.
- When the 'program' button is pressed momentarily the blue indicator lights and pulse count '1' is automatically selected. The unit can then be aligned. The blue indicator will light on the PIR-TECT 1 every time a detection takes place. This test mode will automatically cancel five minutes after last detection. Alternatively, remove the power and then re-apply.

6. Stage 6 – OPTION Definitions

1. PULSE COUNT

This is the number of times the unit has to detect on both of its sensors before signalling an output. Pulse count of 1 is recommended for long-range applications. Pulse Count of 2 is recommended for short-

range applications.

2. **LED MONITOR**

LED Off – LED disabled

LED On – LED signals a detection

3. **N / OPEN & N / CLOSED**

These are magnetically immune volt free relay contacts used to trigger alarm inputs on connected equipment The contacts are rated at a maximum of 24V AC/DC@ 50 mA.

ACCESSORIES

Amseco is able to supply the following accessories to aid installations:


- PIR-305 Conduit cable entry adaptor ring
- PIR-306 Pole mount clamp
- PIR-307 Walk tester

Technical Specification

| | | | |
|---|--|--|--|
| Detection Area | Programmable between 33 & 98 ft. | | |
| Coverage | 10-70 degrees detection angle, 98ft x 79ft coverage max. | | |
| Adjustment | 180 degree pan + 90 degree tilt. | | |
| Fresnel Lens | 28 zones for each Pyro pair, which can be masked with the curtain sliders. | | |
| Customized Optics | Double silicon shielded quad element eliminates 50,000 lux of white light | | |
| Outputs | Silent solid state magnetically immune. | | |
| No.1 | N/OPEN | Volt free relay signal contact 24VAC/DC@ 50mA Alarm time 5 seconds. | |
| No.2 | NI CLO SED | Volt free relay signal contact 24VAC/DC @ 50mA Alarm time 5 seconds | |
| Power input | 9 to 15 voe. | | |
| Current | 8mA (12V nominal). | | |
| Pulse Count | 1 – 2. | | |
| Temp. Compensation | Digital sensitivity adjustment. | | |
| Control | Digital microprocessor – non volatile memory. | | |
| Walk Test | Output test mode with LED indication. | | |
| Operating Temp. | -4 to +131 Fahrenheit | | |
| Conformal coated electronics for increased stability. | | | |
| Housing | High impact zinc alloy. | | |
| Protection Rating | IP 55. | | |
| Dimensions | 5.71 x 4.72 x 4.52 inches | | |
| Weight | 25.46 Ounces NET, 21 Ounces GROSS. | | |
| Mounting Height | Variable up to 20 ft – optimum height 10 ft. | | |
| Cable< 200m | Utilizing all three outputs (incl. tamper) – unshielded twisted four pair AWG 24 | | |
| Cable< 500m | Utilizing all three outputs (incl. tamper) – unshielded twisted four pair AWG 20 | | |
| CE Mark | CE | | |

Potter Electric Signal Co., LLC
5757 Phantom Drive.
St. Louis, Missouri 63042
Tel: 866-240-1 870
Fax: 800-768-8377
www.pottersignal.com

firealarmresources.com
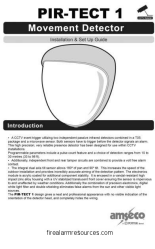
| | |
|---|---|
|  | <p>POTTER PIR-TECT1 Dual PIR Ext. Motion Detection [pdf] Instruction Manual</p> <p>PIR-TECT1 Dual PIR Ext. Motion Detection, PIR-TECT1, Dual PIR Ext. Motion Detection, PIR E xt. Motion Detection, Ext. Motion Detection, Motion Detection, Detection</p> |
|---|---|

References

-  [Fire Alarm Resources | Download fire alarm documents](#)