



proxicast Controlling the MSNSwitch User Guide

[Home](#) » [proxicast](#) » proxicast Controlling the MSNSwitch User Guide

Proxicast Controlling the MSN Switch User Guide

Controlling the MSNSwitch

Tech Note MSNTN01



© Copyright 2019, Proxicast LLC. All rights reserved.

Proxicast is a registered trademark and Ether LINQ, Pocket PORT and LAN-Cell are trademarks of Proxicast LLC. All other trademarks mentioned herein are the property of their respective owners.

Document Revision History:

Date

Jan. 2, 2020

Aug. 1, 2019

Comments

Updated to include model UIS-622b

First release

This Tech Note Applies Only to MSN Switch Models:

UIS-622b, UIS-522b, UIS-523f, UIS-523g, UIS-523i, UIS-523j, UIS-523k and UIS-523e

Introduction

The MSNSwitch from Mega System Technologies, Inc ("Mega Tec") is designed to automatically power-cycle any AC powered device when Internet connectivity is lost. Either of its AC power outlets can also be reset manually or via scheduled actions.

There are 7 ways to access and control the functionality of the MSNSwitch:

1. The MSNSwitch internal web server screens
2. ezDevice smartphone app
3. Cloud4UIS.com web service
4. Skype
5. Google Hangouts
6. A REST-flu API for HTTP commands
7. The Natality utility software

NOTE: Support for the ezDevice app and Cloud4UIS.com web service was added in MSNSwitch firmware version MNT.9319 (04/24/2019). If your MSNSwitch is running older firmware, please see the Updating Firmware section on page 15.

NOTE: Support for the ezDevice app and Cloud4UIS service is **Disabled** in the MSNSwitch by default. You must use the MSNSwitch internal web server to enable this function under the Network menu.

The screenshot displays the MSNSwitch web interface. On the left is a navigation menu with sections: Information (Status), Configuration (Settings), Logs (Data), and Help. The 'Configuration' section is expanded, showing sub-menus: Configuration, Schedule, Network (selected), E-mail, Hangouts, SMS, Account, System Time, and Language. The main content area is titled 'DNS Server IP' and contains several configuration sections: 'DNS Server IP' with fields for Primary and Secondary DNS Server IP and a dropdown for Obtain DNS Server (set to AUTO); 'Advanced Options' with fields for HTTP Port Number (80) and STUN Server (stun.l.google.com:19302); 'Dynamic DNS' with fields for DDNS Provider (None), Domain Name, Name, and Password; and a 'Cloud' section at the bottom, which is highlighted with a red rectangular box. The 'Cloud' section has a 'Cloud Service' dropdown menu currently set to 'Enable'. At the bottom right of the main content area are 'Apply' and 'Reset' buttons.

Contents [[hide](#)]

- 1 1. Internal Web Sever
- 2 2. ezDevice Smartphone App
- 3 3. Cloud4UIS.com Web Service
- 4 4. Skype
- 5 5. Google Hangouts
- 6 6. REST API
- 7 7. Natalty Utility
- 8 8. Updating Firmware
- 9 Documents / Resources
- 9.1 References
- 10 Related Posts

1. Internal Web Sever

Full access to all of the MSNSwitch functionality is available via its internal web server pages. To access the web server, enter the MSNSwitch's IP address into any web browser.

<http://<ip-address-of-MSNSwitch>> e.g. <http://192.168.1.33>

The default username for the MSNSwitch is "admin".

The default password for firmware versions prior to MNT.9731 is "admin".

For MNT.9731 and later, the default password is the last 6 characters of the MSNSwitch's MAC address (upper case). See the MSNSwitch bottom label for the MAC address.

If you do not know the IP address of your MSNSwitch, check your DHCP server log or use the Natalty utility software to scan for the MSNSwitch (see page 14).

The screenshot displays the MSNSwitch web interface. The top header features the 'MSNSwitch' logo and a decorative bar. A left sidebar contains navigation links: Information (Status), Configuration (Settings, Configuration, Schedule, Network, E-mail, Hangouts, Skype, SMS, Account, System Time, Language), Logs (Data, Event Log), and Help (System Status, Save / Upgrade). The main content area is divided into three sections:

- Connection Status:** A table showing assigned sites and their connection details.
- Status and Control:** A section for managing the UIS Reset function, including a legend for outlet status and a control panel.
- Outlet Information:** A table listing individual outlets and their current status.

Assign	Site Label	Target Site	IP Address	Response Time	Timeout
Both	Google	www.google.com	172.217.164.164	131 ms	86 %
	Yahoo	www.yahoo.com	98.138.219.232	147 ms	86 %
	Bing	www.bing.com	204.79.197.200	72 ms	86 %
	Ask.com	www.ask.com	151.101.2.114	53 ms	86 %
None	Router	192.168.0.1	192.168.0.1	16 ms	86 %

Item	On/Off Control
UIS Reset	<input type="checkbox"/>

Legend:
☒ Assigned outlet will auto reset when target site timeout. Only outlets that are On will reset.
☐ Assigned outlet will not reset when connection loss is detected.

Outlet Name	Status	Control
Outlet 1	On	<input checked="" type="checkbox"/> <input type="button" value="Reset"/>
Outlet 2	On	<input checked="" type="checkbox"/> <input type="button" value="Reset"/>

Legend:
☒ Outlet On
☐ Outlet Off
☒ Outlet is On, UIS Reset function is Off

2. ezDevice Smartphone App

Download and install the free ezDevice app for iOS from the [Apple AppStore](#) or for Android from [Google Play](#).




If possible, connect your smartphone via WIFI to the same LAN as the MSNSwitch. This is the fastest and easiest way to add the MSNSwitch to ezDevice.


Launch the ezDevice app and create a new account. This same account information will be used for the Cloud4UIS.com web service (see page 6).

Tap **Add Device** on the top right of the screen. ezDevice will scan your LAN for the MSNSwitch. If found, tap the + icon to add the MSNSwitch. Enter the **Device Key** printed on the bottom label of the MSNSwitch. Tap Done to return to the main screen.

Once the MSNSwitch has been added, return to the main ezDevice screen. Tap the MSNSwitch in the list of devices to change settings.

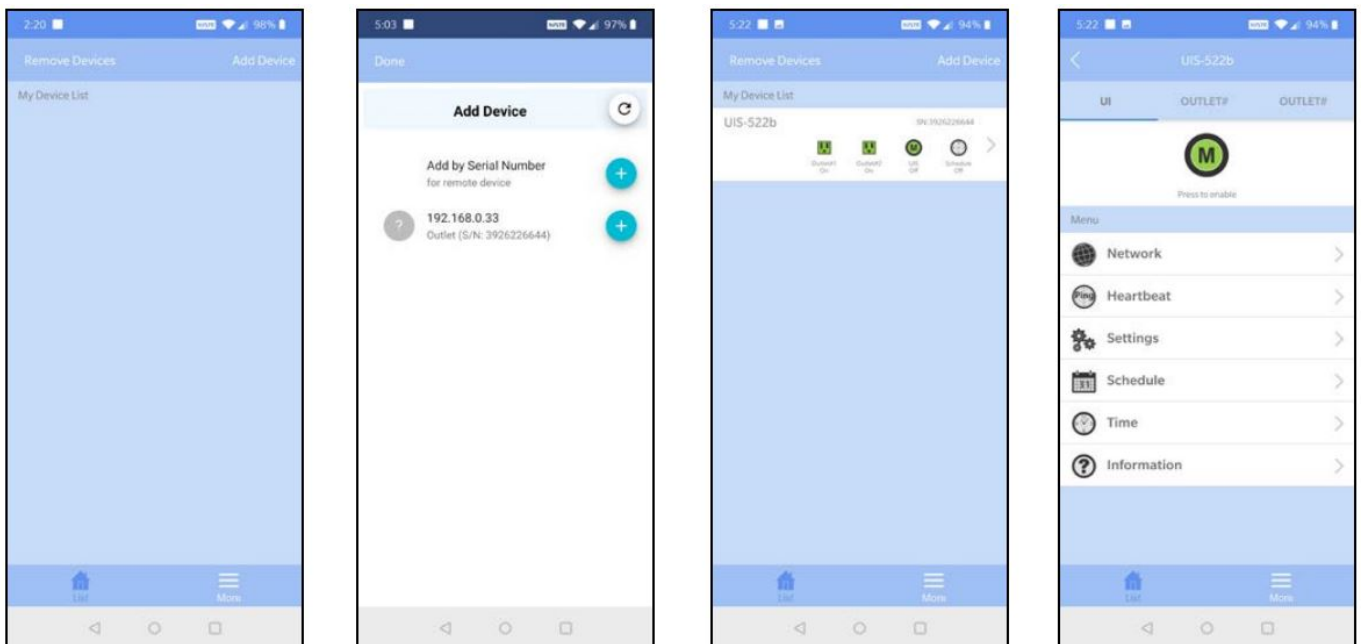

If you cannot connect your phone to your LAN, then choose the **Add by Serial Number** option under **Add Device**.

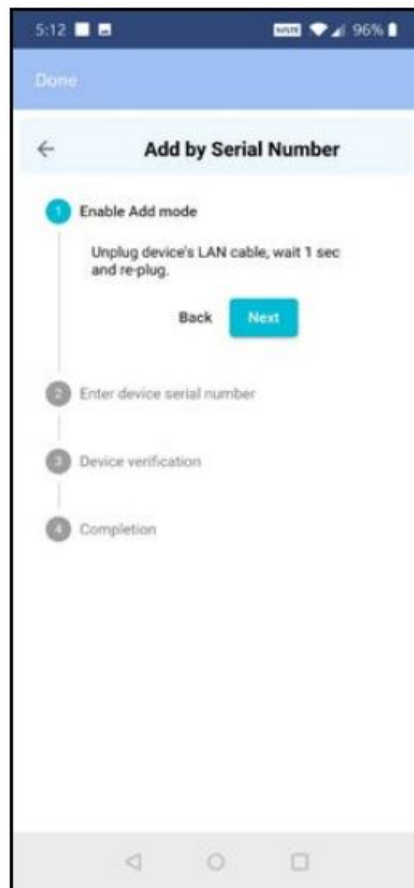


Follow the instructions on the screen. Remove the LAN cable from the MSNSwitch for 1 second, then replace it. Check that the blue UIS button is flashing. This is "Add Mode" which must be active to manually add the MSNSwitch to ezDevice.



Enter the MSNSwitch Serial Number and Device Key when prompted.

3. Cloud4UIS.com Web Service

Open the Cloud4UIS.com web site using any web browser: <http://Cloud4UIS.com>

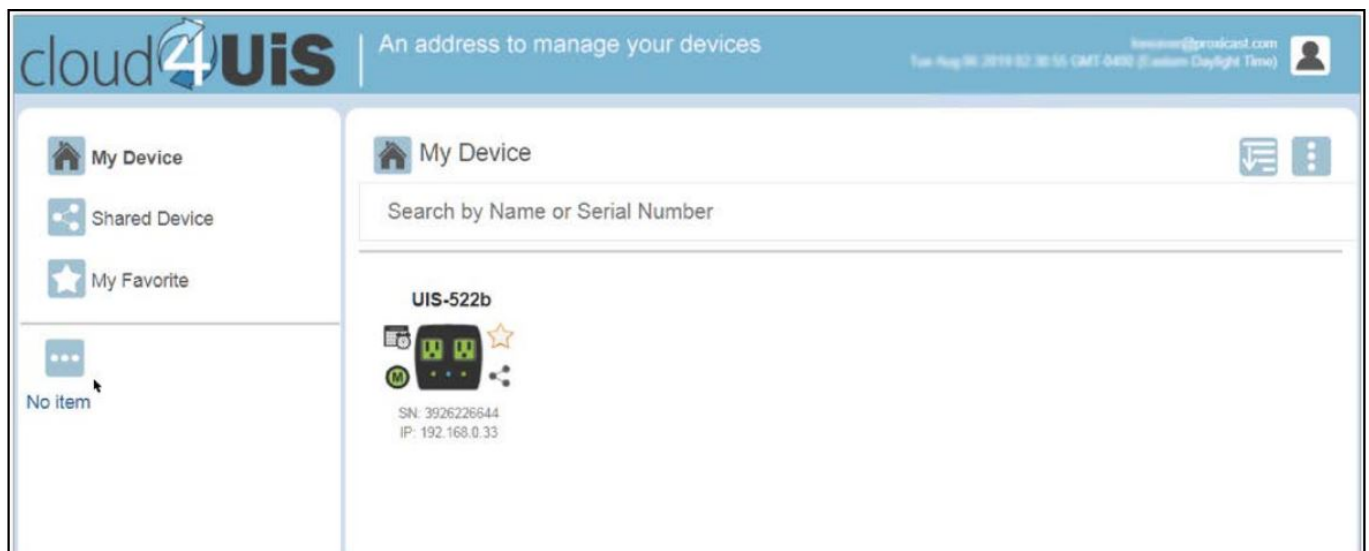
If you do not yet have an account, create one on the site. If you previously created an account using ezDevice, use the same login credentials for Cloud4UIS.com. The Cloud4UIS service is free. If you used ezDevice to add devices, they will appear in your Cloud4UIS account automatically.



If you are adding a device for the first time, click the vertical dot icon  in the upper right corner and then select the Add icon  to open the Add Device screen.




The Add Device screen works the same as it does in the ezDevice smartphone app. If your PC is in the same LAN as the MSNSwitch, you will be able to select it from the list. If your MSNSwitch is not shown, manually enter its serial number to proceed.

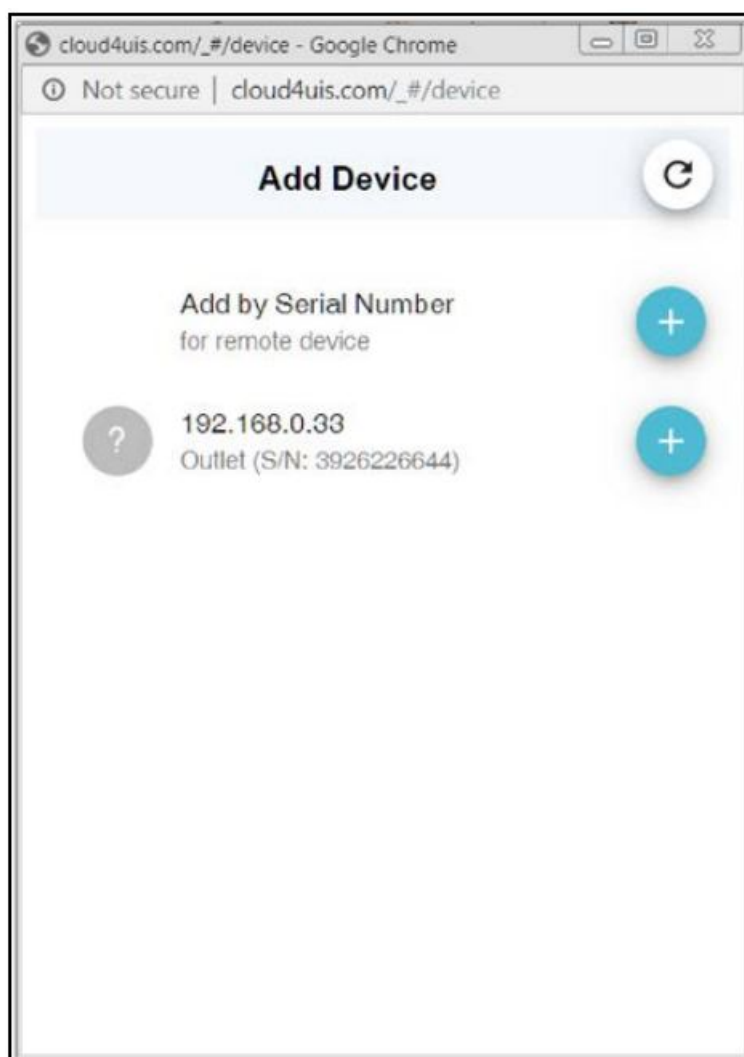


See the ezDevice section on page 4 for instructions on completing the device add procedure. Devices added through Cloud4UIS.com will also be automatically synchronized with the ezDevice app.

4. Skype


In the MSNSwitch's web interface, select the Skype menu and enable the Skype function.

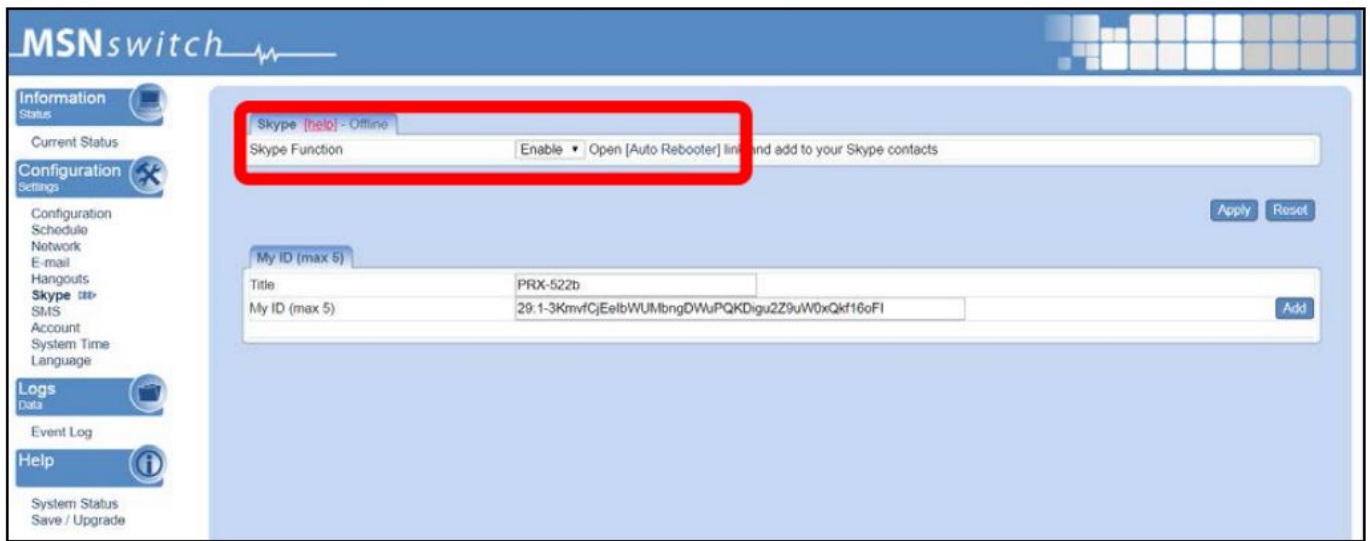

Click the **Auto Rebooted** link to add the Auto Rebooted robot service to your Skype contacts.

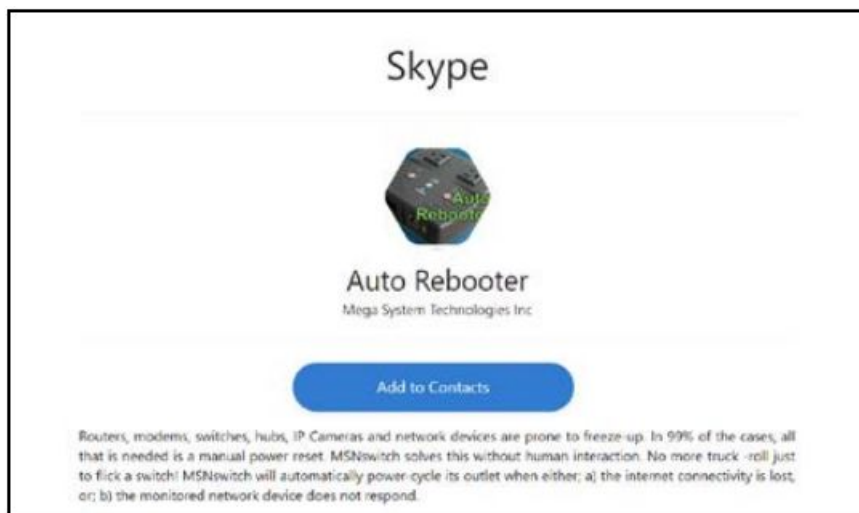

Click the **Get Started** button to add Auto Rebooted to your contacts and begin a messaging session.

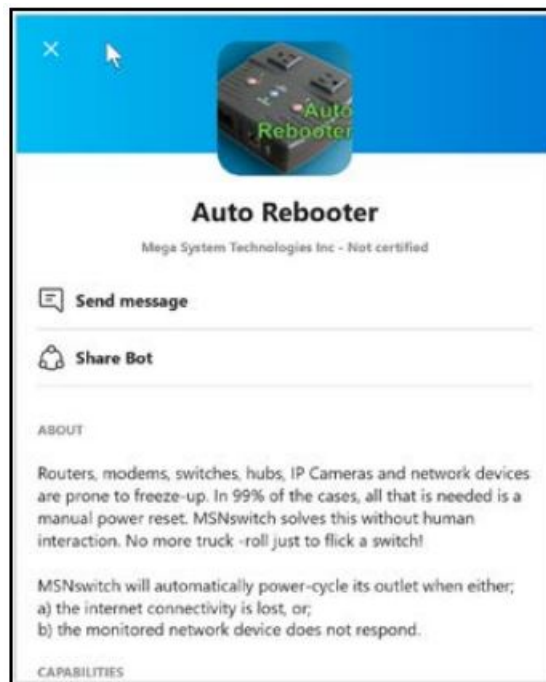


Click **Send Message** to begin a messaging session.

Type **HELP** to see the available commands. Type **Get My ID** to retrieve the security ID required to connect with your MSNSwitch.



Copy the ID from the Skype response and paste it into the ID field of the MSNSwitch's web interface. Click **ADD** to save the settings.

In Skype, enter the command **Show My Devices** and press Enter. The response will be a menu of your devices and actions you can take. Click any of the menu buttons for more actions.

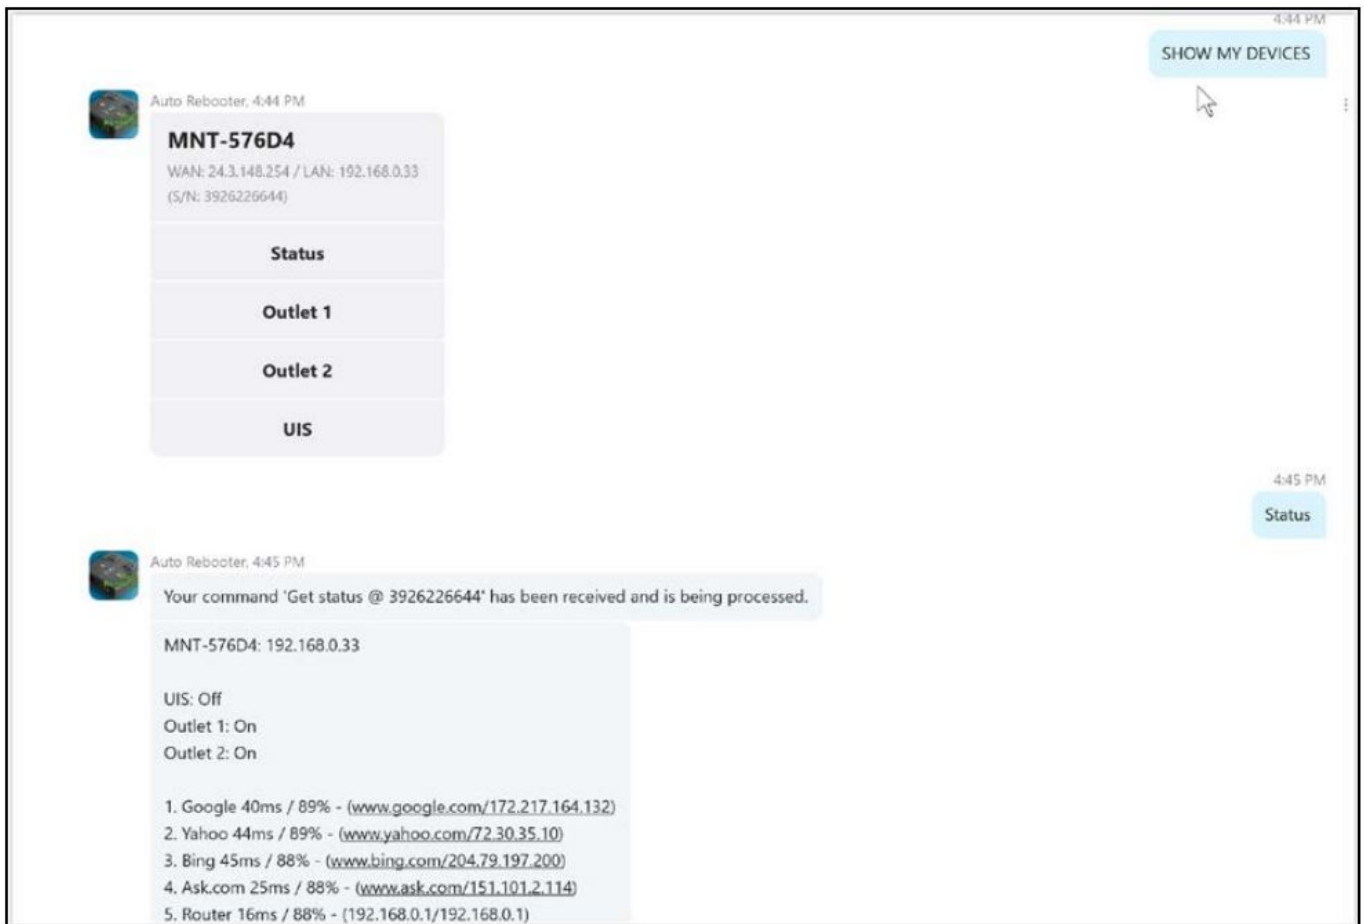

5. Google Hangouts


You must first have a Google Hangouts or Gmail account for yourself. You must create a second Google account that the MSNSwitch will use (a unique account for each MSNSwitch you have).

In the MSNSwitch's web interface, select the **Hangouts** menu and enable the Hangouts function. Enter Google credentials for the account you created for the MSNSwitch.


In the **Add Contact Accounts** field, enter all of the Google accounts which will be permitted to interact with and control this MSNSwitch. Click **Apply** to save the settings.

Check the top of the Hangout tab to ensure that the MSNSwitch was successfully able to log into Hangouts.

Click the **Send Test Message** button to send a message to the contact

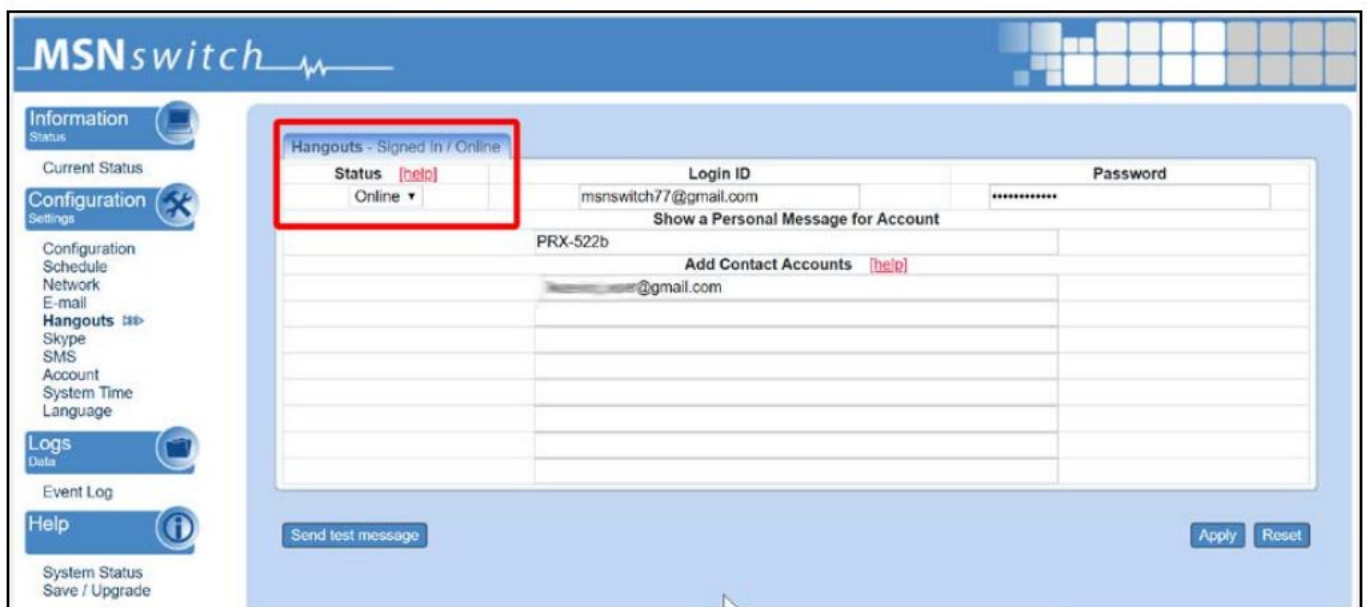

Open your Google Hangouts account and there should be a test message from your MSNSwitch.

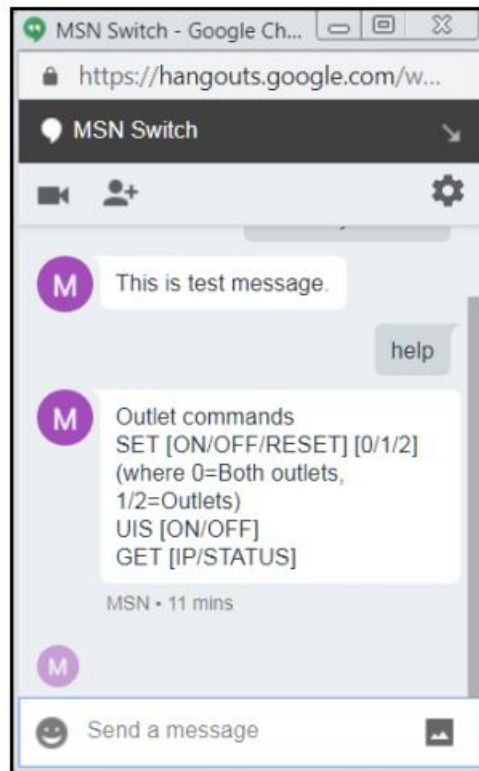

Type **HELP** to see the full list of available commands.

6. REST API

Basic functions of the MSNSwitch can be controlled through a series of HTTP Packet Requests.

Control an Outlet

Packet Request:

"GET" <target> "HTTP/1.1" CRLF

"Host:" <host IP> CRLF

"Keep-Alive: 300" CRLF

"Connection: keep-alive" CRLF

"Authorization:Base" <auth> CRLF CRLF ;auth:encoded account(username:password) with base-64

Request Description:

Target: "/cgi-bin/control.cgi?<action>"

Action:

target=<0/1/2/3>;

0 means UIS,

1 means outlet 1,

2 means outlet 2,

3 means outlet all

control=<0/1/2/3>;

0 means off,

1 means on,

2 means switch (i.e. from On Off, or from Off On),

3 means reset (Outlet only)

Packet Response:

XML format:

```
"<?xml version='1.0'?>"
```

```
"<request>"
```

```
"<outlet_status>"{OUTLET1_STATUS},"{OUTLET2_STATUS}"</outlet_status>"
```

```
"<uis_status>"{UIS_STATUS}"</uis_status>"
```

```
"</request>"
```

XML Description:

OUTLET1_STATUS / OUTLET2_STATUS / UIS_STATUS

0 means off

1 means on

The action can also be initiated via a simple HTTP URL using control2.cgi:

URL: `http://<IP-of-MSNSwitch>/cgi-bin/control2.cgi?<action>&user=admin&passwd=1234`

Example:

To force outlet #1 to reset:

`http://<ip-of-MSNSwitch>/cgi-bin/control.cgi?target=1&control=3&user=admin&passwd=1234`

XML Result:

```
<request>
```

```
<outlet_status>1,1</outlet_status>
```

```
<uis_status>0</uis_status>
```

```
</request>
```

Get the Status of the MSNSwitch

Request:

Target: `"/xml/outlet_status.xml"`

XML format:

```
"<?xml version='1.0'?>"
```

```
"<request>"
```

```
"<site_ip>"{SITE1},"{SITE2},"{SITE3},"{SITE4},"{SITE5}"</site_ip>"
```

```
"<connect_status>"{C1_S},"{C2_S},"{C3_S},"{C4_T},"{C5_S}"</connect_status>"
```

```
"<outlet_status>"{O1_S},"{O2_S}"</outlet_status>"
```

```
"<site_lost>"{S1_L},"{S2_L},"{S3_L},"{S4_L},"{S5_L}"</site_lost>"
```

```
"<uis_fun>"{U_S}"</uis_fun>"
```

```
"<g_target1>"{G_T1}"</g_target1>"
```

```
"<g_target2>"{G_T2}"</g_target2>"
```

```
"</request>"
```

XML Description:

SITE<n>: (n:number)

string: Site <n> IP Address.

C<n>_S: (n:number)

digit(unit: millisecond): Site <n> response timing.

O<n>_S: (n:number)

digit: 0 means off, 1 means on.

S<n>_L: (n:number)

digit: Percent of ping lost.

uis_fun:

digit: 0 means off, 1 means on.

G_T<n>: (n:number)

digit: 0 means None, 3 means All, 1 means Outlet1, 2 means Outlet2

Example:

To get system status:

`http://admin:1234@<ip-of-MSNSwitch>/xml/outlet_status.xml`

XML Result:

```
<request>
<site_label>Google,Yahoo,Bing,Ask.com,Router,,</site_label>
<site_ip>
172.217.15.68,98.138.219.232,204.79.197.200,151.101.2.114,192.168.0.1,null,null
</site_ip>
<connect_status>30,46,29,29,5,-1,-1</connect_status>
<site_lost>1,1,0,0,0,0,0</site_lost>
<lost_times>3,3,2,0,0,0,0</lost_times>
<outlet_status>1,1</outlet_status>
<uis_fun>0</uis_fun>
<reset_only>0,0</reset_only>
<assign>3,3,3,3,3,3,3</assign>
</request>
```

Get Last Heartbeat Time

URL: `http://<IP-of-MSNSwitch>/cgi-bin/heartbeat.cgi?user=admin&passwd=1234`

Response:

XML format:

`<?xml version='1.0'?>`

`<request>”<heartbeat>”YYYY/MM/DD HH:MM”</heartbeat>”`

`</request>”`

Example:

`http://<IP-of-MSNSwitch>/cgi-bin/heartbeat.cgi?user=admin&passwd=1234`

XML Result:

```
<request>
<heartbeat>2019/08/01 04:45</heartbeat>
</request>
```

7. Natality Utility


Mega Tec provides a software utility for Windows and MAC called Netility that scan your LAN for compatible devices and allows you to change some configuration settings and upgrade firmware without accessing the internal web server pages.

Download and install the Netility utility (Windows or MAC) from the www.MSNSwitch.com web site's Download page.

Connect the MSNSwitch to the same Ethernet LAN as your PC. Open Netility and it will scan the LAN for any Mega Tec devices and list them in its main window.



The **Network Settings** button allows you to configure the IP address and related network parameters of the MSNSwitch as well as set the password. The **Launch Web User Interface** will open the MSNSwitch's internal web server in your default browser.

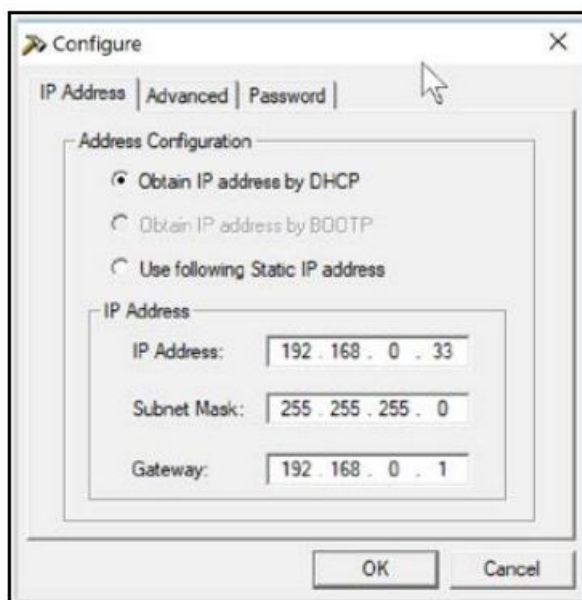

8. Updating Firmware

Download the latest MSNSwitch firmware from the Download page at: <http://www.MSNSwitch.com>

Be sure to download the correct file for your MSNSwitch model. Also download and review the firmware Release Notes for important information on the changes and new features.

MSNSwitch firmware is delivered as a compressed .ZIP file extract the .BIN file from the zip archive. The .BIN file is the actual firmware image file you need to use.

Using the Web Interface

Log into the MSNSwitch's web interface and select the **Save/Upgrade** menu. Click the **Choose File** button to locate the .BIN file you downloaded above. Then click the **Apply** button to begin the update process. Do not power off the MSNSwitch or remove its Ethernet connection until the process is complete. Once the upgrade is complete and the web page refreshes to show the new firmware version number, we strongly recommend performing a factory reset from this screen to ensure that all new firmware parameters are properly initialized. You should also clear your web browser cache, then reconfigure your MSNSwitch as needed.

The screenshot displays the MSNSwitch web interface. On the left is a navigation sidebar with sections: Information (Status), Configuration (Settings), Logs (Data), and Help. The Configuration section is expanded, showing options like Configuration, Schedule, Network, E-mail, Hangouts, SMS, Account, System Time, and Language. The main content area has two tabs: 'Save/Restore Settings' and 'Upgrade Firmware'. The 'Upgrade Firmware' tab is active, showing the 'Firmware Version' as MNT.NB.9319 and the 'Location' as MNT.9731.bin. There are buttons for 'Save', 'Restore', 'Reset', and 'Apply'. Below the 'Apply' button, there are two red asterisk warnings: '* If web upgrade or reboot fails, redo upgrade using Utility in LAN.' and '* Please save your settings before upgrading.'

Using Netility

Launch the Netility software (see page 14). Select the device you wish to upgrade and click the **Firmware Update** button. Select the .BIN file downloaded earlier and begin the firmware update process.

Do not power off the MSNSwitch or remove its Ethernet connection until the process is complete. Once the upgrade is complete and the web page refreshes to show the new firmware version number, we strongly recommend performing a factory reset from this screen to ensure that all new firmware parameters are properly initialized. You should also clear your web browser cache, then reconfigure your MSNSwitch as needed.

Proxicast, LLC 312 Sunny field Drive Suite 200 Glenshaw, PA 15116


1-877-77PROXI
1-877-777-7694
1-412-213-2477

Fax:
1-412-492-9386





E-Mail:
support@proxicast.com

Internet:
www.proxicast.com

Documents / Resources

	proxicast Controlling the MSNSwitch [pdf] User Guide Controlling the MSNSwitch, MSNTN01
---	--

References

-  [Ask.com - What's Your Question? Ask.com Ask.com Ask.com Ask.com](#)
-  [Cloud4UIS](#)
-  [MSNSwitch](#)
-  [Proxicast: Pro-Grade Wireless Solutions](#)