



Pursuit PRO9556Z Remote Start System Layout User Guide

[Home](#) » [Pursuit](#) » Pursuit PRO9556Z Remote Start System Layout User Guide 

Pursuit PRO9556Z Remote Start System Layout User Guide



PRO9556Z

Remote Start w/Keyless

Quick Installation Guide

For Complete Installation Guide and Technical Support Visit
www.voxxuniversity.com
Or Call
1-800-225-6074

www.voxxuniversity.com

Notifications

Remote Start If the remote start fails to start the vehicle, the system will flash the vehicle parking lights to indicate the cause.

1	Runtime Expired
2	Remote Shutdown
3	Brake On
4	Manual Mode
5	Hood Open
6	Low / No Tach
7	Tach Programming
8	High Tach

Chirp Delete System ARM/DISARM chirps can be toggled ON or OFF without entering the Feature Bank programming.

1. Turn the ignition key ON/OFF.
2. Press and release the valet button three (3) times.

The system will respond with one (1) chirp for ON and two (2) Chirps for OFF. This feature will not affect alarm trigger or programming.

User Programmable LED

System LED notifications can be turned ON or OFF without entering Feature Bank programming.

1. Turn the ignition key ON/OFF, ON/OFF.
2. Press and hold valet button for five (5) seconds.

The LED will flash one (1) time for ON, two (2) times for OFF. This feature will not affect LED flash during programming.

Contents

- [1 Tach Programming](#)
- [2 Remote Programming](#)
- [3 Feature Programming](#)
- [4 Data Protocol Selection](#)
- [5 OEM Security](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Tach Programming

The installer must manually configure the Engine Confirmation method in Feature Bank 3, Feature 5. The default method is "Tach". When using the default "Tach" method, the vehicle tach rate must be programmed. To enter tach rate programming:

1. Turn the ignition key to the ON position.
2. Press and release the valet button three (3) times.
3. Turn the ignition key to OFF.
4. Press and hold the valet button.
5. While holding the valet button, start the engine using the key.
6. Hold the valet button for approximately ten (10) seconds. If connected to the vehicle Tach source, the system will flash the parking lights one (1) time every second.
7. Release the valet button. The system will turn on the parking lights for two (2) seconds to indicate the tach rate is programmed.

The tach rate can also be programmed without the use of a valet button. This is helpful when using the OEM remote of Carl ink system to control this module. To program the tach rate without a valet button:

1. Turn the ignition key to the ON position and start the engine.
2. Wait for Engine RPM to lower to a normal idle.

3. Press and hold the vehicle's brake pedal.
4. Press the LOCK button on the OEM remote or the Carl ink App.

Note: Programming tach signal via OEM or Telematics control is only available on Firmware v1.47 or Higher.

Remote Programming

The PRO9556Z includes two (2) programmed remotes. If required, additional remotes can be programmed to the system. Remote Programming is located in Feature Bank 1. To enter Remote Auto Programming:

1. Turn the ignition key to the ON position.
2. Press and release the valet button three (3) times. System will beep and flash the parking lights one (1) time.

Press the lock button on each remote. The system will beep one (1) times to indicate the remote has been programmed.

Feature Programming

The PRO9556Z Feature Banks can be programmed by using the valet button and remote. To enter Feature Bank programming:

1. Turn the ignition to the ON position.
2. Press and release the valet button three (3) times. The system will beep and flash the parking lights one (1) time for Feature Bank 1, Remote Programming.
3. Cycle the ignition key OFF/ON. The system will beep and flash parking lights two (2) times for Feature Bank 2.
4. Press the valet button to cycle features. The LED will flash to display feature number.
5. Press the lock button to cycle options. The system will beep to indicate option number.
6. Cycle THE ignition key OFF/ON. The system will beep and flash parking lights three (3) times for Feature Bank 3.
7. Press the valet button to cycle features. The LED will flash to display feature number.
8. Press the lock button to cycle options. The system will beep to indicate the option number.

Data Protocol Selection

The default data port protocol of this model is ADS (I Datalink 2-Way). This model is capable of detecting the correct data port protocol (ADS or DBI) and automatically configuring Feature Bank 2; Feature 18. To initialize the detection procedure

1. Press and hold the valet button.
2. Cycle the vehicle's Ignition ON/OFF two (2) times.
3. Release the valet button.

The system will automatically detect and set the correct data port protocol, ADS or DBI.

Note: This feature is only available on module firmware v2.0 or higher.

The Feature Banks below can also be programmed using the Flash Logic Weblink. Please visit

Feature Bank 2		Options					
		1 Chirp	2 Chirp	3 Chirp	4 Chirp	5 Chirp	6 Chirp
Features	1 Lock / Unlock Function	500ms	3.5sec	500ms L, DBL UL	DBL L, 500ms UL	DBL L, DBL UL	500ms L, 350ms UL
	2 Accessory Lock	NA					
	3 Accessory Unlock	NA					
	4 Exterior Illumination	NA					
	5 Auto Relock	NA					
	6 Auto Arming	NA					
	7 Notification Sound	NA					
	8 Horn Timing	16ms	30ms	40ms	50ms	10ms	
	9 Valet Override Method	NA					
	10 Driver Priority Unlock	NA					
	11 Silent Choice	OFF	From Transmitter	OEM Style			
	12 Park Light / Trunk Swap	NA					
	13 AUX Ch. 4	NA					
	14 AUX Ch. 5	NA					
	15 AUX Ch. 6	NA					
	16 AUX Ch. 7	NA					
	17 Security Profile	OFF	OEM Security	W/ OEM Remote Start			
	18 Data Port Protocol	ADS	DBI				
Feature Bank 3		Options					
		1 Chirp	2 Chirp	3 Chirp	4 chirp	5 Chirp	6 Chirp
Features	1 Defrost Output	NA					
	2 RS Start Notification	ON	OFF				
	3 RS Runtime	15min	20min	45min	60min	5min	10min
	4 RS Parking Lights	Steady	Flashing				
	5 Engine Confirmation	Tach	Voltage	Data	Hybrid		
	6 Voltage Level	>0.5v B4 Start	<0.5v B4 Start				
	7 Ignition 2 Output	Ignition	Accessory	Start			
	8 Ignition 3 Output	N/A					
	9 Accessory Output	Accessory	Ignition	Start			
	10 Transmission	NA					
	11 Max Crank Time	0.8sec	1.0sec	1.5sec	2.0sec	3.0sec	4.0sec
	12 Diesel Delay	OFF	Diesel 5	Diesel 10	Diesel 15	Diesel 20	Diesel 30
	13 Temperature Start	NA					
	14 Crank Duration	Averaging	Preset				
	15 RS Shock Override	NA					
	16 Turbo Timer	NA					
	17 Start Activation	Two Press	One Press	Three Press			
	18 RS Lock Function	No Change	UL Before L After	UL Before Start	Lock After Start		
	19 Factory Disarm Output	Single Pulse	350ms	500ms	800ms	Same As Bank 2, F1	
	20 Pulse During Crank	During Crank	GWR	Ignition	Accessory		
	21 Factory Arm Output	After Start	GWR	Ignition	Accessory	Start	
	22 Pulse After Shutdown	After Shutdown	GWR	Ignition	Accessory	Start	
	23 Additional Unlock Pulse	No Pulse	IGN, ACC, GWR	IGN,ACC,GWR,PASD			

OEM Security

This system can provide OEM level security. The system will monitor and trigger by the analog hood input and all entry zone inputs from the FLCAN or other integration modules. When an entry zone is detected the system will beep the vehicle horn and flash the parking lights. This feature must be activated in Feature Bank 2, Feature 17.


Operation

To arm the system, press lock button.


To disarm the system, press unlock button.

Valet Override Procedure


To disarm the system without the use of a remote, turn the ignition key to ON and press the valet button one (1) time.

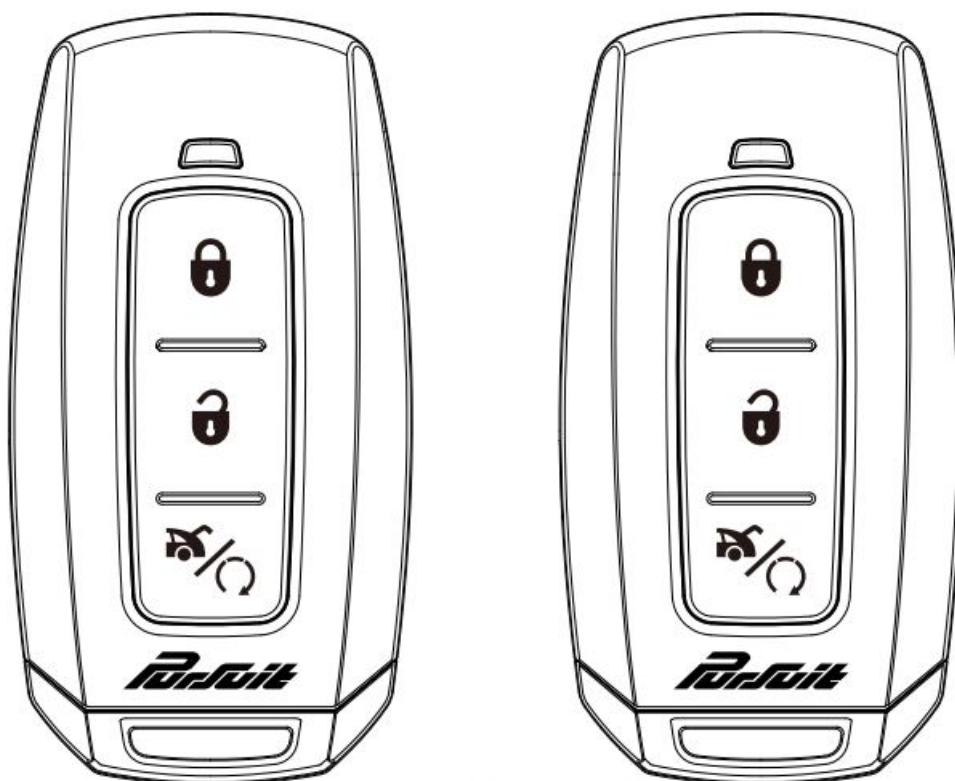

Replacement Part #183BPR

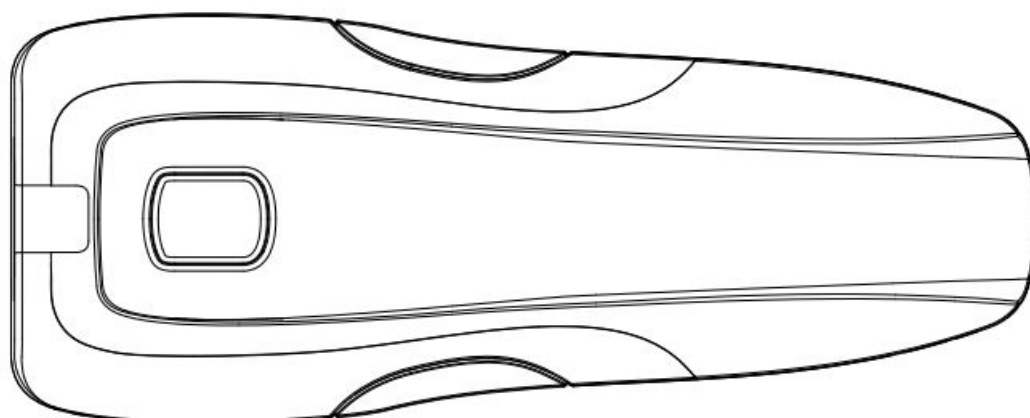

Replacement Part #4180070

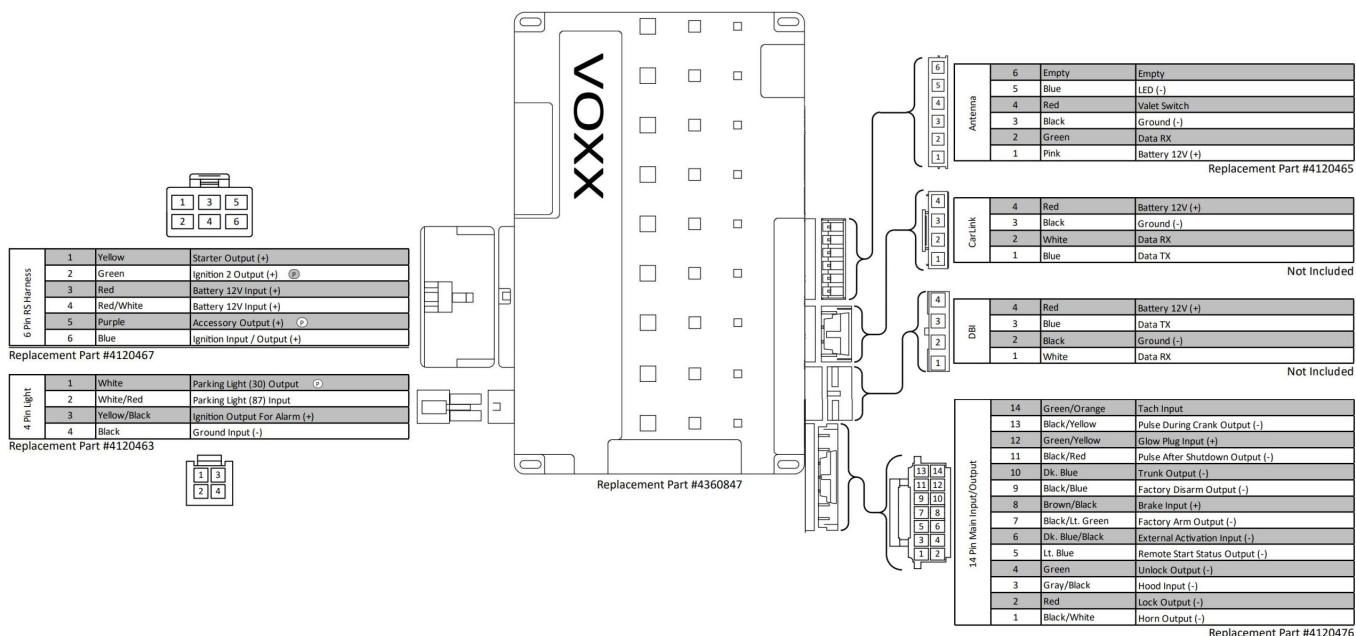

Important Update

The default Data Port Protocol of this system is ADS. If using an FLCAN or other external integration module be sure to choose I Datalink 2-Way when flashing.

This system will also support DBI. This will require programming Feature Bank 2, Feature 18 to DBI.

Documents / Resources

	PurSUIT PRO9556Z Remote Start System Layout [pdf] User Guide PRO9556Z, Remote Start System Layout
--	--

References

- [Flashlogic - Home](#)
- [University : Sign In](#)