



Quanzhou Skydroid Technology R12 Receiver User Manual

[Home](#) » [Quanzhou Skydroid Technology](#) » Quanzhou Skydroid Technology R12 Receiver User Manual 



Skydroid Technology R12 Receiver User Manual

Contents

- 1 Introduction
- 2 B) R12 PRO R12 FUAV is specially designed for agriculture, video capture, and drone flying
- 3 C) Specification of R12 PRO R12
- 4 D. Prepare the first startup
- 5 Receiver
- 6 4) R12 PRO R12 connect to Android phone
- 7 5) How to update firmware
- 8 6) How to change Mode on R12 PRO R12
- 9 7) Frequent Question and Answer
- 10 FCC Statement
- 11 Documents / Resources
- 12 Related Posts

Introduction

1. Product characteristic

1.1 Dual antenna plus Dual module with control of algorithm to ensure reliable communication by full angle high gain antenna. Also, thanks to the latest FHSS(Frequency Hopping Spread Spectrum)technology to achieve perfect control of the FUAV and operation of the camera.

1.2 Tx and Rx output sent flight data to a ground station. Fully maximize advantages of 2.4G to solve the unstable and interference problem of 433Mhz and 915Mhz

1.3 Integrated internal broadcast station

1.4 adjust parameter anytime through App (FUAV Helper)

1.5 Link by USB cable or Bluetooth. Also support S. Bus, PPM, PWM, I2C serial port, and expandable

1.6 Flight parameters can be adjusted through App on your phone. It can be linked by either USB (with OTG) or Bluetooth. You can change any features over the App, mode (mode 1, 2, 3,4), Nor/Rev, failsafe, Sbus, ppm output, and baud rate. Data is saved so that you can use it anytime.

1.7 Based on the “Tower” App to make ground stations perfectly match each other, larger view on the map. So you may do point-to-point planning and self-operation. Also one key home return.

1.8 Internal 4000mah Li-ion battery can last for more than 25 hours with 100mw

	Ground Station Specification			
Model	T12	Channel	12	
Working voltage	4.2V	Current	130mA	
Frequency	2.400-2.4833Ghz	System	FHSS	
firmware update	App online	Weight	560g	
Dimension	225123”35mm	Battery cap.	4000mA	
Duration	25 hours	Charge port	Micro USB	
Application	Helicopter, fixed-wing, drone, car, boat, submarine			

low power consumption. Your phone can be charged through the micro USB port

1.9 Highly integrated data, video, and flight controller board. It makes the size smaller. Aluminum foldable mounting plate. With 360 degree adjustment.

1.10 The camera is equipped with an 8w super bright LED for better capture images at night time

B)R12 PRO R12 FUAV is specially designed for agriculture, video capture, and drone flying

C) Specification of R12 PRO R12

Specification of camera			
Model	R12 PRO, R12	Working voltage	DC 4.5V-5.5V
Current	Light on/off 14mA/ 140mA	Frequency	2420MHz-2480MHz
Weight	90g	Dimension	103*43*21mm

D. Prepare the first startup

1. Make sure the ground station (Tx)is fully charged
2. Please check the position of the antenna is correctly placed

3. Check the firmware is an update

Receiver



Failure LED indication

Red LED to flash rapidly: receiver self detects fail, Sent it back to factory if retry fails.

Red/Green LED flash alternately: receiver self detect succeed

Green LED off but self detect is successful: turn on Tx and pair again

No LED on: Check working voltage is 5v and polarity is correctly connected. Sent back to factory if retry failed.

4) R12 PRO R12 connect to Android phone

4.1 correctly connect receiver and camera. Power on

4.2 install FUAV APK

4.3 Use USB cable comes with the kit to link up the Tx and Android phone as shown



4.4 Click “Yes” , the image will be shown on your phone

5) How to update firmware

5.1 Android upgrade

5.1.1 Open “Device Helper” and link up with Bluetooth. Press the button “A” while turning on the Tx. 5.1.2 Button “A” LED flashing slowly to enter download mode. Check if any new firmware updates. 5.1.3 Refresh the firmware if any.

5.2 PC Upgrade

5.2.1 Please browse “www.fuav.xin” to select download.

5.3 Tx Upgrade

5.3.1 Link up Tx and PC. Press button “A” while turning on the Tx. Button “A” LED flashes slowly to enter download mode.

5.3.2 Double click Firmware Upgrade

5.4 Rx Upgrade

5.4.1 Solder USB cable to upgrade port then press S1 link with PC (window), Red LED shows up to enter download mode.


5.4.2 Select bin file and click to upgrade, when 100% of the upgrade process is finished. Please unplug the

receiver.



6) How to change Mode on R12 PRO R12

6.0 There are four different modes to be selected, Mode 1(JPN), Mode 2(USA), Mode 3(JPN Reverse), Mode 4(USA Reverse)

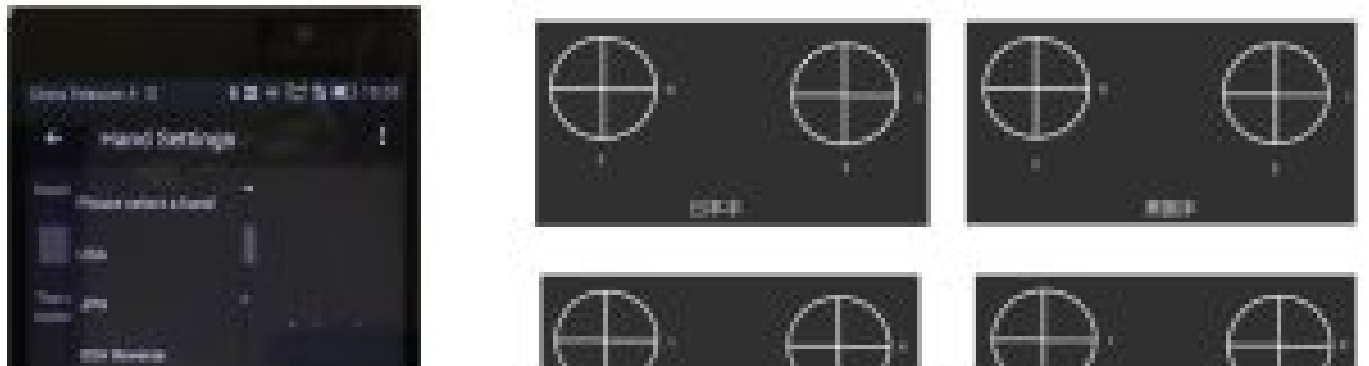

7) Frequent Question and Answer

7.1 Q: Does R12 PRO R12 support PPM, Sbus?

A: Yes, The first-row pins default as Sbus, Change to PPM signal on the APK.

7.2 Q: How far can R12 PRO R12 reach?

A: Under the clean signal circumstances. Video signal can reach 20km while Data signal Can be 30km.

7.3 Q: How to define two antennas on R12 PRO R12

A: Dual antenna is 2.4Ghz, also dual-module inside for transmission.

7.4 Q: How to define two antennas on the receiver

A: Receivers also use a dual antenna, they perform as transceivers. Please place the angle of two antennas as we recommended

7.5 Q: What inside the R12 PRO R12 package?

A: R12 PRO R12 Tx one unit, two 2.4G antenna, Data cable, Rx one unit

7.6 Q: How to charge the R12 PRO R12?

A: Use a Micro USB cable to charge the R12 PRO R12. Flashing in charging mode while off in Full charge.

7.7 Q: How to obtain the latest ground station software and updated firmware?

A: Please visit www.fuav.xin to download and learn from the video.

7.8 Q: Failed to link with APK?

A: Please check the baud rate, connection with the flight control board or Bluetooth is occupied by another device. Our ground station is well-linked with

PIX flight controller board. Also, the other ground station Map comes with a flight controller board.

7.9 Q: How to turn off/On the Tx

A: Short press the power button then long press to turn on the Tx and vice versa

7.10 Q: Fail to unlock the flight controller?

A:

7.11 Q: No LED on the receiver when linked with the flight controller?

A: Turn on the Tx, if still no signal please check the battery level and pair again

7.12 Q: Change hand Mode

A: Open “Device Helper” to change the hand mode

7.13 Q: Abnormal stick position

A: Calibrate again

7.14 Q: what is the signal transmission space

A: about 400/ms

7.15 Q: Do the R12 PRO R12 pair with the new receiver?

A: Yes, R12 PRO R12 sent ID to the receiver randomly. It works with the new pair receiver

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. — Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Documents / Resources

[illegible]