

# ROHM BM1390GLV-EVK-001 Evalution Board Pressure Sensor User Guide

[Home](#) » [ROHM](#) » ROHM BM1390GLV-EVK-001 Evalution Board Pressure Sensor User Guide 



## Pressure Sensor BM1390GLV-EVK-001 Manual

BM1390GLV-EVK-001 is an evaluation board for BM1390GLV, which is a ROHM pressure sensor. This User's Guide is about how to use BM1390GLV-EVK-001 together with ROHM Shield for Arduino\*

### Contents

- [1 Preparation](#)
- [2 Setting](#)
- [3 Measurement](#)
- [4 Documents / Resources](#)
  - [4.1 References](#)
- [5 Related Posts](#)

## Preparation

- BM1390GLV-EVK-001.....1pc
- Shield for Arduino..... 1pc
- Arduino Uno..... 1pc
- USB Cable..... 1pc
- Computer Installed Arduino IDE..... 1pc
  - Requirement: Arduino IDE 1.8.13 or higher
  - Please get Arduino IDE from the link below: <http://www.arduino.cc/>

## Setting

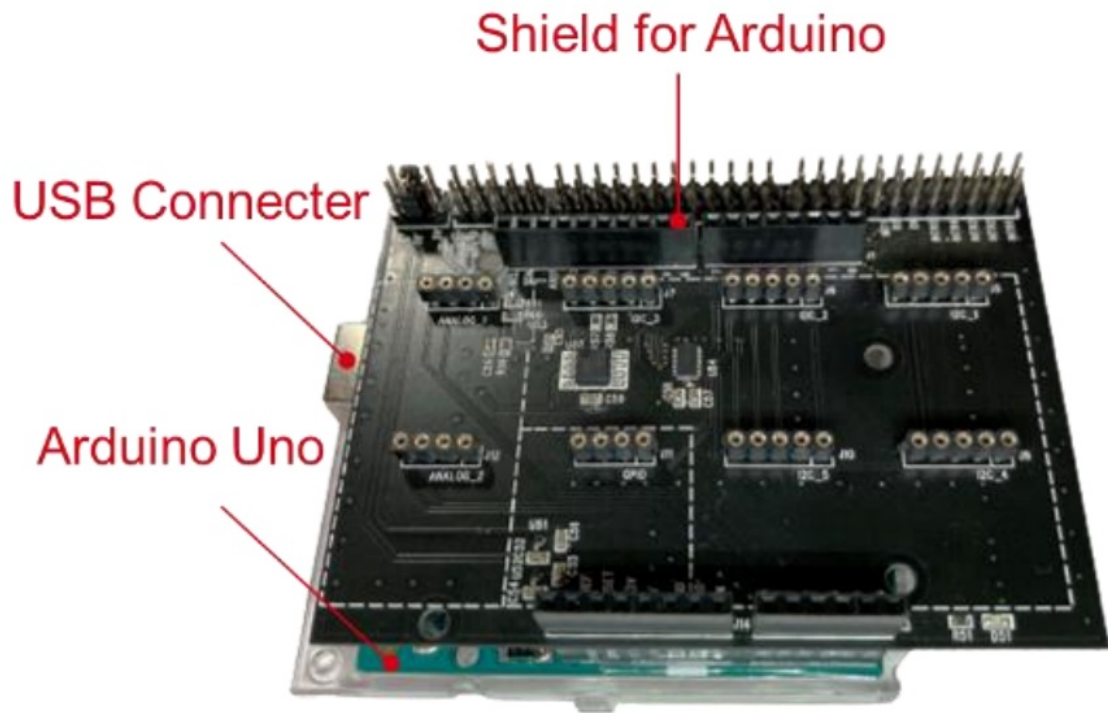


Figure 1. Connection of Arduino Uno and Shield for Arduino

1. Connect Arduino Uno and Shield for Arduino. (Figure 1)
2. Connect BM1390GLV-EVK-001 to the socket of I2C area on Shield for Arduino. (Figure 2)

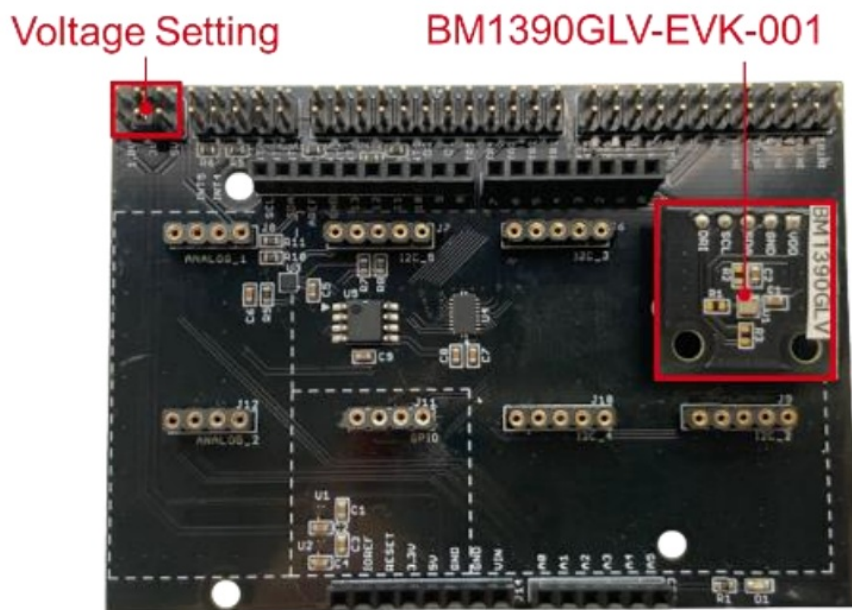


Figure 2. Board Connection and Voltage Setting

3. Set the voltage of Shield for Arduino to 1.8V or 3.0V. (Figure 2)
4. Connect Arduino Uno to Computer using a USB cable.
5. Get BM1390GLV Software \*2 from the link below: <https://www.rohm.com/sensor-shield-support> \*2 The software is subject to change without notice.
6. Launch Arduino IDE.
7. Select [Sketch] -> [Include Library] -> [Add.ZIP library...], then BM1390GLV Software. (Figure 3)

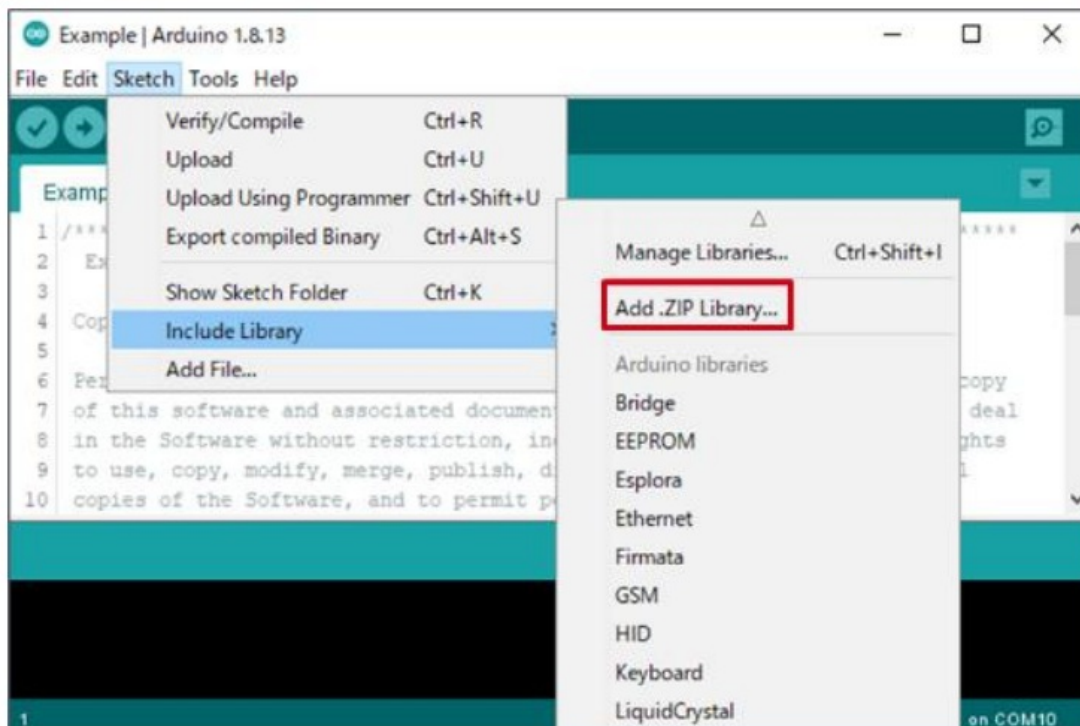


Figure 3. Software Installation

8. Select [File] -> [Examples] -> [Examples from custom libraries], then BM1390GLV Software.

## Measurement

1. Select [Tools]. Set Board to "Arduino Uno" and Port to "COMxx (Arduino Uno)" \*3. (Figure 4) \*3 COM number is different in each environment.

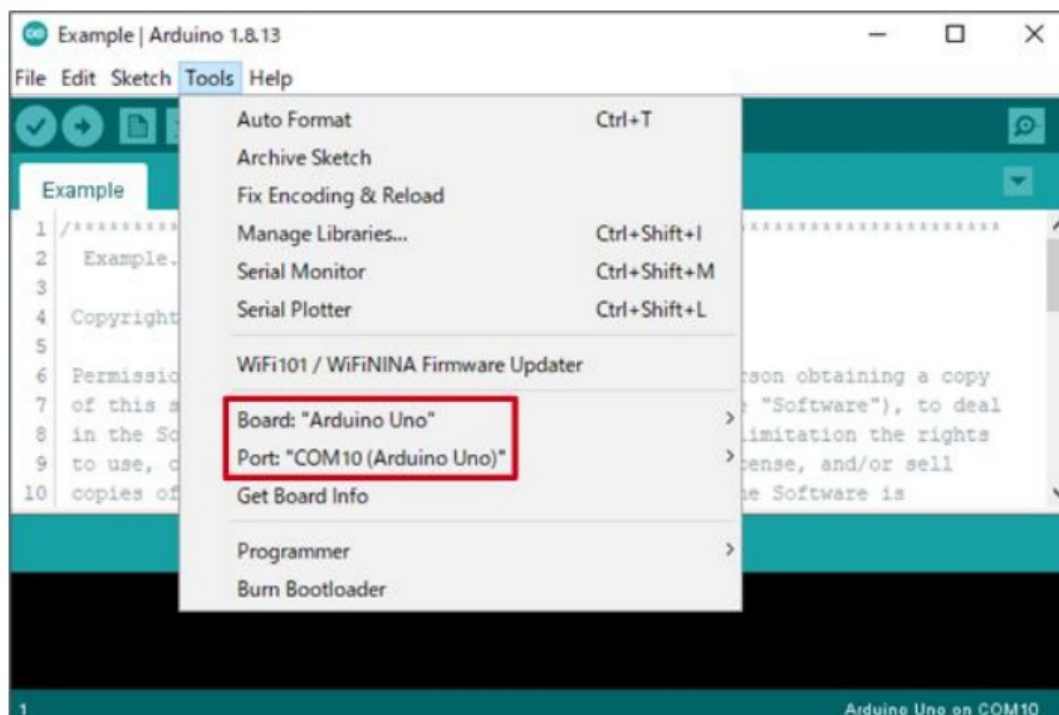


Figure 4. Board and Port Setting

2. Click the write button and wait for the message "Done uploading.". (Figure 5)



Figure 5. Done Uploading

3. Select [Tools] -> [Serial Monitor]. (Figure 6)

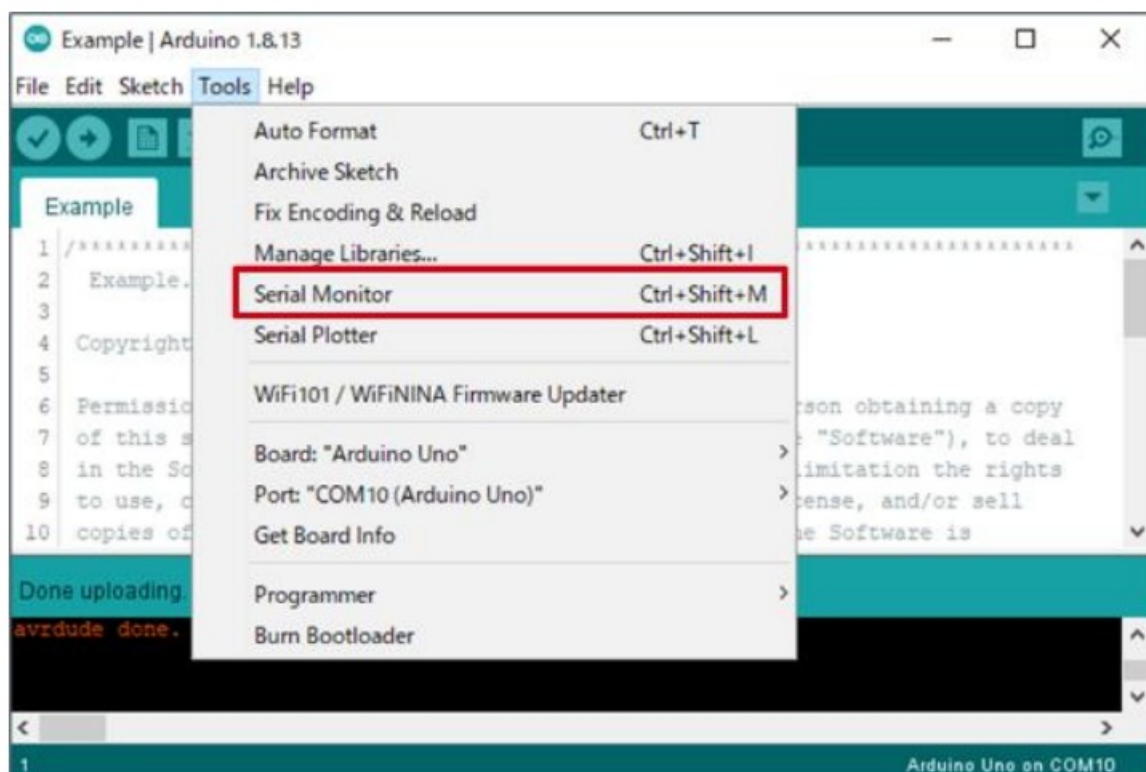


Figure 6. Selecting Serial Monitor

4. Set the baud rate to 115200 baud and check log of the Serial Monitor. (Figure 7)

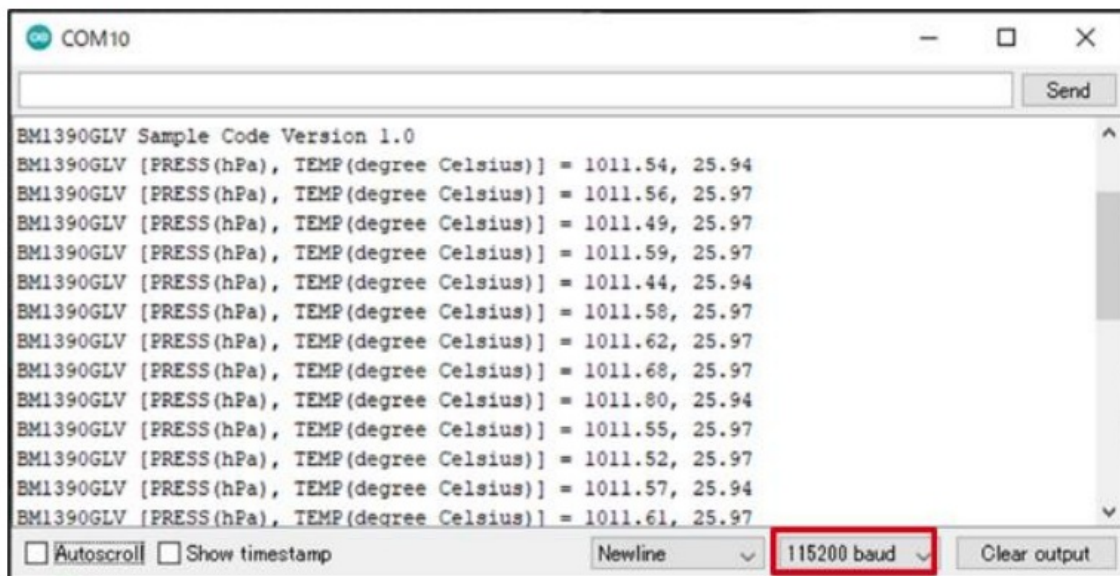



Figure 7. Example of Serial Monitor

#### Board Information \*4

\*4 Board Information is subject to change without notice.

- Digital Communication Interface: I2C
- Slave Address: 0x5D
- Selectable Voltage of Shield for Arduino: 1.8V, 3V
- Supply Voltage for VDD: 1.7V – 3.6V
- Operating Temperature Range: -40 – +85

**Note: BM1390GLV-EVK-001 is non-waterproof.**

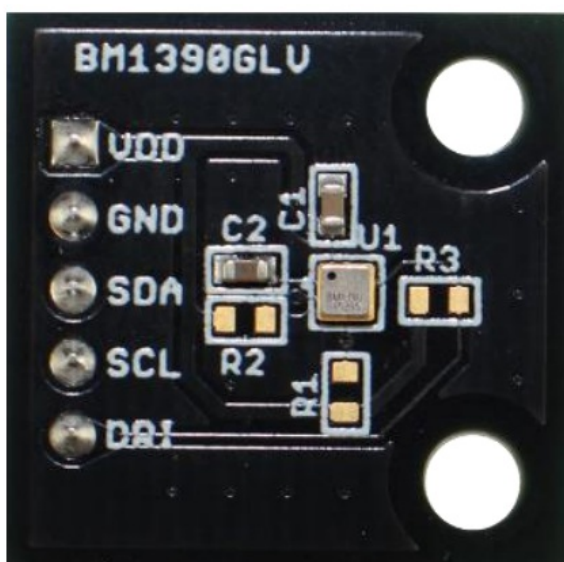

Front



Back

Figure 8. Board Pictures

Table 1. Parts Information

Parts Number	Description
U1	IC: BM1390GLV
C1	Bypass capacitor for VDD: 0.1uF
C2	Bypass capacitor for VREG: 0.22uF
R1	Pull-up register for SDA: N.M.
R2	Pull-up register for SCL: N.M.
JP1	Pull-up register for DRI: N.M.
CN1	Pin header: 2.54 mm pitch, 00.8

**\*5 N.M. = No Mount**

## Notes

1. The information contained herein is subject to change without notice.
2. Before you use our Products, please contact our sales representative and verify the latest specifications :
3. Although ROHM is continuously working to improve product reliability and quality, semiconductors can break down and malfunction due to various factors. Therefore, in order to prevent personal injury or fire arising from failure, please take safety measures such as complying with the derating characteristics, implementing redundant and fire prevention designs, and utilizing backups and fail-safe procedures. ROHM shall have no responsibility for any damages arising out of the use of our Products beyond the rating specified by ROHM.
4. Examples of application circuits, circuit constants and any other information contained herein are provided only to illustrate the standard usage and operations of the Products. The peripheral conditions must be taken into account when designing circuits for mass production.
5. The technical information specified herein is intended only to show the typical functions of and examples of application circuits for the Products. ROHM does not grant you, explicitly or implicitly, any license to use or exercise intellectual property or other rights held by ROHM or any other parties. ROHM shall have no responsibility whatsoever for any dispute arising out of the use of such technical information.
6. The Products specified in this document are not designed to be radiation tolerant.
7. For use of our Products in applications requiring a high degree of reliability (as exemplified below), please contact and consult with a ROHM representative: transportation equipment (i.e. cars, ships, trains), primary communication equipment, traffic lights, fire/crime prevention, safety equipment, medical systems, servers, solar cells, and power transmission systems.
8. Do not use our Products in applications requiring extremely high reliability, such as aerospace equipment, nuclear power control systems, and submarine repeaters.
9. ROHM shall have no responsibility for any damages or injury arising from non-compliance with the recommended usage conditions and specifications contained herein.
10. ROHM has used reasonable care to ensure the accuracy of the information contained in this document. However, ROHM does not warrants that such information is error-free, and ROHM shall have no responsibility for any damages arising from any inaccuracy or misprint of such information.
11. Please use the Products in accordance with any applicable environmental laws and regulations, such as the RoHS Directive. For more details, including RoHS compatibility, please contact a ROHM sales office. ROHM

shall have no responsibility for any damages or losses resulting from non-compliance with any applicable laws or regulations.


12. When providing our Products and technologies contained in this document to other countries, you must abide by the procedures and provisions stipulated in all applicable export laws and regulations, including without limitation the US Export Administration Regulations and the Foreign Exchange and Foreign Trade Act.
13. This document, in part or in whole, may not be reprinted or reproduced without the prior consent of ROHM.

Thank you for your access to ROHM product information. More detail product informations and catalogs are available, please contact us.

ROHM Customer Support System <http://www.rohm.com/contact/>



## Documents / Resources

	<a href="#">ROHM BM1390GLV-EVK-001 Evalution Board Pressure Sensor</a> [pdf] User Guide BM1390GLV-EVK-001, Evalution Board Pressure Sensor
--	---

## References

- [!\[\]\(e7a5b2ecc7ab80b32b565dd7dfa9a5a9\_img.jpg\) Arduino - Home](#)
- [!\[\]\(51a3b3d739efe92b5a87bb7fdd8bc4bf\_img.jpg\) contactus](#)
- [!\[\]\(ebb8dcf4bf19cae7a44506695af49594\_img.jpg\) ROHM Sensor Evaluation Kit | ROHM Semiconductor - ROHM Co., Ltd.](#)