



SATEC EM132 Multi Function Meter User Guide

[Home](#) » [SATEC](#) » SATEC EM132 Multi Function Meter User Guide 



Quick Start Guide
EM132-133

expertmeter™



- 1 Mechanical Installation
- 2 Typical Electrical Installation
- 3 Electrical Installation
- 4 MODULE Installation
- 5 Basic Setup
- 6 DATA DISPLAY
- 7 Basic Menu
- 8 Communication Port Menu
- 9 Input and Output Ratings
- 10 Documents / Resources
 - 10.1 References

Mechanical Installation

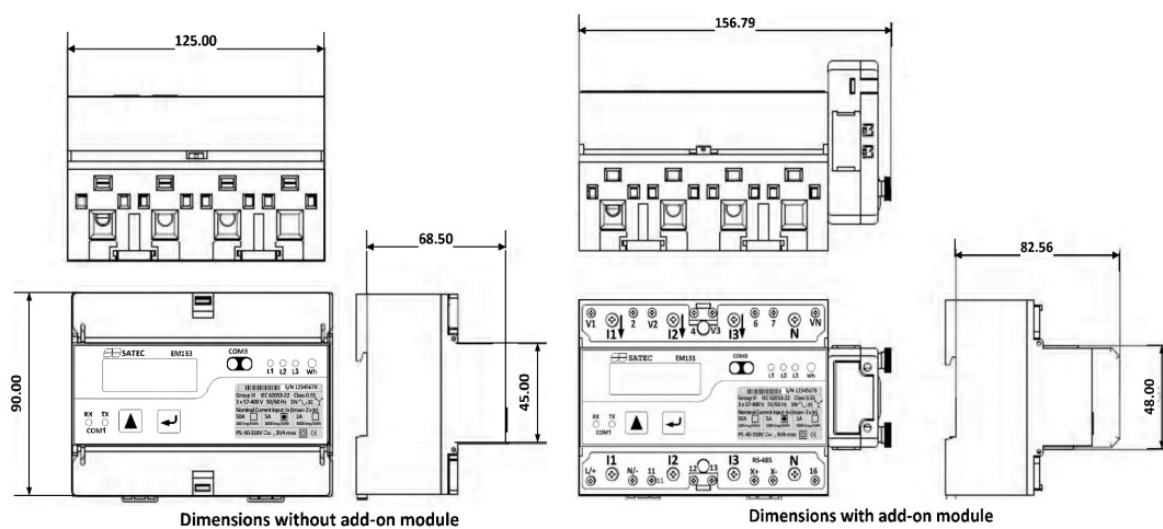


Figure 1: Instrument Dimensions

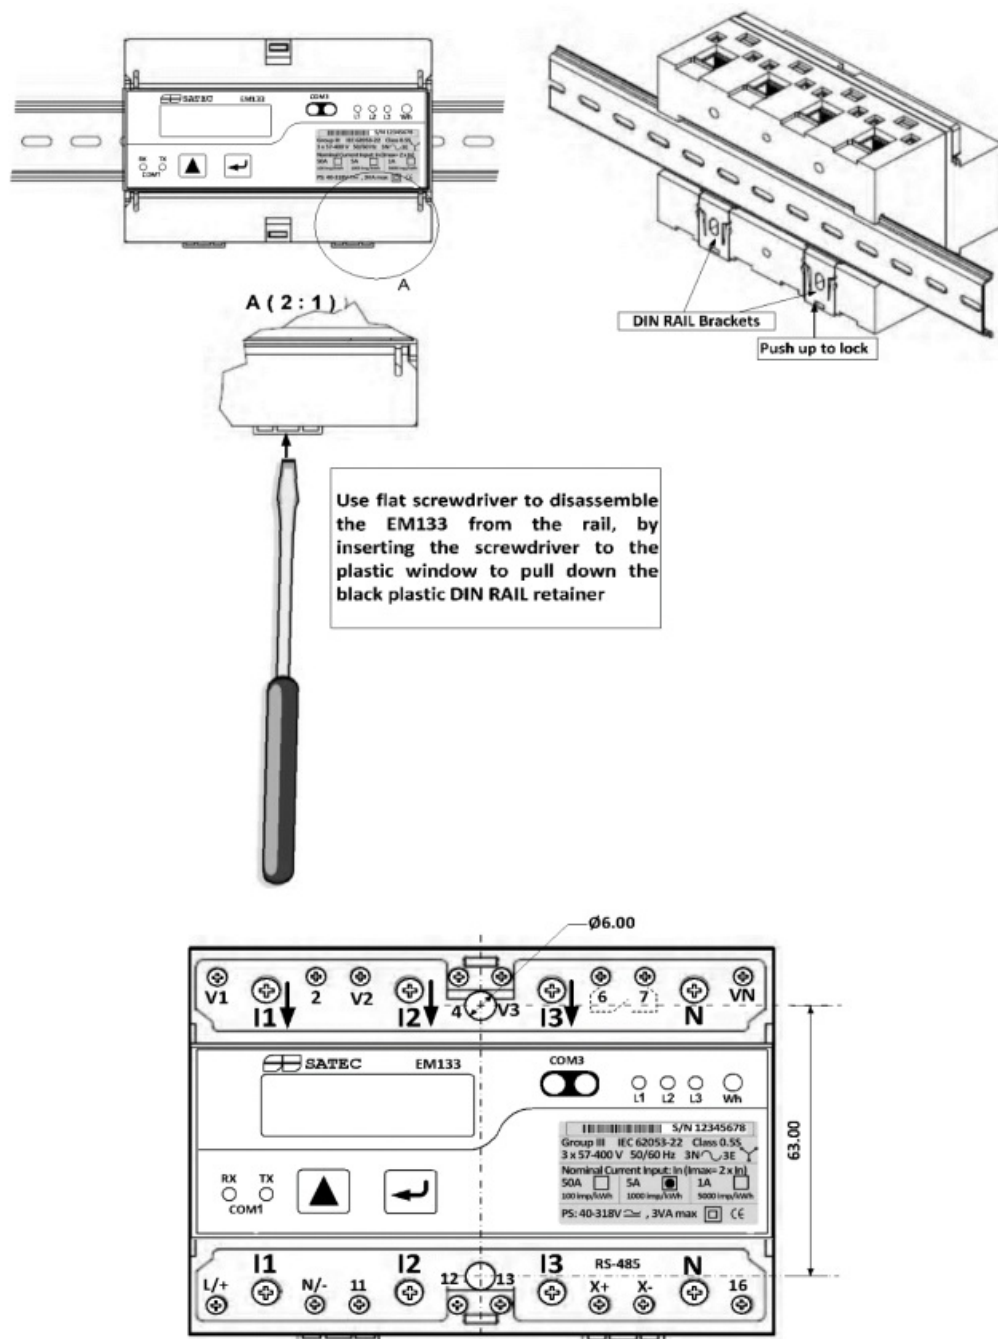


Figure 2: Mounting the EM13X on DIN Rail or on flat surface

IMPORTANT

Only qualified personnel can perform setup.

All incoming power sources must be turned off during installation. During operation of the Powermeter, hazardous voltages are present on the input terminals. Failure to observe precautions can result in serious or even fatal injury, or damage to equipment.

Please refer to the installation and operation manual for further information.

Typical Electrical Installation

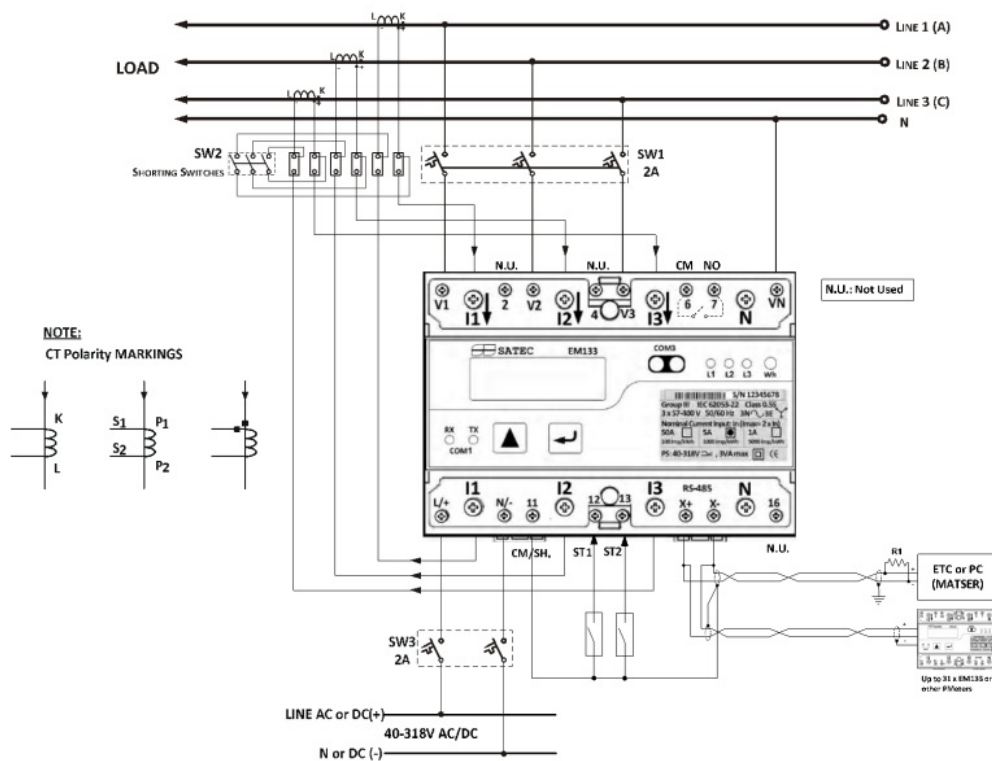




Figure 3: Common Wiring Mode: 4LL3 or 4Ln3

Wiring Configuration	Setup Code
3-wire 2-element Direct connection using 2 CTs	3dir2
4-wire Wye 3-element direct connection using 3 CTs	4Ln3 or 4LL3
4-wire Wye 3-element connection using 3 PTs, 3 CTs	4Ln3 or 4LL3
3-wire 2-element Open Delta connection using 2 PTs, 2 CTs	3OP2
4-wire Wye 2½ -element connection using 2 PTs, 3 CTs	3Ln3 or 3LL3
3-wire 2½ -element Open Delta connection using 2 PTs, 3 CTs	3OP3
4-wire 3-element Delta direct connection using 3 CTs	4Ln3 or 4LL3
3-wire 2½-element Broken Delta connection using 2 PTs, 3 CTs	3bLn3 or 3bLL3

NOTE:

Refer to the Installation and operation manual for the wiring schematics diagrams

Electrical Installation

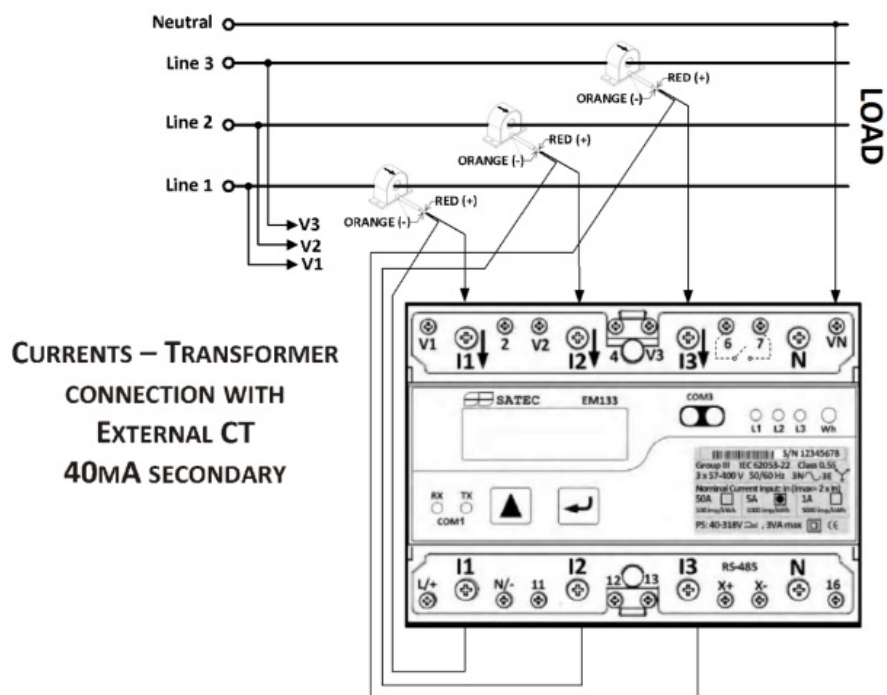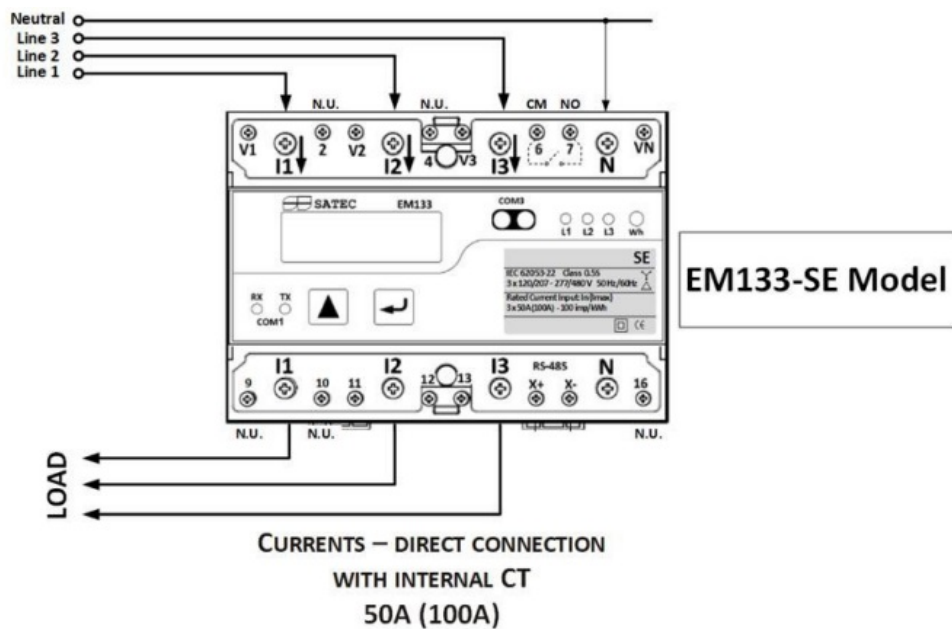

MODULE Installation

This section applies to the I/O and Communication modules.

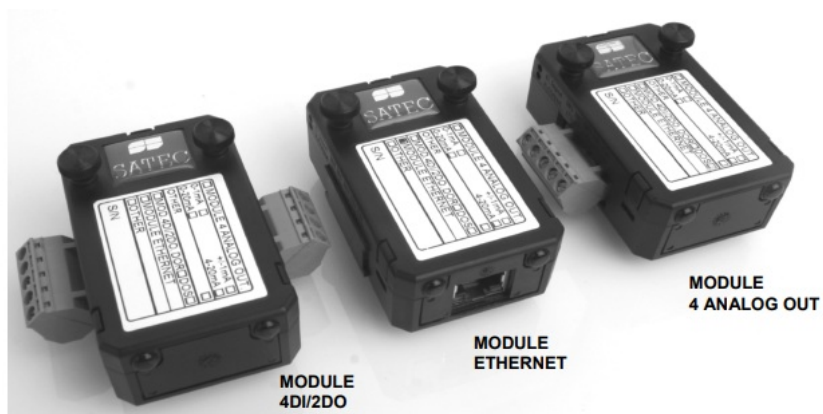


Figure 5: PM130 PLUS modules

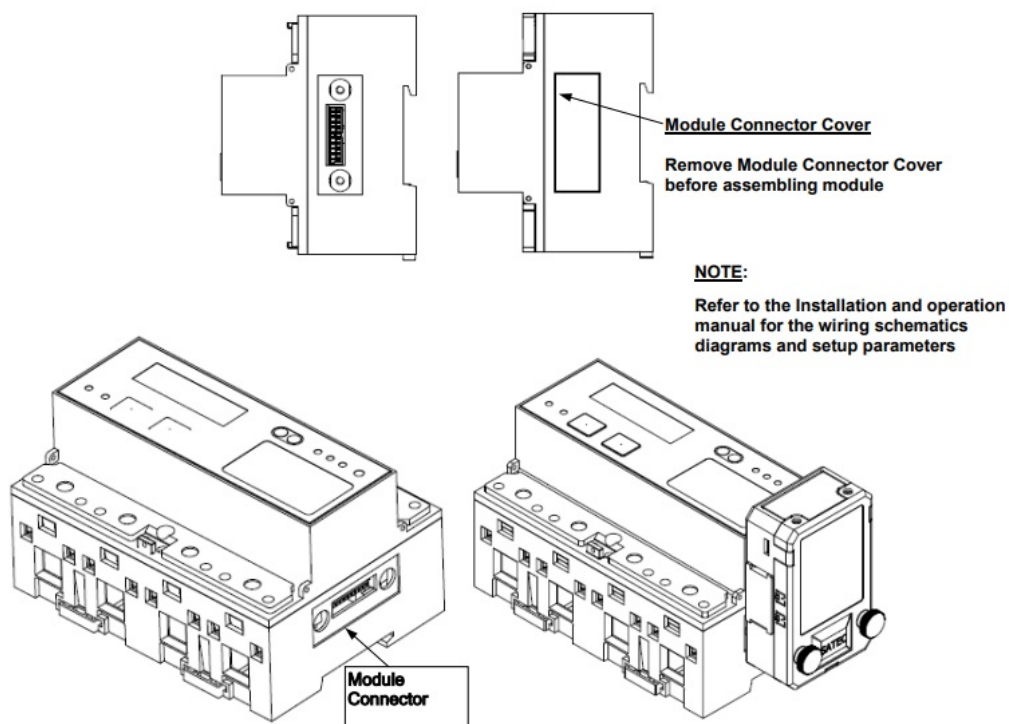



Figure 6: Mounting module

CAUTION







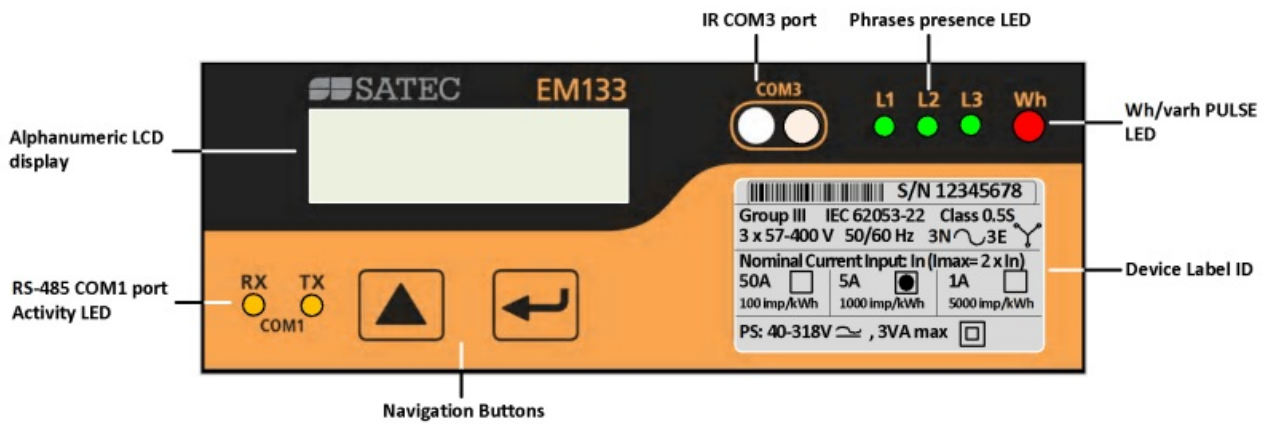






Before I/O Module installation ensure that all incoming power sources are shut OFF. Failure to observe this practice can result in serious or even fatal injury and damage to equipment.


Basic Setup

All setups can be performed directly from the display panel or via communication ports using PAS communication software, except for Communications and Display setups, which must be performed directly at the instrument panel.





To set the CT Primary current, perform the following steps:

- Press  for 5sec, until password no. blinks:
- Enter Password number using , then press  for 2sec then new display with blinking “Reset”
- Navigate by pressing shortly (less than 1sec)  move to Basic setup
- Press  for 2sec, until “Conf” blinks:
- Navigate by pressing shortly (less than 1sec)  move to CT setup
- Press  for 2sec, until “5000” blinks, then press shortly using  to the desired value
- Press  for 2sec, until “CT” blinks, then press  for 2sec, until “Basic” blinks, then press  for 2sec, until “Reset” blinks, press shortly using  to move to blinking “Exit” and press  for 2sec to return to initial screen





DATA DISPLAY

Navigating in Display Mode



The front panel has a simple interface that allows you to display numerous measurement parameters in up to 38 display pages. For easier reading, the parameters are divided into three groups; each group is accessible by pressing the  key and each group page is accessible by pressing the  key.




The initial display is as described below:










First push on  will display Energy measurement parameters, by pushing  will navigate to imp., exp. active/reactive, etc ...as described below:

1  Act. Imp 0 kWh	2 Act. Exp 0 kWh	3 Rea. Imp 0 kvarh	4 Rea. Exp 0 kvarh
5  App. 0 kVAh	6 App. Imp 0 kVAh	7 App. Exp 0 kVAh	
8  Rea. Q1 0 kvarh	9 Rea. Q2 0 kvarh	10 Rea. Q3 0 kvarh	11 Rea. Q4 0 kvarh

Second push on  will display MAX DMD parameters, by pushing  will navigate to MAX DMD P, Q, S, I, etc ...as described below:

1  MAX. DMD P Imp 0 MW	2 MAX. DMD P Exp 0 MW	3 MAX. DMD Q Imp 0 Mvar	4 MAX. DMD Q Exp 0 Mvar
5  MAX. DMD S 0 MVA	6 MAX. DMD I1 0 A	7 MAX. DMD I2 0 A	8 MAX. DMD I3 0 A
9  MAX. DMD In 0 A	10 MAX. DMD V1 0 kV	11 MAX. DMD V2 0 kV	12 MAX. DMD V3 0 kV

Third push on  will display Voltage/Current measurements, by pushing  will navigate to V (L-N), V (L-L), I, Power, PF, THD, TDD, F, etc ...as described below:

1  V1 V2 0 kV 0 kV	2 V3 0 kV	3 V12 V23 0 kV 0 kV	4 V31 0 kV
5  I1 I2 0 A 0 A	6 I3 In 0 A 0 A	7 P Q 0 MW 0 Mvar	8 S PF 0 MVA 0
9  V1 THD I1 THD 0 % 0 %	10 V2 THD I2 THD 0 % 0 %	11 V3 THD I3 THD 0 % 0 %	12 I1 TDD I2 TDD 0 % 0 %
13  I3 TDD 0 %	14 V Unb I Unb 0 % 0 %	15 Freq 0 Hz	
16  V1 Ang I1 Ang 0° 0°	17 V2 Ang I2 Ang 0° 0°	18 V3 Ang I3 Ang 0° 0°	

Basic Menu

Code	Parameter	Options	Description
ConF	Wiring mode	3OP2	3-wire open delta using 2 CTs
		4Ln3	4-wire Wye using 3 PTs (default)
		3dir2	3-wire direct connection using 2 CTs
		4LL3	4-wire Wye using 3 PTs
		3OP3	3-wire open delta using 3 CTs
		3Ln3	4-wire Wye using 2 PTs
		3LL3	4-wire Wye using 2 PTs
		3bLn3	3-wire Broken delta using 2 PTs, 3 CTs
		3bLL3	3-wire Broken delta using 2 PTs, 3 CTs
Pt Ratio	PT ratio	1.0* – 6,500.0	The potential transformer ratio
Pt Factor			
Ct	CT primary current	1-50,000A (5*)	The primary rating of the current transformer
PowDmdPer	Power demand period	1, 2, 5, 10, 15*, 20, 30, 60, E	The length of the period for power demand calculations, in minutes . E = external synchronization
Num.Per.	Number of power demand periods	1-15 (1*)	The number of demand periods to be averaged for sliding window demands 1 = block interval demand calculation
ADmdPer.	Ampere/Volt demand period	0-1800 (900*)	The length of the period for volt/ampere demand calculations, in seconds . 0 = measuring peak current
Frequency	Nominal frequency	25, 50, 60, 400 (Hz)	The nominal power utility frequency
MaxDmdLd			

Communication Port Menu

COM1 setting


Code	Parameter	Options	Description
Protocol	Communications protocol	ASCII*, rtu, dnP3	ASCII, Modbus RTU (default) or DNP3.0 protocol
Interface	Interface standard	485	RS-485 interface (default)
Address	Address	ASCII: 0 (default) – 99, Modbus: 1 (default) -247, DNP3.0: 0 (default) -255	
Baud Rate	Baud rate	110, 300, 600, 1200, 2400, 4800, 9600 (default), up to 115,200 bps	
Data/Parity	Data format	7E, 8E (7/8 bits, even parity), 8n (default) (8 bits, no parity)	
Snd.Delay			

Input and Output Ratings

3 voltage inputs	57/98-400/690 VAC	DIRECT INPUT – Nominal: 690V line-to-line voltage, 828V maximum; 400V line-to-neutral, 480V maximum – Burden: <0.5 V A. INPUT USING PT – Burden: <0.15 VA
	Voltage input terminals	4 x Maximum wire section: 2.5 mm ² (12 AWG)
3 current inputs (Galvanic isolation)	/5A(10A)	INPUT VIA CT with 5A secondary output – Burden: <0.2VA, Overload withstands: 20A RMS continuous, 300A RMS for 0.5 second.
	/1A(2A)	INPUT VIA CT with 1A secondary output – Burden: <0.05VA, Overload withstands: 3A RMS continuous, 80A RMS for 0.5 second.
	50A(100A)	INPUT VIA CT with 50A direct connection – Burden: < 0.05VA, Overload withstands: 120A RMS continuous, 2000A RMS for 0.5 second.
	40mA:(optional)	INPUT VIA CT with 40mA secondary output, using external CT – Split Core CT or Solid Core CT – primary 100-1200A maximum rating
	Current input terminals	3 x Maximum wire section: 16 mm ²
Communication port COM1	EIA RS-485 standard	Optically isolated, max. speed 115.2Kb/s
	COM1 terminals	3 x Maximum wire section: 2.5 mm ²
Communication port COM3	IR COM port	Infra Red, max. speed 38.4Kb/s
Power Supply (Galvanically isolated)	40-300V AC/DC (standard)	50/60 Hz – 9VA
	Power Supply input terminals	3 x Maximum wire section: 2.5 mm ²

MODULE 2DI/DO	DIGITAL INPUT x 2 optically isolated inputs		Dry contact, internally wetted @ 5VDC
	DIGITAL OUTPUT x 1		0.15A/250 VAC – 400 VDC, 1 contact (SPST Form A)
	2DI/DO terminals		5 x Maximum wire section: 2.5 mm ²
MODULE 4DI/2DO (Optional)	DIGITAL INPUT x 2 optically isolated inputs		Dry contact, internally wetted @ 24VDC
	DIGITAL OUTPUT x 2	EMR	5A/250 VAC; 5A/30 VDC, 1 contact (SPST Form A)
		SSR	0.15A/250 VAC – 400 VDC, 1 contact (SPST Form A)
	4DI/2DO terminals		9 x Maximum wire section: 2.5 mm ²
MODULE 4 AO (Optional)	ANALOG OUT x 4 optically isolated outputs (4 different options)		±1 mA, maximum load 5 kW (100% overload)
			0-20 mA, maximum load 510 W
			4-20 mA, maximum load 510 W
			0-1 mA, maximum load 5 k W (100% overload)
	4 AO terminals		5 x Maximum wire section: 2.5 mm ²
Communication port COM2 (Optional)	Ethernet		10/100 Base T, auto adaptation speed, Max. speed 100Mb/s
	ETH connector		Shielded RJ45 cable
Communication port COM2 (Optional)	Profibus		Max. speed 12 Mb/s
	Profibus terminals		5 x Maximum wire section: 2.5 mm ² (12 AWG) or using terminal to DB9 converter: P/N AC0153 REV.A2
Communication port COM2 (Optional)	EIA RS-232-422/485 standard		Optically isolated, max. speed 115.2Kb/s – to be connected to GPRS modem if ordered
	COM2 terminals		5 x Maximum wire section: 2.5 mm ² And DB9 connector

BG0504 REV.A3

	<p>SATEC EM132 Multi Function Meter [pdf] User Guide</p> <p>EM132 Multi Function Meter, EM132, Multi Function Meter, Function Meter, Meter</p>
---	--

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.