



scheppach HC08 Compressor Machine Instruction Manual

[Home](#) » [Scheppach](#) » **scheppach HC08 Compressor Machine Instruction Manual** 

Contents

- [1 scheppach HC08 Compressor Machine Instruction Manual](#)
- [2 scheppach HC08 Compressor Machine](#)
- [3 Explanation of the symbols on the equipment](#)
- [4 1. Introduction](#)
- [5 NOTE:](#)
- [6 WE RECOMMEND:](#)
- [7 2. Device description \(Fig 1-4\)](#)
- [8 3. Unpacking](#)
- [9 ATTENTION!](#)
- [10 4. Intended use](#)
- [11 5. Safety information](#)
- [12 ADDITIONAL SAFETY INSTRUCTIONS](#)
- [13 Operating pressure vessels](#)
- [14 6. Technical data](#)
- [15 7. Before starting the equipment](#)
- [16 9 . Electrical connection](#)
- [17 10. eaning, maintenance, and storage](#)
- [18 11. Disposal and recycling](#)
- [19 12. Troubleshooting](#)
- [20 Read More About This Manual & Download PDF:](#)
- [21 Documents / Resources](#)
 - [21.1 References](#)
- [22 Related Posts](#)

scheppach HC08 Compressor Machine Instruction Manual












scheppach HC08 Compressor Machine



Only for EU countries.

Do not dispose of electric tools together with household waste material! In observance of European directive 2012/19/EU on wasted electrical and electronic equipment and its implementation in accordance with national law, electric tools that have reached the end of their life must be collected separately and returned to an environmentally compatible recycling facility..

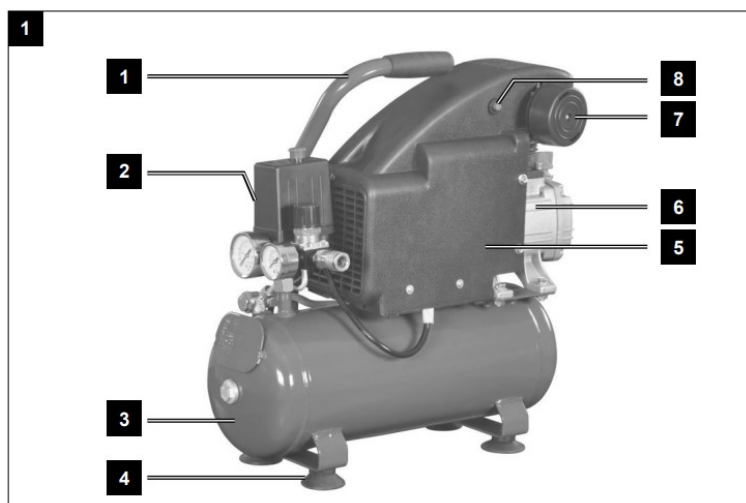

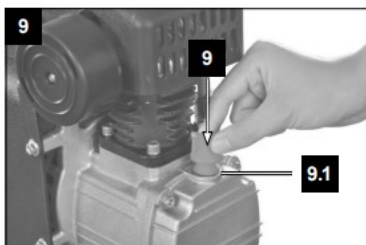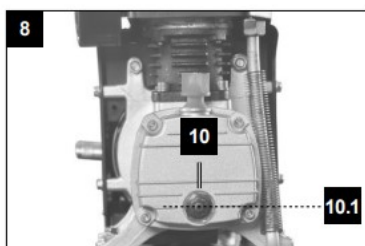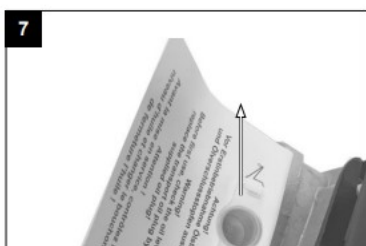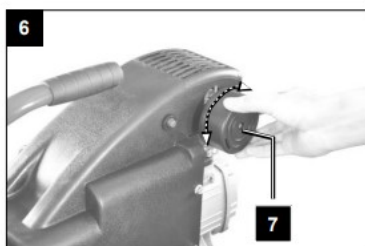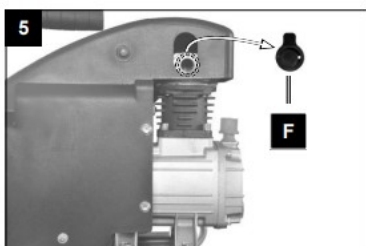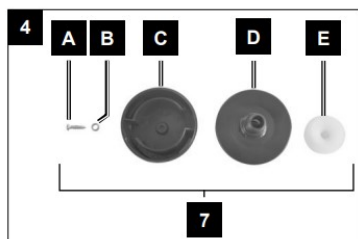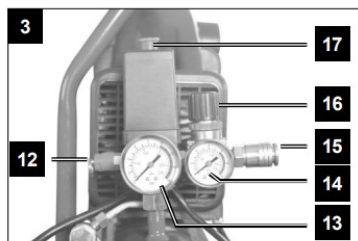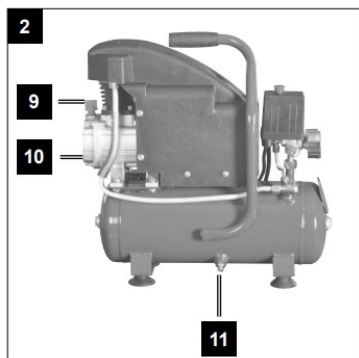

Explanation of the symbols on the equipment



Read and follow the operating and safety instructions before you start working with this power tool



Wear ear-muffs. The impact of noise can cause damage to hearing.



Beware of hot parts!



Beware of electrical voltage!



Warning! The unit is equipped with an automatic start control. Keep others away from the work area of the device!

1. Introduction

DEAR CUSTOMER,
we hope your new tool brings you much enjoyment and success.

NOTE:

According to the applicable product liability laws, the manufacturer of the device does not assume liability for damages to the product or damages caused by the product that occurs due to:

- Improper handling,
- Non-compliance of the operating instructions,
- Repairs by third parties, not by authorized service technicians,
- Installation and replacement of non-original spare parts,
- Application other than specified,
- A breakdown of the electrical system that occurs due to the non-compliance of the electric regulations and VDE regulations 0100, DIN 57113 / VDE0113.

WE RECOMMEND:

Read through the complete text in the operating instructions before installing and commissioning the device. The operating instructions are intended to help the user to become familiar with the machine and take advantage of its application possibilities in accordance with the recommendations. The operating instructions contain important information on how to operate the machine safely, professionally and economically, how to avoid danger, costly repairs, reduce downtimes and how to increase reliability and service life of the machine.

In addition to the safety regulations in the operating instructions, you have to meet the applicable regulations that apply for the operation of the machine in your country. Keep the operating instructions package with the machine at all times and store it in a plastic cover to protect it from dirt and moisture. Read the instruction manual each time before operating the machine and carefully follow its information. The machine can only be operated by persons who were instructed concerning the operation of the machine and who are informed about the associated dangers. The minimum age requirement must be complied with.

In addition to the safety notices contained in this operating manual and the particular instructions for your country, the generally recognised technical regulations for the operation of identical devices must be complied with.

2. Device description (Fig 1-4)

1. Transport handle
2. Pressure switch
3. Pressure vessel
4. Supporting foot
5. Housing cover
6. Motor
7. Air filter
8. Overload / protection switch
9. Oil plug
10. Oil level -control display / Oil drain plug

11. Drain plug for condensation water
12. Safety valve
13. Pressure gauge (for reading the preset vessel pressure)
14. Pressure gauge (for reading the set pressure)
15. Quick-lock coupling (regulated compressed air)
16. Pressure regulator
17. ON/OFF switch
 - A Screw
 - B Washer
 - C Air filter cover
 - D Interior air filter element
 - E Filter element

3. Unpacking

- Open the packaging and remove the device carefully.
- Remove the packaging material as well as the packaging and transport bracing (if available).
- Check that the delivery is complete.
- Check the device and accessory parts for transport damage.
- If possible, store the packaging until the warranty period has expired.

ATTENTION!

The device and packaging materials are not toys!

Children must not be allowed to play with plastic bags, film and small parts! There is a risk of swallowing and suffocation!

4. Intended use

The compressor is designed to generate compressed air for compressed-air driven tools which can be driven with an air volume of up to approx. 130 l/min (e.g. tire inflator, blow-out pistol and paint spray gun). Due to the limited air output it is not possible to use the compressor to drive tools with very high air consumption (for example orbital sanders, rod grinders and hammer screwdrivers).

The equipment is to be used only for its prescribed purpose.

Any other use is deemed to be a case of misuse.

The user / operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of this.

Please note that our equipment has not been designed for use in commercial, trade or industrial applications. Our warranty will be voided if the equipment is used in commercial, trade or industrial businesses or for equivalent purposes.

5. Safety information

Attention! The following basic safety measures must be observed when using electric tools for protection against electric shock, and the risk of injury and fire.

Read all these notices before using the electric tool and keep the safety instructions for later reference.

Safe work

1. Keep the work area orderly
 - Disorder in the work area can lead to accidents.
2. Take environmental influences into account
 - Do not expose electric tools to rain.
 - Do not use electric tools in a damp or wet environment.

There is a risk of electric shock!

 - Make sure that the work area is well-illuminated.
 - Do not use electric tools where there is a risk of fire or explosion.
3. Protect yourself from electric shock
 - Avoid physical contact with earthed parts (e.g. pipes, radiators, electric ranges, cooling units).
4. Keep children away
 - Do not allow other persons to touch the equipment or cable, keep them away from your work area.
5. Securely store unused electric tools
 - Unused electric tools should be stored in a dry, elevated or closed location out of the reach of children.
6. Do not overload your electric tool
 - They work better and more safely in the specified output range.
7. Wear suitable clothing
 - Do not wear wide clothing or jewellery, which can become entangled in moving parts.
 - Rubber gloves and non-slip shoes are recommended when working outdoors.
 - Tie long hair back in a hair net.
8. Do not use the cable for purposes for which it is not intended
 - Do not use the cable to pull the plug out of the outlet. Protect the cable from heat, oil and sharp edges.
9. Take care of your tools
 - Keep your compressor clean in order to work well and safely.
 - Follow the maintenance instructions.
 - Check the connection cable of the electric tool regularly and have it replaced by a recognised specialist when damaged.
 - Check extension cables regularly and replace them when damaged.
10. Pull the plug out of the outlet
 - During non-use of the electric tool or prior to maintenance and when replacing tools.
11. Avoid inadvertent starting
 - Make sure that the switch is switched off when plugging the plug into an outlet.
12. Use extension cables for outdoors
 - Only use approved and appropriately identified extension cables for use outdoors.
 - Only use cable reels in the unrolled state.
13. Remain attentive
 - Pay attention to what you are doing. Remain sensible when working. Do not use the electric tool when you are distracted.
14. Check the electric tool for potential damage
 - Protective devices and other parts must be carefully inspected to ensure that they are fault-free and function as intended prior to continued use of the electric tool.
 - Check whether the moving parts function faultlessly and do not jam or whether parts are damaged. All parts

must be correctly mounted and all conditions must be fulfilled to ensure fault-free operation of the electric tool.

- Damaged protective devices and parts must be properly repaired or replaced by a recognised workshop, insofar as nothing different is specified in the operating manual.
- Damaged switches must be replaced at a customer service workshop.
- Do not use any faulty or damaged connection cables.
- Do not use any electric tool on which the switch cannot be switched on and off.

15. Have your electric tool repaired by a qualified electrician

- This electric tool conforms to the applicable safety regulations. Repairs may only be performed by an electrician using original spare parts. Otherwise accidents can occur.

16. Important!

- For your own safety you must only use the accessories and additional units listed in the operating instructions or recommended or specified by the manufacturer. The use of mounted tools or accessories other than those recommended in the operating instructions or catalog may place your personal safety at risk.

17. Noise

- Wear ear muffs when you use the compressor.

18. Replacing the power cable

- To prevent hazards, leave the replacement of damaged power cables strictly to the manufacturer or a qualified electrician. There is a risk of electric shock!

19. Inflating tires

- Directly after inflating tires, check the pressure with a suitable pressure gauge, for example at your filling station.

20. Roadworthy compressors for building site operations

- Make sure that all lines and fittings are suitable for the maximum permissible operating pressure of the compressor.

21. Place of installation

- Set up the compressor on an even surface.

ADDITIONAL SAFETY INSTRUCTIONS

Safety instructions for working with compressed air and blasting guns

- The compressor pump and lines can become very hot during operation. Touching these parts will burn you.
- The air which is sucked in by the compressor must be kept free of impurities that could cause fires or explosions in the compressor pump.
- When releasing the hose coupling, hold the hose coupling piece with your hand. This way, you can protect yourself against injury from the rebounding hose.
- Wear safety goggles when working with the blow-out pistol. Foreign bodies or blown off parts can easily cause injuries.
- Do not blow at people with the blow-out pistol and do not clean clothes while being worn. Risk of injury!

Operating pressure vessels

- You must keep your pressure vessel in good working order, operate the vessel correctly, monitor the vessel, carry out necessary maintenance and repair work immediately and meet the relevant safety precautions.

- The supervisory authority may enforce essential control measures in individual cases.
- A pressure vessel is not allowed to be used if it has faults or deficiencies that can endanger workers or third parties.
- Check the pressure vessel for signs of rust and damage each time before using. Do not use the compressor with a damaged or rusty pressure vessel. If you discover any damage, then please contact the customer service workshop.

Do not lose these safety instructions

6. Technical data

Mains connection	230 V~ 50 Hz
Motor rating W	max. 1100
Operating mode	S1
Compressor speed min-1	2850 min-1
Pressure vessel capacity (in liters)	8
Operating pressure	approx. 8 bar
Theoretical intake capacity (l/min)	approx. 155
sound power level LWA	93 dB(A)

uncertainty KWA	1.9 dB
Protection type	IP20
Weight of the unit in kg	15

The noise emission values were measured in accordance with EN ISO 3744.

Wear hearing protection.

The effects of noise can cause a loss of hearing.

7. Before starting the equipment

Before you connect the equipment to the mains supply make sure that the data on the rating plate are identical to the mains data.

- Check the equipment for damage which may have occurred in transit. Report any damage immediately to the transport company which was used to deliver the compressor.
- Install the compressor near the point of consumption.
- Avoid long air lines and supply lines (extension cables).
- Make sure that the intake air is dry and dustfree.
- Do not install the compressor in a damp or wet room.
- The compressor may only be used in suitable rooms (with good ventilation and an ambient temperature from +5 °C to 40 °C). There must be no dust, acids, vapors, explosive gases or inflammable gases in the room.
- The compressor is designed to be used in dry rooms. It is prohibited to use the compressor in areas where work is conducted with sprayed water
- Attachment and operation n Important!

You must fully assemble the appliance before using it for the first time! 8.1 Installation of the air filter (7)

- Remove the transport plug (Figure 5 pos. F) and attach the air filter (7) on the unit by turning clockwise (Figure 6).
- Solve for maintenance the air filter (7) by turning counter- clockwise (Figure 6).
- Checking the oil level (Figure 7 – 9) m **Warning: For the first use, check the oil level of** the compressor.
- Operating the machine without oil will cause irreparable damage and render the warranty invalid.
- Remove the plastic oil inlet plug on top of the crank box of the compressor casing. (see fig. 7)
- Check the oil level in the sight glass (10). The oil level should be in the centre of the red circle. (see fig. 8 10.1)
- Attach the closing plug (9), which is included and pull it tight. (fig. 9)
- Mains connection

- The compressor is equipped with a mains cable with shock-proof plug. This can be connected to any 230- 240 V~ 50 Hz shock-proof socket which is protected by a 16 A fuse.
- Before you use the machine, make sure that the mains voltage is the same as the operating voltage (see the rating plate).
- Long supply cables, extensions, cable reels cause a drop in voltage and can impede motor start- up.
- At low temperatures below +5°C, sluggishness may make starting difficult or impossible.
- ON/OFF switch (Fig. 3 17)
- Pull the ON/OFF switch (17) upwards to switch on the To switch off the compressor, press the ON/OFF switch (17) down.
- Setting the pressure (Fig. 3)
- Use the pressure regulator (16) to set the pressure on the pressure gauge (14).
- The set pressure can be drawn from the quicklock coupling (15).
- The vessel pressure can be read off the pressure gauge (13).
- Setting the pressure switch
- The pressure switch (2) is set at the

Cut-in pressure approx. 6 bar

Cut-out pressure approx. 8 bar.

- Overload protection switch (fig. 1 8)
- The compressor has an automatic protection against thermal overload. The overload protector is activated at high engine
- The device is turned off. Re-commissioning of the de- vice can be done only after cooling down and manual
- Follows after activation:
 - Let the unit cool down
 - Press the overload protection switch (8)
- Start the device as described under 4

9 . Electrical connection

The electrical motor installed is connected and ready for operation. The connection complies with the applicable VDE and DIN provisions.

The customer's mains connection as well as the extension cable used must also comply with these regulations.

Damaged electrical connection cable

he insulation on electrical connection cables is often damaged.

This may have the following causes:

- Passage points, where connection cables are passed through windows or
- Kinks where the connection cable has been improv- erly fastened or
- Places where the connection cables have been cut due to being driven

- Insulation damage due to being ripped out of the wall
- Cracks due to the insulation

Such damaged electrical connection cables must not be used and are life-threatening due to the insulation damage. Check the electrical connection cables for damage regularly. Make sure that the connection cable does not hang on the power network during the inspection.

Electrical connection cables must comply with the applicable VDE and DIN provisions. Only use connection cables with the marking „H05VV-F“.

The printing of the type designation on the connection cable is mandatory.

AC motor

- The mains voltage must be 230 V~
- Extension cables up to 25 m long must have a cross-section of 5 mm².

Connections and repairs of electrical equipment may only be carried out by an electrician.

Please provide the following information in the event of any enquiries:

- Type of current for the motor
- Machine data – type plate
- Machine data – type plate

10. Cleaning, maintenance, and storage

n Important!

Pull out the power plug before doing any cleaning and maintenance work on the equipment. Risk of injury from electric shock! **n Important!**

Wait until the equipment has cooled down completely! Risk of burns! **n Important!**

Always depressurize the equipment before carrying out any cleaning and maintenance work! Risk of injury!

- Cleaning
- Keep the equipment free of dirt and dust as far as possible. Wipe the equipment with a clean cloth or blow it down with compressed air at low pressure.
- We recommend that you clean the equipment immediately after you use it.
- Clean the equipment regularly with a damp cloth and some soft soap. Do not use cleaning agents or solvents; these may be aggressive to the plastic parts in the equipment. Ensure that no water can get into the interior of the equipment.
- You must disconnect the hose and any spraying tools from the compressor before cleaning. Do not clean the compressor with water, solvents or the
- Maintenance work on the pressure vessel/condensed water (Fig. 1/2)

m Important!

To ensure a long service life of the pressure vessel (3), drain off the condensed water by opening the drain valve (11) each time after using.

Release the vessel pressure first (see 10.8). Open the drain screw by turning counter-clockwise (looking at the screw from the bottom of the compressor) so that all the condensed water can run out of the pressure vessel. Then close the drain screw again (turn it clockwise). Check the pressure vessel for signs of rust and damage each time before using. Do not use the compressor with a damaged or rusty pressure vessel. If you discover any damage, then please contact the customer service workshop.

- Safety valve (Fig. 3/Pos. 12)

The safety valve (12) has been set for the highest permitted pressure of the pressure vessel. It is prohibited to adjust the safety valve or remove its seal. Actuate the safety valve from time to time to ensure that it works when required. Pull the ring with sufficient force until you can hear the compressed air being released. Then release the ring again.

- Checking the oil level at regular intervals (Figure 8)

Place the compressor on a level and straight surface. The oil level must be between the MAX and MIN marks on the oil level window (10).

Oil change: we recommend SAE 15W 40 or equivalent. The original oil filling must be changed after 100 hours in operation; thereafter the oil must be drained and replaced with new oil after every 500 hours in operation.

- Changing the oil (Figure 8/9)

Switch off the engine and pull the mains plug out of the socket. After releasing any air pressure you can unscrew the oil drain plug (10) from the compressor pump. To prevent the oil from running out in an uncontrolled manner, hold a small metal chute under the opening and collect the oil in a vessel. If the oil does not drain out completely, we recommend tilting the compressor slightly. When the oil has drained out, refit the oil drain plug (10).

Dispose of the old oil at a drop-off point for old oil.

To fill in the correct quantity of oil, make sure that the compressor stands on an even surface. Fill new oil through the oil filler opening (9.1) until it comes up to the maximum level. This is marked with a red dot on the oil level window (10) (Fig. 8 pos. 10.1). Do not exceed the maximum filling quantity. Overfilling the equipment may result in damage. Reinsert the oil sealing plug (9) into the oil filler opening (9.1).

- Cleaning the intake filter (Fig. 4, 6)

The intake filter prevents dust and dirt being drawn in. It is essential to clean this filter after at least every 300 hours in service. A clogged intake filter will decrease the compressor's performance dramatically. Open the thumb screw (A) to remove the intake filter.

Then pull off the filter cover (C). Now you can remove the air filter (E) and the filter housing (D). Carefully tap out the air filter, filter cover and filter housing. Then blow out these parts with compressed air (approx. 3 bar) and reinstall in reverse order.

- Storage

Important!

Pull out the mains plug and ventilate the equipment and all connected pneumatic tools. Switch off the compressor and make sure that it is secured in such a way that it cannot be started up again by any unauthorized person.

m Important!

Store the compressor only in a dry location which is not accessible to unauthorized persons. Always store upright, never tilted!

- **Releasing excess pressure**

Release the excess pressure by switching off the compressor and using the compressed air which is still left in the pressure vessel, e.g. with a compressed air tool running in idle mode or with a blow-out pistol.


11. Disposal and recycling

The equipment is supplied in packaging to prevent it from being damaged in transit. The raw materials in this packaging can be reused or recycled. The equipment and its accessories are made of various types of material, such as metal and plastic. Defective components must be disposed of as special waste. Ask your dealer or your local council.

12. Troubleshooting

Read More About This Manual & Download PDF:

Documents / Resources

	<p>scheppach HC08 Compressor Machine [pdf] Instruction Manual HC08, Compressor Machine, Compressor, HC08, Machine</p>
---	---

References

-  [scheppach | scheppach](#)