




SECURE E7 Plus Hot Water Programmer Instruction Manual

[Home](#) » [SECURE](#) » SECURE E7 Plus Hot Water Programmer Instruction Manual 

SECURE

E7+

Quick installation and operation guide

 BGX701-348-RO2



Contents

[1 E7 Plus Hot Water Programmer](#)

[2 Safety precautions](#)

[3 In the box](#)

[4 Retrofit](#)

[5 Installation \(new\)](#)

[6 Technical specifications](#)

[7 Documents / Resources](#)

[7.1 References](#)

E7 Plus Hot Water Programmer


Tools



Safety precautions


- Installation and connection should only be carried out by a suitably qualified person in accordance with the current edition of the IET wiring regulations.
- E7+ should be mounted approximately 1.5 metres above floor level, in 'free space', away from sources of heat or electrical interference.
- Means of disconnection from the supply having at least 3 mm contact separation in both poles must be incorporated in the fixed wiring.
- We recommends a separate fused circuit from the consumer unit (24 Hour supply) protected by a 15 amp HRC fuse or, preferably, a 16 amp MCB
- Installation of a 100 mA RCD will provide additional protection for the unit.

In the box

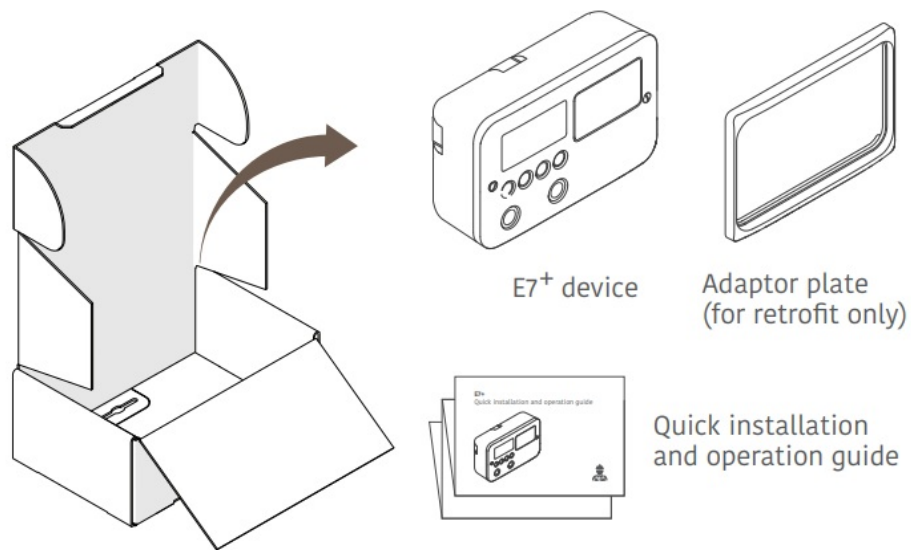


Retrofit


1. Unscrew and open the front cover

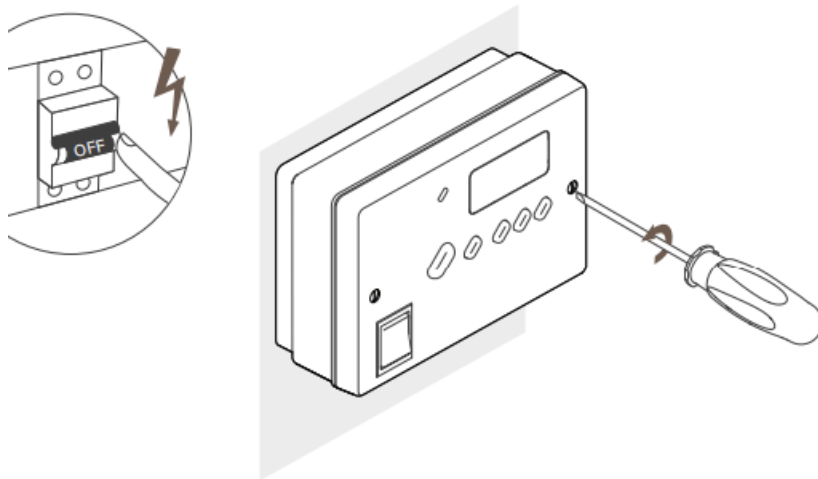

2. Remove all five lugs and scrap the old front cover

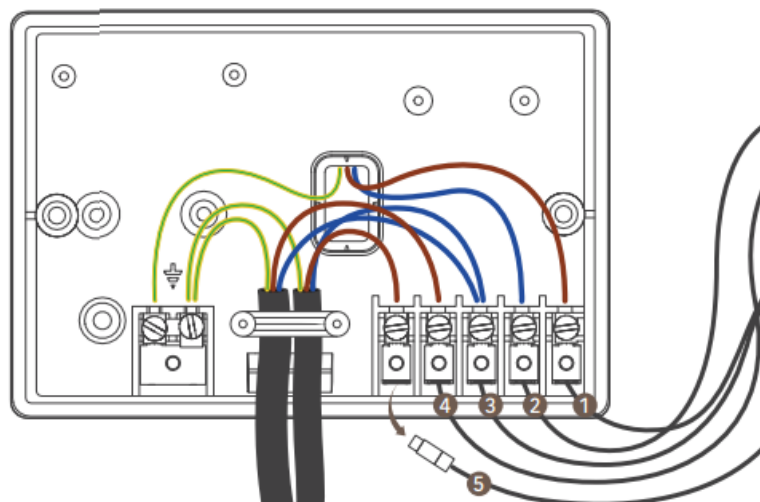


3. Remove both the screws on the front cover

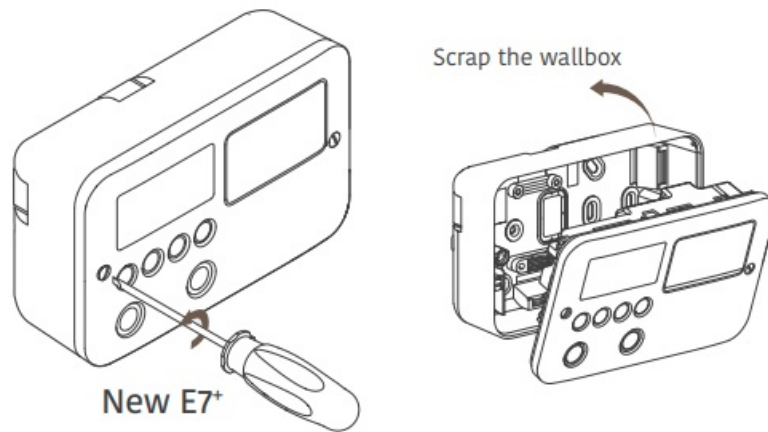


Note: Scrap the wallbox adhering to local regulations

4. Route the wires

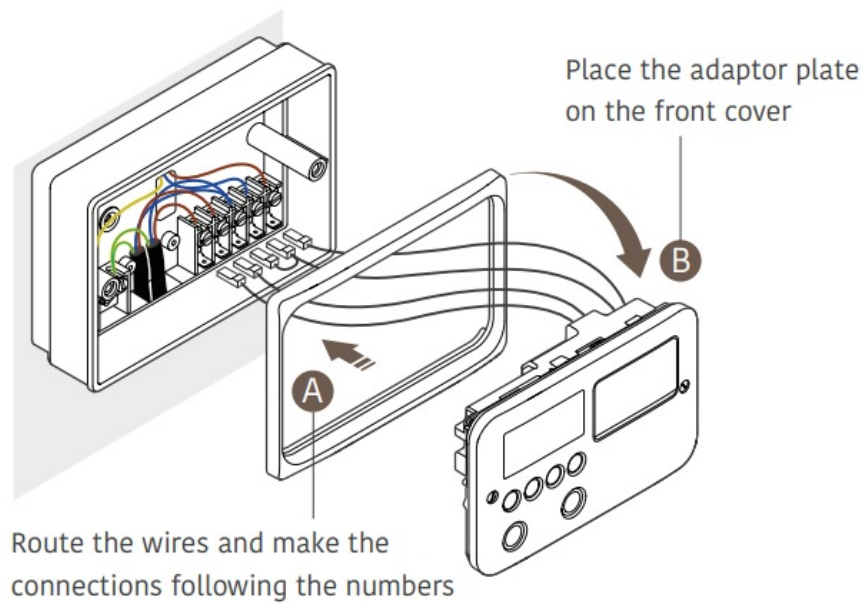


5. Fit the front cover

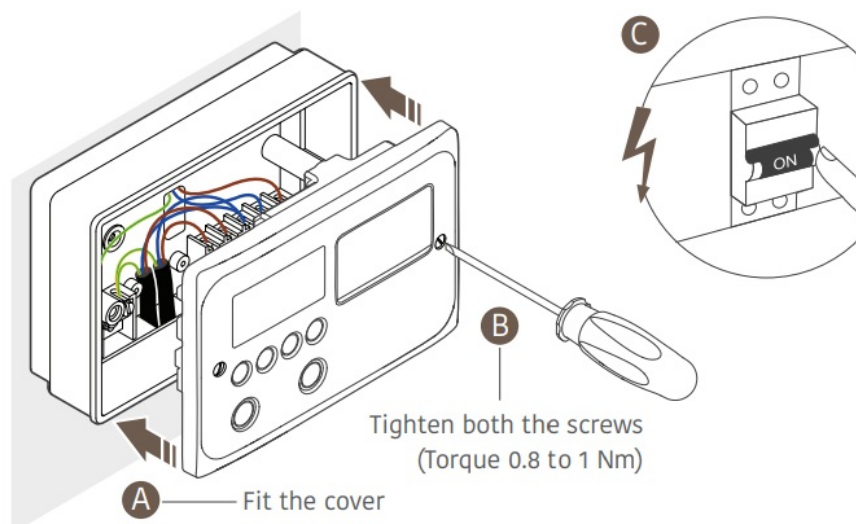

Note: Go to section 8 for settings


Installation (new)

1. Unscrew the screws

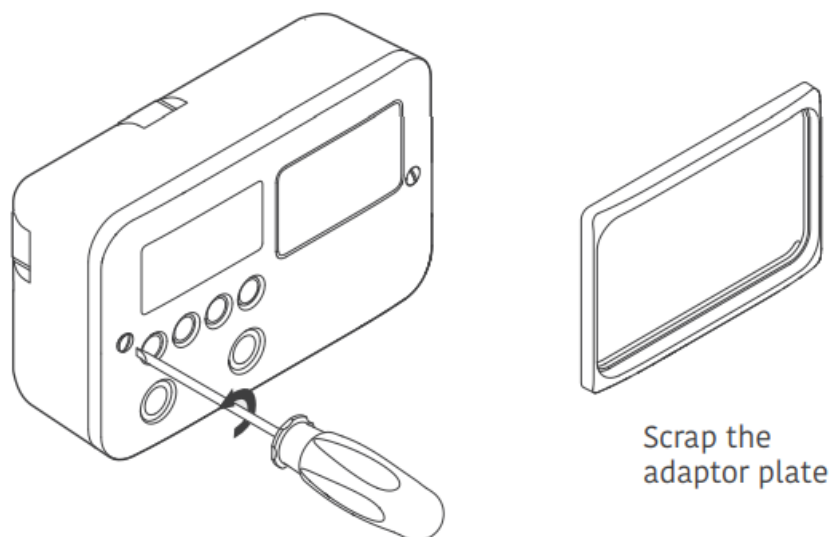


Note: The supplied Adaptor plate is ONLY required when retrofitting the E7+ onto an existing Electronic 7 or Economy 7 quartz back box.

2. Take out the front cover

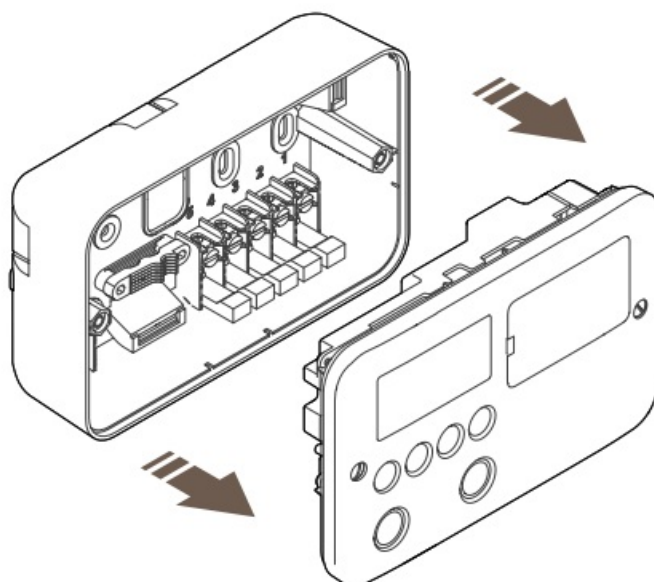


3. Cable entry options

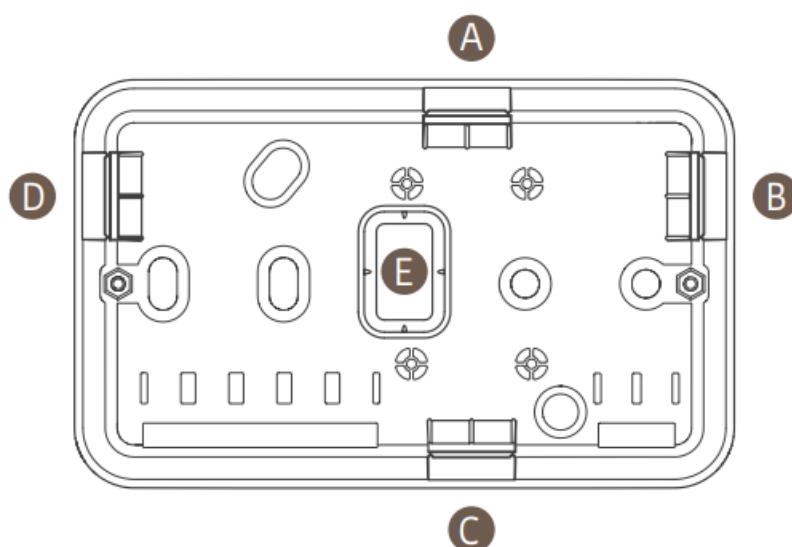

Note: Remove the suitable cable entry cutout before fixing the box. Take care to remove sharp edges.

4. Select mounting option

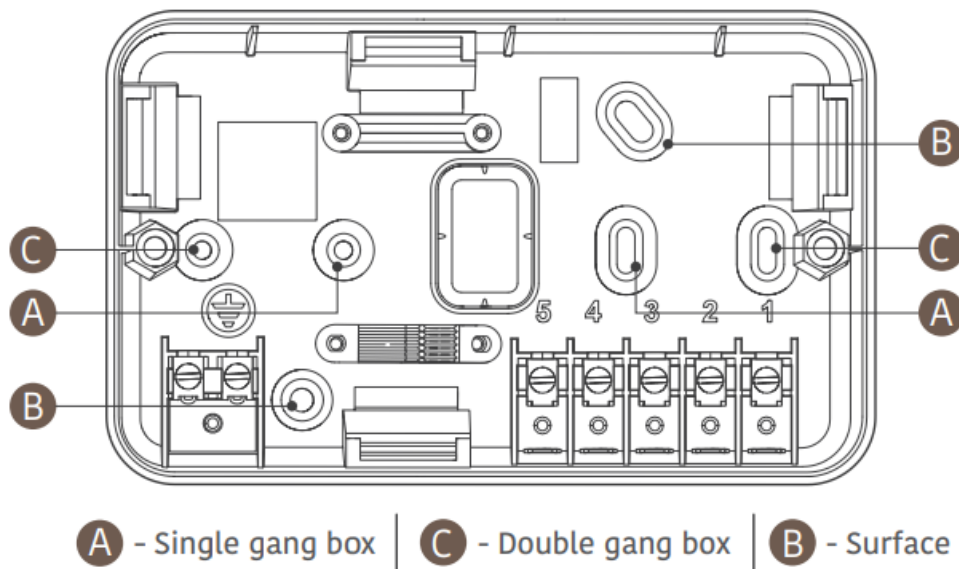

Note: Select the most appropriate mounting option

5. Connection diagram and cable details

Use a three-core cable with a minimum conductor size of 1.0mm for a 2kW heater, or 1.5mm for a 3kW heater to connect the unit to the supply.

Connect the incoming wires to the terminal block as follows;

TERMINAL 1 -LIVE in


TERMINAL 2- NEUTRAL in

TERMINAL 3 – NEUTRAL(s) out to immersion heater(s)

TERMINAL 4 – LIVE out to Boost immersion heater




TERMINAL 5- LIVE out to Off-Peak immersion heater

Clamp all surface wiring adjacent to the box or use trunking where appropriate. Secure the heat resistant flexible cords from the immersion heaters using the cable clamp in the box.

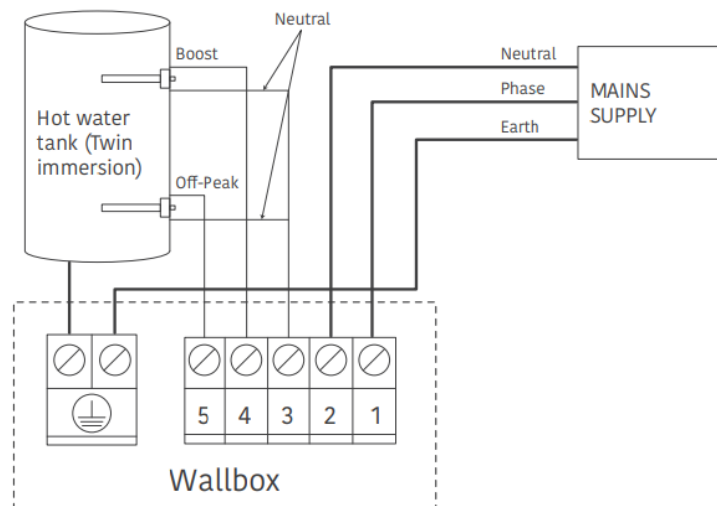


Note: Link terminals 4 and 5 when using a single immersion heater.

6. Connection with immersion heater(s)*

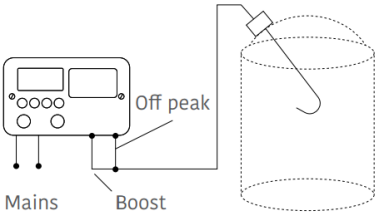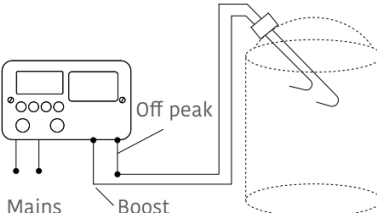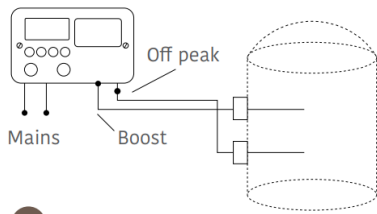
 <p>A Single immersion heater</p>	<p>The 3 core flexible cord should be heat-resistant and rated to 85°C.</p> <p>TERMINAL 4 (Boost live output) should be connected to TERMINAL 5 (O- Peak live output) and to the immersion heater.</p> <p>The Neutral connection should go to TERMINAL 3 and the Earth connection to the EARTH TERMINALS.</p>
 <p>B Dual immersion heater</p>	<p>The thermostat for the top (short) element is usually set 5-10°C less than the thermostat for the long Off-Peak element.</p> <p>The 3 core flexible cords should be heat-resistant and rated 85°C.</p> <p>TERMINAL 4 (boost live output) should be connected to the short element and TERMINAL 5 (Off-Peak live output) to the long element.</p> <p>The Neutral connections should go to TERMINAL 3 and the Earth connection to the EARTH TERMINALS.</p>
 <p>C Twin immersion heater</p>	<p>The thermostat for the top immersion element should be set lower than the thermostat for the bottom immersion heater. The 3 core flexible cords should be heat-resistant and rated 85°C.</p> <p>TERMINAL 4 (boost live output) should be connected to the top immersion heater and TERMINAL 5 (off-peak live output) to the bottom immersion heater. The two Neutral connections should go to TERMINAL 3 and the Earth connections to the EARTH TERMINALS.</p>

Note: Refer connection diagram in section 5


7. Make connections, insert the lugs according to the numbering and tie the wires using the cable tie.

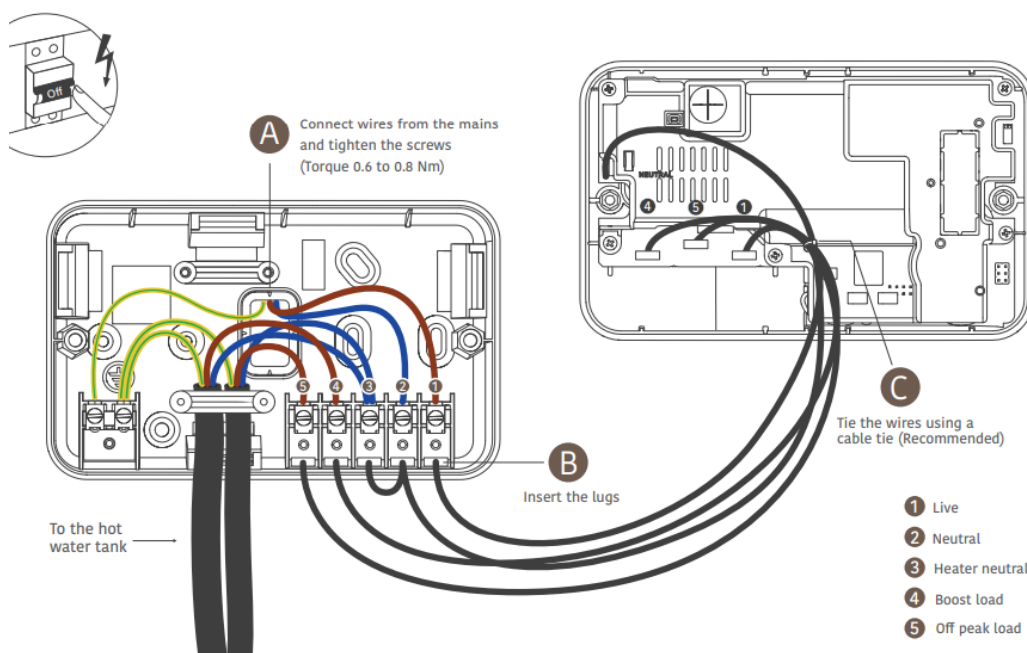


8. Fix the cover and tighten both the screws

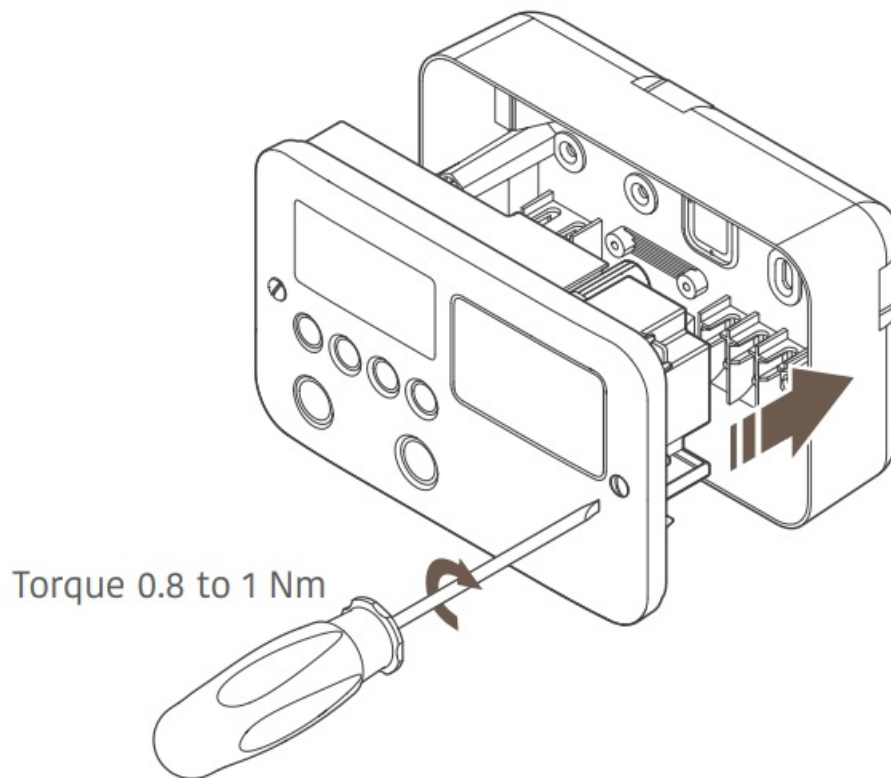


9. Insert the Wi-Fi module (if required)

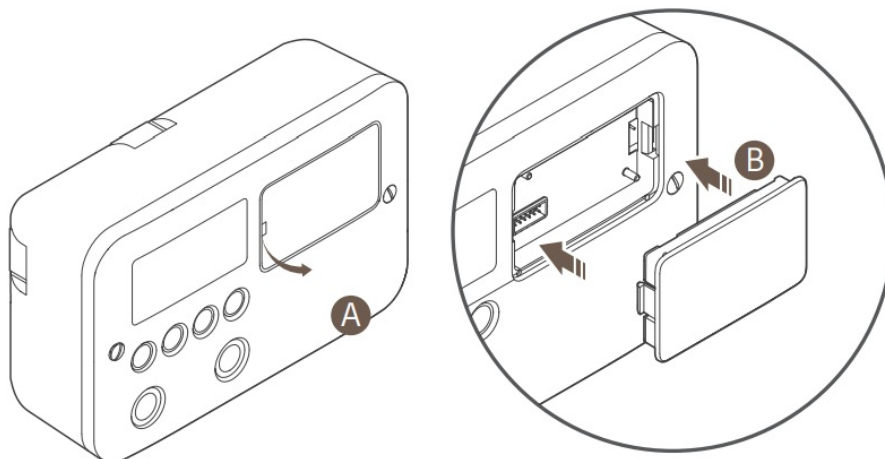

 802,11 B/G/N, 2.4 GHz wireless router with internet

10. Power up the device and select day light saving option

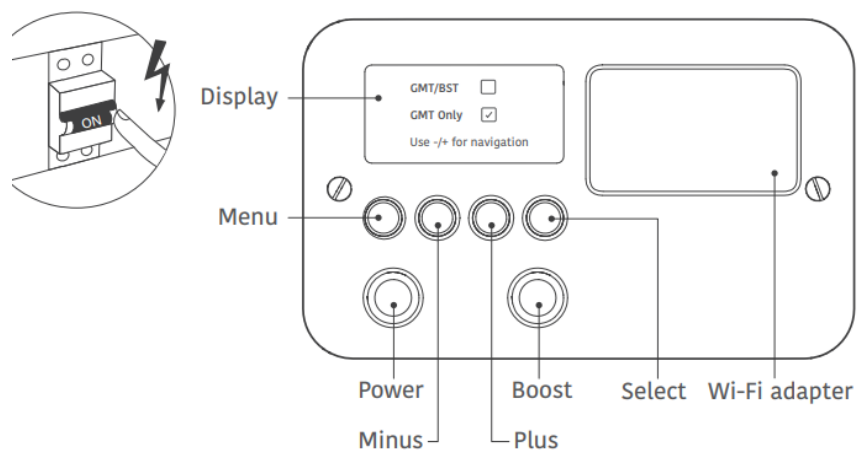

GMT/BST -Switching time will be changed by one hour. In the GMT/BST mode the clock display will match the actual switching time.

GMT ONLY- Switching will always take place at GMT times (summer and winter). The clock display will tell the


correct time of day.


If Connection is to be made where a 2-Rate electricity meter is controlled by a Radio Teleswitch or other equipment which control tariffs remotely or seasonally, it is essential that before setting the commissioning switch you find out how the off-peak times are controlled.

The Customer Service Centre of your Electricity Supplier will confirm information regarding Off-Peak electricity timing and the switching method used for your area.

On installations where the 2-Rate electricity meter is controlled by a mechanical Tariff Time switch the commissioning switch should be set to GMT ONLY.

11. Home screens

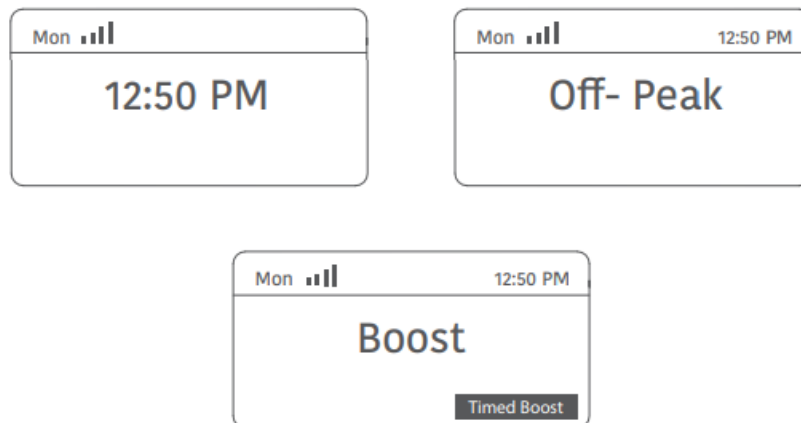

Notes: 1. One of the above screens will appear on power up 2.  appears only when E7 + is connected to the Wi-Fi network.

12. Know the buttons

Button	Function(s)
Power	To On/Off the device
select	<ul style="list-style-type: none">•To enter a setting/option•To confirm a selection•To enable/disable timed boost
Plus (+)	<ul style="list-style-type: none">•To increase the date, time•To navigate between different menus/menu items in the forward direction
Minus (-)	<ul style="list-style-type: none">•To decrease the date, time•To navigate between different menus/menu items in the backward direction
Menu	<ul style="list-style-type: none">•To enter the main menu•To return back to previous menu from within a submenu/selection
Boost	To set Boost manually

13. Default schedule (Monday to Sunday)

Off peak	1st On	1st Off	2nd On	2nd Off	3rd On	3rd Off
	2:15 am	7:15 am	12:00 pm	12:00 pm	12:00 pm	12:00 pm

Boost	On	O
	12:00 AM	12:00 AM

Technical specifications

Electrical	
Number of relays	2
Contact rating	13 A resistive (max), suitable for immersion heaters up to 3 kW
Contact type	Micro-interruption
Switch type	Contact
Supply	230 V \pm 10%AC, 47.5 – 52.5 Hz
Insulation category	CAT II
Software class	Class A
Clock	12/24 hours
Programme selection	Off-Peak – upto 3 on/off time periods, programmable boost and 30 minutes, 1 hour & 2 hours manual boost
Live parts	Enclosed

Radio	
Operating frequency	2.4 GHz
RF range	~60m, line of sight

Mechanical	
Dimensions	102 mm x 165 mm x 54 mm (W*L*H)
Weight	425 gms (approx)
Case material	Thermoplastic, flame retardant
Mounting	Wall mounting
Environmental	
Impulse voltage rating	Cat II 2500V
Enclosure protection	IP30
Pollution degree	Degree 2
Operating temperature range	0oC to +35oC
Storage temperature	-20oC to +70oC
Environmental humidity range	0% to +95% relative humidity
Product life warranty	7 years
Compliance	
Product standards	EN 60730-2-9, BS EN 60730-1
RED radio	ETSI EN 300 328,
RED EMC	ETSI EN 301 489-1,ETSI EN 301 489-17



www.securemeters.com

Secure Meters (UK) Ltd
Secure House, Lulworth Close,
Chandlers Ford, Eastleigh,
SO53 3TL, England



BGX701-348

Documents / Resources

	<p>SECURE E7 Plus Hot Water Programmer [pdf] Instruction Manual E7 Plus, E7 Plus Hot Water Programmer, Hot Water Programmer, Water Programmer, Programmer</p>
--	---

References

-  [Secure Meters](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.