


SEMIKRON
innovation+service
SKYPER 32PRO
R Semikron
Board

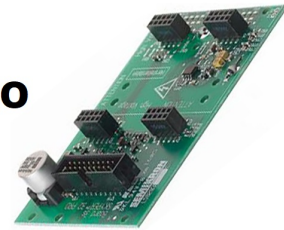

SKYPER 32PRO R Semikron Board User Guide


[Home](#) » [SEMIKRON](#) » SKYPER 32PRO R Semikron Board User Guide 

Contents

- 1 SKYPER 32PRO R Semikron Board
- 2 Product Information
- 3 Application and Handling Instructions
- 4 General Description
- 5 Quality
- 6 Dimensions
- 7 Component Placement Layout
- 8 PIN Array
- 9 Setting Dead Time
- 10 Adaptation Gate Resistors
- 11 Setting Soft Turn-Off
- 12 Temperature Signal
- 13 Mounting
- 14 Schematics
- 15 Parts List
- 16 Documents / Resources
 - 16.1 References

SEMIKRON
innovation+service

SKYPER 32PRO R Semikron Board

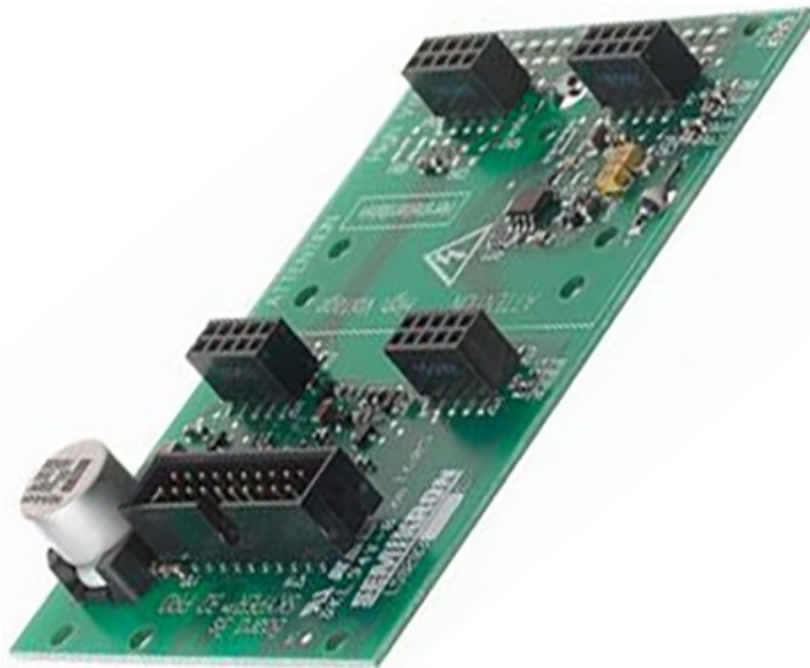

Product Information

The 32PRO R is an IGBT Driver with an Adapter Board SKYPER. Please note that all values in this technical explanation are typical values and may vary in different applications.

- **Application and Handling Instructions**

For design support and further application assistance, visit www.semikron.com. You can also refer to the SEMIKRON Application Manual Power Modules available on the website.

- **General Description**

The product undergoes various quality tests including Automated Optical Inspection, In-Circuit Test, Electrical Parameters Test, Isolation Test, Thermal Cycling, Partial Discharge Test, Temperature Humidity Vibration Test, and Shock Test.

- **Dimensions**

Dimensions: 16.73mm x 2.77mm x 40.37mm x 97.27mm x 100mm.

- **Component Placement Layout**

Refer to Figure 3 for the Adaptor Board layout.

- **PIN Array**

Refer to Figure 4 for Connector X20 (Assmann AWHW 20G SMD) details. Product information for suitable female connectors is available at www.harting.com (part number 09 18 520 6 813).

- **Signal IF_CMN_nHALT**

Refer to Figure 5 for Connection IF_CMN_nHALT details.

- **Setting Dead Time**

Designation	Pattern Name	Setting
R43 (connected to GND)	0603	PRIM_CFG_TDT2_IN Factory setting: 0
R44 (connected to GND)	0603	PRIM_CFG_SELECT_IN Factory setting: not equipped

Frequently Asked Questions (FAQ)

Q: Where can I find additional technical support for the 32PRO R?

A: For further technical assistance, visit the SEMIKRON website at www.semikron.com or refer to the Application Manual Power Modules available on the website.

Please note:

All values in this technical explanation are typical values. Typical values are the average values expected in large quantities and are provided for information purposes only. These values can and do vary in different applications. All operating parameters should be validated by the user's technical experts for each application.

Application and Handling Instructions

- Please provide static discharge protection during handling. As long as the hybrid driver is not completely assembled, the input terminals have to be short-circuited. Persons working with devices have to wear a grounded bracelet. Any synthetic floor coverings must not be statically chargeable. Even during transportation the input terminals have to be short-circuited using, for example, conductive rubber. Worktables have to be grounded. The same safety requirements apply to MOSFET- and IGBT modules.
- Any parasitic inductances within the DC-link have to be minimized. Over-voltages may be absorbed by C- or RCD-snubber networks between main terminals for PLUS and MINUS of the power module.
- When first operating a newly developed circuit, SEMIKRON recommends applying low collector voltage and load current in the beginning and increasing these values gradually, observing the turn-off behavior of the free-wheeling diode and the turn-off voltage spikes generated across the IGBT. An oscillographic control will be necessary. Additionally, the case temperature of the module has to be monitored. When the circuit works correctly under rated operation conditions, short-circuit testing may be done, starting again with low collector voltage.
- It is important to feed any errors back to the control circuit and to switch off the device immediately in failure events. Repeated turn-on of the IGBT into a short circuit with a high frequency may destroy the device.
- The inputs of the hybrid driver are sensitive to over-voltage. Voltages higher than $V_S + 0,3V$ or below $-0,3V$ may destroy these inputs. Therefore, control signal over-voltages exceeding the above values have to be avoided.
- The connecting leads between the hybrid driver and the power module should be as short as possible (max. 20cm), and the driver leads should be twisted.

Further application support

The latest information is available at <http://www.semikron.com>. For design support please read the SEMIKRON Application Manual Power Modules available at <http://www.semikron.com>.

General Description

The Board 3s SKYPER® 32PRO R is an adaptor board for the IGBT module SEMiX® 3s (spring contact version). The board can be customized allowing adaptation and optimization to the used SEMiX® Module. The switching characteristic of the IGBT can be influenced through user settings, e.g. changing turn-on and turn-off speed by variation of RGon and RGoff. Furthermore, it is possible to adjust the monitoring level and blanking time for the DSCP (see Technical Explanations SKYPER® 32PRO R).

Please note:

This technical explanation is based on the Technical Explanations for SKYPER® 32PRO R. Please read the Technical Explanations for SKYPER® 32 PRO R before using the Adaptor Board.

Figure 1: Board 3s SKYPER® 32PRO R


Quality

Table 1: Quality

End test	test category	test description	standard
AOI	Automated Optical Inspection	Control of accurate placement of components/solder joints	SEMIKRON
ICT	In-Circuit Test	Test of the populated PCB, checking the correct fabrication	SEMIKRON
Type test	test category	test conditions	standard
EP	Electrical Parameters	Jamb = -40°C / +85°C	SEMIKRON
SP	STEP Test, Interrupted PS	20x 10µs to 2s	EN61000-4-29
Iso	Isolation Test	High voltage test 4kV, 60s	EN 61800-5-1
TC	Thermal Cycling	200 cycles, Tstgmax – Tstgmin	IEC60068-2-14
PD	Partial discharge test	>1,1 kV; suitable for 900V DC Link	VDE 0110-20
TH	Temperature Humidity	85°C, 85% RH, 96h	IEC 60068-2-67
VB	Vibration	Sinus 20/2000Hz Random 10/2000Hz, 5g, 26 per x,y,z	IEC 60068-2-6
SH	Shock	Half-sinus pulse, 30g, 6000 shocks, 6ms, ±x, ± y, ± z	IEC 60068-2-29


Dimensions


Figure 2: Dimensions in mm

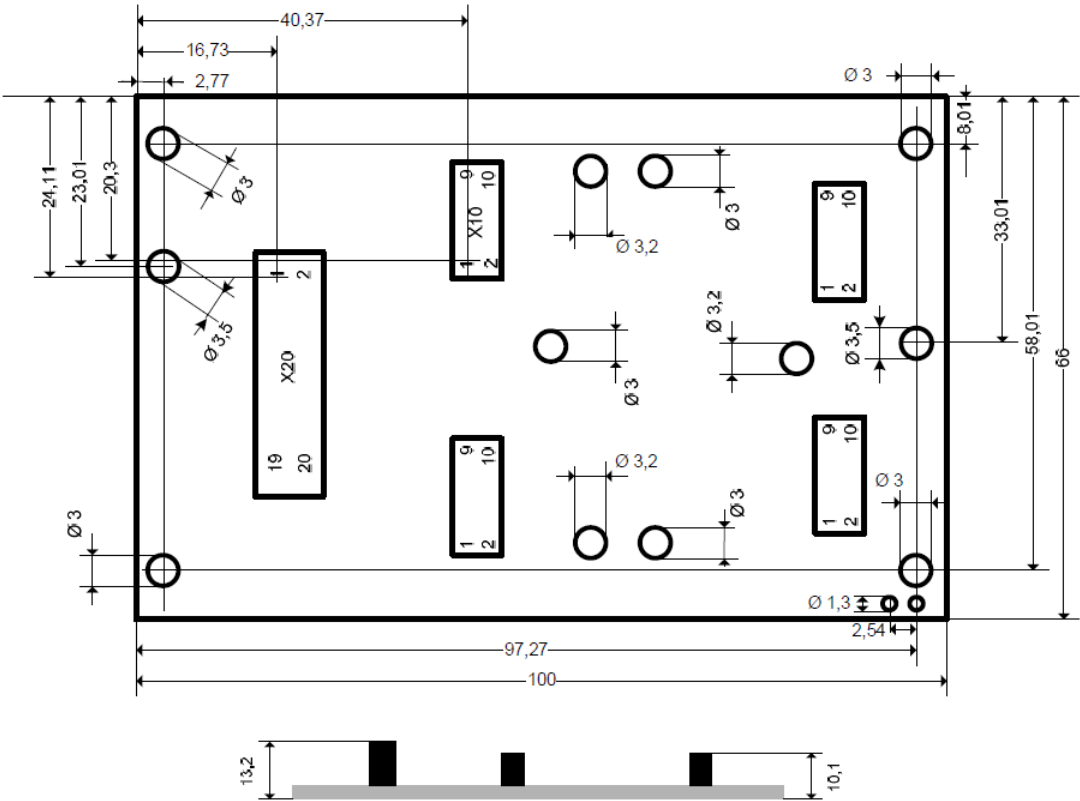

Component Placement Layout


Figure 3: Adaptor Board

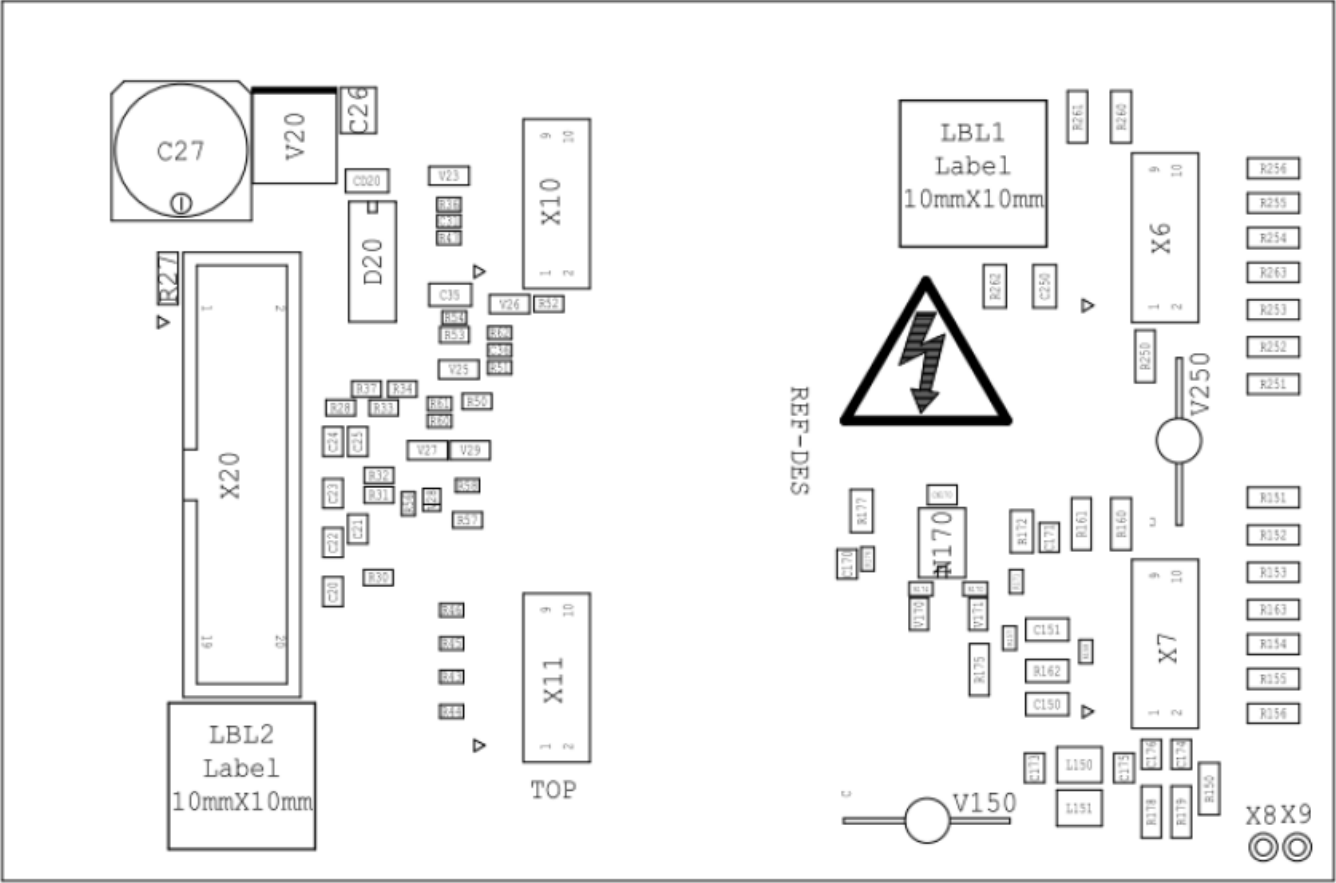

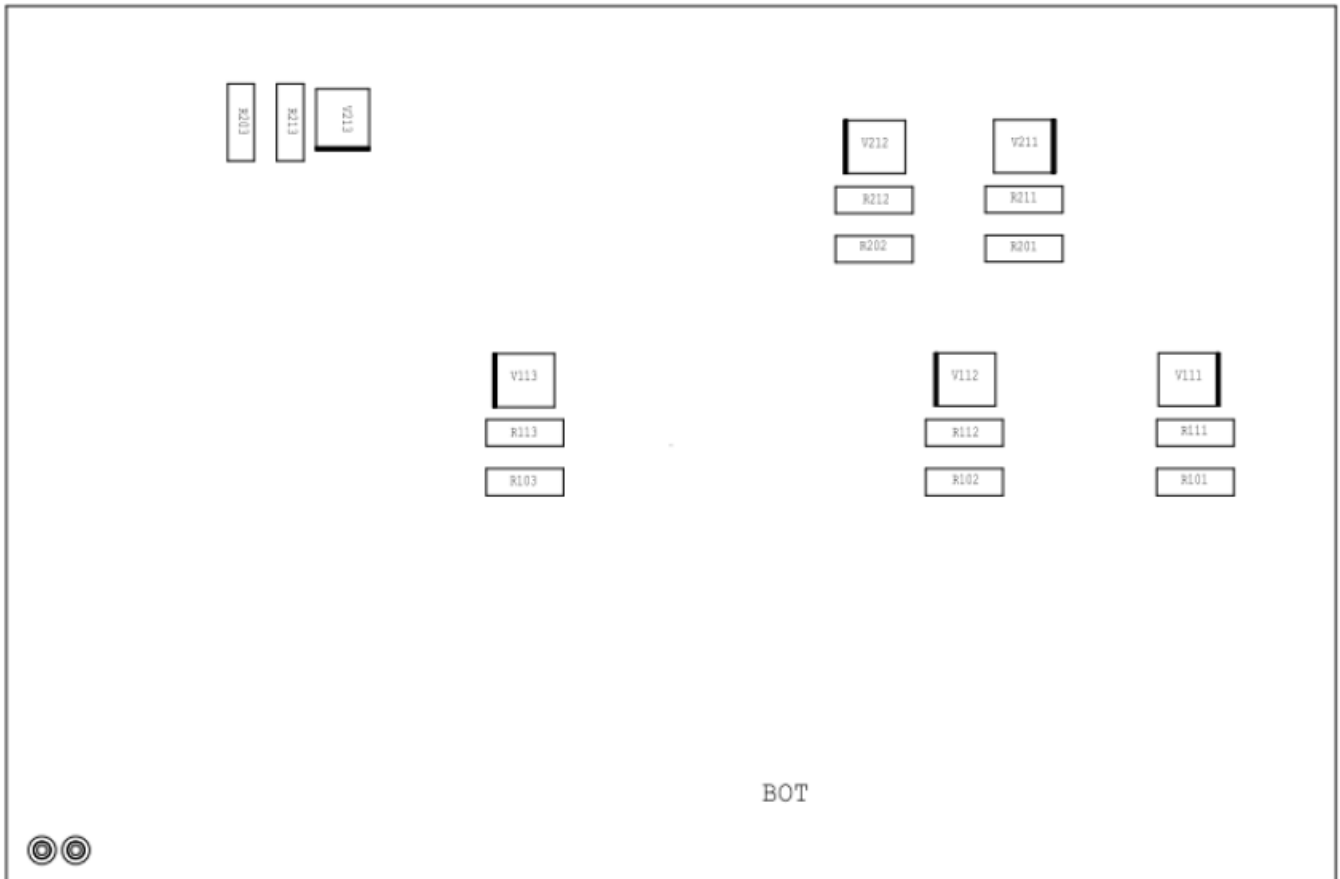

PIN Array

Figure 4: Connector X20 (Assmann AWHW 20G SMD)

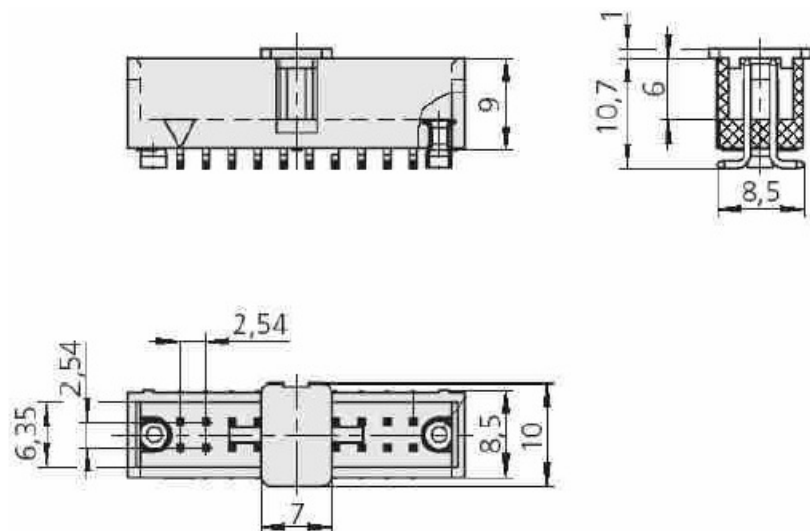

Product information of suitable female connectors and distributor contact information is available at e.g. <http://www.harting.com> (part number 09 18 520 6 813).

Table 2: PIN Array			
PIN	Signal	Function	Specification
X20:01	IF_PWR_15P	Drive power supply	Stabilised +15V \pm 4%
X20:02	IF_PWR_GND	GND for power supply	
X20:03	IF_PWR_15P	Drive power supply	Stabilised +15V \pm 4%
X20:04	IF_PWR_GND	GND for power supply	
X20:05	IF_PWR_15P	Drive power supply	Stabilised +15V \pm 4%
X20:06	IF_PWR_GND	GND for power supply	
X20:07	reserved		
X20:08	IF_PWR_GND	GND for power supply	
X20:09	IF_CMN_nHALT	Driver core status signal (bidirectional signal with dominant recessive behavior)	Digital 15V logic; LOW (dominant) = driver disabled; HIGH (recessive) = ready to operate
X20:10	reserved		
X20:11	reserved		
X20:12	IF_CMN_GND	GND for signal IF_CMN_nHALT	
X20:13	reserved		
X20:14	reserved		
X20:15	IF_HB_TOP	Switching signal input (TOP switch)	Digital 15 V logic; 10 kOhm impedance; LOW = TOP switch off; HIGH = TOP switch on
X20:16	IF_HB_BOT	Switching signal input (BOTTOM switch)	Digital 15 V logic; 10 kOhm impedance; LOW = BOT switch off; HIGH = BOT switch on
X20:17	reserved		
X20:18	IF_HB_GND	GND for signals IF_HB_TOP & IF_HB_BOT	
X20:19	reserved		
X20:20	reserved		


Signal IF_CMN_nHALT

The Halt Logic Signals PRIM_HALT_IN and PRIM_HALT_OUT of the driver core are coupled to one bidirectional signal (IF_CMN_nHALT) with dominant recessive behavior. IF_CMN_nHALT shows the driver core status. When IF_CMN_nHALT is HIGH (recessive), the driver core is ready to operate. When IF_CMN_nHALT is LOW

(dominant), the driver core is disabled / not ready to operate because of e. g. detected failure or driver core system start.

A controller can hold with the IF_CMN_nHALT signal the driver core in a safe state (e.g. during a start-up of a system or gathered failure signal of other hardware) or generate a coeval release of the paralleled driver. Furthermore, paralleled drivers can send and receive IF_CMN_nHALT signals among each other by using a single-wire bus.

Figure 5: Connection IF_CMN_nHALT

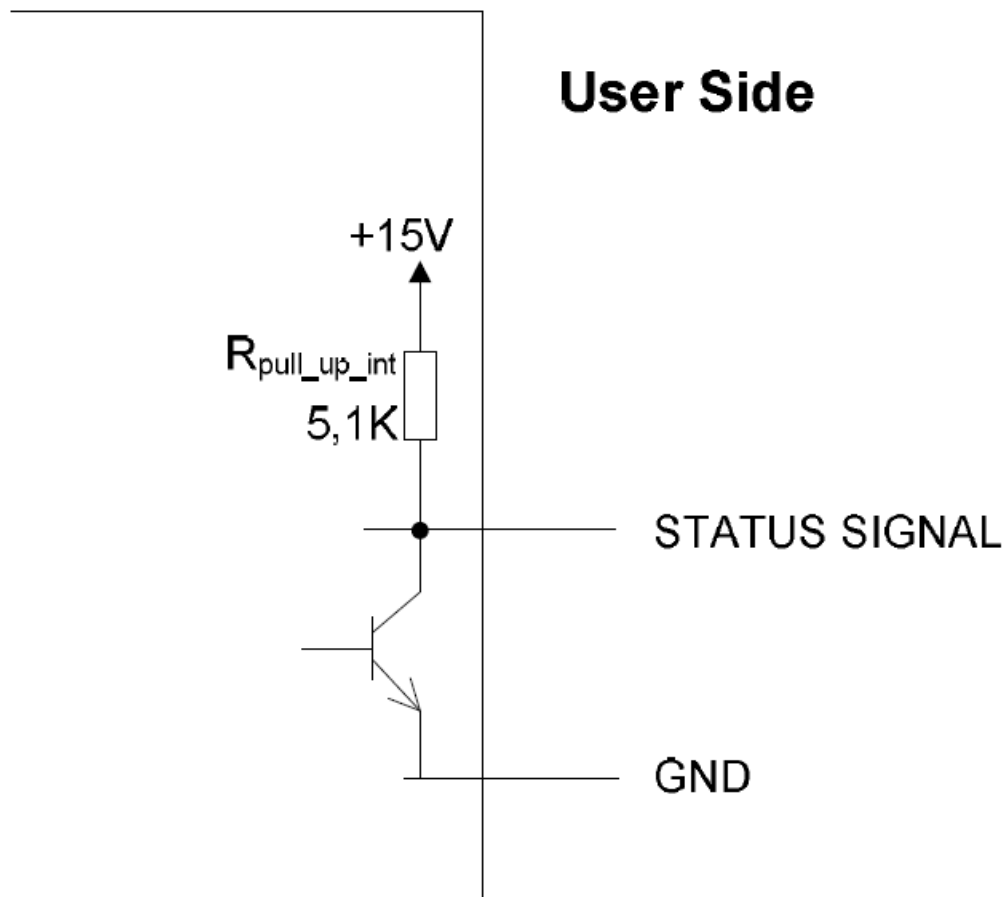

Setting Dead Time

Table 3: DT adjustment		
Designation	Pattern Name	Setting
R43 (connected to GND)	0603	PRIM_CFG_TDT2_IN Factory setting: 0Ω
R44 (connected to GND)	0603	PRIM_CFG_SELECT_IN Factory setting: not equipped
R45 (connected to GND)	0603	PRIM_CFG_TDT3_IN Factory setting: 0Ω
R46 (connected to GND)	0603	PRIM_CFG_TDT1_IN Factory setting: not equipped

Factory setting: 3,3μs

Setting Dynamic Short Circuit Protection

Table 4: R _{CE} & C _{CE}			
Designation	Pattern Name	Setting	
R162	1206	RCE Factory setting: not equipped	TOP
C150	1206	CCE Factory setting: not equipped	TOP
R262	1206	RCE Factory setting: not equipped	BOT
C250	1206	CCE Factory setting: not equipped	BOT

Collector Series Resistance

Table 5: R _{VCE}			
Designation	Pattern Name	Setting	
R150	MiniMELF	RVCE * Factory setting: not equipped	TOP
R250	MiniMELF	RVCE * Factory setting: not equipped	BOT

- 1200V IGBT operation: 0Ω
- 1700V IGBT operation: 1kΩ / 0,4W

Adaptation Gate Resistors

Table 6: R _{Gon} & R _{Goff}			
Designation	Pattern Name	Setting	
R151, R152, R153 (parallel connected)	MiniMELF	RGon Factory setting: not equipped	TOP
R154, R155, R156 (parallel connected)	MiniMELF	RGoff Factory setting: not equipped	TOP
R251, R252, R253 (parallel connected)	MiniMELF	RGon Factory setting: not equipped	BOT
R254, R255, R256 (parallel connected)	MiniMELF	RGoff Factory setting: not equipped	BOT

Adaptation Decoupling Gate Resistors

For details to the decoupling gate resistors and recommended values, see Modules Explanations and Data Sheets SEMiX®.

Table 7: R _{G1} , R _{G2} , R _{G3}			
Designation	Pattern Name	Setting	
R101	MELF	RG1 Factory setting: not equipped	TOP
R102	MELF	RG2 Factory setting: not equipped	TOP
R103	MELF	RG3 Factory setting: not equipped	TOP
R201	MELF	RG1 Factory setting: not equipped	BOT
R202	MELF	RG2 Factory setting: not equipped	BOT
R203	MELF	RG3 Factory setting: not equipped	BOT

Setting Soft Turn-Off

Table 8: R _{Goff_SC}			
Designation	Pattern Name	Setting	
R160, R161 (parallel connected)	MiniMELF	RGoff_SC Factory setting: not equipped	TOP
R260, R261 (parallel connected)	MiniMELF	RGoff_SC Factory setting: not equipped	BOT

Temperature Signal

The temperature sensor inside the SEMiX® module is directly connected to contacting points T1 and T2. For details on the temperature sensor, see Modules Explanations SEMiX®.

Safety Warnings:

The contacting points T1 and T2 are not electrically isolated. Due to the high voltage that may be present at the contacting points T1 and T2, some care must be taken to avoid accidents. There is no cover or potential isolation that protects the high-voltage sections/wires from accidental human contact.

Please note:

If the contacting points T1 and T2 are used for the adaptor of the temperature sensor, the Over Temperature Protection Circuit must be disabled by taking out the resistors R175, R178, and R179.

Over Temperature Protection Circuit (OTP)

The external error input SEC_TOP_ERR_IN on the secondary side (high potential) of the driver core is used for an over-temperature protection circuit to place the gate driver into halt mode.


Dimensioning OTP

1. Define an over-temperature trip level according to the application.
2. Calculate the nominal ohmic resistance value of the temperature sensor at the defined trip level (see “Modules – Explanations – SEMiX®” on the SEMiX® product overview page at <http://www.semikron.com>).
3. The trip level on the adaptor board is set with R172 by using the calculated resistance value.
 - Factory setting R172: not equipped
 - If no resistor is used, a failure signal is generated.

Mounting**Mounting Notes**


The electrical connections between the adaptor board and SEMiX® are realized via spring contacts integrated into SEMiX® power modules and via landing pads on the bottom side of the adaptor board.

Figure 6: Adaptor Board & Driver Core Mounting

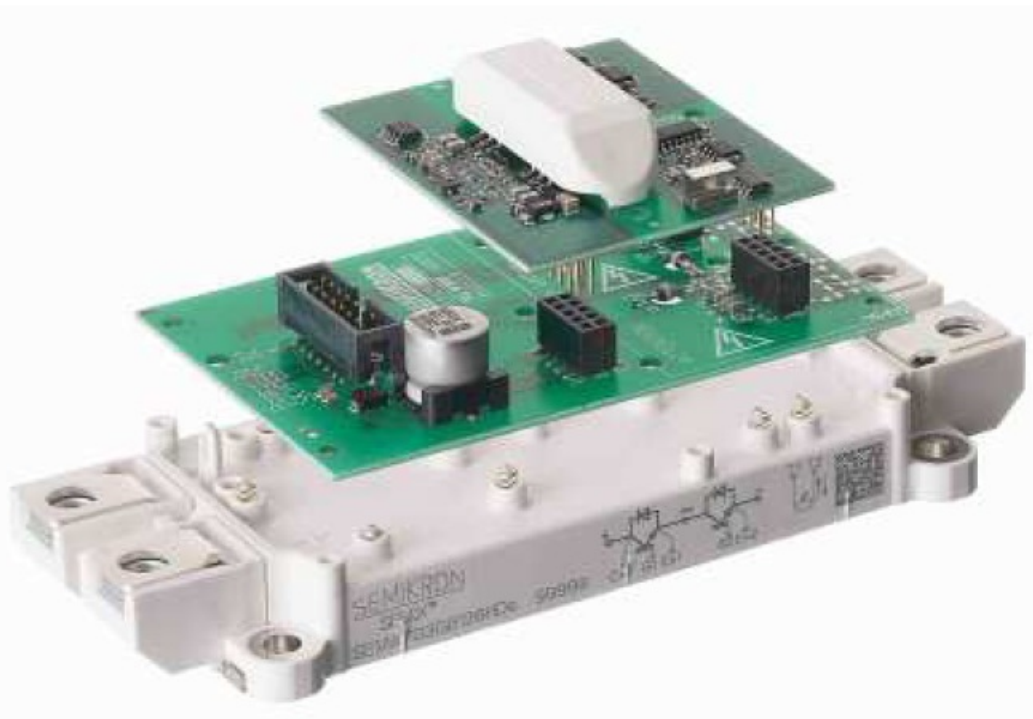

1. Soldering of components (e.g. RGon, RGoff, etc.) on adaptor board.

2. Adaptor Board has to be fixed to the SEMiX® module (see “Mounting Instruction and Application Notes for SEMiX® IGBT modules” on the SEMiX® product overview page at <http://www.semikron.com>).
 3. Insert the driver core into the box connector on the adaptor board.
- The connection between the driver core and the adaptor board should be mechanically reinforced by using support posts. The posts have to be spaced between the driver core and the adaptor board.
 - The product information of suitable support posts and distributor contact information is available at e.g. <http://www.richco-inc.com> (e.g. part number DLMSPM-8-01, LCBST-8-01).

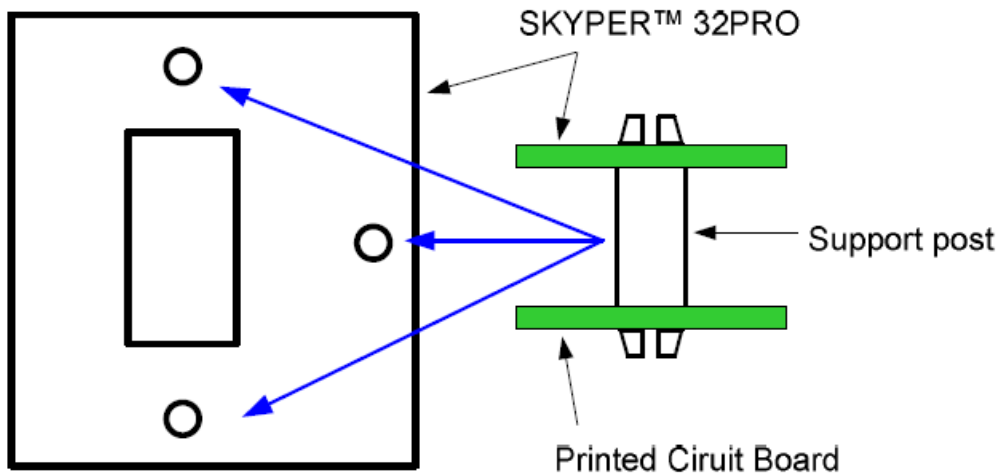

Schematics

Figure 7: Schematic I Adaptor Board

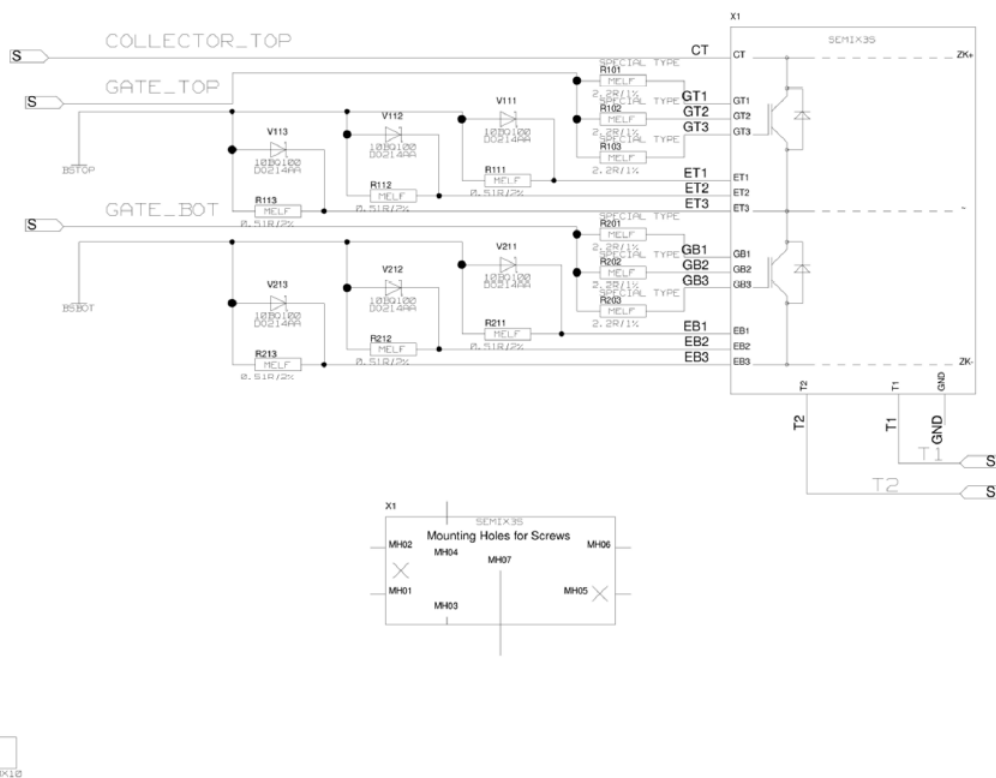


Figure 8: Schematic II Adaptor Board


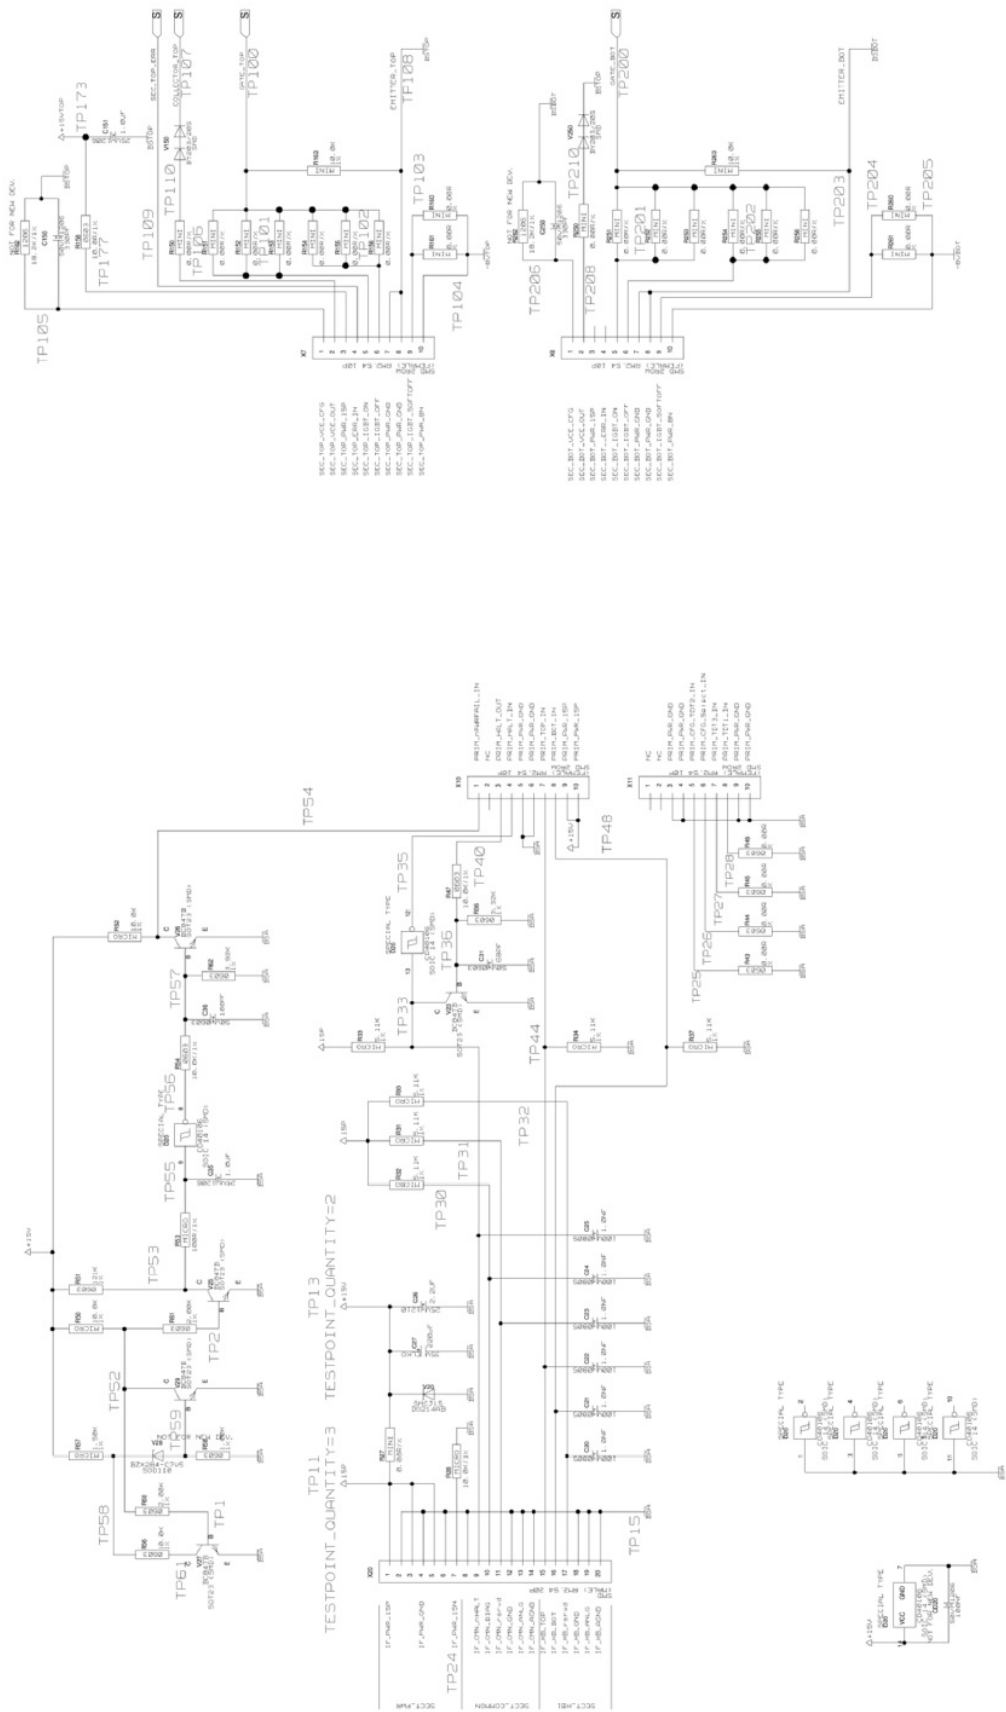


Figure 9: Schematic III Adaptor Board

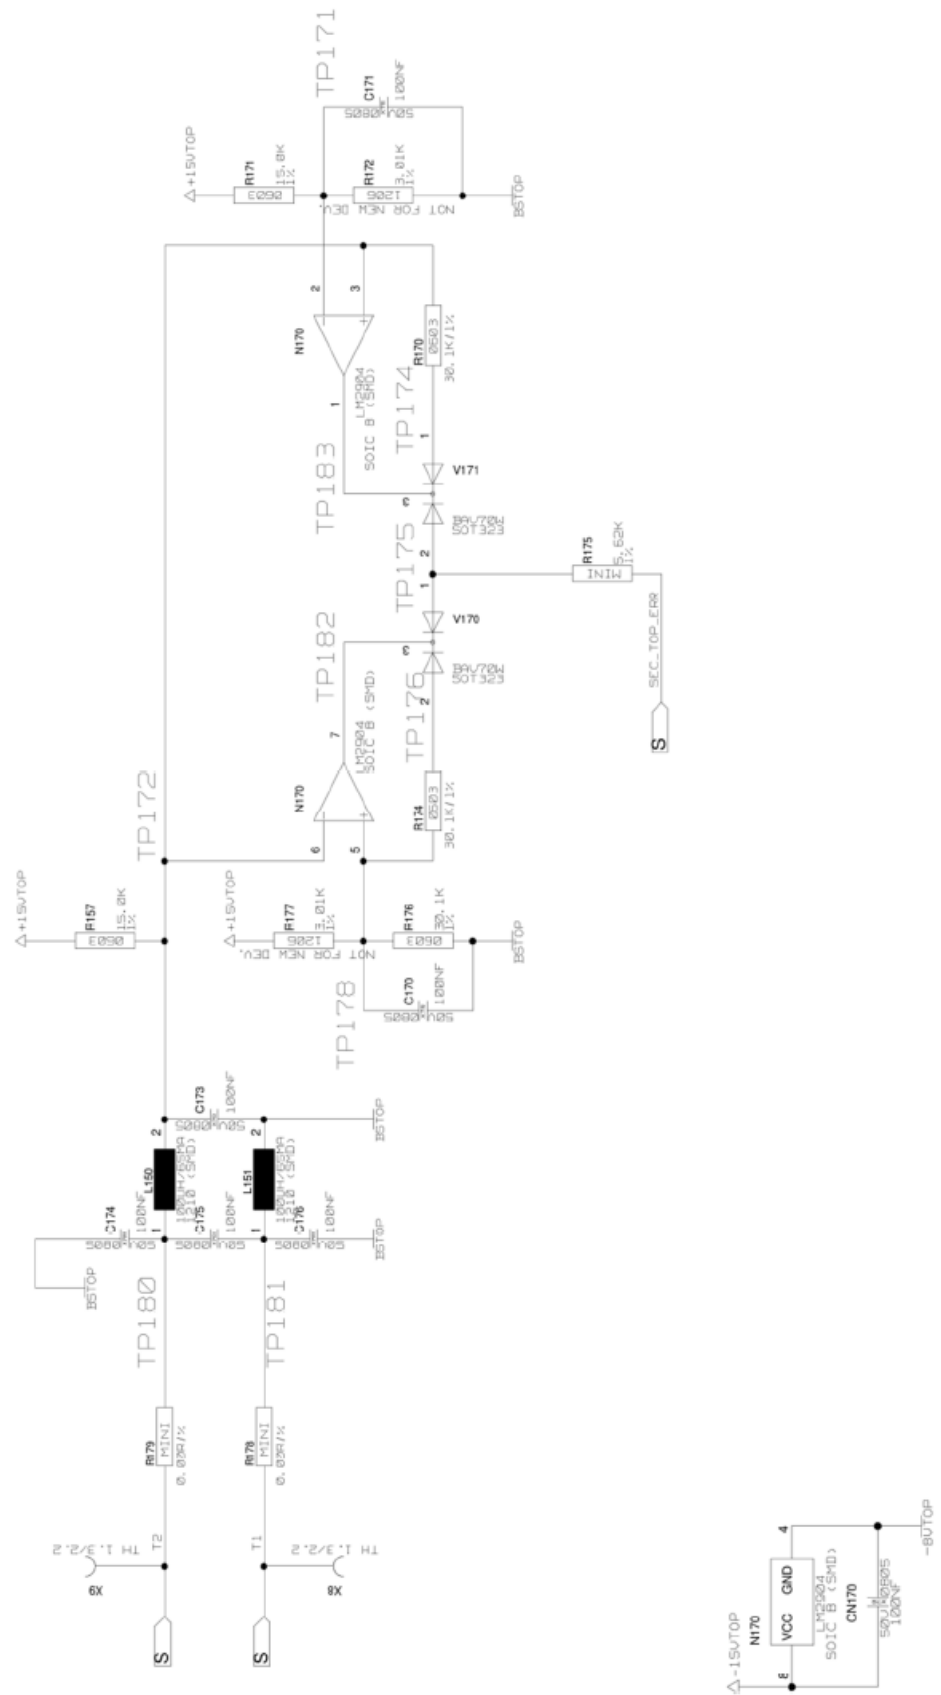

Parts List

Figure 10: Parts List Adaptor Board

Count	Ref. Designator	Value	Pattern Name	Description
7	C170, C171, C173, C174, C175, C176, CN170	100nF	0805 (SMD)	Capacitor X7R
6	C20, C21, C22, C23, C24, C25	1nF	0805 (SMD)	Capacitor X7R
1	C26	2,2µF	1210 (SMD)	Capacitor X7R
1	C27	220µF/35V	SMD	Longlife-Elko
1	C31	68pF	0603 (SMD)	Capacitor NP0
2	C35, C151	1µF	1206 (SMD)	Capacitor X7R
1	C36	100pF	0603 (SMD)	Capacitor NP0
1	CD20	100nF	1206 (SMD)	Capacitor X7R
1	D20	74C14	SOIC 14 (SMD)	Logic-IC 74C...
2	L150, L151	100µH	1210 (SMD)	Inductor
1	N170	LM2904	SOIC 8 (SMD)	Operational Amplifier
6	R111, R112, R113, R201, R211, R212, R213	0,51Ohm	Melf (SMD)	2%
2	R157, R171	15,0KOhm	0603 (SMD)	1%
1	R158	10,0Ohm	0603 (SMD)	1%
2	R163, R263	10,0KOhm	MiniMelf (SMD)	1%
3	R170, R174, R176	30,1KOhm	0603 (SMD)	1%
1	R175	5,62KOhm	MiniMelf (SMD)	1%
1	R177	3,01KOhm	1206 (SMD)	1%
3	R27, R178, R179	0,00Ohm	MiniMelf (SMD)	

3	R28, R50, R52	10,0KOhm	MicroMelf (SMD)	1%
6	R30, R31, R32, R33, R34, R37	5,11KOhm	MicroMelf (SMD)	1%
1	R36	3,32KOhm	0603 (SMD)	1%
2	R43, R45	0,00Ohm	0603 (SMD)	
3	R47, R54, R56	10,0KOhm	0603 (SMD)	1%
1	R51	121KOhm	0603 (SMD)	1%
1	R53	100Ohm	MicroMelf (SMD)	1%
1	R57	1,50KOhm	MicroMelf (SMD)	1%
1	R58	1,00KOhm	0603 (SMD)	1%
2	R60, R61	2,00KOhm	0603 (SMD)	1%
1	R62	3,92KOhm	0603 (SMD)	1%
6	V111, V112, V113, V211, V212, V213	10BQ100	SMB (SMD)	Diode Schottky
2	V150, V250	BY203/20S	SMD	High Voltage Diode
2	V170, V171	BAV70W	SOT323 (SMD)	Double Diode
1	V20	SMCJ15	DO214AB (SMD)	Suppressor Diode
5	V23, V25, V26, V27, V29	BC847B	SOT23 (SMD)	NPN-Transistor
1	V28	BZX284-C7V5	SOD110 (SMD)	Zener-Diode
1	X20	20p.	SMD	Connector
4	X6, X7, X10, X11	RM2,54 10p.	SMD	Box Connector

- **TP:** Test Point
- **Box Connector:** SUYIN 254100FA010G200ZU

References

- www.SEMIKRON.com

- A. Wintrich, U. Nicolai, W. Tursky, T. Reimann, "Application Manual Power Semiconductors", ISLE Verlag 2011, ISBN 978-3-938843-666

HISTORY

SEMIKRON reserves the right to make changes without further notice herein

DISCLAIMER

SEMIKRON reserves the right to make changes without further notice herein to improve reliability, function, or design. Information furnished in this document is believed to be accurate and reliable. However, no representation or warranty is given and no liability is assumed concerning the accuracy or use of such information, including without limitation, warranties of non-infringement of intellectual property rights of any third party. SEMIKRON does not assume any liability arising out of the application or use of any product or circuit described herein.


Furthermore, this technical information may not be considered as an assurance of component characteristics. No warranty or guarantee expressed or implied is made regarding delivery, performance, or suitability. This document supersedes and replaces all information previously supplied and may be superseded by updates without further notice.

SEMIKRON products are not authorized for use in life support appliances and systems without express written approval by SEMIKRON.

SEMIKRON INTERNATIONAL GmbH

- P.O. Box 820251 • 90253 Nuremberg • Germany
- **Tel:** +49 911-65 59-234
- **Fax:** +49 911-65 59-262
- sales.skd@semikron.com
- www.semikron.com.

Documents / Resources

	<p>SEMIKRON SKYPER 32PRO R Semikron Board [pdf] User Guide SKYPER 32PRO R Semikron Board, SKYPER 32PRO R, Semikron Board, Board</p>
---	---

References

- [We are the Ultimate Partner in Power Electronics | Semikron Danfoss](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.