



SENECA T201DCH100-OPEN Series Current Transformers Installation Guide

[Home](#) » [SENECA](#) » SENECA T201DCH100-OPEN Series Current Transformers Installation Guide 

Contents

- [1 SENECA T201DCH100-OPEN Series Current Transformers](#)
- [2 Product Information](#)
- [3 PRELIMINARY WARNINGS](#)
- [4 MODULE LAYOUT](#)
- [5 INSTALLATION REGULATIONS](#)
- [6 TECHNICAL SPECIFICATIONS](#)
- [7 USB PORT](#)
- [8 ELECTRICAL CONNECTIONS](#)
- [9 Documents / Resources](#)

Seneca

SENECA T201DCH100-OPEN Series Current Transformers



Product Information

Model Number	T201DCH100-OPEN	T201DCH300-OPEN	T201DCH600-OPEN
Dimensions (LxHxD)	90 x 85 x 36 mm	90 x 85 x 36 mm	90 x 85 x 36 mm
Weight	145 g	145 g	145 g
Enclosure	PA6, black	PA6, black	PA6, black

PRELIMINARY WARNINGS

The word **WARNING** preceded by the symbol indicates conditions or actions that put the user's safety at risk. The word **ATTENTION** preceded by the symbol indicates conditions or actions that might damage the instrument or the connected equipment. The warranty shall become null and void in the event of improper use or tampering with the module or devices supplied by the manufacturer as necessary for its correct operation, and if the instructions contained in this manual are not followed.

	WARNING: The full content of this manual must be read before any operation. The module must only be used by qualified electricians. Specific documentation is available using the QR-CODE shown on page 1.
	The module must be repaired and damaged parts replaced by the Manufacturer. The product is sensitive to electrostatic discharges. Take appropriate measures during any operation.
	Electrical and electronic waste disposal (applicable in the European Union and other countries with recycling). The symbol on the product or its packaging shows the product must be surrendered to a collection centre authorized to recycle electrical and electronic waste.



DOCUMENTATION
T201DCH100-OPEN



DOCUMENTATION
T201DCH300-OPEN




DOCUMENTATION
T201DCH600-OPEN

CONTACT INFORMATION

- Technical support support@seneca.it
- Product information sales@seneca.it

This document is the property of SENECA srl. Copies and reproduction are prohibited unless authorised. The content of this document corresponds to the described products and technologies. Stated data may be modified or supplemented for technical and/or sales purposes.

MODULE LAYOUT

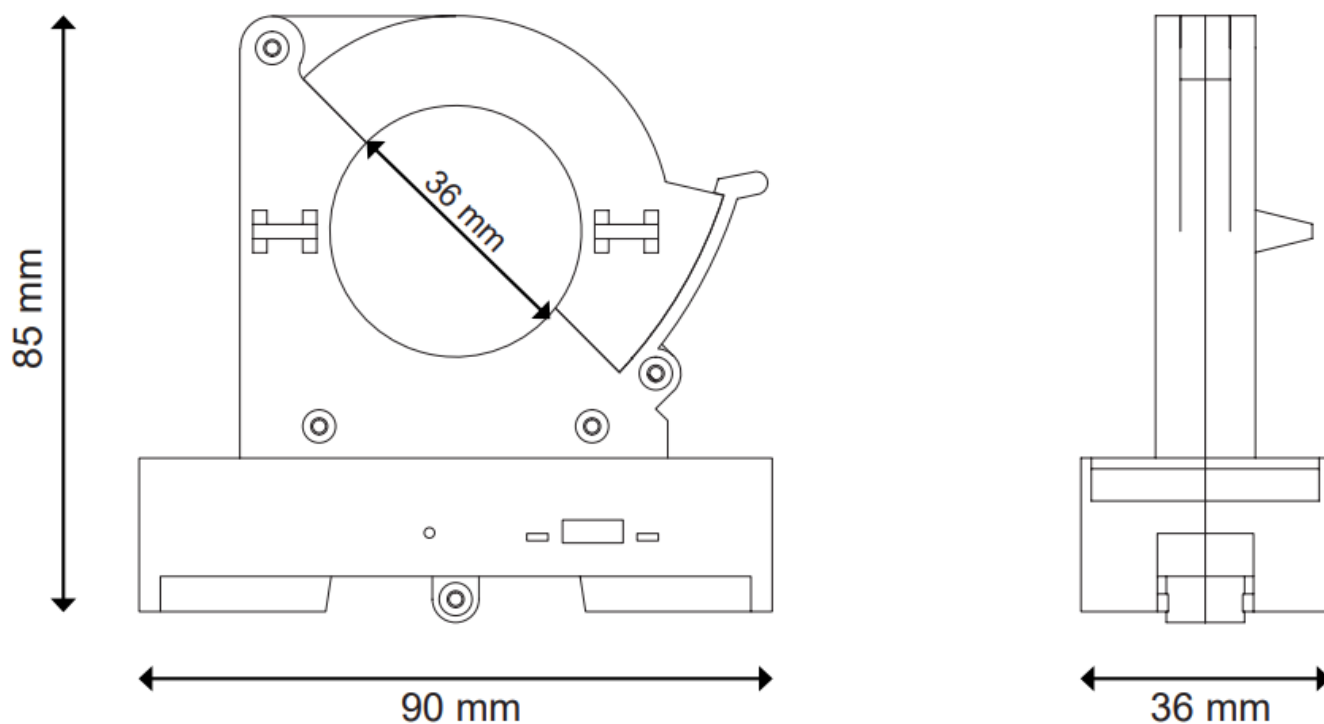


Dimensions LxHxD: 90 x 85 x 36 mm; **Weight:** ≈ 145 g; **Enclosure:** PA6, black

SIGNALS VIA LED ON THE FRONT PANEL


LED	STATUS	LED meaning
PWR/COM Green	ON	The device is powered correctly
PWR/COM Green	Flashing	Communication via USB and RS485 port
D-OUT Yellow	ON	Digital output activated

INSTALLATION REGULATIONS


- Remove the locking pin to allow the instrument to be opened. When using for the first time, the instrument will not be blocked by the pin.

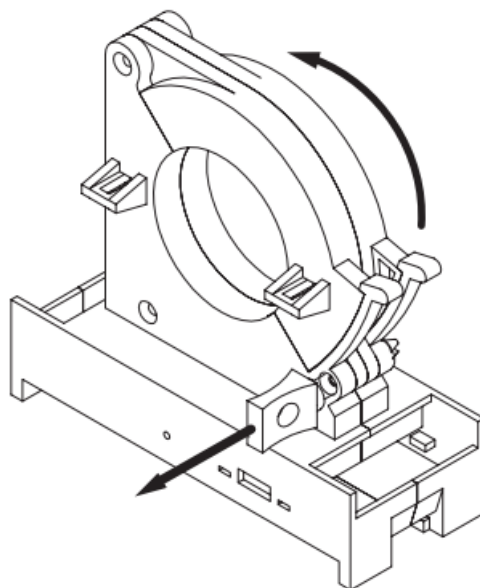


- Position the reading instrument using the DIN rail or the clamps. The reading direction of the instrument is indicated in the reference drawing above.

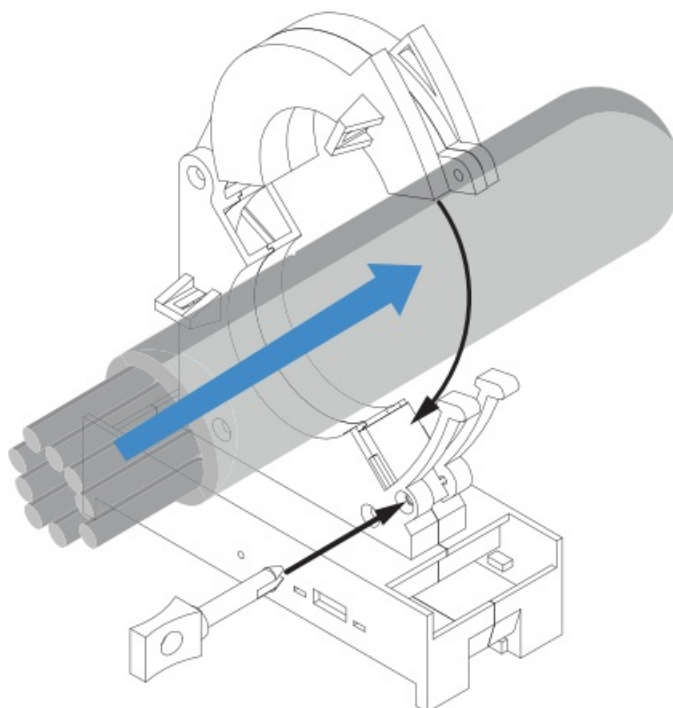

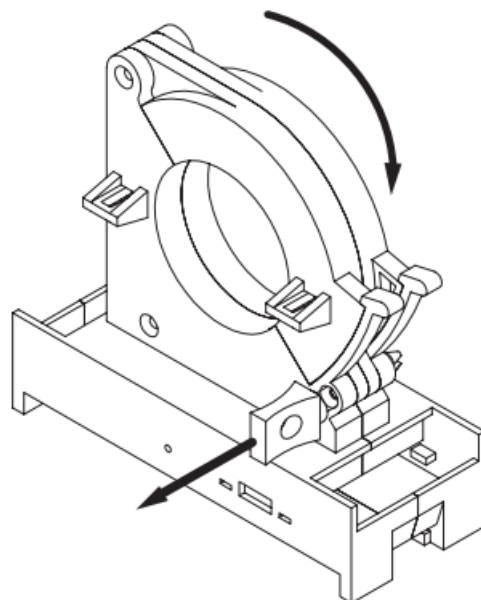


- Close the instrument using the locking pin. Apply sufficient pressure to engage the upper half core with the locking lugs.

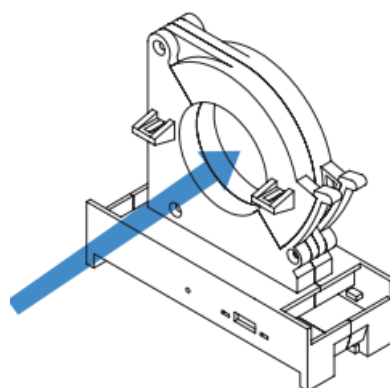

CAUTION: Make sure that the direction of the current flowing through the cable is that shown in the figure (incoming). To increase the sensitivity of the current measurement, insert the cable several times into the central hole of the instrument, creating a series of loops. The sensitivity of the current measurement is proportional to the number of passages of the conductors in the hole, if the loops are not homogeneously distributed a reading error could occur.



TECHNICAL SPECIFICATIONS

CERTIFICATIONS	  		
POWER SUPPLY	Voltage: on Vcc and GND terminals, 11.5 – 28 Vdc; Absorption: Typical: 38 mA (LOAD EXCLUDED)		
INSULATION	Using an insulated conductor, its sheath determines the insulation voltage. An insulation of 3 kVac is guaranteed on bare conductors		

ENVIRONMENTAL CONDITIONS	<i>Temperature:</i> -25 ÷ + 70°C <i>Humidity:</i> 10% ÷ 90% non condensing. <i>Altitude:</i> Up to 2000 m above sea level <i>Storage temperature:</i> -40 ÷ + 85°C <i>Protection rating:</i> IP20.	
ASSEMBLY	DIN rail 35 mm IEC EN60715 or fixing with plastic ties.	
CONNECTIONS	Removable 5-way screw terminals, 5 mm pitch for cables up to 2.5 mm ² micro USB (FOR CONFIGURATION ONLY)	
COMMUNICATION PORT	RS485 serial port on terminals A+ and B-; or on USB port	
INPUT (on 36 mm through hole)	<i>Type of measurement:</i> AC/DC TRMS or DC Bipolar <i>Crest factor:</i> 2 <i>Pass-band:</i> 1 kHz <i>Overload:</i> 2000 A impulsive, 3 x IN continuing	
CAPACITY	AC/DC True RMS (DIP7=OFF)	DC Bipolar (DIP7=ON)
T201DCH100-OPEN	50A or 100A	±50A or ±100A
T201DCH300-OPEN	150A or 300A	±150A or ±300A
T201DCH600-OPEN	300A or 600A	±300A or ±600A
ANALOGUE OUTPUT on Vout and GND terminals	<i>Type:</i> 0 ÷ 10 Vdc, minimum load RLOAD =2 kΩ. <i>Protection:</i> Reverse polarity protection and over voltage protection <i>Resolution:</i> 13 bit (10000 points) <i>EMI error:</i> < 0.5% <i>Temperature coefficient:</i> < 200 ppm/°C <i>Hysteresis on measurement:</i> 0.2% of full scale <i>Response speed:</i> With “Fast” filter 800 ms. With “Slow” filter 2000 ms. The type of output can be selected via software	
DIGITAL OUTPUT	<i>Type:</i> active, 0- Vcc, maximum load 50 mA The type of output can be selected via software	
ACCURACY	below 2% of full scale	above 2% of full scale
T201DCH100-OPEN	1% of full scale at 50/60 Hz, 23°C	0.5% of full scale at 50/60 Hz, 23°C
T201DCH300-OPEN	2% of full scale at 50/60 Hz, 23°C	1% of full scale at 50/60 Hz, 23°C
T201DCH600-OPEN		



































OVERVOLTAGE CATEGORIES	<i>Bare conductor: CAT. III 300 V</i> <i>Insulated conductor: CAT. III 600 V</i>
-------------------------------	---

USB PORT

The module is designed to exchange data according to the modes defined by the MODBUS protocol. It has a micro USB connector and can be configured using applications and/or software programs. The USB communication has priority over the RS485 communication. The USB serial port uses the following communication parameters: 38400,8,N,1 The USB communication port responds exactly like the RS485 port with the exception of the communication parameters. During the use of the USB port, the 485 bus will be inactive; it will reactivate automatically a few seconds after the release of the USB port. EASY SETUP is the software to use for the configuration. For further information go to the website on the cover.


SETTING THE DIP-SWITCHES

The position of the DIP switches defines the Modbus communication parameters of the module: Address and Baud Rate. The following table shows the Baud Rate and Address values according to the DIP- SWITCH setting:

DIP-Switch status												
DIP		ADDRESS	DIP		BAUD RATE	DIP		MEASURING SCALES				
1	2		3	4		5	6		7	8		
				#1			9600		AC/DC true RMS		Full scale	
				#2			19200		DC Bipolar		Half scale	
				#3			38400	DIP-switches must be set while the module is not powered on in order to avoid damaging it.			KEY	
•	•	•	•	#...			57600					
				#14	The instrument is supplied configured for 100A (DCH100), 300A (DCH300) and 600A (DCH600), with 800 ms filter inserted and TRMS mode selected.							ON
				#15								OFF

Note: When DIP switches 3 to 8 are OFF, the communication settings are taken from programming (EEPROM).


ELECTRICAL CONNECTIONS

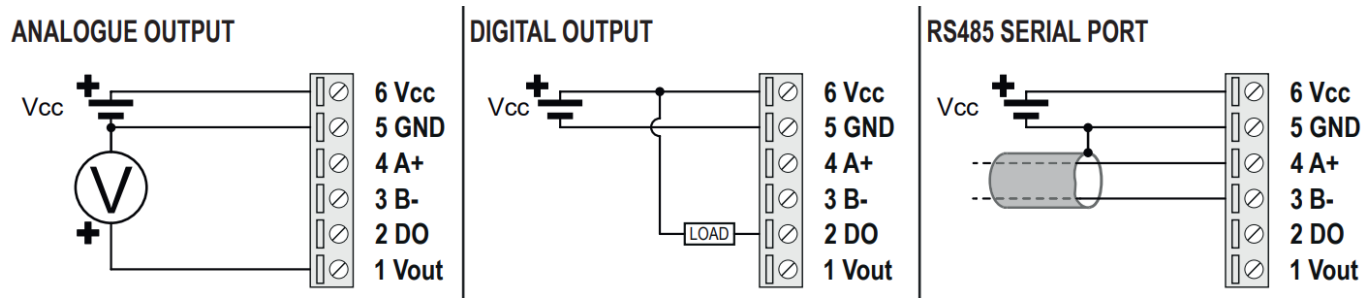

ANALOGUE OUTPUT BEHAVIOUR


AC/DC TRUE RMS

MODEL	DIP7	DIP8	A	B
T201DCH100-OPEN	OFF	OFF	50A	100A
	OFF	ON	25A	50A
T201DCH300-OPEN	OFF	OFF	150A	300A
	OFF	ON	75A	150A
T201DCH600-OPEN	OFF	OFF	300A	600A
	OFF	ON	150A	300A

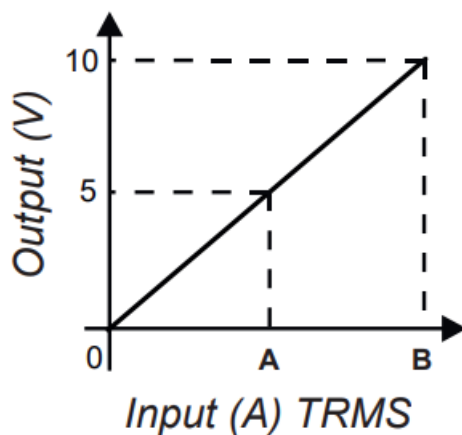


DC BIPOLAR

MODEL	DIP7	DIP8	C	D
T201DCH100-OPEN	ON	OFF	-100A	+100A
	ON	ON	-50A	+50A
T201DCH300-OPEN	ON	OFF	-300A	+300A
	ON	ON	-150A	+150A
T201DCH600-OPEN	ON	OFF	-600A	+600A
	ON	ON	-300A	+300A

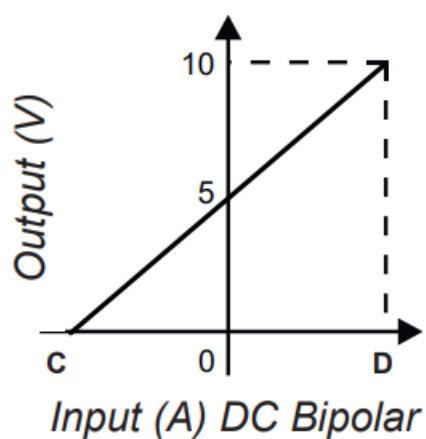

Tel. +39.049.8705359
Fax +39.049.8706287

Documents / Resources

	<p>SENECA T201DCH100-OPEN Series Current Transformers [pdf] Installation Guide T201DCH100-OPEN, T201DCH300-OPEN, T201DCH600-OPEN, T201DCH100-OPEN Series Current Transformers, T201DCH100-OPEN Series, Current Transformers, Transformers</p>
---	---

Manuals+