

# **SEQUENTIAL SWITCH Legendary Analog CV Multiplexer User** Guide

Home » SEQUENTIAL SWITCH » SEQUENTIAL SWITCH Legendary Analog CV Multiplexer User Guide 🖺





**Quick Start Guide** 962 SEQUENTIAL SWITCH **Legendary Analog CV Multiplexer Module for Eurorack** 

#### **Contents**


- 1 Controls
- **2 Power Connection**
- 3 Installation
- **4 Specification**
- **5 Legal Disclaimer**
- **6 LIMITED WARRANTY**
- 7 Documents /

**Resources** 


- 7.1 References
- **8 Related Posts**

#### **Controls**

- (1) TRIGGER OUTPUTS Sends a trigger output via  $3.5\,\mathrm{mm}$  TS cable w henever the respective stage is active. The adjacent LED will light to indicate an active stage.
- (2) TRIGGER BUTTON Allows a stage to be manually selected.
- (3) TRIGGER INPUTS Triggers from other modules can be connected v ia 3.5 mm TS cable to activate specific stages.
- (4) SHIFT A trigger can be connected via 3.5 mm TS cable to activate the next stage in the sequence. When using the 962 to create a 16 or 24-step sequencer with the 960, this jack is usually connected to the OUT jack of the 960's first stage.
- (5) SIG IN One of the inputs is routed to the OUTPUT jacks depending on which stage is active. If all 3 inputs are used, the module will shift in 3 stages. If only the first 2 inputs are used, the shift will alternate between stages 1 and 2. These inputs are usually connected to the 960's output s ection.
- (6) OUTPUT Send the output to another module via 3.5 mm TS cable.

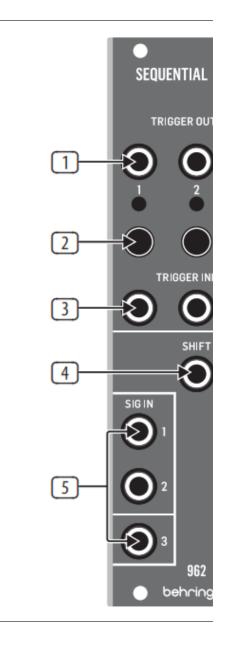

#### **Power Connection**

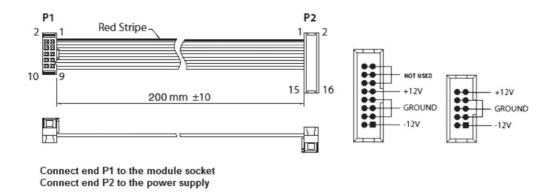

The module comes with the required power cable for connecting to a standard Eurorack power supply system. Follow these steps to connect power to the module. It is easier to make these connections before the module has been mounted into a rack case.

- 1. Turn the power supply or rack case power off and disconnect the power cable.
- 2. Insert the 16-pin connector on the power cable into the socket on the power supply or rack case. The connector has a tab that will align with the gap in the socket, so it cannot be inserted incorrectly. If the power supply does

- not have a keyed socket, be sure to orient pin 1 (-12 V) with the red stripe on the cable.
- 3. Insert the 10-pin connector into the socket on the back of the module. The connector has a tab that will align with the socket for correct orientation.
- 4. After both ends of the power cable have been securely attached, you may mount the module in a case and turn on the power supply.

#### Installation

The necessary screws are included with the module for mounting in a Eurorack case. Connect the power cable before mounting. Depending on the rack case, there may be a series of fixed holes spaced 2 HP apart along the length of the case, or a track that allows individual threaded plates to slide along the length of the case. The free-moving threaded plates allow precise positioning of the module, but each plate should be positioned in approximate relation to the mounting holes in your module before attaching the screws.

Hold the module against the Eurorack rails so that each of the mounting holes is aligned with a threaded rail or threaded plate. Attach the screws partway to start, which will allow small adjustments to the positioning while you get them all aligned. After the final position has been established, tighten the screws down.

# **Specification**

#### Inputs

Signal inputs		
Туре	3.5 mm jack, DC-coupled	
Impedance	> 50 kΩ, unbalanced	
Maximum input level	+10 V	
Trigger inputs		
Туре	3.5 mm jack, AC coupled	
Impedance	> 3 kΩ, unbalanced	
Maximum input level	+5 V	
Minimum switching threshold	+3.5 V trigger	
Shift input	<del></del>	
Туре	3.5 mm jack, DC-coupled	
Impedance	10 kΩ, unbalanced	
Maximum input level	+5 V	
Minimum switching threshold	+1.5 V	
Outputs	<u>'</u>	
Signal outputs		

Туре	3.5 mm jack, DC-coupled	
Impedance	< 1 kΩ, unbalanced	
Maximum output level	+10 V	
Trigger outputs		
Туре	3.5 mm jack, DC-coupled	
Impedance	< 2.5 kΩ, unbalanced	
Maximum output level	+5 V, active high	
Controls		
Channel trigger button	Manually select a stage	
Power		
Power supply	Eurorack	
Current draw	40 mA (+12 V), 20 mA (-12 V)	
Physical		
Dimensions	31 x 40 x 129 mm (1.2 x 1.6 x 5.1")	
Rack units	8 HP	
Weight	0.09 kg (0.2 lbs)	

# **Legal Disclaimer**

Music Tribe accepts no liability for any loss which may be suffered by any person who relies either wholly on or in part upon any description, photograph, or statement contained herein. Technical specifications, appearances, and other information are subject to change without notice. All trademarks are the property of their respective owners. Midas, Klark Teknik, Lab Gruppen, Lake, Tannoy, Turbosound, TC Electronic, TC Helicon, Behringer, Bugera, Oberheim, Auratone, Aston Microphones and Coolaudio are trademarks or registered trademarks of Music Tribe Global Brands Ltd. © Music Tribe Global Brands Ltd.

# **LIMITED WARRANTY**

For the applicable warranty terms and conditions and additional information regarding Music Tribe's Limited Warranty, please see complete details online at <a href="mailto:musictribe.com/warranty">musictribe.com/warranty</a>.



Hereby, Music Tribe declares that this product is in compliance with Directive 2014/30/EU, Directive 2011/65/EU and Amendment 2015/863/EU, Directive 2012/19/EU, Regulation 519/2012 REACH SVHC and Directive

1907/2006/EC.

Full text of EU DoC is available at <a href="https://community.musictribe.com/">https://community.musictribe.com/</a>

EU Representative: Music Tribe Brands DK A/S

Address: lb Spang Olsens Gade 17, DK - 8200 Aarhus N, Denmark



# **Documents / Resources**



<u>SEQUENTIAL SWITCH Legendary Analog CV Multiplexer</u> [pdf] User Guide Legendary Analog CV Multiplexer

# References

• Music Tribe

Manuals+,